


Operating and installation instructions

Gas hobs

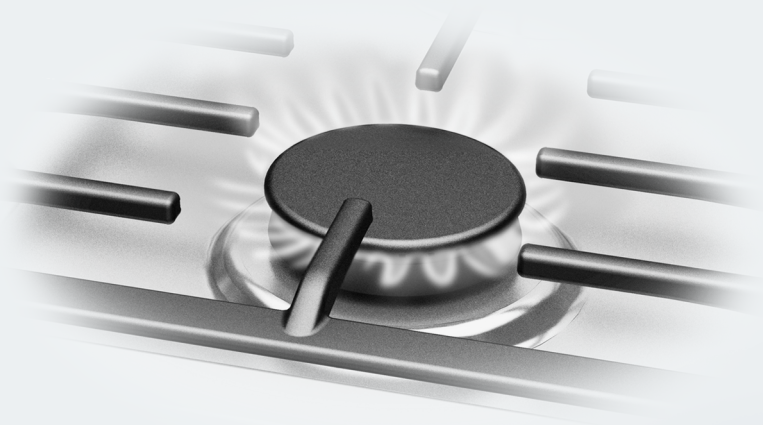

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

This hob can be used in countries other than those specified on the appliance. It is, however, set up for connection to the gas and electricity supplies in the countries specified. For trouble-free operation of the appliance, it is best to use it in the countries specified for use.

For use in other countries, please contact Miele in your country.

Safety precautions to take if you smell gas

- Turn off the gas emergency control valve immediately.
This is usually located near the gas meter.
- Eliminate all sources of ignition in a safe manner.
Do not smoke, light cigarette lighters or matches.
- Do not operate electrical lights or switches, i.e. do not switch them "On" or "Off".
- Open all doors and windows to ventilate the area.
- If the smell of gas persists, evacuate the building.

In the UK you must now:

- Call the Gas Emergency Contact Centre (Tel: 0 800 111 999).

For any gas work in the UK always use a Gas Safe registered engineer.



In other countries please follow relevant country specific procedures on gas.

Contents

Warning and Safety instructions	6
Caring for the environment	16
Guide to the appliance	17
Hob	17
KM 3034	17
KM 3054	18
Control knobs	19
Burner	20
Minute minder controls / indicators	21
Accessories supplied	22
Using for the first time	23
Cleaning the hob for the first time	23
Switching on the hob for the first time	23
Pans	24
Tips on saving energy	26
Operation	27
Rapid ignition system	27
Switching on	27
Adjusting the flame	28
Switching off	28
Easy switch-off function	28
In operation / residual heat indicators	29
Minute minder	30
Minute minder	30
Setting the minute minder for a cooking zone	30
Safety features	31
System lock	31
Flame failure monitor	31
Safety switch-off	31
Cleaning and care	32
Ceramic surface	33
Pan supports	34
Control knobs	34
Burner	34
What to do if	36

Optional accessories	39
Safety instructions for installation	40
Safety distances	41
Installation notes	44
Building-in dimensions	45
KM 3034	45
KM 3054	46
Installation.....	47
Electrical connection	49
Gas connection.....	51
Burner ratings	53
Converting to another gas type	54
Jet table.....	54
Changing the jets	54
Changing the main jets.....	54
Changing the small jets	55
Functional check	56
After sales service, data plate, guarantee	57
Product data sheets	58

Warning and Safety instructions

This hob complies with all relevant safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the hob, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

- ▶ This hob is intended for domestic use and use in other similar environments.
- ▶ This hob is not intended for outdoor use.
- ▶ It is intended for domestic use only to cook food and keep it warm. Any other use is not supported by the manufacturer and could be dangerous.
- ▶ People with reduced physical, sensory or mental capabilities, or lack of experience and knowledge who are not able to use the hob safely on their own must be supervised whilst using it. They may only use it unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

Warning and Safety instructions

Safety with children

- ▶ Children under 8 years of age must be kept away from the hob unless they are constantly supervised.
- ▶ Children 8 years and older may only use the hob unsupervised if they have been shown how to use it in a safe way and can recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean the hob unsupervised.
- ▶ Please supervise children in the vicinity of the hob and do not let them play with it.
- ▶ The hob gets hot when in use and remains hot for a while after being switched off. Keep children well away from the hob until it has cooled down and there is no danger of burning.
- ▶ Danger of burning.
Do not store anything which might arouse a child's interest in storage areas above or next to the hob. Otherwise they could be tempted into climbing onto the appliance.
- ▶ Danger of burning or scalding.
Place pots and pans on the cooking zone in such a way that children cannot pull them down and burn themselves.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.
- ▶ Activate the system lock to ensure that children cannot switch on the hob inadvertently.

Technical safety

- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ Do not use a damaged appliance. It could be dangerous. Check the hob for visible signs of damage.
- ▶ Reliable and safe operation of this hob can only be assured if it has been connected to the mains electricity supply.
- ▶ The electrical safety of this hob can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ To avoid the risk of damage to the hob, make sure that the connection data on the data plate (voltage and frequency) match the mains electricity supply before connecting it to the mains. Consult a qualified electrician if in doubt.
- ▶ Do not connect the hob to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.
- ▶ For safety reasons, this hob may only be used after it has been built in.
- ▶ This hob must not be used in a non-stationary location (e.g. on a ship).
- ▶ Never open the casing of the hob.
Touching or tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
- ▶ While the hob is under guarantee, repairs should only be undertaken by a Miele authorised service technician. Otherwise the guarantee is invalidated.

Warning and Safety instructions

- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.
- ▶ The hob is not intended for use with an external timer switch or a remote control system.
- ▶ Connection to the gas supply must be carried out by a suitably qualified gas fitter (e.g. a Gas Safe registered technician in the U.K).



The hob may be connected to the electrical supply by a fused plug and switched socket. If you wish to connect it to a fused spur connection, or if the plug has been removed or the connection cable is not supplied with a plug, the hob must be connected to the mains supply by a suitably qualified electrician.

- ▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 VV-F (pvc insulated). See "Electrical connection".
- ▶ During installation, maintenance and repair work, the hob must be disconnected from the mains electricity supply. The gas supply must also be shut off. Depending on country this is done in one of several different ways:
 - the mains fuse has been disconnected, or
 - the screw-out fuse is removed (in countries where this is applicable), or
 - switch off at the wall socket and withdraw the plug from the socket. Pull by the plug and not by the mains connection cable to disconnect from the mains electricity supply.
 - the gas inlet valve is closed.

Warning and Safety instructions

► **Danger of electric shock!**

Do not use the hob if it is faulty, or if the ceramic surface is cracked, chipped or damaged in any way. If it is in use switch it off immediately. Disconnect it from the mains electricity supply and gas supply, and contact Miele.

► If the hob is installed behind a furniture panel (e.g. a door), ensure that the door is never closed whilst the hob is in use. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the hob, the housing unit and the floor. Do not close the door until the residual heat indicators have gone out.

Warning and Safety instructions

Correct use

► The hob gets hot when in use and remains hot for a while after being switched off. There is a danger of burning until the residual heat indicators go out.

► Due to the high temperatures radiated, objects left near the hob when it is in use could catch fire.

Do not use the hob to heat up the room.

► Oil and fat can overheat and catch fire. Do not leave the hob unattended when cooking with oil and fat. If it does ignite do not attempt to put the flames out with water.

Disconnect the hob from the mains and use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.

► Flames could set the grease filters of a cooker hood on fire. Do not flambé under a cooker hood.

► Spray canisters, aerosols and other inflammable substances can ignite when heated. Therefore do not store such items or substances in a drawer under the hob. Cutlery inserts must be heat-resistant.

► Do not heat an empty pan.

► Do not heat up food in closed containers e.g. tins or sealed jars on the hob, as pressure can build up in the container, causing it to explode.

► Do not cover the hob, e.g. with a hob cover, a cloth or protective foil. The material could catch fire, shatter or melt if the hob is switched on by mistake or if residual heat is still present.

► When the hob is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of any metal items left on the hob heating up, with the danger of burning. Depending on the material, other items left on the appliance could also melt or catch fire. Do not use the hob as a resting place.

Warning and Safety instructions

- ▶ You could burn yourself on the hot hob. Protect your hands with heat-resistant pot holders or gloves when handling hot pots and pans. Do not let them get wet or damp, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself on steam. Be sure to keep all textiles away from the gas flames. Do not use oversized cloths, tea towels or other similar materials.
- ▶ When using an electrical appliance, e.g. a hand-held food blender, near the hob, ensure that the cable of the electrical appliance cannot come into contact with the hot hob. The insulation on the cable could become damaged.
- ▶ Even a light object can cause damage in certain circumstances. Do not drop anything on the ceramic surface.
- ▶ Plastic and aluminium foil containers melt at high temperatures. Do not use plastic or aluminium foil containers on the hob.
- ▶ If a cooker hood is installed above the hob, ensure that the burners are always covered with a pan when in use. Otherwise flames could reach the cooker hood, parts of which could then be damaged or even set on fire.
- ▶ Only light the gas burners after all burner parts have been properly assembled.
- ▶ Pans must be the correct size for the burner they are used on (see "Suitable Pans"). A pan which is too small will be unstable on the pan support. If the pan diameter is too large, flames can spread out to the sides and damage or burn the worktop, wall claddings or surrounding units and also parts of the hob. Miele cannot be held liable for this type of damage.
- ▶ Ensure that the flames from the burner do not spread out beyond the base and up the sides of the pan.

Warning and Safety instructions

- ▶ Do not use pans with very thin bases on this hob, and never heat up empty pans as they could get damaged. This could also damage the appliance.
- ▶ The pan support supplied with the appliance must always be used. Never place a pan on the burner itself.
- ▶ Replace the pan supports carefully to avoid scratching the surface of the hob.
- ▶ Do not use or store flammable materials near this hob.
- ▶ Remove splashes of fat and other food debris from the surface of the hob as soon as possible. These are a fire hazard.
- ▶ Using the hob will cause a build-up of heat and moisture in the room in which it is installed. Ensure that the room has sufficient natural or mechanical means of ventilation, e.g. a cooker hood.
- ▶ If the hob is used for very long periods of time, additional ventilation of the room may be necessary, e.g. by opening windows or doors, or running the cooker hood on the highest setting.
- ▶ Do not use roasting dishes, pans or grilling stones that are large enough to cover more than one burner. The resulting build-up of heat could damage the hob.
- ▶ If the hob has not been used for a long period of time it should be thoroughly cleaned before it is used again. It is also advisable to have the appliance tested by a qualified person for safety.

Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this hob. The steam could reach electrical components and cause a short circuit.

Caring for the environment

Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposing of your old appliance


Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer or Miele for advice. You are also responsible (by law, depending on country) for deleting any personal data that may be stored on the appliance being disposed of. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

Hob


KM 3034

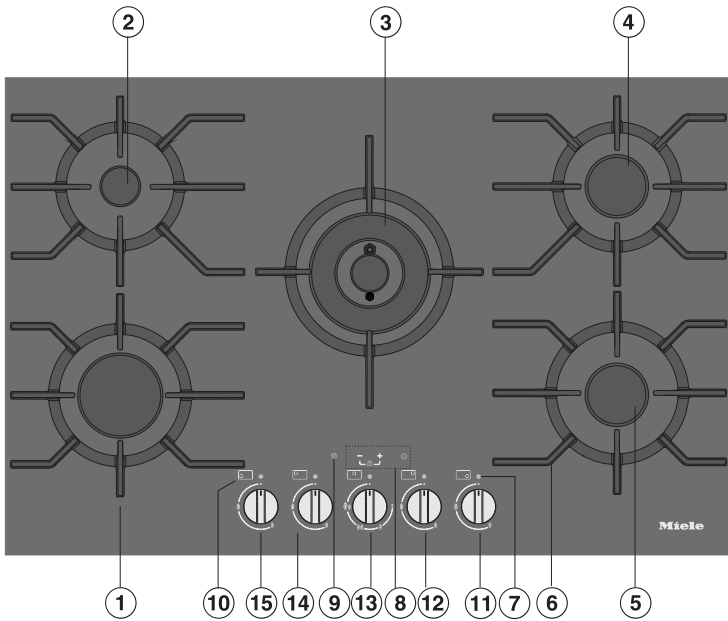

- | | |
|---|-------------------------------------|
| ① Large burner | ⑨ Easy switch-off function |
| ② Small burner | ⑩ Cooking zone symbol |
| ③ Wok burner | Control knobs for the cooking zones |
| ④ Medium burner | ⑪ Front right |
| ⑤ Medium burner | ⑫ Rear right |
| ⑥ Pan support (one for each burner) | ⑬ Middle |
| ⑦ In-operation/Residual heat indicators | ⑭ Rear left |
| ⑧ Minute minder | ⑮ Front left |

Guide to the appliance


KM 3054

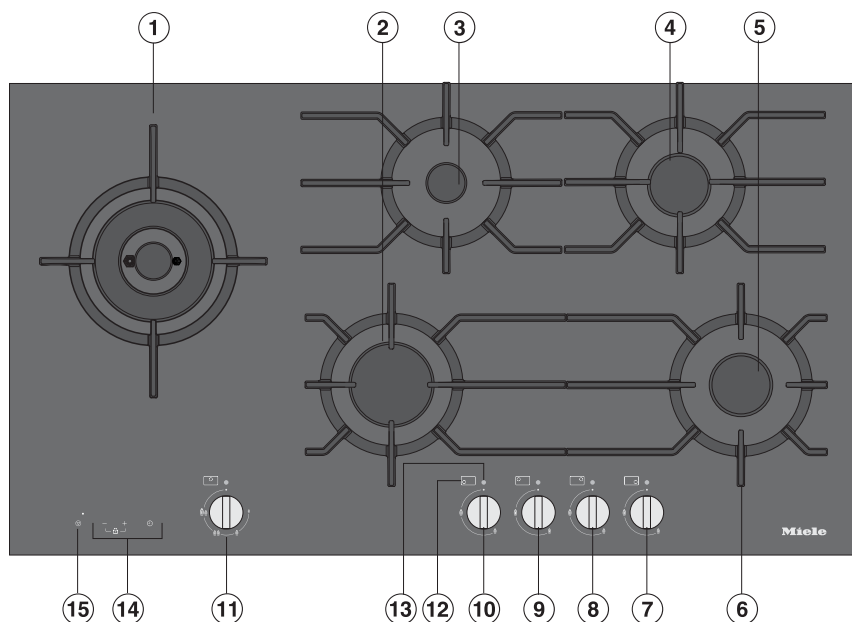

- | | |
|---|---------------------------------------|
| ① Wok burner | ⑭ Minute minder controls / indicators |
| ② Large burner | ⑮ Easy switch-off function |
| ③ Small burner | Control knobs for the cooking zones |
| ④ Medium burner | ⑦ Front right |
| ⑤ Medium burner | ⑧ Rear right |
| ⑥ Pan support (one for each burner) | ⑨ Rear middle |
| ⑫ Cooking zone symbols | ⑩ Front middle |
| ⑬ In-operation/Residual heat indicators | ⑪ Left |


Control knobs

Small/Medium/Large burners

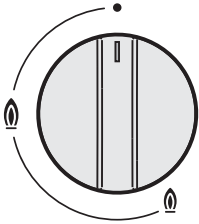

Symbol	Description
•	Burner off, the gas supply is turned off
	Largest flame
	Smallest flame

Wok burner

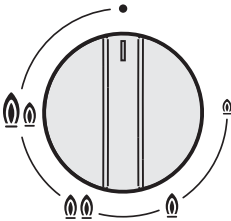


Symbol	Description
•	Burner off, the gas supply is turned off
	Largest flame: inner and outer burner on highest setting.
	Large flame: outer burner on lowest setting, inner burner on highest setting.
	Small flame: outer burner off, inner burner on highest setting.
	Smallest flame: outer burner off, inner burner on lowest setting.

Guide to the appliance


Burner

Wok burner

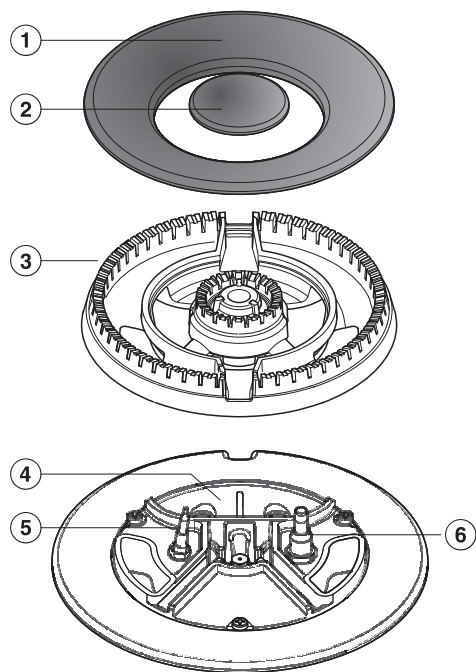


- ① Outer burner cap
- ② Inner burner cap
- ③ Burner head
- ④ Burner base
- ⑤ Thermocouple
- ⑥ Ignitor

Small, medium and large burners

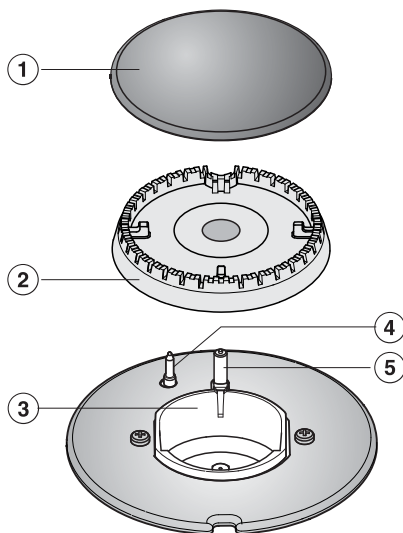

- ① Burner cap
- ② Burner head
- ③ Burner base
- ④ Thermocouple
- ⑤ Ignitor

Minute minder controls / indicators

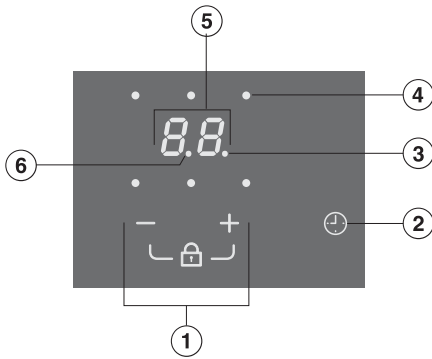

- ① Activating the safety lock / Setting the time
- ② Minute minder
 - For switching on/off
 - Switching between functions
 - For selecting a cooking zone

Indicator lights

- ③ Minute minder
- ④ Indicator light for relevant zone, e.g. the rear right cooking zone
- ⑥ Indicator light for half hours if the minute minder setting exceeds 99 minutes
- ⑤ Time display

00 to 99 Duration in minutes

0.h to 5.h Duration in hours

Guide to the appliance

Accessories supplied

The accessories supplied with your appliance as well as a range of optional ones are available to order from Miele (see "Optional accessories").

Wok ring



The wok ring supplied gives additional stability to the wok, especially to woks with a rounded base.

Combination trivet



The combination trivet supplied must be used if you are using pans with a smaller base diameter than that specified in the chart for suitable pans.

- Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate, guarantee" section of this booklet.
- Remove any protective wrapping and stickers.

Cleaning the hob for the first time

- Before using for the first time, clean the hob with a damp cloth only and then wipe dry.
- Clean all removable parts of the burners with a solution of warm water and a small amount of washing-up liquid applied with a soft sponge. Dry all parts thoroughly after cleaning and then reassemble the burners (see "Cleaning and care").

Switching on the hob for the first time

The metal components have a protective coating which when heated for the first time will give off a slight smell and possibly some vapours.

The smell and any vapours given off do not indicate a faulty connection or appliance and they are not hazardous to health.

Pans

Minimum pan base diameter	
Burner	Ø cm
Small burner	10
Medium burner	12
Large burner	14
Wok burner	14

Maximum diameter at top of pan	
Burner	Ø cm
Small burner	20
Medium burner	22
Large burner	24
Wok burner	26


- Select cookware that fits the size of the burner:
Large diameter = large burner
Small diameter = small burner.
- Refer to the chart above and ensure that the pan diameter falls within the minimum and maximum diameters given for the burner you are using. If the pan diameter is too large, flames can spread out to the sides and damage or burn the worktop, wall claddings or surrounding units and also parts of the hob or other appliances. Pans which are too small for the pan supports, or pans which do not sit securely on the pan supports, are dangerous and should not be used.
- Unlike pans that are used on an electric hob, the bottom of pans used on a gas hob do not have to be flat to deliver good cooking results.

- Remember when purchasing new pans that manufacturers usually refer to the diameter at the top of the pan in their documentation, and not to the base diameter.
- Any heat-resistant pans can be used on a gas burner.
- Pans with thick bases are preferable as these distribute heat more evenly. With thin bases, there is a danger of food overheating in places. Stir the food frequently.
- Always place cookware on the pan support supplied with the appliance. Never place it directly on the burner.
- Position the cookware centrally on the pan support so that it sits securely and cannot tip. A little movement is quite normal and not a cause for concern.
- Do not use pots or pans that have bases with pronounced edges.



Wok ring

- Use the wok ring supplied to give additional stability to pans, especially to woks with a rounded base.

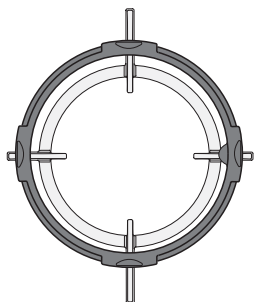

- Place the wok ring on the pan support so that it sits securely in position and cannot move (see diagram).


The wok is unique among cookware in that it has a small base diameter and a large rim diameter (usually 35-40 cm). Wok pans are ideal for use on the wok burner.

Combination trivet

The combination trivet must be used if you wish to use a pan with a smaller diameter base than the minimum given in the table.

Tips on saving energy

- Use a pan lid whenever possible to minimize heat loss.

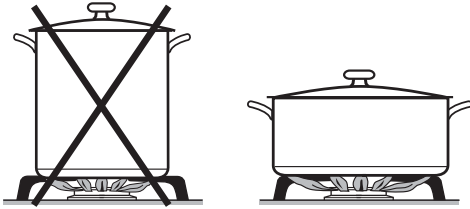

- Wide, shallow pans are preferable to tall, narrow ones. They will heat up faster.
- Cook with as little water as possible.
- Reduce the size of the flame once the water has come to the boil or the oil is hot enough to fry in.
- Use a pressure cooker to reduce cooking times.

Rapid ignition system

The appliance is supplied with a rapid ignition system with the following features:

- Rapid ignition without pressing and holding the control,
- Automatic re-ignition
Should the flame be extinguished by a gust of air, the burner will re-ignite automatically. If re-ignition is unsuccessful, the gas supply will be cut off automatically (see "Flame failure monitor").

You might hear the burner re-igniting as it switches itself back on (1-2 clicks), for instance, in the event of a draft.

Switching on



Fire hazard.

Do not leave the appliance unattended whilst it is being used.

- The control knob for the burner must be pressed in and turned anti-clockwise to the large flame symbol to switch on. The ignitor will "click" and ignite the gas.

When a control knob is activated, a spark is developed automatically on all burners. This is normal and does not indicate a defect.


- If the burner fails to ignite, turn the control knob to the "•" position. Air the room or wait at least 1 minute before trying again.
- If the burner does not ignite the second time, turn the control knob back to "•" and see "What to do if ...".

Operation

Adjusting the flame

The burners can be regulated at any level between the strongest and weakest flame.

As the outer part of the flame is much hotter than the centre, the tips of the flames should stay beneath the pan base. Flame tips which extend beyond the sides of the pan merely warm up the air in the room and can also damage pan handles and increase the danger of injury.

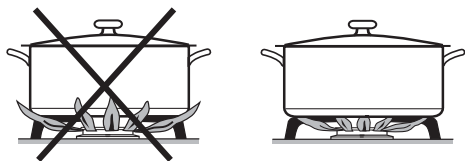

- Adjust the flame so that it does not spread out beyond the sides of the pan.

Wok burner

Depending on the type of control knob, there may be a stopper between the low and high settings at the 6 o'clock position.


- Press the control knob down lightly to move past this resistance.

Switching off

- Turn the control clockwise to position "•".

This stops the flow of gas and the flame goes out.

Easy switch-off function

Touching the  sensor switches off all active burners.

- Touch the  sensor.

All burners are switched off. The in-operation/residual heat indicators of the switched off burners flash and the indicator light for the easy switch-off function remains illuminated.

If a minute minder has been set for a cooking zone, it will be cancelled.


- Turn the control to "•".

The easy switch-off indicator light goes out and the in-operation/residual heat indicators of cooking zones which are still hot will light up constantly.

In operation / residual heat indicators

The in-operation / residual indicator lights up when a gas burner is switched on. The in-operation indicator will go out when the burner is switched off. The residual heat indicator will remain on until the gas burner is cool enough to touch.

If the indicator lights are flashing, there is a fault. See "Problem solving guide".

 Danger of burning. Do not touch the pan supports, cooking zones or the hob whilst the residual heat indicators are lit up.

Minute minder

A duration of between 1 minute (01) and 6 hours (6.h) can be set.

Use the - sensor to reduce the time from 6.h to 00, and the + sensor to increase the time from 00 to 6.h. The display stops at 2.h and at 99. To continue beyond this setting, briefly remove your finger from the sensor and then touch it again.

Durations exceeding 99 minutes are set in half-hour steps. The half hour is indicated by a dot after the number.

Minute minder

Setting

- Touch the ⌚ sensor.

00 and the minute minder indicator lamp will flash in the timer display.

- Select the time you want with the - or + sensor.

Changing

- Touch the ⌚ sensor.
- Select the time you want with the - or + sensor.

Deleting

- Touch the ⌚ sensor.
- Touch the - and + sensors at the same time until 00 appears in the timer display.

Setting the minute minder for a cooking zone

A minute minder can be allocated for any switched on cooking zone. This function can be used simultaneously for all cooking zones.

- Switch on the required cooking zone.
- Keep touching the ⌚ sensor until the indicator light for this cooking zone starts flashing.

If several cooking zones are switched on, the indicator lights for the cooking zones being used light up anti-clockwise, starting with the front right.

- Set the time you want.
- If you want to set another cooking zone to switch off automatically, follow the same steps as described above.

If more than one switch-off time is programmed, the shortest time remaining will be displayed, and the corresponding indicator light will flash. The other indicator lights will light up constantly.

- If you want to show the time remaining for another zone which is counting down in the background, touch the ⌚ sensor repeatedly until the indicator light for the zone you require flashes.

System lock

The system lock is deactivated if there is an interruption to the power supply.

The system lock can only be activated if all the cooking zones are switched off.

The hob is fitted with a system lock so that it cannot be used by mistake. When activated the cooking zones cannot be switched on and the minute minder cannot be used.

If a control knob is turned or a sensor is touched when the system lock is active, the indicator light illuminates and *LL* appears in the minute minder display.

Activating

- Touch the + and - sensors at the same time until *LL* appears in the minute minder display and a tone sounds.

LL will go out after a short while.

Deactivating

- Touch the + and - sensors at the same time until *LL* goes out in the minute minder display and a tone sounds.

Flame failure monitor

This hob has a flame failure monitor. If the flame goes out, for example because food has boiled over or there has been a sudden draught, and automatic re-ignition has been unsuccessful, the supply of gas to the burner will be cut off. This will prevent any gas escaping. To use the burner again, turn the control knob to "•".

Safety switch-off

If the burner has been used for an unusually long period of time, it will switch itself off automatically. To use the burner again, turn the control to the "•" position.

Cleaning and care



Danger of burning.

The burners must be switched off.

The hob needs to cool down.



Danger of injury.

The steam from a steam cleaning appliance could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean the hob.

The use of unsuitable cleaning agents can cause the surfaces to discolour or alter.

All surfaces are susceptible to scratching.

Remove any residual cleaning agent immediately.

Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- cleaning agents containing soda, alkalines, ammonia, acids or chlorides
- cleaning agents containing descaling agents
- stain or rust removers
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners
- solvent-based cleaning agents
- dishwasher cleaner
- grill and oven cleaners
- glass cleaning agents
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents
- melamine eraser blocks

The surfaces of the burner components and pan supports will become more matt with time. This is completely normal and does not indicate damage to the material.

- The entire hob should be cleaned after each use.
- Stubborn soiling should be soaked first.
- Dry the hob after using water to clean it. This helps prevent limescale deposits.

Tip: Food that has boiled over onto a hot hob can result in discolouration on the burner components. Immediately remove all spilled food and all salt or sugar splatters.

Ceramic surface

Do not clean the area between the glass-ceramic surface and the frame or the frame and the worktop with sharp, pointed objects. This could damage the seals.

Do not use washing-up liquid to clean the appliance as washing-up liquid will not remove all soiling and deposits.

It will form an invisible coating which will cause permanent discolouration of the ceramic surface.

Clean the ceramic surface regularly with a suitable ceramic cleaning agent such as the Miele ceramic and stainless steel hob cleaner.

- Wipe all coarse soiling off using a damp cloth. Stubborn soiling may need to be removed with a shielded scraper blade.
- Then clean the hob with Miele ceramic and stainless steel hob cleaner (see "Optional accessories") or a suitable proprietary ceramic hob cleaning agent applied with kitchen paper or a clean cloth. Do not apply cleaning agent whilst the hob is still hot, as this could result in marking. Please follow the manufacturer's instructions.
- Wipe the surface afterwards with a damp cloth to remove any cleaning agent residues.

Residues can burn onto the appliance the next time it is used and cause damage to the ceramic surface. Ensure that all cleaning agent residues are removed.

- Finally, dry the ceramic surface with a clean soft cloth.

Any **marks** left by limescale residue or water can be removed using the Miele ceramic and stainless steel hob cleaner.

Cleaning and care

Pan supports

- Remove the pan supports.
- Clean the pan supports in the dishwasher or with a solution of warm water and a little washing-up liquid applied with a soft sponge. Stubborn soiling should be soaked first.
- After cleaning, dry the pan supports thoroughly with a clean cloth.

Control knobs

The control knobs are not dishwasher safe.
The control knobs should only be cleaned by hand.

The control knobs may become discoloured if they are not cleaned regularly.

- Clean the control knobs using a solution of warm water and a little washing-up liquid applied with a soft sponge.

Burner

Do not clean any parts of the burner in a dishwasher.


- The burner should be dismantled and then cleaned by hand using a solution of warm water and a little washing-up liquid applied with a soft sponge.
- Parts of the burner that cannot be removed should be wiped clean with a damp cloth only.
- The ignitor and thermocouple should be very carefully wiped clean using a well wrung out cloth.

Do not let the ignitor get wet. If it gets wet, it will not spark.

- After cleaning, dry all surfaces with a clean cloth. Make sure that the flame slits are clean and completely dry.

The surfaces of the burner caps will become more matt with time. This is quite normal and does not indicate damage to the burner caps. Nor will affect the operation of the hob.


Assembling the small, medium and large burners

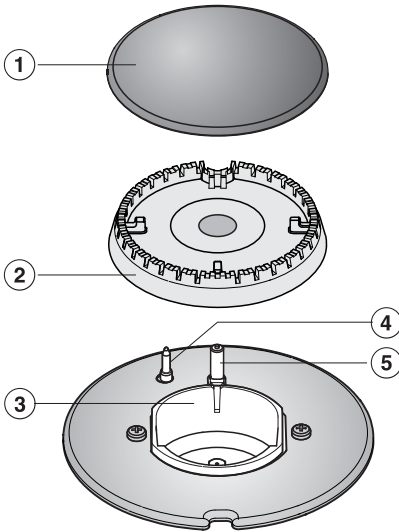

- Place the burner head ② on the burner base ③ so that the thermocouple ④ and the ignitor ⑤ extend through their respective holes in the burner head. The burner head must click into place correctly.
- Place the burner cap ① flat over the burner head ②. When correctly positioned, the burner cap will not slide about.

Ensure parts are reassembled in the correct order.

Assembling the wok burner

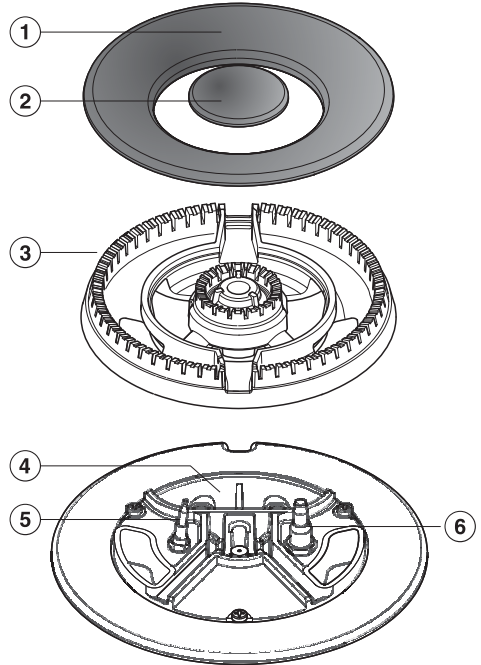


- Place the burner head ③ on the burner base ④ so that the thermocouple ⑤ and the ignitor ⑥ extend through their respective holes in the burner head. The burner head must click into place correctly.
- Then place the burner caps ① and ② in position.

Ensure parts are reassembled in the correct order.

What to do if ...

With the aid of the following guide, minor problems can be easily corrected without contacting Miele.

If having followed the suggestions below, you still cannot resolve the problem, please contact Miele (see end of this booklet for contact details).

 **Danger of injury.** Installation, maintenance and repairs to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations.
Do not open the casing of the appliance.
Repairs and other work by unqualified persons could be dangerous and Miele cannot be held liable for unauthorised work.

Problem	Cause and remedy
The burners do not ignite when the hob is being used for the first time or after it has been out of use for a longer period.	<p>There could be air lock in the gas pipe.</p> <ul style="list-style-type: none">■ You may need to make several attempts before the burner ignites successfully.
The burner does not ignite after several attempts.	<p>There may be a technical fault.</p> <ul style="list-style-type: none">■ Turn all of the controls clockwise to "●" and interrupt the power supply to the hob for a few seconds.
	<p>The burner is not correctly assembled.</p> <ul style="list-style-type: none">■ Assemble the burner correctly.
	<p>The gas shut-off valve is closed.</p> <ul style="list-style-type: none">■ Open the gas shut-off valve.
	<p>The burner is wet and/or dirty.</p> <ul style="list-style-type: none">■ Clean and dry the burner.
	<p>The flame slits are blocked and/or wet.</p> <ul style="list-style-type: none">■ Clean and dry the flame slits.
The gas flame goes out after being lit.	<p>The flames do not touch the thermocouple and the burner does not get hot enough: The burner parts are not positioned correctly.</p> <ul style="list-style-type: none">■ Position the burner parts correctly.
	<p>There is soiling on the thermocouple.</p> <ul style="list-style-type: none">■ Remove any soiling.

Problem	Cause and remedy
The flame suddenly looks different.	The burner parts are not positioned correctly. ■ Position the burner parts correctly.
	The burner head or the holes in the burner cap are dirty. ■ Remove any soiling.
The gas flame goes out during use.	The burner parts are not positioned correctly. ■ Position the burner parts correctly.
	There has been a power outage. ■ Turn the control knob in a clockwise direction to "•". Once power has been restored the hob can be used again as normal.
The ignitor on the burner does not spark.	The mains fuse has tripped. ■ You may need to contact a qualified electrician or Miele.
	There is food residue stuck between the ignitor and the burner cap. There is food residue on the thermocouple. ■ Remove any soiling (See "Cleaning and care").
The in-operation / residual heat indicator is flashing.	There has been a power outage. ■ Turn the control knob in a clockwise direction to "•". Once power has been restored the hob can be used as normal again.

What to do if ...

Problem	Cause and remedy
Letters appear in the minute minder display.	<p><i>LC</i> The system lock has been activated.</p> <ul style="list-style-type: none"> ■ You need to deactivate the system lock (see "System lock").
	<p><i>FL</i> A sensor fault has occurred.</p> <ul style="list-style-type: none"> ■ Make sure that there is no direct light (from the sun or from an artificial source) falling onto the hob. The area surrounding the hob must not be too dark. ■ Make sure that there is nothing covering the sensors or the hob. Take any pans off the hob and wipe away any food deposits. ■ Interrupt the power supply to the hob for approx. 1 minute. ■ If the problem persists after power has been restored, please contact Miele Service.
The in-operation/residual heat indicators are flashing and a combination of letters and numbers appears in the minute minder display.	<p><i>F2</i> The overheating protection mechanism has been activated.</p> <ul style="list-style-type: none"> ■ Turn all the control knobs clockwise to "•". You can operate the cooking zones again once <i>F2</i> has disappeared.
	<p><i>EO</i> There is a fault with the electronics.</p> <ul style="list-style-type: none"> ■ Reset: touch the easy switch-off function sensor for three seconds. ■ If this fault code continues to appear in the display, contact Miele Service.
	<p>All other fault codes There is a fault with the electronics.</p> <ul style="list-style-type: none"> ■ Interrupt the power supply to the hob for approx. 1 minute. ■ If the problem persists after power has been restored, please contact Miele Service.

Miele offer a comprehensive range of useful accessories as well as cleaning and conditioning products for your Miele appliances.

These products can be ordered through the Miele Webshop.

 
These can also be ordered from Miele (see end of this booklet for contact details) or from your Miele dealer.

Ceramic and stainless steel hob cleaner 250 ml



Removes heavy soiling, limescale deposits and aluminium residues

Microfibre cloth



Removes finger marks and light soiling


Safety instructions for installation

Fit the wall units and cooker hood before fitting the hob to avoid damaging the hob.

- ▶ The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort. Any backmoulds must be of heat-resistant material.
- ▶ The hob must not be installed over a fridge, fridge-freezer, freezer, dishwasher, washing machine, washer-dryer or tumble dryer.
- ▶ A gas hob must not be installed directly next to a deep fat fryer as the gas flames could ignite the fat in the fryer. It is essential to maintain a distance of at least 300 mm between these two appliances.
- ▶ When installing the hob, make sure that the gas pipe and electrical connection cable cannot come into contact with hot appliance parts.
- ▶ The electrical cable and any flexible gas connection pipes must be installed in such a way so that they do not come into contact with any moving kitchen parts (e.g. a drawer), and cannot become trapped.
- ▶ Observe carefully the safety clearances listed on the following pages.

All dimensions are given in mm.

Safety distance above the hob

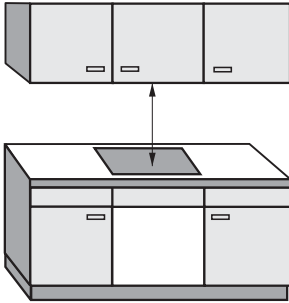

A minimum safety distance must be maintained between the appliance and the cooker hood above it. See the cooker hood manufacturer's operating and installation instructions for details. If the manufacturer's instructions are not available for the cooker hood or if any flammable objects (e.g. utensil rails, wall units etc) are installed above the hob a minimum safety distance of at least 760 mm must be maintained between them and the appliance below.

When two or more appliances which have different safety distances are installed together below a cooker hood, you should observe the greatest safety distance.

Safety distances


Safety distances to the sides and back of the hob

Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear or a tall unit or wall on one side (right **or** left) (see illustrations).


① Minimum distance between the **back** of the worktop cut-out and the rear edge of the worktop:
50 mm

② Minimum distance between the worktop cut-out and a wall or tall unit to the **right** of it:
150 mm.


③ Minimum distance between the worktop cut-out and a wall or tall unit to the **left** of it:
150 mm.

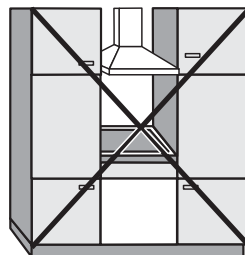


Not allowed

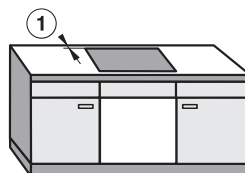

Recommended

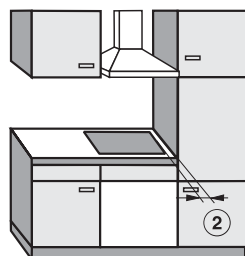

Not recommended

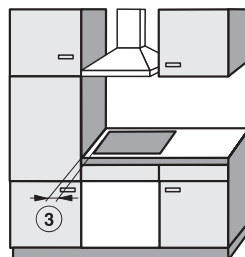

Not recommended

Safety distance when installing the appliance near a wall with additional niche cladding

A minimum safety distance must be maintained between the worktop cut-out and any niche cladding to protect it from heat damage.


If the niche cladding is made from a combustible material (e.g. wood) a minimum safety distance ⑤ of 50 mm must be maintained between the cut-out and the cladding.

If the niche cladding is made from a non-combustible material (e.g. metal, natural stone, ceramic tiles) the minimum safety distance ⑤ between the cut-out and the cladding will be 50 mm less the thickness of the cladding.


Example: 15 mm niche cladding

50 mm - 15 mm = minimum safety distance of 35 mm

Flush-fitted hobs

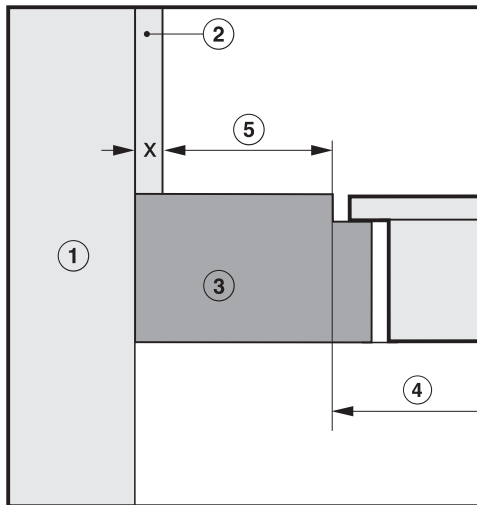


Hob with frame or bevelled edge

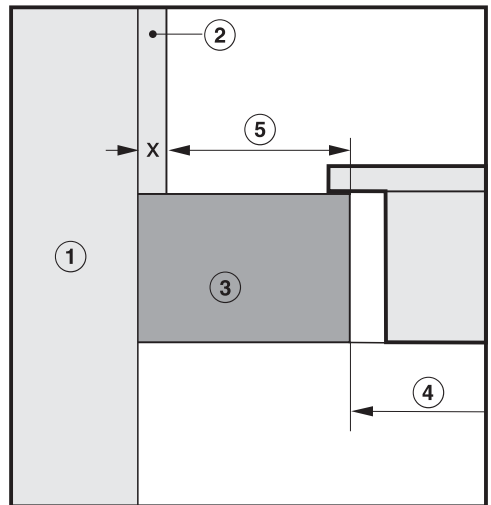

- ① Masonry
- ② Niche cladding dimension x = thickness of the niche cladding material
- ③ Worktop
- ④ Worktop cut-out
- ⑤ Minimum distance to
 - combustible** materials 50 mm
 - non-combustible** materials 50 mm - dimension x

Installation notes


Seal between the hob and the worktop

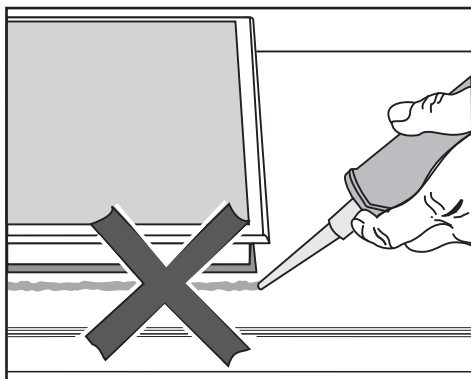

Do not use sealant between the hob and the worktop. This could result in damage to the hob or the worktop if the hob ever needs to be removed for servicing.


The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the worktop.

Tiled worktop

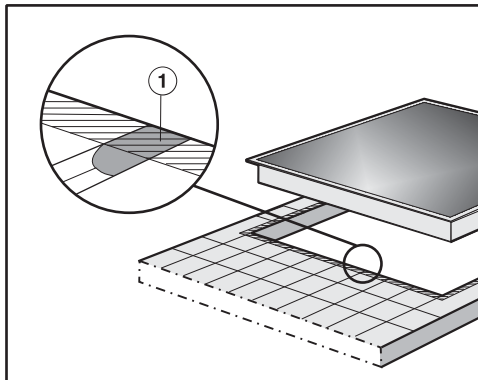

Grout lines ① and the hatched area underneath the hob frame must be smooth and even. If they are not the hob will not sit flush with the worktop and the sealing strip underneath the hob will not provide a good seal between the hob and the worktop.


KM 3034

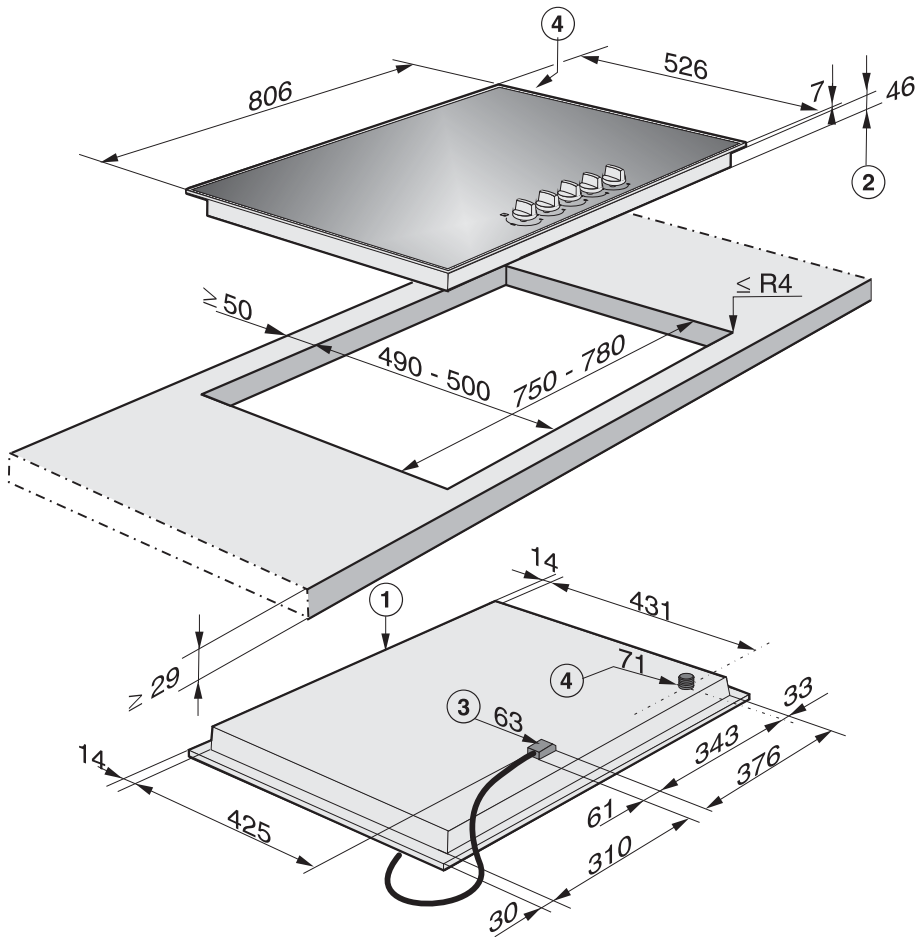

- ① Front
- ② Casing depth
- ③ Mains connection box with mains connection cable, L = 2000 mm
- ④ Gas connection R $1\frac{1}{2}$ - ISO 7-1 (DIN EN 10226)

Building-in dimensions

KM 3054

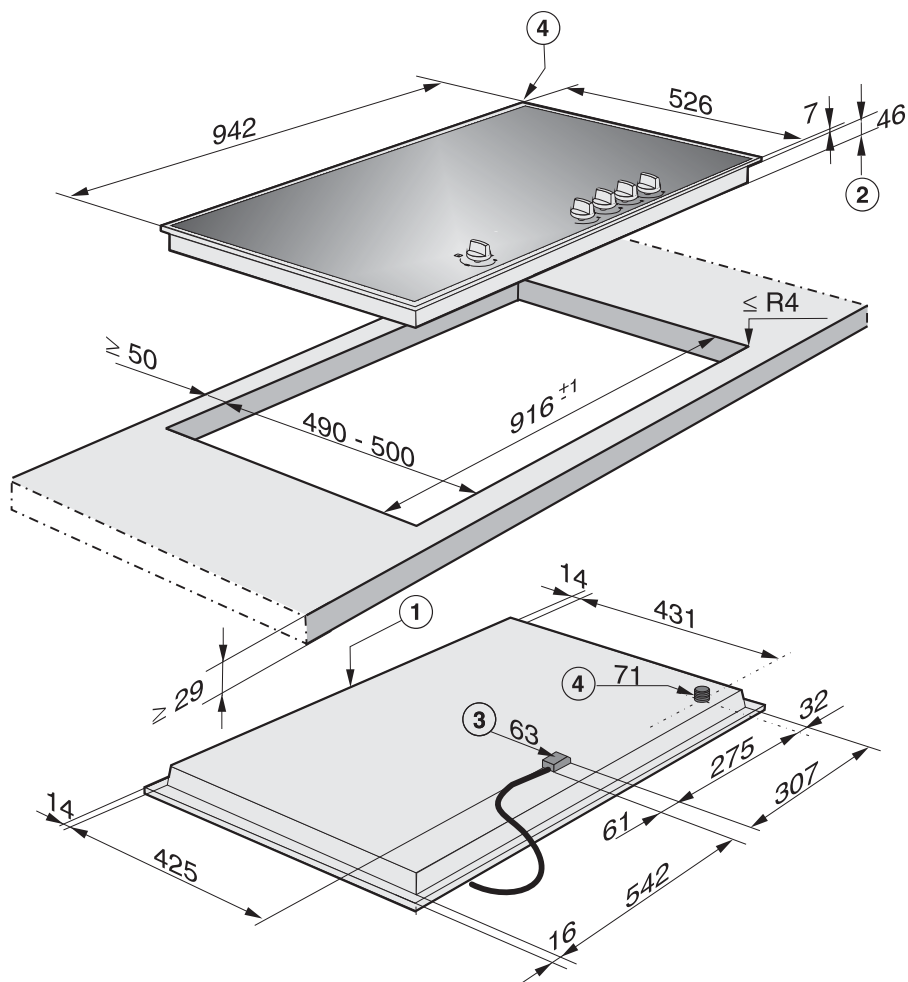

- ① Front
- ② Casing depth
- ③ Mains connection box with mains connection cable, L = 2000 mm
- ④ Gas connection R 1/2 - ISO 7-1 (DIN EN 10226)

Preparing the worktop

- Make the worktop cut-out as shown in the building-in diagram. Observe the safety distances (see "Safety distances").
- Seal the cut surfaces with a suitable sealant to avoid swelling caused by moisture. The sealant must be heat-resistant.

Make sure that the sealant does not come into contact with the top of the worktop.

The seal underneath the hob will hold it securely in the cut-out. Any gap between the frame and worktop will reduce with time.

Installing the hob

- Feed the mains connection cable down through the cut-out.
- Place the hob centrally in the cut-out. When doing this, make sure that the seal under the hob sits flush with the worktop on all sides. This is important to ensure an effective seal all round.


If the seal does not meet the worktop correctly on the corners, the corner radius ($\leq R4$) can be carefully scribed to suit.

Do not use sealant (e.g. silicone).

- Connect the hob to the mains.
- Connect the hob to the gas supply (see "Gas connection").

Installation

Securing the hob

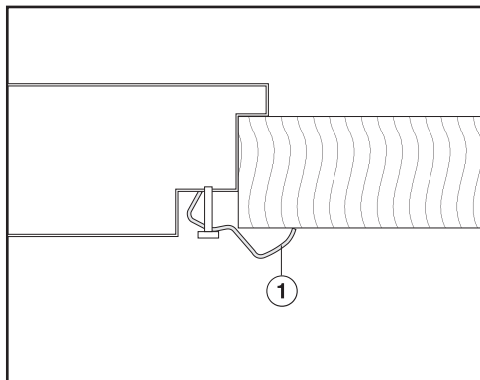

- Secure the hob using the brackets ① supplied.

Functional check

- After installing the hob, ignite all burners to check that they are operating correctly:
 - The flame must not go out on the lowest setting, or when the control is turned quickly from the highest to the lowest setting.
 - On the highest setting, the flame must have a distinctive and visible core.

All electrical work must be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7671 in the UK). Connection must be made via a switched socket. This will make it easier for service technicians should the appliance need to be repaired. The electrical socket must be easily accessible after installation.



Danger of injury.

Miele cannot be held liable for unauthorised installation, maintenance and repair work as this can be dangerous to users.

Miele cannot be held liable for damage or injury caused by incorrect installation, maintenance or repair work, or by an inadequate or faulty earthing system (e.g. electric shock).

If the plug is removed from the connection cable or if the cable is supplied without a plug, the appliance must be connected to the electrical supply by a suitably qualified electrician.

If the switched socket is not accessible after installation, or if the appliance is to be hard-wired, an additional means of disconnection must be provided for all poles. When switched off, there must be an all-pole contact gap of at least 3 mm in the switch (including switch, fuses and relays). Connection data is shown on the data plate. It must match the mains electrical supply.

After installation ensure that all electrical components are shielded and cannot be accessed by users.

Total power rating

See data plate

Connection

AC 230 V, 50 Hz

The connection data is quoted on the dataplate. It must match the household supply.

Residual current device

For extra safety, it is advisable to protect the appliance with a suitable residual current device (RCD) with a trip range of 30 mA.

WARNING

**THIS APPLIANCE MUST BE
EARTHED**

Electrical connection

Disconnecting from the mains



Danger of electric shock.

After disconnection, ensure the appliance cannot be switched back on by mistake.

To disconnect the appliance from the mains power supply, do one of the following depending on installation:

Safety fuses

- Completely remove fuses

Automatic circuit breakers

- Press the (red) button until the middle (black) button springs out.

Built-in circuit breakers

- Circuit breakers, type B or C: switch the on-off switch from 1 (on) to 0 (off).

Residual current device (RCD)

- Switch the main switch from 1 (on) to 0 (off) or press the test button.

Replacing the mains cable



Danger of electric shock.

The mains connection cable must be replaced by a suitably qualified and competent person in accordance with current local and national safety regulations. (e.g. BS 7671 in the UK).

If the mains cable needs to be replaced it must be replaced with a special connection cable, type H 05 VV-F (PVC-insulated), available from Miele.

The connection data is quoted on the data plate.

For any gas work in the UK always use a Gas Safe registered engineer.



⚠ Connection to the gas supply, or conversion to a different gas type, may only be undertaken by an approved and registered gas installer. The installer is responsible for ensuring that the appliance functions correctly when installed.

The gas connection must be installed so that connection can be made either from inside or outside the kitchen unit. The isolating valve must be easily accessible and visible (by opening the kitchen door if necessary).

Check with your local gas supplier about the type of gas its calorific value and compare this information with the type of gas quoted on the appliance's data plate.

This hob is not connected to an exhaust flue.
When installing and connecting the appliance please observe all relevant installation instructions and ensure it has adequate ventilation once installed.

Connection to the gas supply must be carried out in strict accordance with local and national safety regulations (e.g. Gas Safe in the UK). Every appliance should have its own easily accessible isolating valve and test point.

Any special local conditions relating to gas installations as well as building regulations must also be observed.

Gas connections, pipes and connection cables can suffer damage if exposed to heat from the hob.
After installation make sure that neither the gas pipe nor the mains cable can come into contact with hot parts of the appliance and that the gas pipe and connections on the hob cannot come into contact with hot gas exhaust.

Flexible gas pipes (in countries where permitted) can be damaged by incorrect routing.
Attach flexible gas pipes in such a way so that they do not come into contact with any moving kitchen parts (e.g. a drawer) and are not exposed to mechanical stress.

The hob must be set for local gas conditions and the gas connection must undergo a leakage test.

Gas connection

This hob is a class 3 appliance and is suitable for use with natural gas or liquid gas.

Category in acc. with EN 30

United Kingdom

GB II 2 H3 +20 mbar, 28-30/37 mbar

Ireland

IE II 2 H 3+20 mbar, 28-30/37 mbar

Depending on country of destination this appliance is set up for connection to natural or liquid gas. See adhesive label on the appliance.

Depending on country, a set of jets for conversion to an alternative type of gas may be included with the hob. Please contact your supplier or Miele for the appropriate conversion jets if necessary. Conversion to another type of gas is described under "Conversion to another type of gas".


Connecting the hob

The hob is supplied with a conical $\frac{1}{2}$ " gas connection point for connection to one of the following:

- Rigid connection with isolation valve
- Flexible connection in accordance with DIN 3383 Part 1, maximum length 2000 mm. (Not for the UK!)

Unsuitable sealants may not be leak-proof.

Connections must be sealed using appropriate sealant.

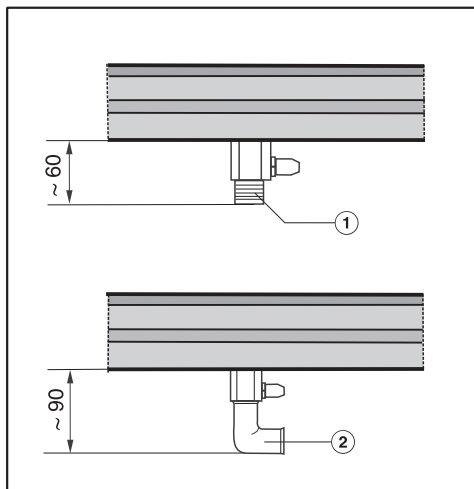

① Connection with test point specifically for GB

② 90° bend
Connection with test point specifically for GB and 90 ° bend.

Nominal ratings

Burner	Gas type	Highest setting		Lowest setting
		kW	g/h	kW
Small burner	Natural gas H	1.0	–	0.25
	Liquid gas	0.95	69	0.2
Medium burner	Natural gas H	1.7	–	0.3
	Liquid gas	1.7	124	0.35
Large burner	Natural gas H	2.7	–	0.5
	Liquid gas	2.55	186	0.6
Wok	Natural gas H	4.7	–	0.3
	Liquid gas	4.6	335	0.25
Total	Natural gas H	11.8	–	
	Liquid gas	11.5	837	

Converting to another gas type

⚠ Conversion from one type of gas to another, should only be undertaken by an approved and registered gas installer in strict accordance with current local and national safety and building regulations.
Disconnect the hob from the electricity supply and turn off the gas supply.

When converting to another type of gas, both the main **and** small jets need to be changed.

Jet table

The jet markings refer to a $\frac{1}{100}$ mm bore diameter.


	Ø	
	Main jet	Small jet
Natural gas H		
Small burner	0.76	0.39
Medium burner	0.94	0.42
Large burner	1.20	0.54
Wok burner	2x 1.07 / 0.72	0.42
Liquid gas		
Small burner	0.52	0.23
Medium burner	0.66	0.36
Large burner	0.81	0.42
Wok burner	2x 0.70 / 0.46	0.25

Changing the jets

- Disconnect the hob from the electricity supply and turn off the gas supply.

Changing the main jets


Small, medium and large burners

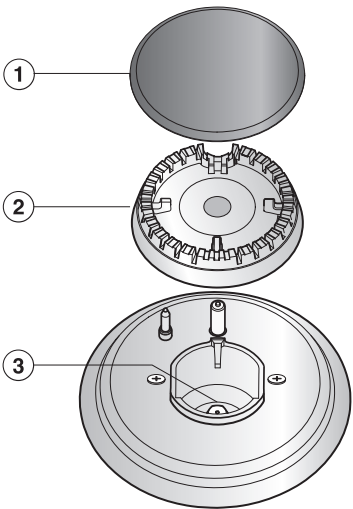

- Remove the pan support, burner cap ① and burner head ②.
- Using an M7 socket spanner, unscrew the main jet ③
- Fit the correct jets securely (see jet table).
- Secure the jets against inadvertent loosening with sealing wax.

Converting to another gas type

Wok burner

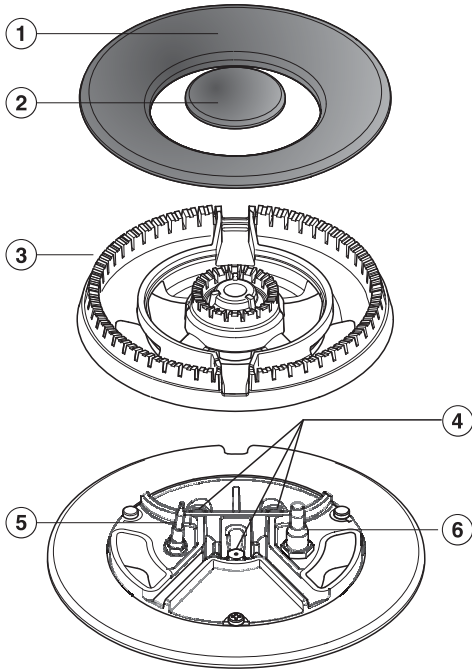


- Remove burner caps ①② and burner head ③.
- Using an M7 socket spanner, unscrew the main jets ④.
- Fit the correct jets securely (see jet table).
- Secure the jets against inadvertent loosening with sealing wax.


Changing the small jets

To change the small jets, the burner fixing screws must first be loosened and the upper section of the appliance removed.

- Pull the control knobs off.
- Remove the burner components.

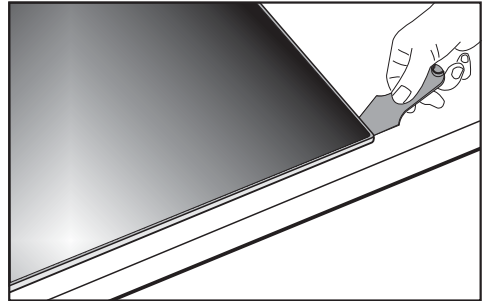

- Lift the top of the appliance off (see illustration).

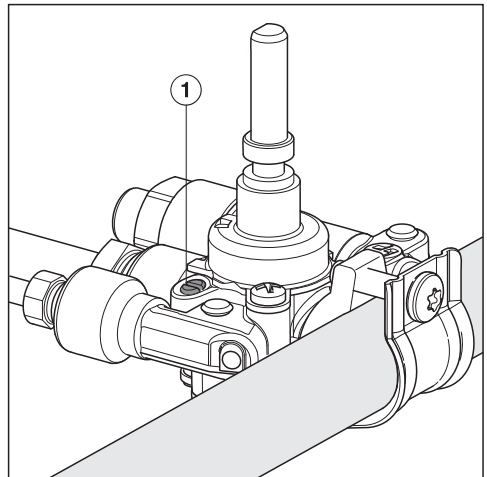

- Using a small screwdriver, unscrew the small jet ① in the gas fitting.
- Pull out the jet with a pair of pliers.
- Fit the correct jets securely (see jet table).
- Secure the jets against inadvertent loosening with sealing wax.

Converting to another gas type

Functional check

- Check all gas fittings for leaks.
- Reassemble the hob.
- Ignite all burners to check that they are operating correctly.
 - The flame must not go out on the lowest setting, or when the control is turned quickly from the highest to the lowest setting.
 - On the highest setting, the flame must have a distinctive and visible core.
- Adhere the label supplied with the jets, stating the type of gas being used.

After sales service, data plate, guarantee

After sales service

In the event of any faults which you cannot easily remedy, please contact

- your Miele Dealer, or
- Miele Service.

See end of this booklet for contact details.

Please note that telephone calls may be monitored and recorded for training purposes.

N.B. A call-out charge will be applied to service visits where the problem could have been resolved as described in these instructions.

When contacting your Dealer or Miele, please quote the model and serial number of your appliance.

Data plate

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the back page of these instructions.

Guarantee: UK

The appliance is guaranteed for 2 years from the date of purchase.

In the UK, you must activate your cover by calling 0330 160 6640 or registering online at www.miele.co.uk.

Guarantee: Other countries

For information on the appliance guarantee specific to your country please contact Miele. See end of this booklet for contact details.

Product data sheets

The following data sheets apply to the models described in this operating instruction manual.

Information for domestic gas-fired hobs

In acc. with regulation (EU) No. 66/2014

MIELE	
Model name / identifier	KM 3034
Number of gas burners	5
Energy efficiency per gas burner ($EE_{\text{gas burner}}$)	1. = 58,2 3. = 52,4 4. = 55,1 5. = 55,1
Energy efficiency for the gas hob calculated per kg ($EE_{\text{gas hob}}$)	55,2

Information for domestic gas-fired hobs

In acc. with regulation (EU) No. 66/2014

MIELE	
Model name / identifier	KM 3054
Number of gas burners	5
Energy efficiency per gas burner ($EE_{\text{gas burner}}$)	1. = 52,4 3. = 55,1 4. = 55,1 5. = 58,2
Energy efficiency for the gas hob calculated per kg ($EE_{\text{gas hob}}$)	55,2

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Customer Contact Centre Tel: 0330 160 6600
E-mail: mielecare@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
ACN 005 635 398
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: 1300 464 353
Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511
E-mail: info@miele.cn, Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay, Hong Kong
Tel: (852) 2610 1025, Fax: (852) 3579 1404
Email: customerservices@miele.com.hk
Website: www.miele.hk

India

Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola, New Delhi - 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in, Internet: www.miele.in

Ireland

Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

Miele

Malaysia

Miele Sdn Bhd
Suite 12-2, Level 12
Menara Sapura Kencana Petroleum
Solaris Dutamas No. 1, Jalan Dutamas 1
50480 Kuala Lumpur, Malaysia
Phone: +603-6209-0288
Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited
IRD 98 463 631
Level 2, 10 College Hill
Freemans Bay, Auckland 1011, NZ
Tel: 0800 464 353
Internet: www.miele.co.nz

Singapore

Miele Pte. Ltd.
163 Penang Road
04 - 03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: info@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: (011) 875 9000, Fax: (011) 875 9035
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.
Gold & Diamond Park
Office No. 217-6, Sheikh Zayed Road
P.O. Box 11 47 82 - Dubai
Tel. +971 4 3044 999
Fax. +971 4 3418 852
800-MIELE (64353)
E-Mail: info@miele.ae
Website: www.miele.ae

KM 3034 / KM 3054



en-GB

M.-Nr. 09 168 460 / 04