


# Operating and installation instructions



## Oven

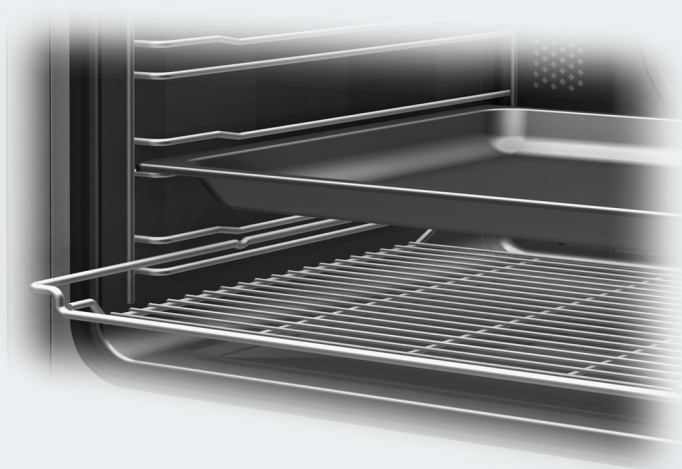


To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

# Contents

---

<b>Warning and Safety instructions</b> .....	5
<b>Caring for the environment</b> .....	16
<b>Oven overview</b> .....	17
<b>Oven controls</b> .....	18
Function selector .....	19
Temperature selector .....	19
Temperature indicator light  .....	19
Clock/timer .....	20
Display .....	20
Buttons .....	20
<b>Features</b> .....	21
Model numbers .....	21
Data plate .....	21
Items supplied .....	21
Accessories supplied and available to order.....	21
Side runners .....	22
Baking tray, universal tray and rack with non-tip notches .....	22
FlexiClip telescopic runners HFC 70 .....	23
Oven controls .....	27
Safety features .....	27
System lock  .....	27
Cooling fan .....	27
Vented oven door .....	27
PerfectClean treated surfaces .....	28
Catalytic enamelled surfaces .....	28
<b>Using for the first time</b> .....	29
Before using for the first time .....	29
Setting the time of day for the first time .....	29
Heating up the oven for the first time.....	30
<b>Overview of functions</b> .....	31
<b>Tips on saving energy</b> .....	32
<b>Using the oven</b> .....	34
Simple operation .....	34
Cooling fan .....	34
Pre-heating the oven .....	35

<b>Clock/timer</b> .....	36
Display .....	36
Symbols in the display .....	36
Buttons .....	36
How to set the time or a duration .....	37
Displaying times/durations .....	37
When the time/duration has elapsed .....	37
Using the minute minder  .....	38
To set the minute minder .....	38
To change the duration .....	39
To cancel the duration .....	39
Switching on and off automatically .....	40
Set the cooking duration .....	40
At the end of the cooking duration .....	41
Setting a cooking duration and finish time .....	42
Changing the cooking duration .....	43
Deleting a cooking duration .....	44
Deleting a finish time .....	44
Altering the time of day .....	45
Altering settings .....	46
<b>Baking</b> .....	48
Baking charts .....	49
Creamed mixture .....	50
Rubbed in mixture .....	52
Yeast mixtures and quark dough .....	54
Sponge mix .....	56
Choux pastry, puff pastry, meringue .....	57
<b>Roasting</b> .....	58
Roasting charts .....	59
Beef, veal .....	60
Pork .....	61
Lamb, game .....	62
Poultry, fish .....	63
<b>Low temperature cooking</b> .....	64
<b>Grilling</b> .....	66
Grilling chart .....	67
<b>Defrost</b> .....	70
<b>Drying food</b> .....	71

# Contents

---

<b>Frozen food/Ready meals</b> .....	72
<b>Further applications</b> .....	73
Gentle bake .....	73
Heat crockery .....	74
<b>Cleaning and care</b> .....	75
Unsuitable cleaning agents .....	75
Tips.....	76
Normal soiling.....	76
Cleaning the seal.....	76
Stubborn soiling (excluding the FlexiClip runners) .....	77
Stubborn soiling on the FlexiClip runners .....	78
Cleaning catalytic enamelled panels .....	78
Removing spice, sugar and similar deposits .....	78
Removing oil and grease splashes.....	79
Removing the door.....	80
Dismantling the door .....	81
Refitting the door.....	84
Removing the side runners with FlexiClip runners .....	85
Removing the back panel.....	86
Lowering the top heat/grill element.....	86
<b>What to do if ...</b> .....	87
<b>After Sales / Guarantee</b> .....	90
<b>Electrical connection</b> .....	91
Oven .....	91
Electrical connection: Other countries .....	92
<b>Building-in diagrams</b> .....	93
Appliance and niche dimensions .....	93
Installation in a base unit.....	93
Installation in a tall unit.....	94
Front dimensions .....	95
<b>Installing the oven</b> .....	96
<b>Note for test institutes</b> .....	97
Test food acc. to EN 60350-1 .....	97
Energy efficiency class .....	98
Data sheets for household ovens.....	98

## Warning and Safety instructions

---

This appliance complies with statutory safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for damage or injury caused by non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.

## Warning and Safety instructions

---

### Correct application

- ▶ This oven is intended for use in domestic households and similar working and residential environments.
- ▶ The oven is not intended for outdoor use.
- ▶ This oven is intended for domestic use only to cook food, and in particular to bake, roast, grill, cook, defrost and dry food. Any other use is not supported by the manufacturer and could be dangerous.
- ▶ People with reduced physical, sensory or mental capabilities, or lack of experience or knowledge who are not able to use the appliance safely on their own must be supervised whilst using it. They may only use it unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- ▶ This oven is supplied with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This special lamp must only be used for the purpose it is intended for. It is not suitable for room lighting.

### Safety with children

- ▶ Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.
- ▶ Children 8 years and older may only use the oven unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean or maintain the appliance unsupervised.
- ▶ Please supervise children in the vicinity of the oven and do not let them play with it.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.

## Warning and Safety instructions

---

► Danger of burning. Children's skin is far more sensitive to high temperatures than that of adults. External parts of the oven such as the door glass, control panel and the vents become quite hot during use. Do not let children touch the oven whilst it is in use.

► Danger of injury. The door can support a maximum weight of 15 kg.

Do not let children sit on the door, lean against it or swing on it. They could injure themselves.



### Technical safety

- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ Never use a damaged oven. It could be dangerous. Check it for visible signs of damage before using it.
- ▶ Reliable and safe operation of this oven can only be assured if it has been connected to the mains electricity supply.
- ▶ The electrical safety of this appliance can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ To avoid the risk of damage to the oven, make sure that the connection data on the data plate (voltage and frequency) match the mains electricity supply before connecting the oven to the mains. Consult a qualified electrician if in doubt.
- ▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (fire hazard).
- ▶ For safety reasons, this appliance may only be used after it has been built in.
- ▶ The oven must not be used in a non-stationary location (e.g. on a ship).
- ▶ Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.  
Never open the casing of the appliance.
- ▶ While the appliance is under guarantee, repairs should only be undertaken by a Miele authorised service technician. Otherwise the guarantee is invalidated.

## Warning and Safety instructions

---

- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.
- ▶ If the connection cable is damaged or if the oven is supplied without a cable, it must be replaced or fitted with a special connection cable by a Miele authorised technician (see "Electrical connection").
- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply, e.g. if the oven lighting is faulty (see "Problem solving guide" and "Electrical connection").
- ▶ In order to function correctly, the oven requires an adequate supply of cool air. Ensure that the supply of cool air is not impaired (e.g. by heat insulation strips in the housing unit). Please also ensure that the cool air supply is not unduly heated by other heat sources such as a solid fuel stove.
- ▶ If the oven is installed behind a furniture panel (e.g. a door), ensure that the door is never closed whilst the oven is in use. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the oven, the housing unit and the floor. Do not close the door until the oven has cooled down completely.

### Correct use



Danger of burning.

The oven becomes hot when in use.

You could burn yourself on the heating elements, oven interior, cooked food or oven accessories.

Wear oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

► Due to the high temperatures radiated, objects left near the oven when it is in use could catch fire.

Do not use the oven to heat up the room.



► Oil and fat can ignite if overheated. Never leave the oven unattended when cooking with oil and fat.

If it does ignite do not put the flames out with water. Switch the oven off immediately and then suffocate the flames by keeping the oven door closed.

► Grilling food for an excessively long time can cause it to dry out with the risk of catching fire.

Do not exceed recommended grilling times.

► Some types of food dry out quickly and can self-ignite if high grill temperatures are used.

Never use the grill to finish baking part-cooked rolls or bread or to dry flowers or herbs. Use Fan plus  or Conventional heat  for this type of procedure.

► If using alcohol in your recipes, please be aware that high temperatures can cause the alcohol to vaporise. The vapour can catch fire on hot heating elements.

## Warning and Safety instructions

---

► When using residual heat to keep food in the oven warm, the high moisture content and amount of condensation in the oven can cause corrosion damage. The control panel, the worktop or the housing unit can also suffer damage.



When using residual heat do not switch the oven off. Instead set the temperature to the lowest setting and leave the oven on the selected function. The fan will then remain on automatically and dissipate the moisture.

► Food which is stored in the oven or left in it to be kept warm can dry out and the moisture released can lead to corrosion damage in the oven.

Always cover food that is left in the oven to keep warm.

► A build-up of heat can cause the enamel on the floor of the oven to crack or shatter.

Do not line the floor of the oven with anything, e.g. aluminium foil or oven liners.

If you wish to place dishes on the floor of the oven during cooking, or place crockery on the floor of the oven to heat it up, you can do so, but only with the Fan plus  or Gentle bake  function.

► The enamelling on the oven floor can become damaged by items being pushed around on it.

If using the oven to store pots and pans, ensure that you avoid pushing them around on the oven floor.

► If cold liquid is poured onto a hot surface steam will occur, which can cause scalding. The sudden change in temperature can also damage enamel surfaces.

Do not pour cold liquid directly onto hot enamelled surfaces.

► It is important that the temperature in the food being cooked is evenly distributed and sufficiently high. Stir and / or turn it to ensure even heat distribution.

## Warning and Safety instructions

---

- ▶ Plastic containers which are not suitable for use in an oven can melt at high temperatures and can even damage the oven or catch fire.  
Only use plastic containers which are declared by the manufacturer as being suitable for use in an oven. Follow the manufacturer's instructions on use.
- ▶ Do not heat up food in closed containers e.g. tins or sealed jars in the oven, as pressure will build up in the container, causing it to explode.
- ▶ You could injure yourself on the open oven door or trip over it.  
Avoid leaving the door open unnecessarily.
- ▶ The door can support a maximum weight of 15 kg. Do not sit on or lean against an open door, and do not place heavy objects on it. Also make sure that nothing can get trapped between the door and the oven cavity. The oven could get damaged.

## Warning and Safety instructions

---

### **Stainless steel appliances**

- ▶ Adhesives will damage the stainless steel surface and cause it to lose its dirt-repellent protective coating. Do not use sticky notes, transparent adhesive tape, masking tape or other types of adhesive on the stainless steel surface.
- ▶ The surface is susceptible to scratching. Even magnets can cause scratching.

### **Cleaning and care**

- ▶ Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.
- ▶ Scratches on the door glass can result in the glass breaking. Do not use abrasive cleaners, hard sponges, brushes or sharp metal tools to clean the door glass.
- ▶ The side runners can be removed for cleaning (see "Cleaning and care").  
Ensure that they are replaced correctly.
- ▶ The catalytic enamelled panels can be removed for cleaning purposes (see "Cleaning and care").  
Ensure that the panels are replaced correctly and do not use the oven without them fitted.

### Accessories

► Only use genuine original Miele accessories and spare parts with this appliance. Using accessories or spare parts from other manufacturers will invalidate the guarantee, and Miele cannot accept liability.

► If you have a Miele HUB 5000-M, HUB 5001-M, HUB 5000-XL or a HUB 5001-XL oven dish, do not place it on Shelf level 1. This would damage the floor of the oven. The very small gap between the bottom of the dish and the oven floor would cause a build-up of heat and could cause the enamel to crack or chip.

Never place a Miele oven dish on the top rail of Shelf level 1 as it will not be held securely in this position by the anti-tip notches on the runners.

In general it is best to use Shelf level 2.

# Caring for the environment

---

## Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.


## Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer or Miele for advice. You are also responsible (by law, depending on country) for deleting any personal data that may be stored on the appliance being disposed of. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.




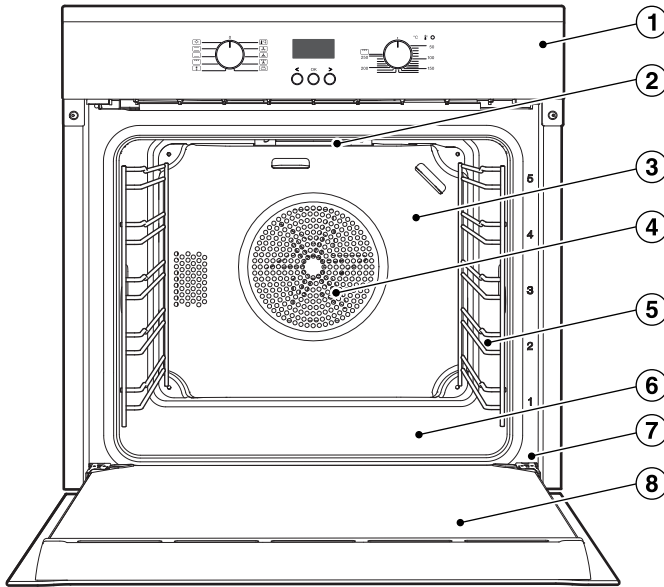

- ① Oven controls \*
- ② Top heat/grill element
- ③ Catalytic enamelled back panel
- ④ Air inlet for the fan with ring heating element behind it
- ⑤ Side runners with 5 shelf levels
- ⑥ Oven floor with bottom heat element underneath it
- ⑦ Front frame with data plate
- ⑧ Door

\* feature will vary depending on model

# Oven controls

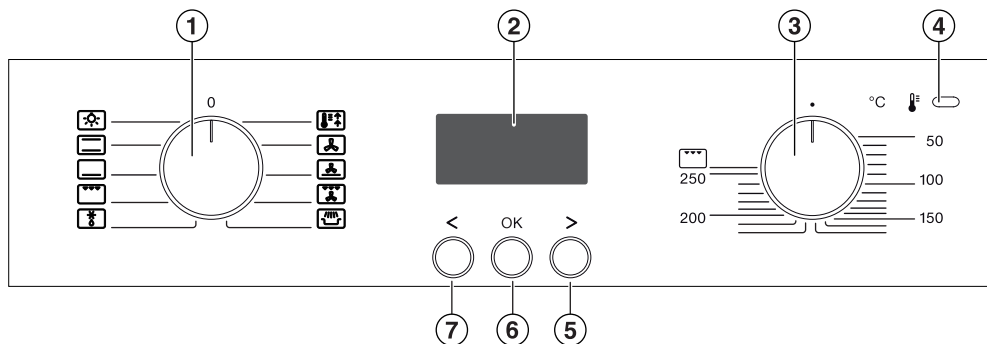

- ① Function selector  
For selecting oven functions
- ② Clock/timer  
For displaying the time of day and settings
- ③ Temperature selector  
For setting the temperature
- ④ Temperature indicator light  
Indicates that the oven is heating up
- ⑤ > button  
For modifying times and settings.
- ⑥ OK button  
For selecting functions and confirming settings.
- ⑦ < button  
For modifying times and settings.

## Function selector

Use the function selector to select the required function and switch on the oven lighting independently.

It can be turned clockwise or anti-clockwise.

In the **0** position it can be retracted by pressing it in.

### Functions



*Lighting*



*Conventional heat*



*Bottom heat*



*Grill*



*Defrost*



*Rapid heat-up*



*Fan plus*



*Intensive bake*



*Fan grill*



*Gentle bake*


## Temperature selector

Use the temperature selector to select the temperature for the cooking processes.

It can be turned clockwise until a resistance is felt and then back again. The temperature selector can be retracted when it is in the **•** position by pressing it in.

The temperature settings are marked on the temperature selector and on the control panel with ovens.

### Temperature indicator light

The temperature indicator light  lights up whenever the oven is heating up.

As soon as the set temperature is reached:

- The oven heating switches off.
- The temperature indicator light goes out.

The temperature control unit ensures that the oven heating and the temperature indicator light switch back on if the temperature in the oven temperature falls below the level set.

# Oven controls

---

## Clock/timer

The clock/timer is operated via the **display** and the <, *OK* and > buttons.

### Display

The display shows the time of day or your settings.

It goes dark if settings are not being entered.

Please refer to "Clock/Timer" for more information.

### Buttons

The H256xB/H266xB has sensor controls which react to finger touch. Each touch is confirmed with a keypad tone.

This keypad tone can be switched off if wished. Go to setting and select status 5 / (see "Clock/timer – Altering settings").

All the other models have push buttons.

## Model numbers

A list of the ovens described in these operating instructions can be found on the back page.

## Data plate

The data plate is located on the front frame, visible when the door is open.

The data plate states the model number of your oven, the serial number as well as connection data (voltage, frequency and maximum connected load).

Please have this information to hand, should you need to contact Miele regarding any questions or problems.

## Items supplied

The oven is supplied with:

- the operating and installation instructions for using the oven,
- screws for securing your oven in the housing unit,
- various accessories.

## Accessories supplied and available to order

Accessories will vary depending on model.

Your oven will be supplied with side runners, a universal tray and a rack. Depending on model, your oven may also come supplied with some or several of the accessories listed here.

All the accessories listed as well as the cleaning and care products are designed for Miele ovens.


These are available to order via the Miele Webshop, the Miele Spare Parts Department (see end of this booklet for contact details) or from your Miele dealer.

When ordering, please quote the model number of your oven and the reference number of the accessories required.

# Features

---

## Side runners

Side runners for trays, racks and Miele oven dishes are fitted on either side of the oven cavity for shelf levels .

The numbers for the shelf levels are marked on the front frame.

Each level consists of two rails, one above the other.


The accessories (e.g. the rack) are pushed into the oven between the two rails.

FlexiClip telescopic runners (depending on model) are fitted on the lower rail.


The side runners can be removed for cleaning (see "Cleaning and care").

## Baking tray, universal tray and rack with non-tip notches


Baking tray HBB 71:

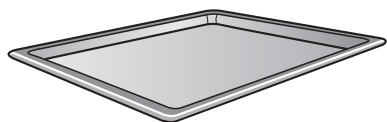

Universal tray HUBB 71:

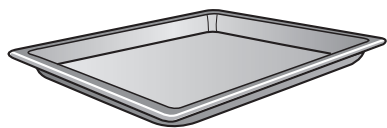

Rack HBBR 71:

 

These accessories are inserted into the oven between the two rails of a side runner.

Always position the rack as illustrated.


The accessories have non-tip safety notches half way along the short edges which prevent them from being pulled right out when they only need to be pulled partially out.



If you are using the universal tray with the rack on top, insert the tray between the rails of the side runners and the rack will automatically slide in above them.

The enamelled surfaces have been treated with PerfectClean.



## FlexiClip telescopic runners HFC 70

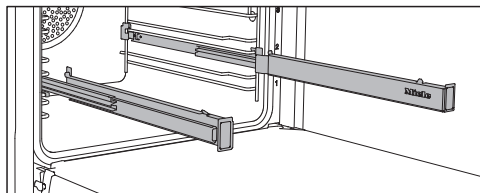

The FlexiClip telescopic runners can be used with any shelf level.


Push the FlexiClip telescopic runners right into the oven before placing accessories on them.

The accessories will then automatically sit securely in between the stoppers at either end of each runner and be prevented from sliding off.

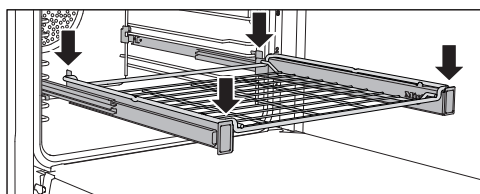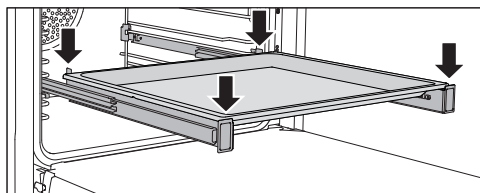

The FlexiClip runners can support a maximum load of 15 kg.


## Fitting and removing FlexiClip telescopic runners

 **Danger of burning.**  
Make sure the oven heating elements are switched off and cool.

The FlexiClip runners are fitted in between the two rails that make up a shelf level.


The FlexiClip runner with the Miele logo is fitted on the right.

When fitting the FlexiClip telescopic runners **do not** extend them.

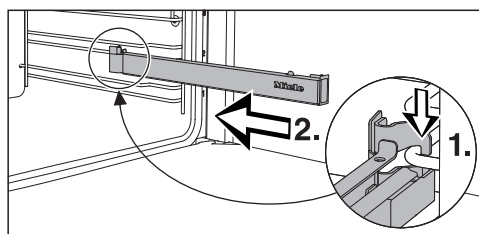

- Hook the FlexiClip runner onto the front of the lower rail of a side runner (1.) and then push it along the rail into the oven compartment (2.).

## Features

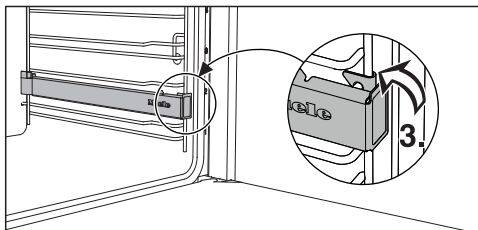


- Then secure the FlexiClip runner to the lower of the two rails as illustrated (3).

If the FlexiClip runners are difficult to pull out after fitting, you may need to pull firmly on them once to release them.

To remove a FlexiClip runner:

- Push the FlexiClip runner in all the way.

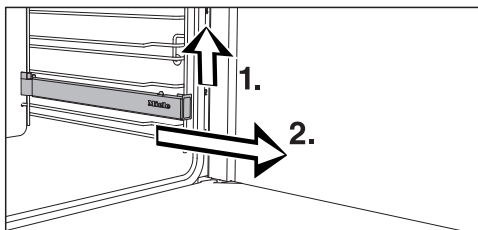

- Remove the FlexiClip runner by raising it at the front (1) then pulling it forwards along the rail and out (2).


### Round baking tray HBF 27-1



The round baking tray is suitable for cooking pizza, shallow cakes made with yeast or whisked mixtures, sweet and savoury tarts, baked desserts, flat bread, and can also be used for frozen cakes and pizzas.

The enamelled surface has been treated with PerfectClean.

### Perforated baking tray HBBL 71

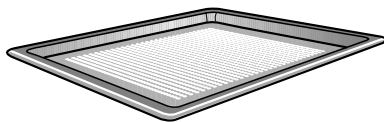

The perforated baking tray has been specially designed for baking fresh yeast and quark dough items, bread and rolls.

The fine perforations help to brown the underside of food.


The tray can also be used for drying fruit and vegetables.

The enamelled surface has been treated with PerfectClean.

The round perforated baking tray HBFP 27-1 can be used for the same things.



## Baking stone HBS 60

 


The baking stone is ideal for items which need a well baked base such as pizza, quiche, bread, bread rolls and savoury snacks.

The baking stone is made from heat retaining fire brick and is glazed. Place it directly on the rack.

A paddle made of untreated wood is supplied with it for placing food on the baking stone and taking it off.

## Anti-splash insert HGBB 71

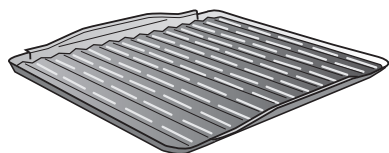

The anti-splash insert fits in the universal tray.

The juices from the food being grilled or roasted collect under the insert. This prevents them from spitting and making the oven dirty. The juices can then be used for making gravy and sauces.

The enamelled surface has been treated with PerfectClean.

## HUB Gourmet oven dishes HBD Gourmet oven dish lids

The Miele gourmet oven dishes, unlike other oven dishes, slide into the oven on the side runners. They have non-tip safety notches like the rack to prevent them being pulled out too far. They also have a non-stick coating.

Gourmet oven dishes are available in two sizes. The width and the height are the same for both.


Suitable lids are available separately. Please quote the model number when ordering a lid.

### Depth: 22 cm

HUB 5000-M  
HUB 5001-M \*




 HBD 60-22




### Depth: 35 cm

 HUB 5000-XL  
HUB 5001-XL \*



HBD 60-35

 


\* suitable for use on induction hobs

# Features

 ---

## Handle HEG



The handle makes it easier to take the universal tray, baking tray and rack out of the oven, or to put them into it.

## Catalytic enamelled liners

- Side liners  
These are fitted behind the side runners in the sides of the oven and help keep the oven walls clean.
- Roof liner  
This is fitted above the top heat/grill element and helps keep the roof of the oven clean.
- Back panel  
This should be replaced if the catalytic enamel has become ineffective due to incorrect use or very heavy soiling.

When ordering, please quote the model number of your oven.

## Miele microfibre cloth

Light soiling and fingerprints can be easily removed with the microfibre cloth.

## Miele oven cleaner

Miele oven cleaner is suitable for removing very stubborn soiling. It is not necessary to pre-heat the oven beforehand.

## Oven controls


The oven controls are used to operate the various cooking functions for baking, roasting and grilling.

They are also used for

- Time of day display
- Minute minder
- Switching cooking processes on and off automatically
- Selecting settings

## Safety features

### System lock

The system lock prevents the oven from being used unintentionally (see "Clock/timer - Altering settings – P 3"). When the system lock is engaged  will appear in the display.

## Cooling fan

The cooling fan will come on automatically when a cooking programme is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

This cooling fan will switch itself off automatically after a certain period of time.

## Vented oven door

The oven door glass panes have a heat-reflecting coating.

When the oven is operating, air is passed through the door to keep the outer pane cool.

The door can be removed and dismantled for cleaning (see "Cleaning and care").

# Features

---

## PerfectClean treated surfaces

PerfectClean surfaces have very good non-stick properties and are much easier to keep clean than conventional enamel surfaces, if cleaned regularly.

Food can be taken off these surfaces easily, and soiling from baking and roasting is simple to remove.

Food can be sliced or cut up on PerfectClean surfaces.

Do not use ceramic knives as these will scratch the PerfectClean surface.

Surfaces treated with PerfectClean enamel can be cleaned as you would clean glass.

Read the instructions in "Cleaning and care" so that the benefits of the non-stick properties and easy cleaning are retained.

The following have all been treated with PerfectClean:


- Oven interior
- Universal tray
- Baking tray
- Anti-splash insert
- Gourmet perforated baking tray
- Round baking tray
- Round perforated baking tray

## Catalytic enamelled surfaces

The back panel, roof liner (if fitted) and side liners (if fitted) are coated with catalytic enamel. Soiling from oil and fat is burnt off this surface when very high temperatures are used in the oven.

See "Cleaning and care" for more information.

### Before using for the first time

 The oven must not be operated until it has been correctly installed in its housing unit.

- Press and release the function and temperature selectors if they are retracted.

The time of day can only be changed when the function selector is at **0**.

- Set the time of day

### Setting the time of day for the first time

The time of day is shown in 24 hour clock format.




After connecting the oven to the electricity supply, *12:00* will flash in the display.

The time of day is set in segments: first the hours, then the minutes.

- Confirm with OK.

*12:00* will light up and  will flash.

- While the  symbol is flashing confirm with OK.

The hours will flash.

- Use < or > to set the hours.

- Confirm with OK.

The hours are saved and the minutes will flash.

- Use < or > to set the minutes.

- Confirm with OK.

The time of day is now saved.


The time of day can be displayed in 12 hour format by setting *P 2* in the settings menu to status *12* (see "Clock/timer – Altering settings").

## Using for the first time

### Heating up the oven for the first time


New ovens can give off an unpleasant smell on first use. Heating up the oven for at least 1 hour with nothing in it will get rid of this smell.

Ensure that the kitchen is well ventilated during this operation. Close doors to other rooms to prevent the smell spreading throughout the house.

- Remove any stickers or protective foil from the oven and accessories.
- Take the accessories out of the oven and clean them (see "Cleaning and care").
- Before heating the oven up, wipe the interior with a damp cloth to remove any dust or bits of packaging that may have accumulated in the oven cavity during storage and unpacking.
- Select Fan plus .

The oven heating, lighting and cooling fan will switch on.

- Set the maximum temperature (250 °C).
- Heat the empty oven for at least an hour.
- After the heating up process has finished, turn the function selector to **0** and the temperature selector to **•**.







 




 Danger of burning. Allow the oven to cool down before cleaning by hand.

- Clean the oven interior with a clean sponge and a solution of hot water and washing-up liquid or a damp microfibre cloth.
- Dry all surfaces with a soft cloth.

Leave the oven door open until the oven interior is completely dry.

## Overview of functions





Your oven has a range of oven functions for preparing food.

Function	Description
<b>Conventional heat</b> 	For baking and roasting traditional recipes, cooking soufflés and cooking at low temperatures.  If using an older recipe or cookbook, set the oven temperature for Conventional heat 10 °C lower than that recommended. This will not change cooking times.
<b>Bottom heat</b> 	Use this setting towards the end of cooking to brown the base of a cake, quiche or pizza.
<b>Grill</b> 	For grilling thin cuts (e.g. steak) and browning baked dishes.
<b>Defrost</b> 	For the gentle defrosting of frozen food.
<b>Rapid heat-up</b> 	For pre-heating the oven quickly. The oven function required must then be selected.
<b>Fan plus</b> 	This function is used for baking and roasting on different levels at the same time. A lower temperature can be selected than when using Conventional heat  , as the fan distributes the heat around the oven compartment straight away.
<b>Intensive bake</b> 	For baking cakes with moist toppings. Intensive bake is not suitable for baking thin biscuits or for roasting as the juices will become too dark.
<b>Fan grill</b> 	For grilling thicker cuts of meat (e.g. chicken). Lower temperatures can be used than when using the Grill  function, as the fan distributes the heat around the oven compartment straight away.
<b>Gentle bake</b> 	For small amounts e.g. of frozen pizza, bake-off rolls, cookies and for meat dishes and roasts. You can save up to 30 % energy compared to cooking with a standard oven function as long as the door is kept shut during cooking.  The oven lighting does not switch on with this function.

## Tips on saving energy

---

### Cooking

- Remove any accessories from the oven that you do not require for cooking.
- Pre-heat the oven only if instructed to do so in the recipe or the cooking chart.
- Avoid opening the door during cooking.
- In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest given time.
- It is best to use dark baking tins and containers with a matt finish made from non-reflective materials (enamelled steel, oven-proof glassware, non-stick coated cast aluminium). Shiny materials such as stainless steel or aluminium reflect heat, preventing it reaching the food efficiently. Do not cover the oven floor or the rack with heat-reflective aluminium foil.
- Observe cooking durations to avoid energy wastage when cooking food.
- Wherever possible set the cooking duration, or use a food probe.
- Fan plus  can be used for cooking many types of food. Because the fan distributes the heat to food straight away it allows you to use a lower temperature than you would with Conventional heat . It also enables you to cook on several shelf levels at the same time.
- Gentle bake  is an innovative function that makes optimum use of residual heat. You can save up to 30 % energy compared to cooking with a standard oven function as long as the door is kept shut during cooking.
- Fan grill  can be used for a wide variety of food and you can use lower temperatures than with other grill functions which use the maximum temperature setting.
- Whenever possible you should cook several dishes at the same time. Place them next to each other in the oven or on different shelf levels.
- Dishes which you are unable to prepare at the same time should, if possible, be cooked one after the other in order to make use of existing heat in the oven.



### Using residual heat

- The temperature in cooking programmes using temperatures above 140 °C which take longer than 30 minutes to cook can be turned down to the lowest possible temperature about 5 minutes before the end of cooking in order to make use of residual heat. Do not switch the oven off (see "Warning and safety instructions").
- If you wish to clean catalytic enamelled parts of the oven, it is best to do so immediately after a cooking programme. The residual heat in the oven will help reduce the amount of energy required.

# Using the oven

---

## Simple operation

- Place the food in the oven.
- Select the required oven function with the function selector.

The oven lighting and the fan will switch on.

- Use the temperature selector to set the temperature.

The oven heating will switch on.

After cooking:

- Turn the function selector to **0** and the temperature selector to **•**.
- Take the food out of the oven.

## Cooling fan

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

This cooling fan will switch itself off automatically after a certain period of time.

## Pre-heating the oven

It is only necessary to pre-heat the oven in a few instances.

Most dishes can be placed in a cold oven. They will then make use of the heat produced during the heating-up phase.

Pre-heat the oven when cooking the following food with the following oven functions:

### Fan plus


- dark bread dough
- beef sirloin joints and fillet



### Conventional heat

- cakes and biscuits with a short baking time (up to 30 minutes)
- delicate mixtures (e.g. sponges)
- dark bread dough
- beef sirloin joints and fillet

## Rapid heat-up

With Rapid heat-up  the heating up phase can be shortened.

Do not use Rapid heat-up  to pre-heat the oven when baking pizzas or biscuits and small cakes. They will brown too quickly on top.

- Select Rapid heat-up .
- Select a temperature.
- When the temperature indicator light  goes out for the first time, set the oven function you require for continued cooking.
- Place the food in the oven.

# Clock/timer

The clock/timer offers the following functions:

- Time of day display
- Minute minder
- Switching cooking processes on and off automatically
- Altering settings *P*


The clock/timer is operated via the **display** and the <, OK and > buttons.







The functions available are indicated by symbols.

## Display



## Symbols in the display

Depending on the position of the function selector  and/or whether a button has been pressed, the following symbols appear:

Symbol/function		
	Minute minder	Any
	Duration	Function
	End of cooking duration	
	Time of day	0
<i>P</i>	Setting	
5	Setting status	
	System lock	

You can only set or change a function if the function selector is in the correct position.

## Buttons

Button	Use
<	<ul style="list-style-type: none"><li>- To highlight a function</li><li>- To reduce a duration</li><li>- To access Settings <i>P</i></li><li>- To change the status 5 of a setting <i>P</i></li></ul>
>	<ul style="list-style-type: none"><li>- To highlight a function</li><li>- To increase a duration</li><li>- To change the status 5 of a setting <i>P</i></li></ul>
OK	<ul style="list-style-type: none"><li>- To confirm a function</li><li>- To save set durations and altered settings</li><li>- To confirm set durations</li></ul>

Hours, minutes or seconds are set with the < or > buttons in individual steps. Holding the button pressed will speed up the change in the display.

## How to set the time or a duration

Times are set in segments:

- For the time of day and cooking durations, first the hours, then the minutes.
- For the minute minder, first the minutes, then the seconds.

■ Confirm with OK.

Depending on the position of the function selector, the functions (⏰, ⌚, ⌚ or ⌚) will appear.

- Highlight the function required with < or >.

The appropriate symbol will flash for about 15 seconds.

- While the symbol is flashing confirm with OK.

This selects the function and the left numeric block will start to flash.

You can only set the time/duration while the numeric block is flashing. If you run out of time you will have to select the function again.

- Use < or > to enter the value required.
- Confirm with OK.

The right numeric block will start to flash.

- Use < or > to enter the value required.
- Confirm with OK.

The time/duration you have set is now saved.

## Displaying times/durations

If times/durations have been entered, the ⏰ and ⌚ or ⌚ symbols will appear to show that these have been set.

If you are using the minute minder ⌚, cooking duration ⌚ and end of cooking time ⌚ functions simultaneously, the last selected time will be displayed.

If you have selected a cooking duration, the time of day cannot be displayed.

## When the time/duration has elapsed

Once the time has elapsed, the relevant symbol will flash and a buzzer will sound, if this option is selected (see "Clock/timer - Altering settings").

- Confirm with OK.

The buzzer will stop and the symbols in the display will go out.

## Clock/timer

### Using the minute minder

The minute minder can be used to time other activities in the kitchen, e.g. boiling eggs.


The minute minder can also be used at the same time as a cooking programme in which the start and finish times have been set, e.g. as a reminder to stir a dish or add seasoning etc.

A maximum minute minder time of 99 minutes and 59 seconds can be set.

#### To set the minute minder

Example: You want to boil some eggs and set a minute minder duration of 6 minutes and 20 seconds.



■ Press < repeatedly until  starts to flash.

■ Confirm with OK.



00:00 will appear and the minutes block will flash.

If you then press < once, two lines will appear and, after pressing again, the maximum possible minute value 99 will appear.



■ Use < or > to set the minutes.

■ Confirm with OK.

The minutes are saved and the seconds will flash.




■ Set the seconds using < or >.


■ Confirm with OK.



The minute minder is saved and will count down in seconds.

The  symbol indicates the minute minder has been set.

## At the end of the minute minder duration

-  will flash.
- the display will show the time counting upwards,
- A buzzer will sound for approx. 7 minutes, if this option is selected (see "Clock timer - Altering settings").

### ■ Confirm with OK.

The buzzer will stop and the symbols in the display will go out.

If cooking durations have not been set, the time of day will appear in the display.

## To change the duration

- Press < repeatedly until  starts to flash.

The minute minder duration selected appears.

### ■ Confirm with OK.

The minutes block will flash.

- Use < or > to set the minutes.

### ■ Confirm with OK.

The seconds block will flash.

- Set the seconds using < or >.

### ■ Confirm with OK.

The changed minute minder duration is saved and will count down in seconds.

## To cancel the duration

- Press < repeatedly until  starts to flash.

- Confirm with OK.

The minutes block will flash.

- Decrease the minutes to 00 by pressing <, or increase them to 99 by pressing >.

The next time the relevant button is pressed, two lines will appear instead of the minutes:



- Confirm with OK.

Four lines will appear:



- Confirm with OK.

The minute minder duration is now cancelled.

If cooking durations have not been set, the time of day will appear in the display.

# Clock/timer

## Switching on and off automatically

Cooking programmes can be switched off, or on and off automatically.

To do this, set a duration or a duration and finish time after selecting an oven function and a temperature.

The maximum duration which can be set for a cooking programme is 11 hours and 59 minutes.

We recommend switching on and off automatically when roasting.

If using it for baking, do not delay the start for too long as the cake mixture or dough will dry out, and the raising agents will lose their effectiveness.


## Set the cooking duration

Example: to bake a cake for 1 hour 5 minutes

- Place the food in the oven.
- Select the required oven function and the temperature.


The oven heating, lighting and cooling fan will switch on.

- Press > repeatedly until  starts to flash.

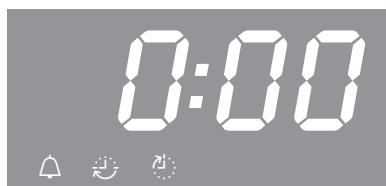

0:00 will appear.


- Confirm with OK.

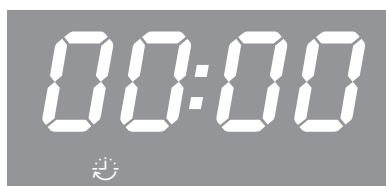

00:00 will appear and the hour numeric block will start to flash.

If you then press < once, two lines will appear and, after pressing again, the maximum possible hour value ## will appear.




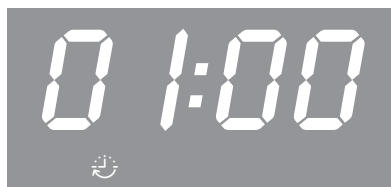

■ Use < or > to set the hours.


■ Confirm with OK.

The hours are saved and the minutes will flash.

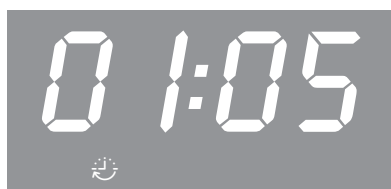

■ Use < or > to set the minutes.

■ Confirm with OK.

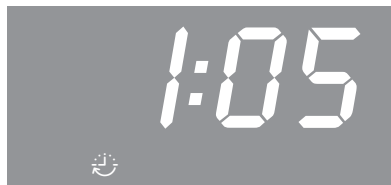

The cooking duration is saved and then counts down in minutes, with the last minute counting down in seconds.

The 🕒 symbol indicates a cooking duration has been set.

### At the end of the cooking duration

- 0:00 will appear.
- 🕒 will flash.
- The oven heating will switch off automatically.
- The cooling fan continues to run.
- A buzzer will sound for approx. 7 minutes, if this option is selected (see "Clock timer - Altering settings").

■ Confirm with OK.

- The buzzer will stop and the symbols in the display will go out.
- The time of day will appear.
- The oven heating will then switch on again.
- Turn the function selector to 0 and the temperature selector to •.
- Take the food out of the oven.

# Clock/timer

## Setting a cooking duration and finish time


A cooking duration and finish time can be set to switch a cooking programme on and off automatically.

Example: the time is now 11:15; you want a dish with a cooking duration of 90 minutes to be ready at 13:30.

- Place the food in the oven.
- Select the required oven function and the temperature.

The oven heating, lighting and cooling fan will switch on.

### Set the cooking duration first:

- Press > repeatedly until  starts to flash.
- Confirm with OK.


00:00 will appear and the hour numeric block will start to flash.


- Use < or > to set the hours.
- Confirm with OK.

The hours are saved and the minutes will flash.


- Use < or > to set the minutes.
- Confirm with OK.

The cooking duration is now saved.

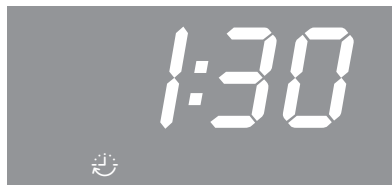

The  symbol indicates a cooking duration has been set.

## Now set the finish time:

- Press > repeatedly until  starts to flash.



12:45 will appear in the display (current time of day + cooking duration = 11:15 + 1:30).

- Confirm with OK.

The hours will flash.

 


- Use < or > to set the hours.
- Confirm with OK.

The hours are saved and the minutes will flash.




- Use < or > to set the minutes.
- Confirm with OK.

The finish time  is now saved.

The oven heating, lighting and cooling fan will switch off.

The selected finish time appears in the display.

As soon as the start time (13:30 - 1:30 = 12:00) is reached, the oven heating, lighting and cooling fan will switch on.

The set cooking duration  appears and then counts down in minutes, with the last minute counting down in seconds.

### Changing the cooking duration

- Press > repeatedly until  starts to flash.

The cooking duration remaining will appear in the display.

- Confirm with OK.

The hours will flash.

- Use < or > to set the hours.

- Confirm with OK.

The minutes block will flash.


- Use < or > to set the minutes.

- Confirm with OK.

The altered cooking duration is now saved.

# Clock/timer


## Deleting a cooking duration

- Press < or > repeatedly until  starts to flash.

- Confirm with OK.


The hours will flash.

- Press < or > repeatedly until two lines appear.

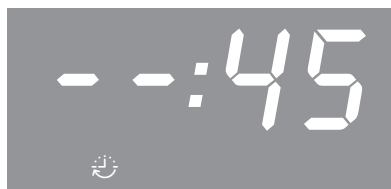

- Confirm with OK.

Four lines will appear:

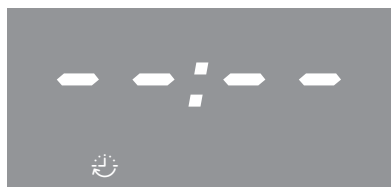

- Confirm with OK.

The cooking duration and any finish time will be deleted.


The time of day will appear unless a minute minder time has been set.

The oven heating, lighting and cooling fan will switch on.

If you want to finish the cooking programme:

- Turn the function selector to **0** and the temperature selector to **•**.
- Take the food out of the oven.

## Deleting a finish time

 - Press < or > repeatedly until  starts to flash.

- Confirm with OK.


The hours will flash.

- Press < or > repeatedly until two lines appear.

- Confirm with OK.

Four lines will appear.

- Confirm with OK.

The  symbol will appear and the set cooking duration will count down in minutes, with the last minute counting down in seconds.


If you want to finish the cooking programme:

- Turn the function selector to **0** and the temperature selector to **•**.
- Take the food out of the oven.

If you turn the function selector to **0**, the settings for the cooking duration and the finish time will be deleted.

### Altering the time of day

The time of day can only be changed when the function selector is at **0**.

- Turn the function selector to **0**.
- Press **>** repeatedly until  starts to flash.
- Confirm with OK.

The hours will flash.

- Use **<** or **>** to set the hours.
- Confirm with OK.

The hours are saved and the minutes will flash.

- Use **<** or **>** to set the minutes.
- Confirm with OK.

The time of day is now saved.

After a power cut, the time of day needs to re-entered.

# Clock/timer

## Altering settings

Your appliance is supplied with a number of standard default settings (see the "Settings overview" chart).

A setting *P* is changed by altering its status 5.

- Turn the function selector to 0.
- Press and hold < until *P* appears.



- If you want to change another setting, press < or > repeatedly until the relevant number appears.
- Confirm with OK.



The setting is selected and the current status 5 appears, e.g. 0.

To alter the status:

- Press < or > repeatedly until the required status appears in the display.
- Confirm with OK.

The selected status is saved and the setting *P* appears again.


If you wish to alter more settings, proceed as described previously.

If you do not want to alter any more settings:

- Wait for approx. 15 seconds until the time of day appears.

The settings remain in memory even after a power cut.

## Settings overview

Setting	Status
<i>P 1</i> <b>Buzzer volume</b>	<i>5 0</i> The buzzer is <b>switched off</b> . <i>5 1</i> to <i>5 30*</i> The buzzer is <b>switched on</b> . The volume can be altered. When you select a status you will hear the corresponding buzzer.
<i>P 2</i> <b>Clock format</b>	<i>24*</i> The time of day is shown in <b>24 hour format</b> . <i>12</i> The time of day is shown in <b>12 hour format</b> . If you change the clock after 13:00 from a 12 hour clock to a 24 hour clock you will need to update the hour accordingly.
<i>P 3</i> <b>System lock for the oven</b>	<i>5 0*</i> The system lock is <b>switched off</b> . <i>5 1</i> The system lock is <b>On</b> and  appears in the display. The system lock prevents the oven from being used inadvertently. The system lock will remain turned on in the case of a power failure.
<i>P 4 **</i> <b>Keypad tone</b>	<i>5 0</i> Keypad tone <b>deactivated</b> . <i>5 1*</i> Keypad tone <b>activated</b> .

\* Factory default setting




\*\* Only applies to H256xB/H266xB

# Baking

Eating food which has been cooked correctly is important for good health.




Only bake cakes, pizza, chips etc. until they are golden. Do not overcook them.

## Functions

Depending on how the food is prepared, you can use Fan plus , Intensive bake  or Conventional heat .

## Bakeware

The choice of bakeware depends on the oven function.

- Fan plus , Intensive bake : baking tray, universal tray, bakeware of any ovenproof material.
- Conventional heat : Dark baking tins with a matt finish. Avoid using bright, shiny metal tins as they give an uneven and poor browning result and in some cases cakes might not cook properly.
- Always place baking tins on the rack. Position rectangular tins with the longer side across the width of the rack for optimum heat distribution and even baking results.
- When baking cakes with fresh fruit toppings and deep sponge cakes place the tin in the universal tray to catch any spillages.

## Baking paper, greasing the tin

Miele accessories, e.g. the universal tray are treated with PerfectClean enamel (see "Features").

Surfaces treated with PerfectClean enamel generally do not need to be greased or covered with baking paper.

Baking paper should be used with:

- anything prepared using a lye containing sodium hydroxide (e.g. pretzels, bread sticks) because the lye can damage the PerfectClean surface,
- meringues or sponges with a high egg-white content because they are more likely to stick,
- frozen food cooked on the rack.



## Baking charts

The data for the recommended function is printed in bold.

Unless otherwise stated, the durations given are for an oven which has not been pre-heated. With a pre-heated oven, shorten durations by up to 10 minutes.

### Temperature

As a general rule, select the lower temperature given in the chart.

Baking at temperatures higher than those recommended may reduce the cooking time, but will lead to uneven browning, and unsatisfactory cooking results.

### Duration

Check if the food is cooked at the end of the shortest time quoted. To check if a cake is ready, insert a wooden skewer into the centre. It is ready if the skewer comes out clean, without dough or crumbs sticking to it.

### Shelf level <sup>5</sup><sub>1</sub>

The shelf level on which you place your food for baking depends on the oven function and number of trays being used.

#### – **Fan plus**

- 1 tray: level 2
- 2 trays: levels 1+3
- 3 trays: levels 1+3+5

When using the universal tray and baking tray to bake on two or more levels at the same time, place the universal tray underneath the baking tray.

Bake moist biscuits and cakes on a maximum of two levels at the same time.

#### – **Intensive bake**


















- 1 tray: level 1



#### – **Conventional heat**



- 1 tray: level 1 or 2

# Baking


## Creamed mixture

Cakes / biscuits		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Muffins (1 tray)		<b>140–150</b>	<b>2</b>	<b>35–45</b>
		150–160	2	30–40
Muffins (2 trays)		<b>140–150</b>	<b>2+4</b>	<b>35–45<sup>2)</sup></b>
Small Cakes (1 tray) <sup>*)</sup>		<b>150</b>	<b>2</b>	<b>30–40</b>
		<b>160<sup>1)</sup></b>	<b>3</b>	<b>20–30</b>
Small cakes (2 trays) <sup>*)</sup>		<b>150<sup>1)</sup></b>	<b>2+4</b>	<b>25–35</b>
Small cakes/biscuits (1 tray)		<b>140–150</b>	<b>2</b>	<b>25–35</b>
		150–160 <sup>1)</sup>	3	15–25
Small cakes/biscuits (2 trays)		<b>140–150</b>	<b>2+4</b>	<b>25–35<sup>2)</sup></b>
Sponge cake		150–160	2	60–70
		<b>150–160<sup>1)</sup></b>	<b>2</b>	<b>60–70</b>
Ring cake		<b>150–160</b>	<b>2</b>	<b>50–60</b>
		170–180	2	55–65

 Function /  Fan plus /  Conventional heat

















 Temperature / <sup>5</sup><sub>1</sub> Shelf level /  Duration




\* The settings also apply for testing in accordance with EN 60350-1.




1) Pre-heat the oven. Do not use Rapid heat-up .


2) Take the baking trays out of the oven early if the food is sufficiently browned before the specified duration has elapsed.

## Creamed mixture

Cakes / biscuits		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Foam cake (tray)		<b>150-160</b>	<b>2</b>	<b>25-35</b>
		150-160 <sup>1)</sup>	2	25-35
Marble, nut cake (tin)		<b>150-160</b>	<b>2</b>	<b>55-75</b>
		150-160	2	60-80
Fresh fruit cake, with meringue topping (tray)		150-160	2	40-50
		<b>170-180</b>	<b>2</b>	<b>45-55</b>
Fresh fruit cake (tray)		<b>150-160</b>	<b>2</b>	<b>35-45</b>
		160-170	2	35-55
Fresh fruit cake (tin)		150-160	2	55-65
		<b>170-180</b>	<b>2</b>	<b>35-45</b>
Flan base		<b>150-160</b>	<b>2</b>	<b>25-35</b>
		170-180 <sup>1)</sup>	2	15-25



 














 Function /  Fan plus /  Conventional heat

 Temperature / <sup>5</sup><sub>1</sub> Shelf level /  Duration




1) Pre-heat the oven. Do not use Rapid heat-up .

# Baking


## Rubbed in mixture

<b>Cakes / biscuits</b>		 [°C]	 5 1	 [min]
Small cakes/biscuits (1 tray)		<b>140-150</b>	<b>2</b>	<b>20-30</b>
		160-170 <sup>1)</sup>	3	15-25
Small cakes/biscuits (2 trays)		<b>140-150</b>	<b>1+3</b>	<b>20-30</b> <sup>2)</sup>
Drop cookies (1 tray) <sup>*)</sup>		<b>140</b>	<b>2</b>	<b>30-40</b>
		<b>160</b> <sup>1)</sup>	<b>3</b>	<b>20-30</b>
Drop cookies (2 trays) <sup>*)</sup>		<b>140</b>	<b>1+3</b>	<b>30-40</b> <sup>2)</sup>
Flan base		<b>150-160</b>	<b>2</b>	<b>35-45</b>
		170-180 <sup>1)</sup>	2	20-30
Streusel cake		<b>150-160</b>	<b>2</b>	<b>45-55</b>
		170-180	2	45-55
Cheese cake		150-160	2	70-80
		<b>170-180</b>	<b>2</b>	<b>80-90</b>
		150-160	2	70-80









 





 Function /  Fan plus /  Conventional heat /  Intensive bake

 Temperature /  Shelf level /  Duration




\* The settings also apply for testing in accordance with EN 60350-1.

 - 1) Pre-heat the oven. Do not use Rapid heat-up .
- 2) Take the baking trays out of the oven early if the food is sufficiently browned before the specified duration has elapsed.


## Rubbed in mixture

Cakes / biscuits		 [°C]		 [min]
Apple cake (Apple pie) (baking tin Ø 20 cm) *		<b>160</b>	<b>2</b>	<b>90-100</b>
		<b>180</b>	<b>1</b>	<b>80-90</b>
Apple pie		160-170	2	50-70
		<b>170-180 <sup>1)</sup></b>	<b>2</b>	<b>60-70</b>
		<b>160-170</b>	<b>2</b>	<b>50-70</b>
Fresh fruit tart, glazed (tin)		150-160	2	55-75
		170-180	2	55-75
		<b>150-160</b>	<b>2</b>	<b>55-65</b>
Swiss apple pie (tray)		<b>220-230 <sup>1)</sup></b>	<b>1</b>	<b>30-50</b>
		<b>180-190</b>	<b>1</b>	<b>30-50</b>

 Function /  Fan plus /  Conventional heat /  Intensive bake
















 Temperature /  Shelf level /  Duration




\* The settings also apply for testing in accordance with EN 60350-1.




1) Pre-heat the oven. Do not use Rapid heat-up .

# Baking

## Yeast mixtures and quark dough

















Cakes / biscuits		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Gugelhupf		<b>150-160</b>	<b>2</b>	<b>50-60</b>
		160-170	2	50-60
Stollen		<b>150-160</b>	<b>2</b>	<b>45-65</b>
		160-170	2	45-60
Streusel cake		150-160	2	35-45
		<b>170-180</b>	<b>3</b>	<b>35-45</b>
Fresh fruit cake (tray)		160-170	2	40-50
		<b>160-170</b>	<b>3</b>	<b>45-55</b>
Apple turnovers (1 tray)		150-160	2	25-30
		<b>160-170</b>	<b>2<sup>1)</sup></b>	<b>25-30</b>
Apple turnovers (2 trays)		150-160	1+3	25-30 <sup>2)</sup>

 Function /  Fan plus /  Conventional heat



 Temperature / <sup>5</sup><sub>1</sub> Shelf level /  Duration



- 1) For yeast dough. With quark dough use shelf level 3.
- 2) Take the baking trays out of the oven early if the food is sufficiently browned before the specified duration has elapsed.

## Yeast mixtures and quark dough

Cakes / biscuits		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
White bread		180–190	2	35–45
		<b>190–200</b>	<b>2</b>	<b>30–40</b>
Wholegrain bread		180–190	2	55–65
		<b>200–210</b> <sup>1)</sup>	<b>2</b>	<b>45–55</b>
Pizza (tray)		170–180	2	35–45
		<b>190–200</b> <sup>1)</sup>	<b>2</b> <sup>2)</sup>	<b>30–45</b>
		<b>170–180</b>	<b>2</b> <sup>2)</sup>	<b>35–45</b>
Onion tart		170–180	2	35–45
		<b>180–190</b> <sup>1)</sup>	<b>2</b> <sup>2)</sup>	<b>25–35</b>
		<b>170–180</b>	<b>2</b>	<b>30–40</b>
Proving dough		50	<sup>3)</sup>	15–30
		<b>50</b>	<sup>3)</sup>	<b>15–30</b>













 Function /  Fan plus /  Conventional heat /  Intensive bake




 Temperature / <sup>5</sup><sub>1</sub> Shelf level /  Duration




- 1) Pre-heat the oven. Do not use Rapid heat-up .
- 2) For yeast dough. With quark dough use shelf level 3.
- 3) The dish can be placed on the oven floor. Depending on the size of the dish you may need to remove the shelf runners. If using Conventional heat  please also place the rack on on the oven floor.

# Baking


## Sponge mix

<b>Cakes / biscuits</b>		 [°C]	 5 1	 [min]
Tart / flan base (2 eggs)		160–170	2	20–30
		<b>160–170</b> <sup>1)</sup>	<b>2</b>	<b>15–25</b>
Sponge cake (4–6 eggs)		170–180	2	20–35
		<b>150–160</b> <sup>1)</sup>	<b>2</b>	<b>30–45</b>
Whisked sponge <sup>*)</sup>		<b>170</b>	<b>2</b>	<b>25–35</b>
		<b>150–180</b> <sup>1)</sup>	<b>2</b>	<b>20–45</b>
Swiss roll		170–180 <sup>1)</sup>	2	10–20
		<b>180–190</b> <sup>1)</sup>	<b>2</b>	<b>10–15</b>

 Function /  Fan plus /  Conventional heat














 Temperature /  Shelf level /  Duration

\* The settings also apply for testing in accordance with EN 60350-1.




1) Pre-heat the oven. Do not use Rapid heat-up .




## Choux pastry, puff pastry, meringue

Cakes / biscuits		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Choux buns (1 tray)		<b>160–170</b>	<b>2</b>	<b>30–45</b>
		180–190 <sup>1)</sup>	3	25–35
Choux buns (2 trays)		<b>160–170</b>	<b>1+3</b>	<b>30–45</b> <sup>2)</sup>
Puff pastry (1 tray)		<b>170–180</b>	<b>2</b>	<b>20–30</b>
		190–200	3	20–30
Puff pastry (2 trays)		<b>170–180</b>	<b>1+3</b>	<b>20–30</b> <sup>2)</sup>
Macaroons (1 tray)		<b>120–130</b>	<b>2</b>	<b>25–50</b>
		120–130 <sup>1)</sup>	3	25–45
Macaroons (2 trays)		<b>120–130</b>	<b>1+3</b>	<b>25–50</b> <sup>2)</sup>

 Function /  Fan plus /  Conventional heat

 Temperature / <sup>5</sup><sub>1</sub> Shelf level /  Duration



1) Pre-heat the oven. Do not use Rapid heat-up .

2) Take the baking trays out of the oven early if the food is sufficiently browned before the specified duration has elapsed.

# Roasting

---

## Functions

Depending on how the food is prepared, you can use Fan plus  or Conventional heat .

## Dishes

You can use any heat-resistant dishes:

Miele Gourmet oven dishes, roasting pans, ovenproof glass dishes, roasting bags, dishes made from earthenware or cast iron, the universal tray, rack and/or anti-splash insert (if available) on top of the universal tray.

We recommend roasting in oven dishes as this ensures that sufficient stock remains for making gravy. The oven also stays cleaner than when roasting on the rack.

## Tips

- Browning only occurs towards the end of the roasting time. Remove the lid about halfway through the roasting time if a more intensive browning result is desired.
- At the end of the programme, take the roast out of the oven, wrap in aluminium foil and leave to stand for about 10 minutes. This helps retain juices when the meat is carved.
- For a crisp finish, baste poultry 10 minutes before the end of the cooking time with slightly salted water.



## Roasting charts

The data for the recommended function is printed in bold.

Unless otherwise stated, the durations given are for an oven which has not been pre-heated. With a pre-heated oven, shorten durations by up to 10 minutes.

### Temperature

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

When cooking with Fan plus , select a temperature of 20 °C lower than for Conventional Heat .

For cuts which weigh more than 3 kg, select a temperature approx. 10 °C lower than that given in the roasting chart.

Roasting will take longer at the lower temperature, but will be more even.

When roasting on the rack, set a temperature approx. 10 °C lower than for roasting in an oven dish.

## Pre-heating

Pre-heating is generally only required when roasting beef sirloin joints and fillet.

### Roasting duration

The traditional British method for calculating the roasting time is to allow 15 to 20 minutes per lb/450 grammes, according to type of meat, plus approx. 20 minutes, adjusting the length of time as roasting proceeds to obtain the required result. The roasting time can also be determined by multiplying the thickness of the roast [cm] with the time per cm [min/cm], depending on the type of meat:

- Beef/venison: 15–18 min/cm
- Pork/veal/lamb: 12–15 min/cm
- Sirloin/fillet: 8–10 min/cm











 

Check if the meat is cooked after the shortest duration quoted.

### Shelf level

As a general rule, use shelf level 2.


# Roasting

## Beef, veal













Food		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Topside of beef, approx. 1 kg		170–180	2	100–130 <sup>3)</sup>
		<b>190–200</b>	<b>2</b>	<b>110–140</b> <sup>3)</sup>
Fillet of beef approx. 1 kg <sup>1)</sup>		150–160 <sup>2)</sup>	2	20–50 <sup>4)</sup>
		<b>180–190</b> <sup>2)</sup>	<b>2</b>	<b>20–50</b> <sup>4)</sup>
Sirloin joint, approx. 1 kg <sup>1)</sup>		150–160 <sup>2)</sup>	2	30–60 <sup>4)</sup>
		<b>180–190</b> <sup>2)</sup>	<b>2</b>	<b>30–60</b> <sup>4)</sup>
Veal, approx. 1.5 kg		<b>190–200</b>	<b>2</b>	<b>70–90</b> <sup>3)</sup>
		200–210	2	90–110 <sup>3)</sup>

  Function /  Temperature /  <sup>5</sup><sub>1</sub> Shelf level /  Duration

 Fan plus /  Conventional heat

- 1) Use the universal tray. First sear the meat all over on the hob to seal it.
- 2) Pre-heat the oven. Do not use Rapid heat-up .
- 3) Roast with the lid on first, then remove the lid halfway through roasting and add approx. 0.5 l liquid.
- 4) Depending on degree of cooking required (when using a roast probe): rare: 40–45 °C, medium: 50–60 °C, well done: 60–70 °C

## Pork

Food		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Pork joint, approx. 1 kg		160–170	2	100–120 <sup>1)</sup>
		<b>190–200</b>	<b>2</b>	<b>90–110</b> <sup>1)</sup>
Pork joint with crackling, approx. 2 kg		170–180	2	120–160 <sup>1)</sup>
		190–200	2	130–150 <sup>1)</sup>
Gammon joint, approx. 1 kg		150–160	2	60–80 <sup>1)</sup>
		170–180	2	80–100 <sup>1)</sup>
Meat loaf, approx. 1 kg		170–180	2	60–70 <sup>1)</sup>
		<b>200–210</b>	<b>2</b>	<b>70–80</b> <sup>1)</sup>











 Function /  Temperature /  <sup>5</sup><sub>1</sub> Shelf level /  Duration



 Fan plus /  Conventional heat

1) Add approx. 0.5 l liquid halfway through roasting.

# Roasting


## Lamb, game

Food		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Leg of lamb, approx. 1.5 kg		170–180	2	90–110 <sup>1)</sup>
		<b>180–190</b>	<b>2</b>	<b>90–110</b> <sup>1)</sup>
Saddle of lamb, approx. 1.5 kg		220–230 <sup>2)</sup>	3	40–60 <sup>3)</sup>
		<b>230–240</b> <sup>2)</sup>	<b>3</b>	<b>40–60</b> <sup>3)</sup>
Venison, approx. 1 kg		<b>200–210</b>	<b>2</b>	<b>80–100</b> <sup>1)</sup>
		200–210	2	80–100 <sup>1)</sup>

 Function /  Temperature /  <sup>5</sup><sub>1</sub> Shelf level /  Duration



 











 Fan plus /  Conventional heat

1) Roast with the lid on first, then remove the lid halfway through roasting and add approx. 0.5 l liquid.

2) Pre-heat the oven. Do not use Rapid heat-up .

3) Add approx. 0.5 l liquid halfway through roasting.

## Poultry, fish

Food		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]
Poultry, 0.8–1 kg		<b>180–190</b>	2	<b>60–70</b>
		190–200	2	60–70
Poultry, approx. 2 kg		<b>180–190</b>	<b>2</b>	<b>90–110</b>
		190–200	2	110–120
Poultry, stuffed, approx. 2 kg		<b>180–190</b>	<b>2</b>	<b>110–130</b>
		190–200	2	110–130
Poultry, approx. 4 kg		<b>160–170</b>	<b>2</b>	<b>120–160</b> <sup>1)</sup>
		180–190	2	120–160 <sup>1)</sup>
Fish, whole, approx. 1.5 kg		160–170	2	45–55
		<b>180–190</b>	<b>2</b>	<b>45–55</b>

 Function /  Temperature /  <sup>5</sup><sub>1</sub> Shelf level /  Duration

 Fan plus /  Conventional heat

1) Add approx. 0.5 l liquid halfway through roasting.

## Low temperature cooking

This method is ideal for cooking beef, pork, veal or lamb when a tender result is required.

First sear the meat all over at a high temperature on the hob in order to seal it.

Then place the meat in the pre-heated oven where the low temperature and long cooking duration will cook it to perfection and ensure it is very tender.

The meat will relax and the juices inside will start to circulate evenly throughout the meat to reach the outer layers. This will give very tender and succulent results.

### Tips


- Use lean meat which has been correctly hung and trimmed. Bones should be removed before cooking.
- For searing, use a suitable cooking oil or fat that can withstand high temperatures (e.g. clarified butter, vegetable oil).
- Do not cover meat during cooking.

Cooking takes between 2-4 hours depending on the size and weight of the meat and on how well cooked you want it as well as the level of browning required.

### Procedure

Use the universal tray with the rack placed on top of it.

Do not use the Rapid Heat-up  function to pre-heat the oven.

- Place the rack together with the universal tray on shelf level 2.
- Select Conventional heat  and a temperature of 130 °C.
- Pre-heat the oven together with the universal tray and rack for approx. 15 minutes.
- Whilst the oven is pre-heating, sear the meat thoroughly on the hob.



**Danger of burning.**

Wear oven gloves when placing hot food in the oven or removing it and when adjusting oven shelves etc. in a hot oven

- Place the seared meat on the rack.
- Reduce the temperature to 100 °C.
- Continue cooking until the end of the cooking duration.



On ovens with a clock/timer, you can set this procedure to finish automatically, see the "Clock/timer - Set the cooking duration").



## After cooking

- Meat can be carved straight from the oven. It does not need to rest.
- The cooking result will not be affected if the meat is left in the oven after the programme has finished. It can be kept warm until you serve it.
- The meat is an ideal temperature to eat straight away. Serve on pre-heated plates with very hot sauce or gravy to prevent it cooling down too quickly.

## Cooking duration / Core temperatures

Meat	 [min]	 [°C]
Fillet of beef	80–100	59
Sirloin joint		
– Rare	50–70	48
– Medium	100–130	57
– Well done	160–190	69
Pork fillet	80–100	63
Gammon*	140–170	68
Fillet of veal	80–100	60
Saddle of veal *	100–130	63
Saddle of lamb *	50–80	60

 Duration

 Core temperature

If you have a separate food probe, you can use the core temperature shown.

\* Off the bone

# Grilling



**Danger of burning.**

Grill with the oven door closed. If you grill with the door open, hot air will escape from the oven instead of being cooled by the cooling fan. The controls will get hot.

## Functions

### Grill

For grilling larger quantities of thin cuts (e.g. steaks) and browning baked dishes.



The whole of the top heating / grill element will get hot and glow red.

### Fan grill

For grilling larger items, e.g. rolled meat, poultry.

The top heating / grill element and the fan switch on and off alternately.

## Trays and racks

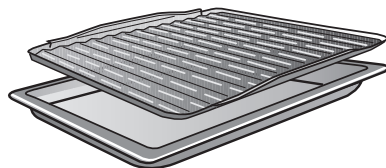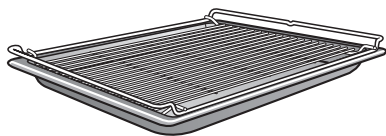

Use the universal tray with the rack or anti-splash insert (if available) on top. The juices from the food being cooked collect under the insert. This prevents them from spitting and making the oven dirty. The juices can then be used for making gravy and sauces.

**Do not use the baking tray.**

## Preparing food for grilling

Trim the meat. Do not season meat with salt before grilling as this draws the juices out.

Add a little oil to lean meat if necessary. Do not use other types of fat as they can burn and cause smoke.

Clean fish in the normal way. To enhance the flavour, add a little salt or squeeze a little lemon juice over the fish.

## Grilling

- Place the rack or the anti-splash insert (if available) in the universal tray.
- Place the food on top.
- Select the required oven function and the temperature.
- Pre-heat the grill for approx. 5 minutes with the door closed.



**Danger of burning.**

Wear oven gloves when placing hot food in the oven or removing it and when adjusting oven shelves etc. in a hot oven

- Place the food on the appropriate shelf level (see the Grilling chart).
- Close the door.
- Turn the food halfway through grilling.

## Grilling chart

The data for the recommended function is printed in bold.

Check the food after the shortest duration quoted.

Take note of the temperature range, the shelf levels and the durations. These take the size of the meat and cooking practices into account.

### Temperature

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

### Pre-heating

Pre-heating is essential for grilling. Always pre-heat the top heat/grill element for approx. 5 minutes with the door closed.

### Shelf level

Select the shelf level according to the thickness of the food.

- Thin cuts: shelf level 4 or 5
- Thick cuts: shelf level 2 or 3

# Grilling

---

## Grilling duration 🕒

- Thin pieces of fish and meat usually take 6–8 minutes per side.  
Thicker pieces require more time for each side. It is best to grill food of a similar thickness at the same time so that the grilling time for each item does not vary too greatly.
- Turn the food halfway through grilling.

## Testing to see if cooked


























One way of finding out how well a piece of meat has been cooked is to press down on it with a spoon:

- Rare: If the meat gives easily to the pressure of the spoon, it will still be red on the inside.
- Medium: If there is some resistance, the inside will be pink.
- Well-done: If there is very little resistance, it is cooked through.

Check if the meat is cooked after the shortest time quoted.


**Tip:** If the surface of thicker cuts of meat is cooked but the centre is not cooked, continue grilling at a lower temperature setting or use a lower shelf level to allow the food to cook through to the centre.

Pre-heat the grill for approx. 5 minutes with the door closed.

Food to be grilled	 5 1	 [°C]	 [min]	 [°C]	 [min]
Thin cuts					
Burgers <sup>*)</sup>	5 <sup>1)</sup>		30-40	–	–
Kebabs	5		12-17	240	12-17
Chicken kebabs	5		12-17	240	12-17
Pork chops	5 <sup>1)</sup>		20-30		17-23
Liver	4		8-12		12-15
Burgers	5 <sup>1)</sup>		20-30		20-30
Bratwurst	5		8-15	240	10-15
Fish fillet	4		15-25		15-25
Trout	4		15-25		15-25
Toast <sup>*)</sup>	3		6-10	–	–
Cheese toast	4		8-12	240	10-13
Tomatoes	4		12-17		12-17
Peaches	3/4		7-12	240	10-15
Thicker cuts					
Chicken, approx. 1.2 kg	3		55-65	190	55-65
Pork, approx. 1 kg	3	–	–	180	80-90

 Grill /  Fan grill

 5  
1 Shelf level /  Temperature /  Duration


\* The settings also apply when using the Full grill  function for testing in accordance with EN 60350-1.

1) Place the rack on shelf level 5 and the universal tray on shelf level 2.

# Defrost

Use the Defrost  function to gently defrost frozen food.

When this function is selected, only the fan switches on and circulates the air at room temperature.



 Danger of salmonella poisoning. It is particularly important to observe food hygiene rules when defrosting poultry. Do not use the liquid from the defrosted poultry. Pour it away, and wash the tray, the sink and your hands.

## Tips

- Where possible, remove the packaging and put the food to be defrosted on the universal tray or into a suitable dish.
- When defrosting poultry, put it on the rack over the universal tray to catch the defrosted liquid so that the meat is not lying in this liquid.
- Meat, poultry and fish do not need to be fully defrosted before cooking. Defrost so that the surface is sufficiently thawed to take herbs and seasoning.

## Defrosting durations

The duration needed for defrosting depends on the type and weight of the food.

Frozen food	 [g]	 [min]
Chicken	800	90–120
Meat	500	60–90
	1000	90–120
Bratwurst	500	30–50
Fish	1000	60–90
Strawberries	300	30–40
Butter cake	500	20–30
Bread	500	30–50

 weight /  defrosting duration

# Drying food




Drying is a traditional method of preserving fruit, certain vegetables and herbs.






It is important that fruit and vegetables are ripe and not bruised before they are dried.

## ■ Prepare the food for drying

- Peel and core apples, and cut into slices 0.5 cm thick.
- Stone plums, if necessary.
- Peel, core and cut pears into thick wedges.
- Peel and slice bananas.
- Clean mushrooms and cut them in half or slice them.
- Remove parsley and dill from the stem.
- Distribute the food evenly over the universal tray.


Use the Gourmet perforated baking tray, if you have one.

- Select Fan plus  or Conventional heat .
- Select a temperature of 80–100 °C.
- Place the universal tray on shelf level 2.  
With Fan plus  you can dry produce on levels 1+3 at the same time.

Food		 [min]
Fruit		120–480
Vegetables		180–480
Herbs		50–60

-  Function /  Drying time
-  Fan plus /  Conventional heat

- Reduce the temperature if condensation begins to form in the oven.

 Danger of burning. Wear oven gloves when removing the dried food from the oven.

- Allow the dried fruit or vegetables to cool down after drying.

Dried fruit must be completely dry, but also soft and elastic.

- Store in sealed glass jars or tins.

# Frozen food/Ready meals

---

## Tips

### Cakes, pizza, baguettes

- Large frozen items such as cakes, pizzas or baguettes cover an extensive area of the baking tray or universal tray.  
The temperature difference if large frozen items are cooked in these trays can cause the tray to distort in such a way that it cannot be removed from the oven when it is hot. Further use will make the distortion worse. Place this type of food on baking parchment on the rack to prevent the risk of this happening.
- Use the lowest temperature recommended on the manufacturer's packaging.

### Oven chips, croquettes or similar items

- Small items of frozen food such as oven chips can be cooked on the baking tray or universal tray.  
Place baking parchment on the tray so that they cook gently.
- Use the lowest temperature recommended on the manufacturer's packaging.
- Turn several times during cooking.

## Method

Eating food which has been cooked correctly is important for good health.

Only bake cakes, pizza, chips etc. until they are golden. Do not overcook them.

- Select the function and temperature recommended on the manufacturer's packaging.
- Pre-heat the oven.
- Place the food in the pre-heated oven on the shelf level recommended on the packaging.
- Check the food at the end of the shortest duration recommended on the packaging.



### Gentle bake

Gentle bake is suitable for small amounts e.g. of frozen pizza, bake-off rolls, cookies and for meat dishes and roasts. The optimum use of residual heat enables savings of up to 30 % energy to be made compared to cooking with a standard oven function with comparably good cooking results.



This function is not suitable for larger amounts of food such as sponge cakes and fresh fruit cake where the cake mix needs to be thoroughly baked throughout as no energy savings would be made.



The temperature can be set between 100 and 250 °C.

The oven lighting does not switch on with this function.

For optimum results keep the door shut whilst cooking.

Examples of use:

Food	 [°C]	 [min]
Biscuits	160	22–27
Ratatouille	180	40–60
Fish fillet in foil approx. 500 g	200	25–35
Frozen pizza, pre-cooked	210	20–25
Ham roast, approx. 1.5 kg	160	115–145
Braised beef, approx. 1.5 kg	180	160–180


 Temperature /  Duration

- Use shelf level 1 or 2 depending on the height of the food.
- The durations given are for an oven which has not been pre-heated.
- Roast with the lid on first, then remove the lid three-quarters of the way through roasting and add approx. 0.5 l liquid.
- Check the food after the shortest duration quoted.


## Further applications

---

### Heat crockery

Use Fan plus  for pre-heating crockery.

Only pre-heat heat-resistant dishes.

- Place the rack on shelf level 2 and place the crockery on it. Depending on the size of the crockery you can also use the oven floor and also take the side runners out to make more room.
- Select Fan plus .
- Set the temperature to 50–80 °C.



**Danger of burning.**

Wear oven gloves when removing the dishes from the oven. Droplets of water may have accumulated underneath the dish.

- Remove the heated crockery from the oven.



**Danger of burning.**

Make sure the oven heating elements are switched off and that the oven cavity is cool.



**Danger of injury.**

The steam from a steam cleaning appliance could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean the oven.

All surfaces can become discoloured or damaged if unsuitable cleaning agents are used. The front of the oven, in particular, will be damaged by oven cleaners.

All surfaces are susceptible to scratching. Scratches on glass surfaces could cause a breakage in certain circumstances.

Remove any residual cleaning agent immediately.

### Unsuitable cleaning agents

To avoid damaging the surfaces, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides
- cleaning agents containing descaling agents on the oven front
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners
- solvent-based cleaning agents
- stainless steel cleaning agents
- dishwasher cleaner
- glass cleaning agents
- cleaning agents for ceramic hobs
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents
- melamine eraser blocks
- sharp metal scrapers
- wire wool
- spot cleaning
- oven cleaner \*
- stainless steel spiral pads \*

\* these can, however, be used to remove very heavy soiling from PerfectClean treated surfaces.

## Cleaning and care

If soiling is left for a long time it might become impossible to remove. Continued use of the oven without regular cleaning will make it much harder to keep clean.

Soiling is, therefore, best removed after each use of the oven.

The accessories are not dishwasher-proof.

### Tips

- Soiling caused by spilt juices and cake mixtures is best removed whilst the oven is still warm. Exercise caution and make sure the oven is not too hot - danger of burning.
- To make cleaning easier you can dismantle the oven door, remove the side runners and the FlexiClip runners (if present), remove the catalytic back panel and lower the top heating/grill element.

### Normal soiling

See "Cleaning catalytic enamelled panels" for instructions on how to keep catalytic panels clean.

- It is best to remove normal soiling immediately using a clean sponge and a solution of hot water and washing-up liquid or with a clean, damp microfibre cloth.
- After cleaning make sure all residual cleaning agent is thoroughly removed with clean water. This is particularly important when cleaning PerfectClean surfaces as cleaning agent residues can impair the non-stick properties.
- After cleaning, wipe the surfaces dry using a soft cloth.

### Cleaning the seal

There is a seal around the oven interior which seals the oven interior and the inside of the door.

Grease deposits on the seal can cause it to become brittle and cracked.

- It is best to wipe the seal clean after each use.

### Stubborn soiling (excluding the FlexiClip runners)

Spilt fruit and roasting juices may cause lasting discolouration or matt patches on enamelled surfaces. This discolouration is permanent but will not affect the efficiency of the finish. Do not try to remove this discolouration! Clean these following the instructions given here.

- Baked on deposits can be removed with a glass scraper or a non-abrasive stainless steel spiral pad.

Oven spray will damage catalytic enamel. Remove all catalytic enamelled panels from the oven interior before using oven spray.

- Very stubborn soiling on PerfectClean surfaces can be cleaned using Miele Oven Cleaner. This cleaner must only be applied to cold surfaces in accordance with the instructions on the packaging.

Non-Miele oven cleaner must only be used in a cold oven and for no longer than a maximum of 10 minutes.

- You can then also use the scouring pad on the back of a washing-up sponge to remove the soiling.
- After cleaning, remove all oven cleaning agent residues thoroughly with clean water, and dry with a soft cloth.

## Cleaning and care

---

### Stubborn soiling on the FlexiClip runners

Never attempt to clean FlexiClip telescopic runners in a dishwasher. This would remove the special grease which is essential for their smooth functioning.

For stubborn surface soiling or if the bearings become sticky with spilled fruit juices proceed as follows:

- Soak the FlexiClip runners for approx. 10 minutes in a solution of hot water and washing-up liquid. If necessary use the back of a washing-up sponge to remove the soiling. The bearings can be carefully cleaned with a soft brush.

Cleaning may cause some discolouration or fading in places, however this will not affect the functioning of the runners in any way.

### Cleaning catalytic enamelled panels

Soiling from oil and fat is burnt off catalytic enamel when very high temperatures are used in the oven.


The higher the temperature, the more effective the process.

Exposure to scouring agents, abrasive brushes or sponges and oven sprays can cause catalytic enamel to lose its self-cleaning properties. Catalytic enamelled panels should therefore be taken out of the oven before using oven spray in it.


### Removing spice, sugar and similar deposits

- Remove the back panel (see "Cleaning and care - Removing the back panel").
- Clean the back panel by hand with a solution of hot water and washing-up liquid applied with a soft brush.
- Rinse it thoroughly and then leave it to dry before fitting it back in the oven.

### Removing oil and grease splashes

- Remove any accessories from the oven including the side runners.
- Before starting the cleaning process, remove any large deposits of soiling from the inside of the door and the PerfectClean surfaces to prevent them burning on.
- Select Fan plus  and a temperature of 250 °C.
- Heat the empty oven for at least hour, or more depending on the degree of soiling.

If the catalytic coating is very heavily soiled with oil and grease, a film can form on the oven surface during the cleaning process.


 **Danger of burning.** Allow the oven to cool down before cleaning by hand.

- Clean the inside of the door and the oven interior with a clean sponge and a solution of hot water and washing-up liquid or a clean damp microfibre cloth.

Any remaining soiling will gradually disappear with each subsequent use of the oven at high temperatures.

## Cleaning and care


### Removing the door

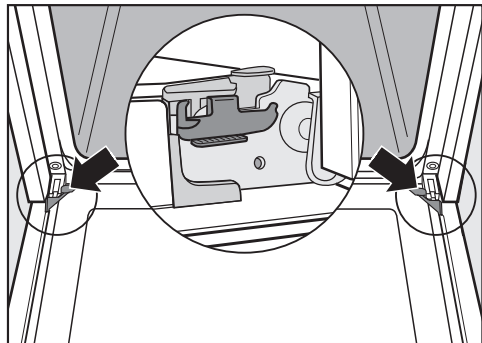

The door is connected to each door hinge by retainers.

Before the door can be removed the locking clamps on both hinges must first be unlocked.

- Open the door fully.

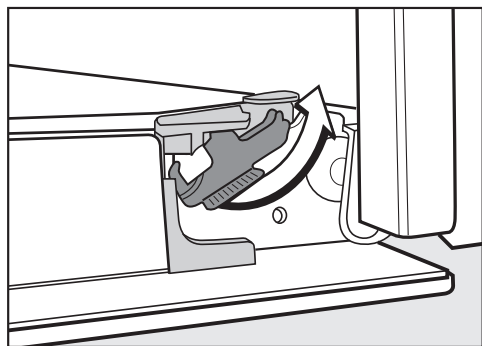

- Release the locking clamps by turning them as far as they will go.

Do not attempt to take the door off the retainers when it is in the horizontal position as the retainers will spring back against the oven.

Do not use the handle to pull the door off the retainers as the handle could break.

- Raise the door up till it rests open.



- Holding the door securely at both sides lift it upwards off the retainers. Make sure you take it off straight.



### Dismantling the door

The oven door is an open system with 3 glass panes which have a heat-reflective coating on some of their surface.

When the oven is operating, air is directed through the door to keep the outer pane cool.

If soiling has worked its way in between the glass panes, the door can be dismantled in order to clean in between the panes.

Take particular care as scratches can damage the glass. When cleaning the glass panes do not use abrasive cleaning agents, hard sponges or brushes and do not use sharp metal tools or scrapers.

Please also read the general notes on cleaning the oven front before cleaning the glass panes.

Oven spray will damage the aluminium trims inside the door. These should only be cleaned using hot water and washing-up liquid applied with a clean sponge or a clean, damp microfibre cloth.

Be especially vigilant after dismantling the door that the glass panes do not break.


## Cleaning and care



Danger of injury.


Always remove the door before disassembling it.

- Place the door on a protective surface (e.g. on a tea towel) with the outside pane facing downwards to prevent it getting scratched. The door handle should line up with the edge of the table so that the glass lies flat and does not get broken during cleaning.

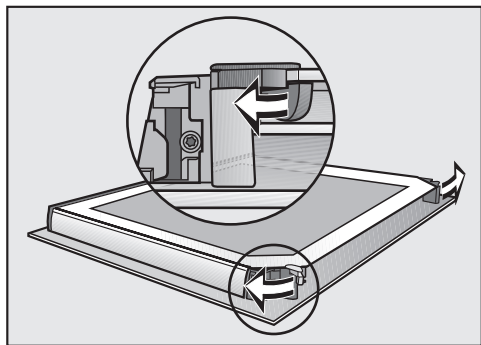


- Flip the two glass pane retainers outwards to open them.

To remove the inner panes:

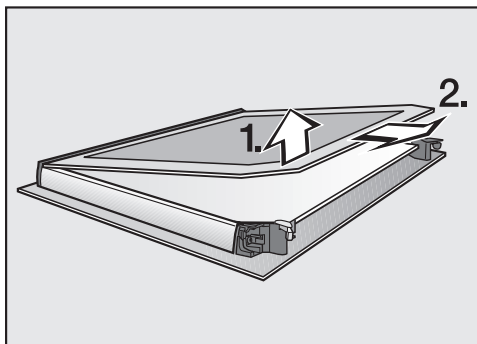


- **Carefully** lift the inner pane up and out of the plastic strip.

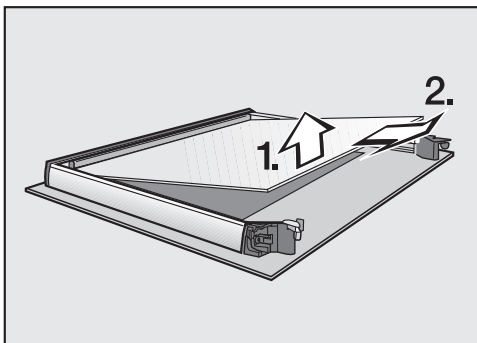


- Lift the middle pane up **gently** and pull it out.
- Clean the door panes and other parts with a clean sponge and a solution of hot water and washing-up liquid or a clean damp microfibre cloth.
- Dry all parts with a soft cloth.


Then reassemble the door carefully:

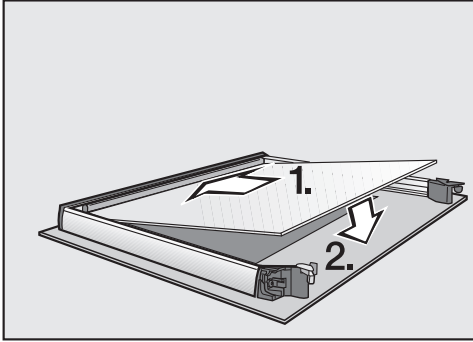

- Refit the middle pane in such a way that the material number is legible (it must not be a mirror image).

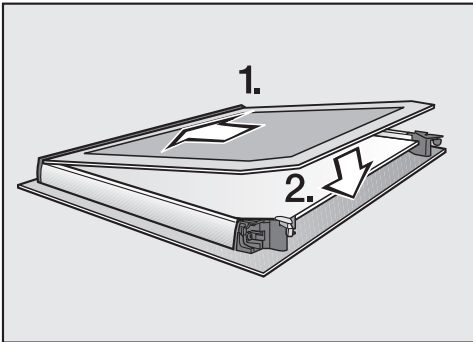

- Push the inner pane with the matt printed side facing downwards into the plastic strip and place it between the retainers.

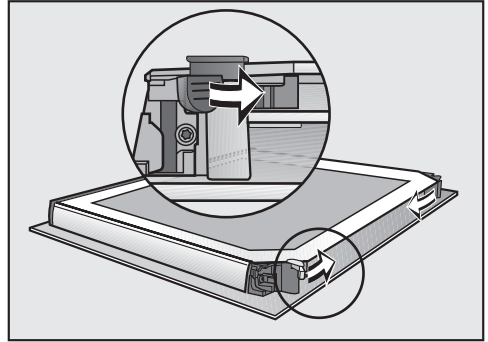


- Flip both the glass pane retainers inwards to close them.

The door is now reassembled and is ready to fit back on the oven.

## Cleaning and care

### Refitting the door

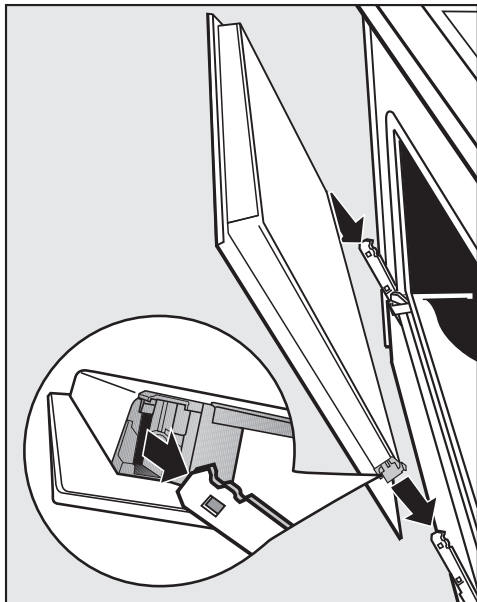


- Hold the door securely on both sides and carefully fit it back into the hinge retainers.

Make sure that the door goes back on straight.

- Open the door fully.

If the locking clamps are not locked, the door could work loose resulting in damage.

Ensure that the locking clamps are locked after refitting the door.

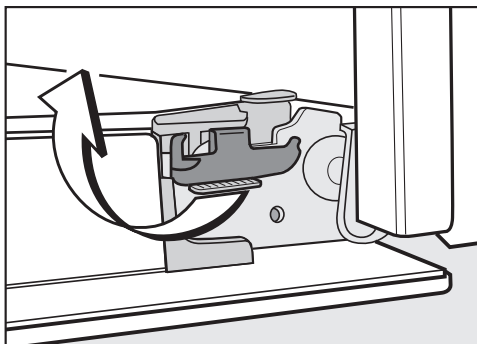


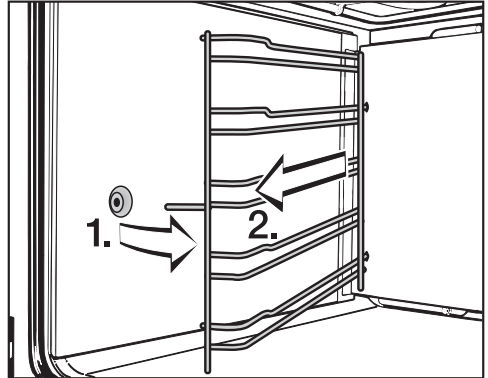
- Flip both locking clamps back up as far as they will go into a horizontal position.

### Removing the side runners with FlexiClip runners

You can remove the side runners together with the FlexiClip runners (if present).

If you wish to remove the FlexiClip runners separately beforehand, please follow the instructions in "Features – Fitting and removing FlexiClip telescopic runners".

 Danger of burning.  
Make sure the oven heating elements are switched off and cool.




- Pull the side runners out of holder (1) at the front of the oven and then pull them out of the oven (2).

**Refit** in the reverse order.


- Take care and ensure that all parts are correctly fitted.

# Cleaning and care

## Removing the back panel

 **Danger of injury.**  
Do not use the oven without the back panel.

The back panel can be removed for cleaning purposes.

 **Danger of burning.**  
Make sure the oven heating elements are switched off and cool.

- Disconnect the appliance from the mains.
- Remove the side runners.
- Undo the four screws in the corners of the back panel and take it out.
- Clean the back panel (see "Cleaning and Care - Cleaning the catalytic enamelled back panel").


**Refit** in the reverse order.

- Refit the back panel carefully.


Make sure the openings are located as illustrated in "Oven overview".

- Reconnect the oven to the electricity supply.

## Lowering the top heat/grill element

 **Danger of burning.**  
Make sure the oven heating elements are switched off and that the oven cavity is cool.

- Remove the side runners.

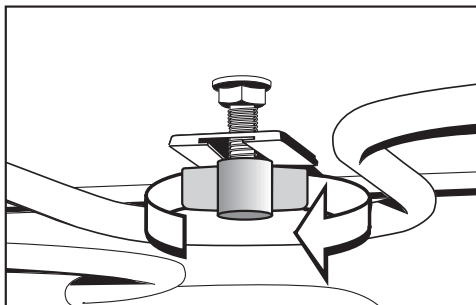

- Undo the wing nut.

Use caution not to damage the top heat/grill element.  
Do not use force when lowering the top heat/grill element.

- Carefully lower the top heat/grill element.

You can now clean the roof of the oven.

- Raise the top heat/grill element and tighten the wing nut securely.
- Refit the side runners.

With the aid of the following guide, minor problems can be easily corrected without contacting Miele.


If having followed the suggestions below, you still cannot resolve the problem, please contact Miele (see back cover for contact details).




Danger of injury. Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person.

Repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.


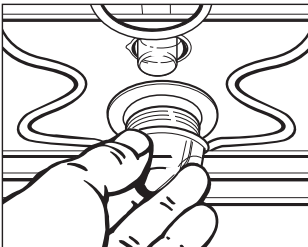


Do not attempt to open the casing of the oven yourself.

Problem	Cause and remedy
<b>The display is dark.</b>	There is no power to the oven. ■ Check whether the mains fuse has tripped. If it has, contact a qualified electrician or Miele.
<b>The oven does not heat up.</b>	You have only selected an oven function or a temperature. ■ Select both a function <b>and</b> a temperature.
	The system lock  has been activated. ■ Switch off the system lock (see "Clock/timer - Altering settings").
	There is no power to the oven. ■ Check whether the mains fuse has tripped. If it has, contact a qualified electrician or Miele.

## What to do if ...

Problem	Cause and remedy
<b>12:00 is flashing in the display.</b>	<p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>■ Reset the time of day (see "Using for the first time").</li> </ul> <p>Cooking times will also need to be reset.</p>
<b>0:00 appears unexpectedly in the display and the  symbol flashes at the same time. The buzzer may also be sounding.</b>	<p>The oven has been operating for an unusually long time and this has activated the safety switch-off function.</p> <ul style="list-style-type: none"> <li>■ Turn the function selector to <b>0</b>. The oven is now ready to use again immediately.</li> </ul>
<b>F XX appears in the display,</b>	<p>There is a problem that you cannot resolve.</p> <ul style="list-style-type: none"> <li>■ Call Miele Service.</li> </ul>
<b>A noise can be heard after a cooking process.</b>	<p>The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.</p> <p>This cooling fan will switch itself off automatically after a certain period of time.</p>
<b>Spots like rust appear on catalytic surfaces.</b>	<p>The catalytic cleaning process does not remove spices, sugar and similar deposits.</p> <ul style="list-style-type: none"> <li>■ Take catalytic panels out of the oven and remove this type of deposit with a mild solution of hot water and washing-up liquid applied with a soft brush (see "Cleaning and care / Cleaning catalytic enamelled panels").</li> </ul>
<b>Cakes and biscuits are not sufficiently baked in the times given in the chart</b>	<p>A different temperature from the one given in the recipe was used.</p> <ul style="list-style-type: none"> <li>■ Select the temperature required for the recipe.</li> </ul>
	<p>The ingredient quantities are different from those given in the recipe.</p> <ul style="list-style-type: none"> <li>■ Double check the recipe. The addition of more liquid or more eggs makes a moister mix which would take longer to cook.</li> </ul>



Problem	Cause and remedy
<b>Browning is uneven.</b>	<p>The wrong temperature or shelf level was selected.</p> <ul style="list-style-type: none"> <li>■ There will always be a slight unevenness. If the unevenness is pronounced, check that the correct temperature and shelf level have been selected.</li> </ul> <p>The material or colour of the baking tin is not suitable for the oven function.</p> <ul style="list-style-type: none"> <li>■ When using Conventional heat  use matt, dark coloured tins. Light coloured, shiny pans will not produce as desirable results.</li> </ul>
<b>FlexiClip runners are not running smoothly.</b>	<p>The bearings in the FlexiClip runners are not sufficiently lubricated.</p> <ul style="list-style-type: none"> <li>■ Lubricate the bearings with the special Miele lubricant.</li> </ul> <p>Only use this special lubricant, as it is designed to withstand high temperatures in the oven. Other lubricants can harden and stick to the FlexiClip runners when they are heated. The Miele lubricant is available to order from Miele or via the online Miele shop.</p>
<b>The top oven lighting does not turn on.</b> 	<p>The halogen lamp needs replacing.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p> <b>Danger of burning.</b>        Make sure the oven heating elements are switched off and that the oven cavity is cool.</p> </div> <ul style="list-style-type: none"> <li>■ Disconnect the appliance from the mains.</li> <li>■ Turn the lamp cover a quarter turn anti-clockwise to release it and then pull it together with its seal downwards to take it out.</li> <li>■ Replace it with a new halogen lamp (Osram 66725 AM/A, 230 V, 25 W, G9).</li> <li>■ Refit the lamp cover together with its seal and turn clockwise to secure.</li> <li>■ Reconnect the oven to the electricity supply.</li> </ul> <p>You have selected Gentle bake . The oven lighting does not come on with this function.</p>

## After Sales / Guarantee

---

### After sales service

In the event of any faults which you cannot easily remedy, please contact

- your Miele Dealer, or
- Miele Service.

See end of this booklet for contact details.

Please note that telephone calls may be monitored and recorded for training purposes.

N.B. A call-out charge will be applied to service visits where the problem could have been resolved as described in these instructions.

When contacting your Dealer or Miele, please quote the model and serial number of your appliance.

This information is given on the data plate, visible on the front frame of the oven, with the door fully open.

### Guarantee: UK

The appliance is guaranteed for 2 years from the date of purchase.

In the UK, you must activate your cover by calling 0330 160 6640 or registering online at [www.miele.co.uk](http://www.miele.co.uk).

### Guarantee: Other countries

For information on the appliance guarantee specific to your country please contact Miele. See end of this booklet for contact details.



## Danger of injury!

Installation, repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.

Connection to the electrical supply must be carried out by a suitably qualified and competent person in accordance with local and national safety regulations. Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

Connection of this appliance to the electricity supply must be made in accordance with current safety regulations (BS 7671 in the UK).

Connection of this appliance should be made via a fused connection unit or a suitable isolator and the on/off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays according to EN 60335).

## Connection data

The required connection data are given on the data plate located on the oven trim visible when the door is open.

Ensure that these match the mains supply.

- When contacting Miele, please quote the following:
  - Model number
  - Serial number
  - Connection data (voltage/frequency/maximum connected load)

When replacing the cable supplied with another cable or changing the connection, only cable type H05VV-F with a suitable cross-sectional area (CSA) may be used.

## Oven

This oven is supplied with an approx. 1.7 m long 3-core cable for connection to a 230 V, 50 Hz supply.

The wires in the mains lead are coloured as follows:

Green/yellow = earth

Blue = neutral

Brown = live



## **WARNING - THIS APPLIANCE MUST BE EARTHED**

For extra safety it is advisable to protect the appliance with a suitable residual current device (RCD).  
Maximum connected load: see data plate.

# Electrical connection

---

## Electrical connection: Other countries

All electrical work should be carried out by a suitably qualified and competent Miele approved service technician in strict accordance with local and national safety regulations.

The voltage and rated load are given on the data plate situated at the front of the oven interior. Please ensure that these match the household mains supply.

For extra safety it is advisable to install a suitable residual current device (RCD) / ground fault interrupter (GFI). Contact a qualified electrician for advice.

If the cord is damaged a new cord must be fitted by a Miele approved service technician.




**WARNING - THIS APPLIANCE  
MUST BE EARTHED**

## Appliance and niche dimensions

Dimensions are given in mm.

### Installation in a base unit

When building the appliance into a base unit underneath a hob please also observe the installation instructions for the hob as well as the building-in depth required for the hob.

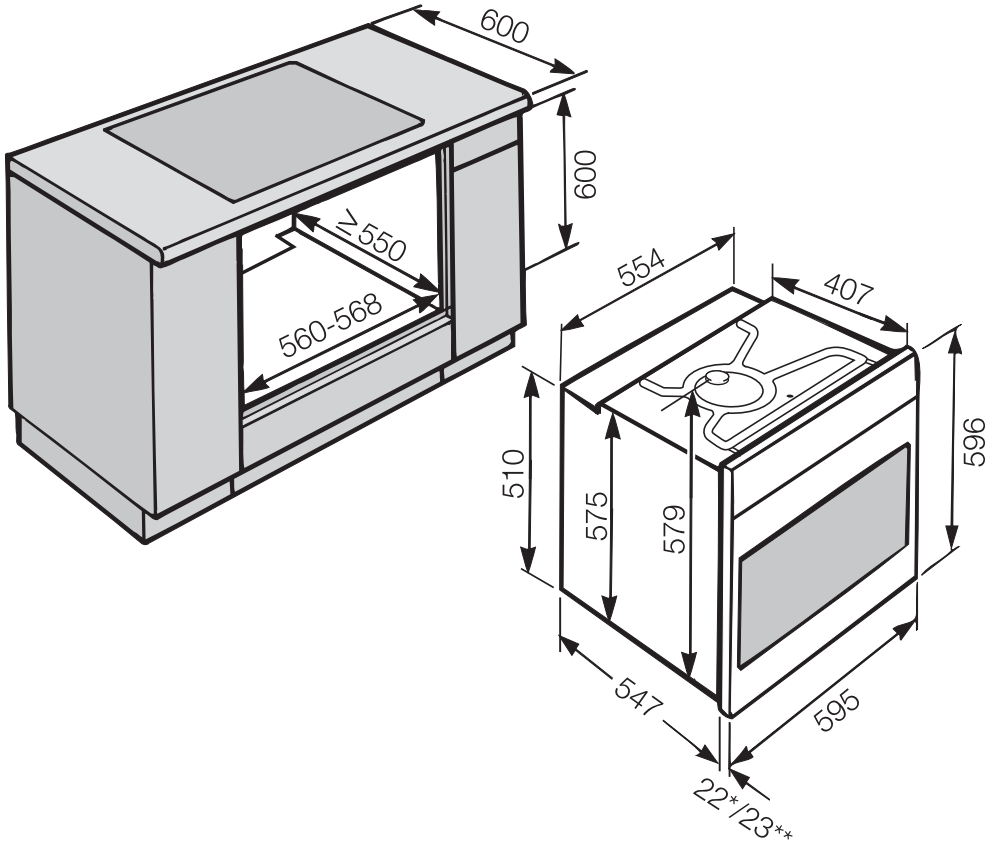


\* Ovens with glass front

\*\* Ovens with metal front

## Building-in diagrams

### Installation in a tall unit

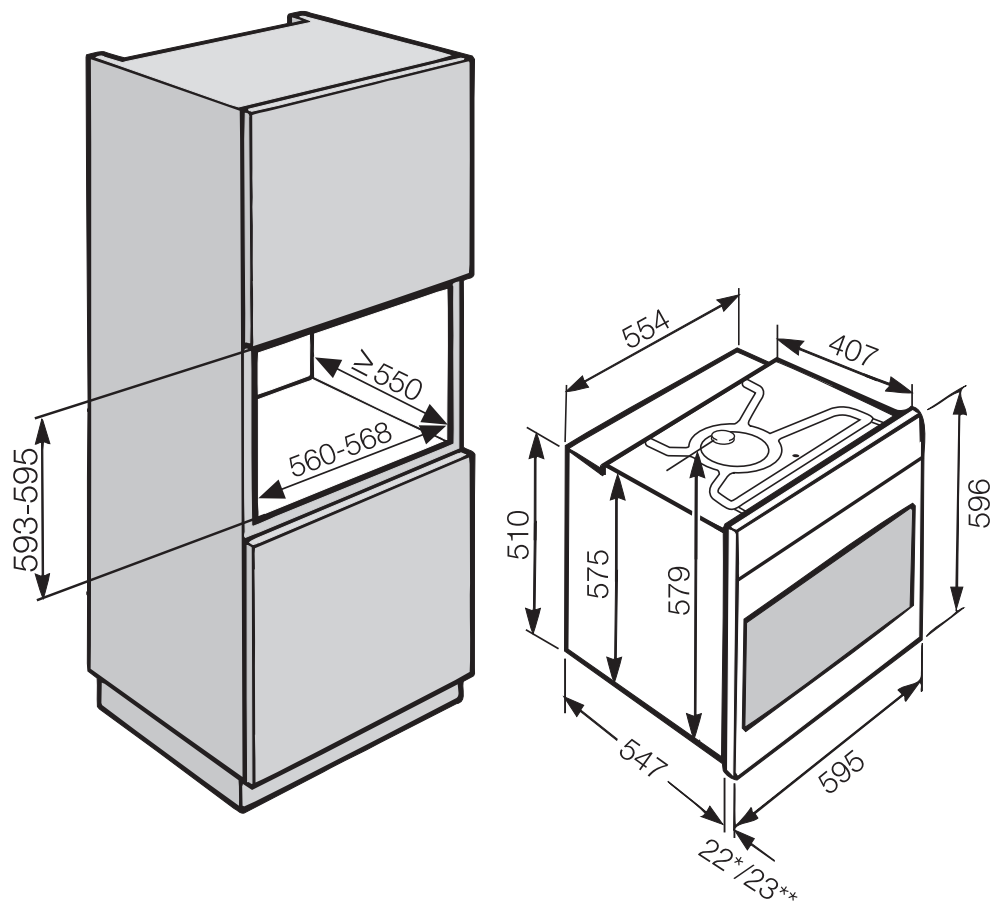


\* Ovens with glass front

\*\* Ovens with metal front

## Front dimensions

Dimensions are given in mm.

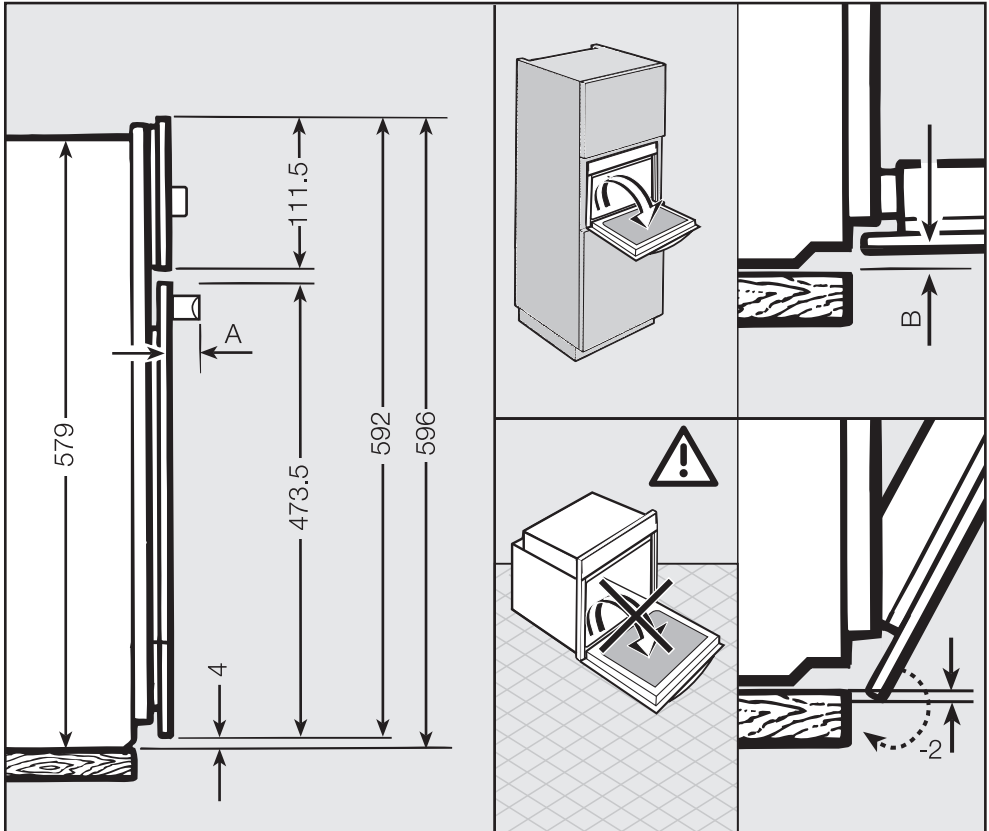

- A** H23xx; H25xx: 45 mm  
H24xx, H26xx: 42 mm
- B** Ovens with glass front: 2.2 mm  
Ovens with metal front: 1.2 mm

# Installing the oven

**⚠** The oven must not be operated until it has been correctly installed in its housing unit.

In order to function correctly, the oven requires an adequate supply of cool air.

Ensure that the supply of cool air is not impaired (e.g. by heat insulation strips in the housing unit).

Please also ensure that the cool air supply is not unduly heated by other heat sources such as a solid fuel stove.

## Before installation

- Before connecting the appliance to the mains, you must disconnect the power supply to the isolator switch or fused spur connection unit.

## Building in


- Connect the mains cable from the oven to the isolator.

Do not carry the oven by the door handle. The door can be damaged. Use the handles on each side of the casing to carry it.

It is advisable to dismantle the door before installing the appliance (see "Cleaning and Care - Dismantling the door") and remove accessories from the oven cavity. This will make it easier to install in its niche and you will not be tempted into using the handle to carry it.

- Push the oven into the housing unit and align it.

 

 


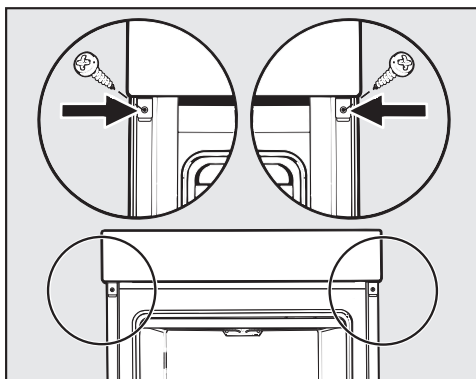

 

 








- Open the door (if you have not removed it previously).







- Use the screws supplied to secure the oven to the side walls of the housing unit through the holes in the oven trim.
- Refit the door, if necessary (see "Cleaning and care - Refitting the door").




## Test food acc. to EN 60350-1

Test food	Accessories		 [°C]	 <sup>5</sup> <sub>1</sub>	 [min]	Pre-heat
Drop cookies	1 tray		140	2	30–40	No
	2 trays <sup>1)</sup>		140	1+3	30–40	No
	1 tray		160 <sup>2)</sup>	3	20–30	Yes
Small cakes	1 tray		150	2	30–40	No
	2 trays		150 <sup>2)</sup>	2+4	25–35	Yes
	1 tray		160 <sup>2)</sup>	3	20–30	Yes
Whisked sponge	Springform <sup>3)</sup> Ø 26 cm		170	2	25–35	No
			150–180 <sup>2) 4)</sup>	2	20–45	Yes
Apple cake	Springform <sup>3)</sup> Ø 20 cm		160 <sup>2)</sup>	2	90–100	No
			180	1	80–90	No
Toast	Rack			3	6–10	Yes, 5 minutes
Burgers	Rack on top of universal tray			5 <sup>5)</sup>	1st side: 15– 20 2nd side: 15–20	Yes, 5 minutes

 Function /  Temperature / <sup>5</sup><sub>1</sub> Shelf level /  Cooking duration

 Fan plus /  Conventional heat /  Grill

- 1) Take the baking trays out of the oven early if the food is sufficiently browned before the specified duration has elapsed.
- 2) Pre-heat the oven. Do not use Rapid heat-up .
- 3) Use a dark coloured, matt tin and place it on the rack.
- 4) In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest duration.
- 5) Place the rack on shelf level 5 and the universal tray on shelf level 2.

## Note for test institutes


---

### Energy efficiency class

The energy efficiency class is calculated in accordance with EN 60350-1.
--

Energy efficiency class: A+

Please observe the following advice when testing:

- Use the Gentle bake  programme for testing purposes.
- During testing make sure that only those accessories required for the test are in the oven cavity.  
Do not use other accessories that might be available, such as FlexiClip runners or catalytic enamelled panels such as side panels or roof liners.
- When calculating the Energy efficiency class it is important to keep the oven door firmly closed.  
Depending on test instruments used, the door seal function can be affected to a greater or lesser degree. This can have a negative influence on test results.  
This can be compensated for by pressing on the door. Where necessary suitable technical measures can be used to assist. The door seal is not affected in normal everyday use.

### Data sheets for household ovens

The data sheets apply to ovens described in this operating instruction manual.

## Data sheet for household ovens

In acc. with delegated regulation (EU) No. 65/2014 and regulation (EU) No. 66/2014

<b>MIELE</b>	
<b>Model name / identifier</b>	H2561B
Energy efficiency index/cavity (EEI <sub>cavity</sub> )	81,9
Energy efficiency class/cavity	
A+++ (most efficient) to D (least efficient)	A+
Energy consumption per cycle for each cavity in conventional mode	1,05 kWh
Energy consumption per cycle for each cavity in fan-forced convection mode	0,71 kWh
Number of cavities	1
Heat source(s) per cavity	electric
Volume of cavity	76 l
Mass of the appliance	39 kg

## Data sheet for household ovens

In acc. with delegated regulation (EU) No. 65/2014 and regulation (EU) No. 66/2014

<b>MIELE</b>	
<b>Model name / identifier</b>	H2661-1B
Energy efficiency index/cavity (EEI <sub>cavity</sub> )	81,9
Energy efficiency class/cavity	
A+++ (most efficient) to D (least efficient)	A+
Energy consumption per cycle for each cavity in conventional mode	1,05 kWh
Energy consumption per cycle for each cavity in fan-forced convection mode	0,71 kWh
Number of cavities	1
Heat source(s) per cavity	electric
Volume of cavity	76 l
Mass of the appliance	39 kg







## **United Kingdom**

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Customer Contact Centre Tel: 0330 160 6600  
E-mail: mielecare@miele.co.uk  
Internet: www.miele.co.uk

## **Australia**

Miele Australia Pty. Ltd.  
ACN 005 635 398  
ABN 96 005 635 398  
1 Gilbert Park Drive, Knoxfield, VIC 3180  
Tel: 1300 464 353  
Internet: www.miele.com.au

## **China**

Miele (Shanghai) Trading Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District  
200040 Shanghai, PRC  
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511  
E-mail: info@miele.cn, Internet: www.miele.cn

## **Miele (Hong Kong) Limited**

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay, Hong Kong  
Tel: (852) 2610 1025, Fax: (852) 3579 1404  
Email: customerservices@miele.com.hk  
Website: www.miele.hk

## **India**

Miele India Pvt. Ltd.  
Ground Floor, Copia Corporate Suites  
Plot No. 9, Jasola, New Delhi - 110025  
Tel: 011-46 900 000, Fax: 011-46 900 001  
E-mail: customercare@miele.in, Internet: www.miele.in

## **Ireland**

Miele Ireland Ltd.  
2024 Bianconi Avenue  
Citywest Business Campus, Dublin 24  
Tel: (01) 461 07 10, Fax: (01) 461 07 97  
E-Mail: info@miele.ie, Internet: www.miele.ie

## **Manufacturer: Miele & Cie. KG**

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

# Miele

## **Malaysia**

Miele Sdn Bhd  
Suite 12-2, Level 12  
Menara Sapura Kencana Petroleum  
Solaris Dutamas No. 1, Jalan Dutamas 1  
50480 Kuala Lumpur, Malaysia  
Phone: +603-6209-0288  
Fax: +603-6205-3768

## **New Zealand**

Miele New Zealand Limited  
IRD 98 463 631  
Level 2, 10 College Hill  
Freemans Bay, Auckland 1011, NZ  
Tel: 0800 464 353  
Internet: www.miele.co.nz

## **Singapore**

Miele Pte. Ltd.  
163 Penang Road  
# 04 - 03 Winsland House II  
Singapore 238463  
Tel: +65 6735 1191, Fax: +65 6735 1161  
E-Mail: info@miele.com.sg  
Internet: www.miele.sg

## **South Africa**

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: (011) 875 9000, Fax: (011) 875 9035  
E-mail: info@miele.co.za  
Internet: www.miele.co.za

## **United Arab Emirates**

Miele Appliances Ltd.  
Gold & Diamond Park  
Office No. 6-217, Sheikh Zayed Road  
P.O. Box 11 47 82 - Dubai  
Tel. +971 4 3044 999  
Fax. +971 4 3418 852  
800-MIELE (64353)  
E-Mail: info@miele.ae  
Website: www.miele.ae

H2561B; H2661-1B



en-GB

M.-Nr. 10 168 840 / 02