




Heat Pump Dryer



User manual

DV9*K60****/DV8*K60****

SAMSUNG

Contents

Safety information	4
What you need to know about the safety instructions	4
Important safety symbols	4
Important safety precautions	5
Instructions about the WEEE	12
 Installation	 13
Unpacking your dryer and installing guide	13
See dryer exterior	13
Check before installing	15
Before using the product	15
Important to installer	15
Location considerations	16
Alcove or closet installation	16
Electrical requirements	16
Grounding	16
Installation side by side	17
Final installation checklist	18
Draining water without using the water tank	18
Connecting the drain hose	19
Installation stacking	22
 Before you start	 25
Cleaning the filter case 	25
Rack Dry (DV9 series only)	26
Load the dryer properly	27
Getting started	28
 Operations	 29
Overview of the control panel	29
Simple steps to start	32
Cycle overview	33
Drying guide	35
Special features	36

Maintenance	38
Clean the heat exchanger	38
Control panel	38
Stainless steel tumbler	38
Dryer exterior	38
Dumping condensed water 	39
Cleaning the heat exchanger filter 	40
 Troubleshooting	 42
Check these points if your dryer...	42
Information codes	44
 Appendix	 45
Fabric care chart	45
Protecting the environment	46
Specification	47
Consumption data	48
Sheet of household tumble driers	49

Safety information

Congratulations on your new Samsung dryer. This manual contains important information on the installation, use, and care of your appliance. Please take the time to read this manual to take full advantage of your dryer's many benefits and features.

What you need to know about the safety instructions

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, or operating your dryer.

Always contact your manufacturer about problems or conditions you do not understand.

Important safety symbols

What the icons and signs in this user manual mean:



WARNING

Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.



CAUTION

Hazards or unsafe practices that may result in personal injury and/or property damage.



NOTE

Indicates that a risk of personal injury or material damage exists.



Read the instructions

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist.

To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.



WARNING - Risk of Fire

- Clothes dryer installation must be performed by a qualified technician.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions.

Important safety precautions

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. **For use in Europe:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Children should be supervised to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
6. For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

Safety information

7. **For use in Europe:** Children of less than 3 years should be kept away unless continuously supervised.
8. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
9. The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
10. The lint trap has to be cleaned frequently, if applicable.
11. Lint must not be allowed to accumulate around the tumble dryer. (not applicable for appliances intended to be vented to the exterior of the building)
12. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
13. Do not dry unwashed items in the tumble dryer.
14. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
15. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
16. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

17. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
18. Remove all objects from pockets such as lighters and matches.
19. **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
20. Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
21. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
22. **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
Heat pump model only: The instructions shall also include the substance of the following:
WARNING: In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.
WARNING: Do not damage the refrigerant circuit.

Critical installation warnings

WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into a wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

Safety information

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install or keep the product exposed to the outdoor elements.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified technician in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug after installation.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. See installation instructions for grounding this appliance.

Install this appliance in a location with solid, level floor.

- Failing to do so may result in abnormal vibrations, noise or problems with the product.

Since an ingredient in hair spray may degrade the hydrophile property of the heat exchanger so that dew may appear on the outer surface of the appliance when the cooling operation is running, do not install the appliance in a beauty salon.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

Critical usage warnings

WARNING

Do not let children or pets on or into the product. In addition, when disposing of this product, disassemble the door lock (lever).

- This may result in children falling and injuring themselves.
- If children become locked in the product, there is a danger of suffocation.

Do not try to access the inside of the product when the drum is rotating.

Do not sit on the product or lean against the door.

- This may result in the product turning over and resulting in injury.

Dry the laundry only after it was spun by an appropriate washing machine.

Do not dry unwashed items in the tumble dryer.

Do not drink the condensed water.

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Do not dry laundry contaminated by inflammable materials such as gasoline, kerosene, benzene, thinner, alcohol, etc.

- This may result in electric shock, fire or explosion.

Do not let pets chew or play with the dryer.

- This may result in electric shock or injury.

When disposing of the product, separate the door and the power cord before disposing of the product.

- Failing to do so may result in damage to the power cord or an injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

When gas (city gas, propane gas, LP gas) leaks, do not touch this appliance or the power cord, ventilate immediately.

- At this time, do not use the ventilating fan.
- A spark may cause an explosion or fire.

Do not repair, replace, or attempt to service any part of the appliance unless specifically recommended in the user-repair instructions. You must also have the skills necessary to service this appliance.

Safety information

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as copper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service center.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

If the product generates strange noise, smells of something burning, or generates smoke, immediately cut-off the power and contact the service center.

- Otherwise, it may cause an electric shock or fire as a result.

Do not let children (or pets) play in or on your product. The product door does not open easily from the inside and children may be seriously injured if trapped inside.

Usage cautions

CAUTION

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not touch the glass door and inside of the drum during or just after drying as it is hot.

- This may result in burns.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Do not dry laundry containing forming rubber (latex) or similar rubber textures.

- If forming rubber is heated, it may start a fire.

Do not dry laundry contaminated by vegetable oil or cooking oil as a large amount of the oil will not be removed when washing the laundry. In addition, use the Cool Down cycle so that the laundry is not heated.

- The oxidization heat of the oil may start a fire.

Make sure that the pockets of all clothing to be dried are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not dry clothing with large buckles, buttons, or other heavy metal (zippers, hooks and eyelets, button-up covers).

If necessary, use the laundry net for small and lightweight laundry such as fabric tie belt, apron strings, and underwire bras which can dissolve or break during a cycle.

Recommend against using drying sheets to reduce static electricity as this could lead to damage to your laundry and also potential damage to the appliance.

- This may result in damage to the laundry.

Do not use the dryer near dangerous powders such as coal dust, wheat flour, etc.

- This may result in electric shock, fire or an explosion.

Do not place inflammable materials near the product.

- This may result in toxic gases from the product, damage to parts, electric shock, fire or an explosion.
- The appliance should not be placed behind lockable doors etc.

Do not touch the rear side of the appliance during or immediately after drying is complete.

- The appliance remains hot and may cause burns.

Contains fluorinated greenhouse gases.

Hermetically sealed equipment.

Do not vent gases into the atmosphere.

Refrigerant (Type): R-134a (GWP = 1430)

Refrigerant (Charging): 0.4 kg, 0.572 tCO₂e

Critical cleaning warnings

WARNING

Do not clean the appliance by spraying water directly onto it.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

Clean the filter case before and after using the dryer.


Clean the inside of the product on a regular basis by asking an authorized service engineer.

Clean the Heat Exchanger with a soft brush or vacuum cleaner once a month, Do not touch the heat exchanger with your hand. Otherwise, it may cause an injury.

The interior of the dryer should be cleaned periodically by qualified service personnel.

Safety information

Instructions about the WEEE

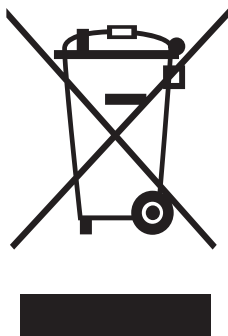

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH visit: samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html


Installation

Unpacking your dryer and installing guide

Hire a professional to install this dryer properly. If there is a service call performed as a result of poor setup, adjustment, and connection, it is considered the responsibility of the installer. It is recommended that a professional is called to install this appliance, especially for more difficult installations involving draining to the mains water supply or product stacking. If problems of installation result in a service visit to fix a fault, this is typically considered to be the responsibility of the installer.

Make sure you have everything necessary for proper installation (AC 220-240 V / 50 Hz). A grounded electrical outlet is required. See **"Electrical requirements"** (See page 16).

See dryer exterior

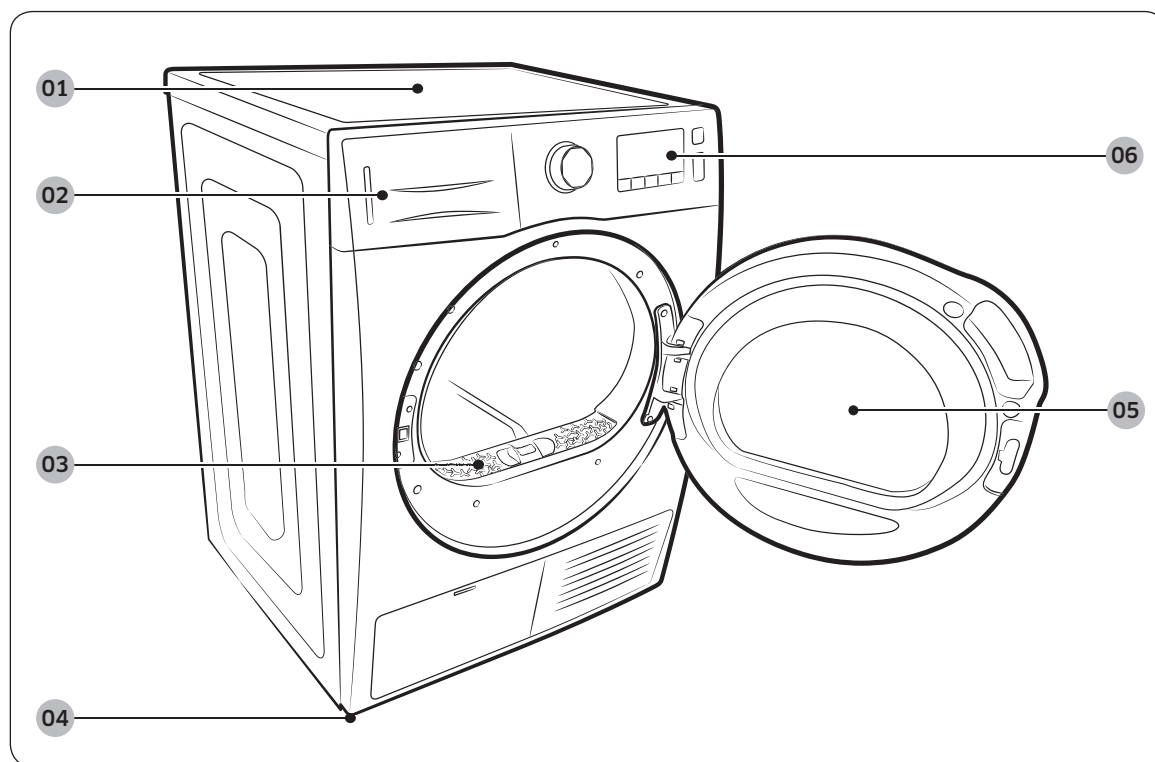

01 Cover top

02 Water tank

03 Filter case

 
04 Levelling feet

05 Door


06 Control panel

Installation

Parts




Hose guide

 

Cable tie



Hose connector

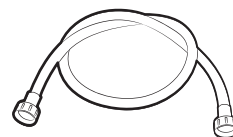

Long drain hose
(2 m)



Manual book



Rack Dry (9 Series)

Check before installing

- Do not plug the power cord into the wall outlet before completing the dryer installation.
- Check the appearance of the product for any damaged parts before starting the product installation.
- If there are any parts that appear to be damaged, please contact your nearest Samsung Customer Service Center.
- When moving the product, do not move the product by yourself.
- Take care of the edges of the dryer as they can be sharp.
- Do not install the dryer in a location exposed to frost. Cold water may damage the product.
- Use the product indoors only.
- Do not place the dryer on one side when lifting it, and do not move the dryer in such a way that the internal parts shake. This may result in damage to the internal parts of the product.

Before using the product

- Check if there are any accessories remaining inside the drum.
- Plug in the power cord just before operating the product.
- Do not block the air inlet hole of the cooling grill at the front of the dryer.
- Do not place inflammable objects near the dryer and keep the surroundings clean.
- Keep the dryer level with the ground.
- Do not remove the adjustable levelling feet of the dryer. They are necessary to keep the product level with the ground.

Important to installer

Please read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.

WARNING

Remove the door from all discarded appliances to avoid the danger of a child suffocating.

Installation

Location considerations

Because a condensing type has been adopted, which condenses and processes air inside the dryer, external ventilation is not required.

Therefore, The dryer can be installed and used in any location where the temperature is between 5 and 35 degrees centigrade, unlike a conventional dryer that requires an external exhaust system.

Alcove or closet installation

To operate safely and properly, your new dryer requires minimum clearances of:

Sides - 25 mm

Rear - 51 mm

Top - 25 mm

Front - 490 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 490 mm unobstructed air opening.

Electrical requirements

NOTE

Electrical requirements is AC 220-240 V / 50 Hz.

WARNING

- Improper connection of the equipment grounding conductor can result in a risk of electric shock.
Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer – if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, It is your responsibility to provide adequate electrical services for your dryer.

Grounding

Your dryer must be grounded. If your dryer malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your dryer comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

NOTE


Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes. Improperly connecting the equipment-grounding conductor can result electrical shock. Check with a qualified electrician or serviceman if you are unsure if the dryer is properly grounded. Do not modify the plug provided with the dryer. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING

If the product is not grounded, there is a danger of fire or electric shock.

Installation side by side

For proper installation, we recommend that you hire a professional. To install:

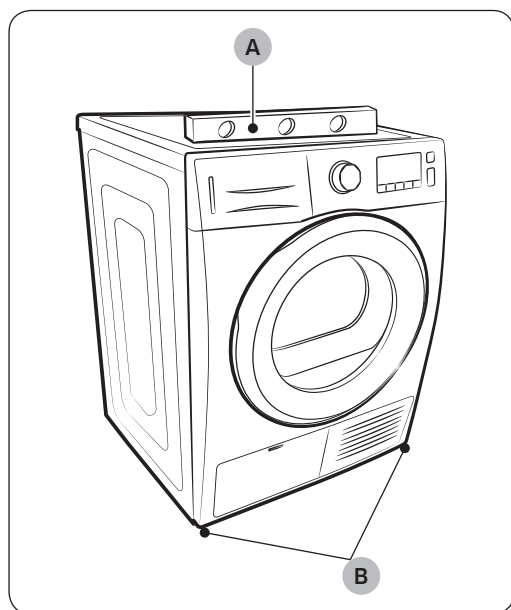


- A.** Level
B. Levelling feet

1. Move your dryer to an appropriate location for installation. Consider installing the dryer and washer side-by-side. Lay two of the carton cushion-tops on the floor. Tip your dryer on its side so it will lay across both cushion-tops.
2. Set your dryer back in an upright position.
3. Use a **level (A)** to check if the dryer is level. If not, adjust the **leveling feet (B)** at the bottom of the dryer. Repeat this adjustment until the dryer is level.

CAUTION

- To ensure optimal performance, the dryer must be level.
- To minimize vibration, noise, and unwanted movement of the dryer, the floor must be a flat, solid surface.

Installation

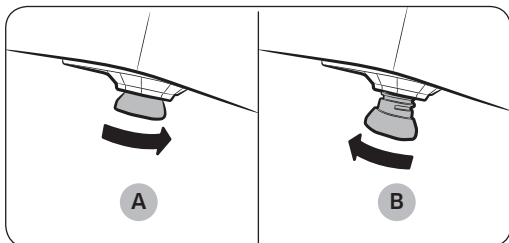

NOTE

- To set the dryer to the same height as the washer, **fully retract (A)** the levelling feet by turning them counterclockwise, **then loosen (B)** the legs by turning them clockwise.
- Adjust the levelling feet only as much as necessary to level the dryer. Extending the levelling feet more than necessary can cause the dryer to vibrate.

4. Review "Electrical requirements" section (See page 16). Before operating or testing.
5. With a level, check your dryer and make necessary adjustments to the levelling legs.
6. Plug in your dryer, and check operation by using the checklist below.

Final installation checklist

- Dryer is plugged into electrical outlet and is properly grounded.
- Dryer is leveled and is sitting firmly on the floor.
- Start your dryer to confirm that it runs, heats, and shuts off.
- Finally, check if the "HC" check occurs when after running the **TIME DRY** cycle for 20 minutes.


Draining water without using the water tank

You can use the dryer without using the water tank by following the procedures below.

Install the drain hose so that water can be drained well.


- Otherwise, the water may overflow and it may cause damage to the properties.

Connecting the drain hose

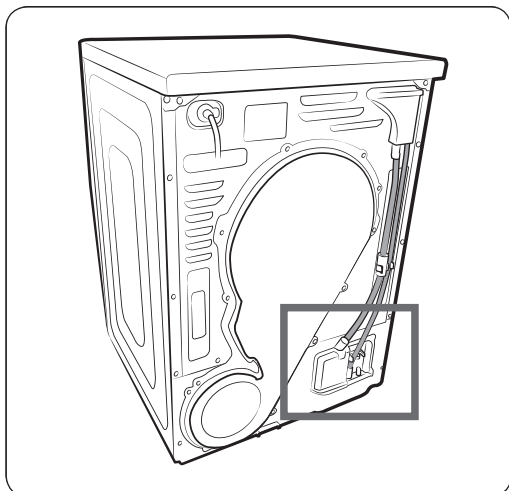


The dryer can pump the condensed water outside of the dryer directly with drain hose provide.

The procedures to connect the drain hose are as follows.

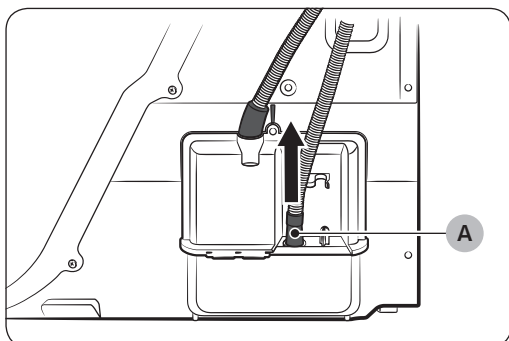


1. Disconnect the **drain hose (A)**.

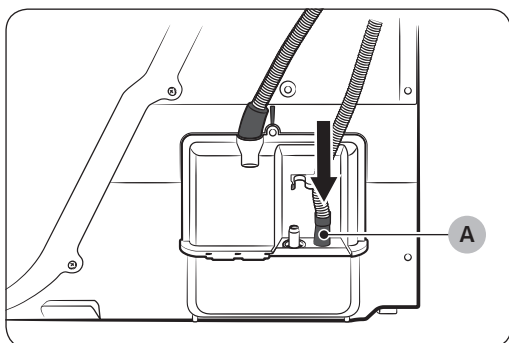

2. Connect the **drain hose (A)** to the other hole.

Installation

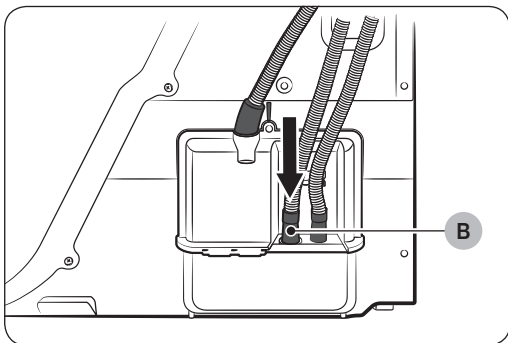

3. Connect accessory hose (long drain hose) to the hole next to the hole that is connected to **drain hose (B)**.



CAUTION

- Because the dryer's drain pump can only pump up the drain water to a 90 cm height, when you connect the **drain hose (B)** to the drain point, make sure that the height of drain point does not exceed 90 cm.
A drainage check may occur if the drain point exceeds 90 cm. If a drainage check occurs, the control panel displays a check code.
- After connecting the drain hose, you can directly drain the condensed water via the drain-outlet through the connected drain hose or through the washstand or the drain-outlet of the washstand.



Connecting the drain hose

⚠ CAUTION

Do not extend the drain hose.

- Since water may leak from the connected part, be sure to use one long drain hose instead of connecting short ones. If you cannot help connecting more than one hose, be sure to seal the connected parts with silicone sealant. (Do not use the electric insulating tape for sealing.)


The end of the drain hose can be positioned in three ways:

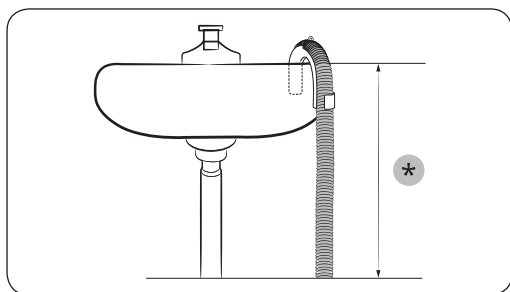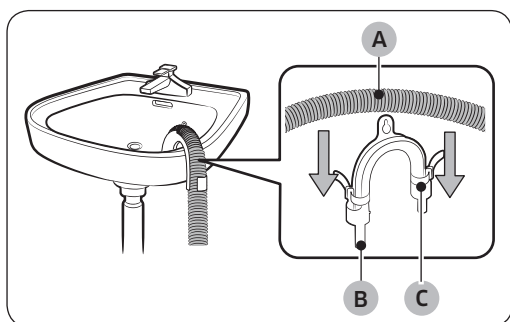

- Over the edge of a wash basin: The drain hose must be placed lower than 90 cm. If the end of the drain hose needs to be placed above the ground, we recommend a height of **60-90 cm (*)**. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.
- Assemble the **drain hose (A)** and the **hose guide (B)** and fix them with the **cable-tie (C)**.
- You can drain the condensed water by connecting the accessory hose (long drain hose) to the drain-outlet directly.

Connecting the direct-hose

You can immediately drain the condensed water that comes out while drying, by connecting the drain hose to the tap.

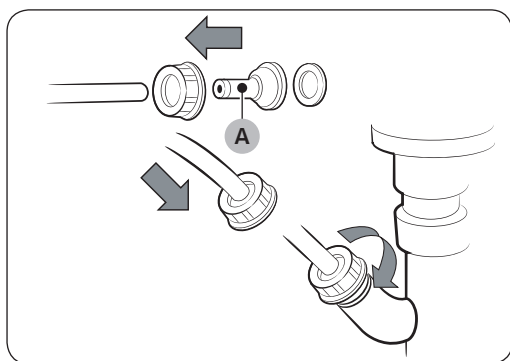

- Assemble the **hose connector (A)** and the hose.

⚠ CAUTION

Since there is a danger of water leaking from the hose connector and accessory hose, make sure that they are connected firmly.

Installation




2. Connect the end of the hose to the tap.

Installation stacking


In case of purchasing the additional stacking kit, contact our Samsung service center or local distributors. (Part No. SK-DH / SK-DA / SKK-DF)

The stacking kit differs depending on the model.

Only use the product in 1 hour after installing the stacking kit by tilting the product so that the product can run after the oil in the compressor becomes stable.

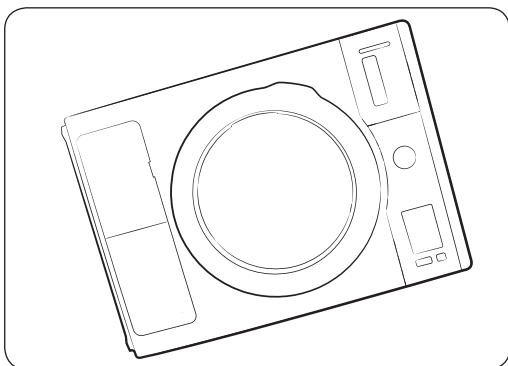


1. Carefully lay the dryer on its side.
Use the packing material so you don't scratch the finish on the dryer.

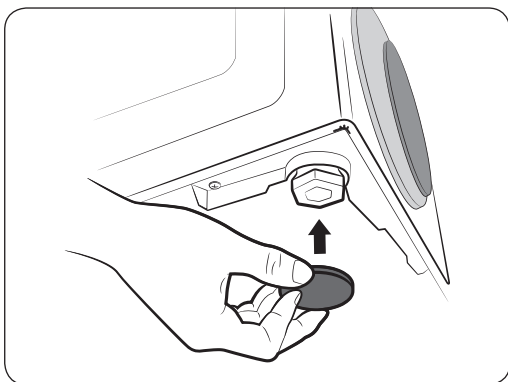


2. Install rubber pads to dryer base.
 - Locate the 4 rubber pads in the parts package. Insert the rubber pads into the holes at the bottom of the levelling legs.
 - Purchase the stacking-kit package additionally.
3. Set the dryer upright.

⚠ CAUTION

The stacking kit can only be installed for Samsung family products.

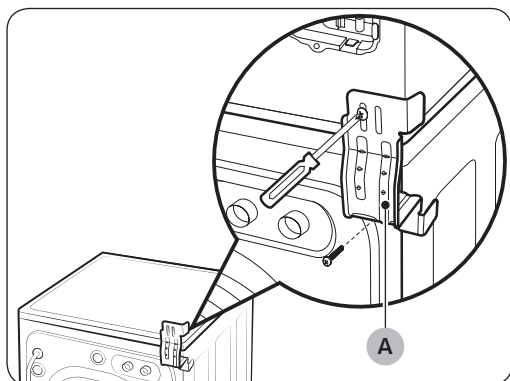

A. Bracket-Stacking

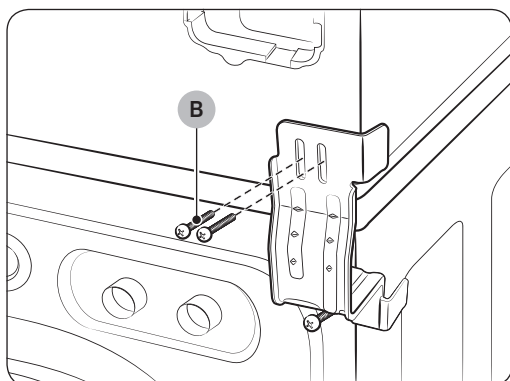

B. Screw

4. Install bracket to dryer.

- Remove washer top cap screw from the rear left. Align left bracket holes with top cap screw hole on rear left of the unit and replace screw.
- Repeat the above step with the right side.

NOTE


Leave screw loose so dryer hole alignment will be easier.

5. Install dryer and bracket on washer

WARNING

- Lift the dryer on top of the washer. Protect the washer control panel with cardboard or other protection. Be sure to lift the dryer high enough to clear the washer control panel. Personal Injury. More than two people are recommended to lift the dryer into position because of its weight and size. Failure to do so could result in injury.
- Align the holes in the bracket with the holes in the back of the dryer. Using a Phillips screwdriver, attach the M4 x 12 tapping screws.
- Tighten the washer bracket screws ; then tighten all stacking kit screws.

Installation

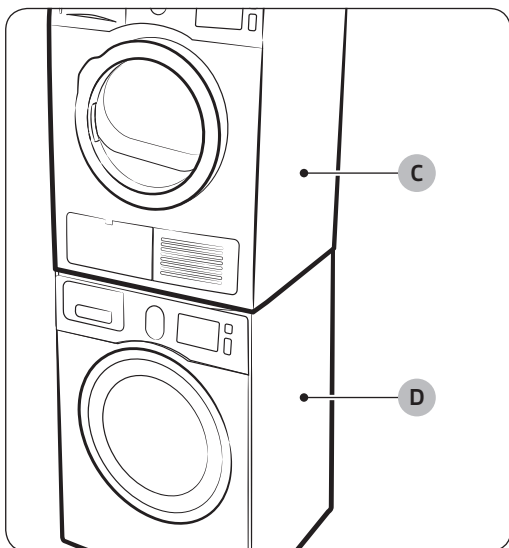

C. Dryer
D. Washer

6. Finalise the installation




WARNING

- Refer to the washer Installation Instructions to complete the washer installation.
- Refer to the dryer Installation Instructions to complete the dryer installation.
- Carefully slide or walk the stacked washer and dryer into place. Use felt pads or other sliding device to assist moving and to protect flooring.
- Do not push on the dryer once installed to top of the washer. Pushing on the dryer may result in pinched fingers.



Before you start

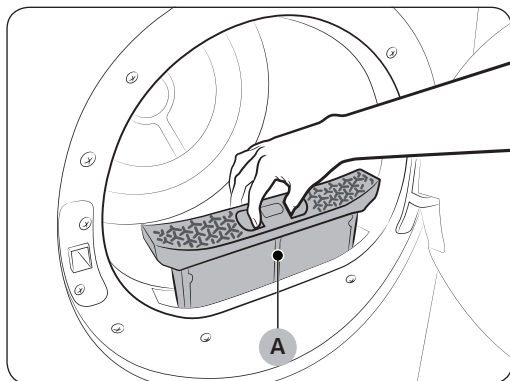Cleaning the filter case



1. Open the door and remove the **filter (A)** by pulling it upwards.
2. Open and clean the filter case.
 - Clean the filter case after the drying operation is completed.

CAUTION

- Since the drying performance may be degraded and there is a danger of fire if you do not clean the filter case after the specified period of use, clean the filter case at the specified cleaning interval.
- Clean the filter case after every drying operation.
- Clean the heat exchanger filter  after every 2 cycles. For details, see the "Cleaning the heat exchanger filter " section on page 40.


NOTE

- If the surface of the filter is wet, use the filter after drying it completely.

Before you start

Rack Dry (DV9 series only)

Installing the drying rack

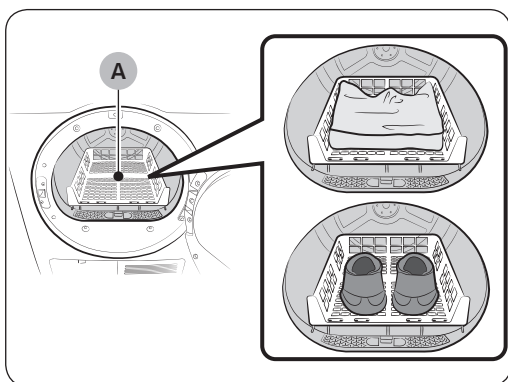

A. Rack dry

1. Open the dryer door.
2. Position the drying rack in the tumbler, placing the front lip of the drying rack on the top of the lint filter case.
3. Place the rear legs in the two recessed areas of the dryer's back wall then push down the middle of the drying rack to fix.
4. Place the items to be dried on the rack, leaving space between them so air can circulate.
5. Close the dryer door.
6. Press the **Power** button.
7. Select **TIME DRY** by using the cycle selector dial, set the **Time** button.

NOTE

- You can set the drying time up to 150 minutes. Select the time according to the moisture and weight of the items. It may be necessary to reset the timer if a longer drying time is needed. (When you dry laundry using the drying rack, using the **TIME DRY** cycle is recommended.)
8. Press the **Start/Pause** button.

Drying rack drying suggestions

Items	Remarks (Max 1.5 kg)
Washable sweaters (block to shape and lay flat on rack)	When drying the laundry using the Rack, fold and place the clothes on the Rack to prevent the clothing from becoming wrinkled.
Stuffed toys (cotton or polyester fiberfilled)	
Stuffed toys (foam or rubber-filled)	
Foam rubber pillows	
Sneakers	To dry sports shoes, place the shoes on the Rack so that the soles of the shoes are facing downwards.

WARNING

Drying foam rubber, plastic, or rubber on a heat setting may cause damage to the items and lead to a fire hazard.

CAUTION

When drying shoes, use the provided Rack Dry to prevent damage to the dryer.

Load the dryer properly

- Place only one wash load in your dryer at a time.
- Mixed loads of heavy and lightweight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
- Add one or more similar items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.
- Make sure to insert laundry that has been spun by an appropriate washing machine.
- No unwashed textiles should be dried
- Textiles which have been in contact with oil, alcohol, petrol etc. should not be dried.

Before you start

Getting started

1. Load your dryer loosely - DO NOT overload.
2. Close the door.
3. Select the appropriate cycle and options for the load.
4. Press the **Start/Pause** button.
5. The dryer indicator light will illuminate.
6. The estimated cycle time will appear in the display.
The time may fluctuate to better indicate drying time remaining in the cycle.



NOTE

- When the cycle is complete and “End” (or “0”) will appear in the display.
- Pressing Power cancels the cycle and stops your dryer.
- The Drying, Cooling, and Wrinkle Prevent indicator lights will illuminate during those portions of the cycle.


Operations

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons, read the safety information before operating this appliance.




If the Wrinkle Prevent option is not selected, take out the laundry immediately after it is washed and dried. Leaving the laundry inside the drum may produce wrinkles.

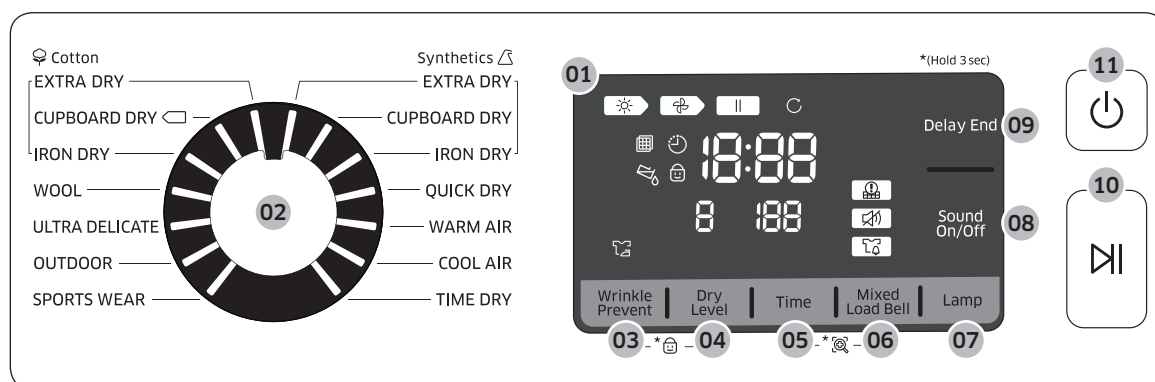Overview of the control panel



01 Digital Graphic Display	<p>Displays the remaining drying cycle time, all cycle information, and check messages.</p> <p>The display window shows the estimated time remaining in the cycle after you have pressed the Start/Pause button. The estimated time remaining may fluctuates as the cycle progresses. The drying light will illuminate and remain lit until the cycle is complete.</p> <p>When your dryer is in the cool-down phase, the Cooling light will illuminate. When your dryer is in the Wrinkle Prevent phase, the Wrinkle Prevent light will illuminate.</p> <p>While the dryer is running the Wrinkle Prevent cycle, the time display unit keeps making a big circle. When the cycle is complete, "End" or "0" appears on the time display unit. Press the Start/Pause or Power button to turn the dryer off, and then open the door.</p>
02 Cycle Selector	<p>When you turn on your dryer, the Cotton (CUPBOARD DRY) cycle is selected as default.</p> <p>Turn the Cycle Selector to select the cycle you want.</p>

Operations

03 Wrinkle Prevent	<p>Wrinkle Prevent provides approximately 120 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Press the Wrinkle Prevent button to activate this feature.</p> <p>The indicator light will illuminate when Wrinkle Prevent is selected. Dried laundry is prevented from becoming wrinkled by periodic drum rotations after the completion of the drying cycle. (Note that while the dryer is running the Wrinkle Prevent cycle, the time display unit keeps making a big circle.)</p>
04 Dry Level	<p>To select the dry level in the Cotton, Synthetics cycles, press the Dry Level button.</p> <p>Press the button repeatedly to scroll through level 1 to level 3. Larger or bulkier loads may require dry level 3 for complete dryness, which is the strongest level. Dry level 1 is used to partially dry items that lay flat or hang to dry.</p>
05 Time	<p>When using TIME DRY, WARM AIR, COOL AIR cycles, time can be adjusted by pressing the Time button.</p> <p>30 min > 60 min > 90 min > 120 min > 150 min (120 min and 150 min time options are not available for WARM AIR and COOL AIR cycles.)</p> <p>Except the TIME DRY, QUICK DRY, WARM AIR, COOL AIR cycle, the time indicator of manual is off because exact drying times are determined by fluctuating humidity levels.</p>
06 Mixed Load Bell	<p>This is an alarm that notifies the user when the average drying level is damp dry (80 % dried) when the laundry contains various types of materials and fabric.</p> <p>If the corresponding condition is satisfied, the Mixed Load Bell  indicator blinks.</p> <p> NOTE</p> <p>This is available only with the Cupboard Dry or Extra Dry cycle.</p>
07 Lamp	<p>Lights the dryer drum while the dryer is running.</p> <p> NOTE</p> <p>It can be set while your dryer is not only running but also when it is stopped. If you do not turn the Lamp off within 5 minutes of turning it on, it is automatically turned off.</p>

08 Sound On/Off	The Sound On/Off function can be selected during all cycles. When this function is selected, sound is turned off for all cycles. Even if the power is turned on and off repeatedly, the setting is retained.
09 Delay End	Press this button repeatedly to cycle through the available Delay End options. (from 1 hours to 24 hours in one hour increments). The hour displayed indicates the time when the dry cycle will be finished. See page 36 for detail.
10 Start/Pause	Press to start a dry cycle. If the dryer is running, press it once and it will pause the dryer. Press it again to restart the dry cycle.
11 Power	Press once to turn your dryer on, press again to turn it off. If your dryer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.














NOTE

If you insert laundry into your dryer while it is extremely tangled immediately after your washer has finished a wash or spin cycle, it may degrade the drying efficiency or cause the door to open.

We recommend that you disentangle your laundry appropriately before inserting it.

NOTE

Each indicator on the graphic display means:

	Drying in Progress		Child Lock On/Off
	Cooling in Progress		Wrinkle Prevent
	Stop		Heat Exchanger Filter Clean Alarm
	Wrinkle Prevent in Progress		Sound On/Off
	Filter Check		Mixed Load Bell
	Delay End		Smart Check
	Dumping Condensed Water		

Operations

Simple steps to start

1. Press **Power** to turn on the dryer.
2. Turn the **Cycle Selector** to select a cycle.
3. Change the cycle settings (**Dry Level**, and **Time**) as necessary.
4. Optionally, you can activate options available by pressing the relevant button (**Wrinkle Prevent**, **Lamp**, **Mixed Load Bell**, and/or **Delay End**).
5. Press and hold **Start/Pause**. The dryer indicator turns on with an estimated cycle time on the display.



NOTE

Availability of options and setting values differs depending on the cycle.

To change the cycle during operation

1. Press **Start/Pause** to stop operation.
2. Select a different cycle.
3. Press and hold **Start/Pause** to start new cycle.

Cycle overview

Cycle		Description	Max load (kg)	
			DV9	DV8
Cotton		For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.	9	8
Cotton	EXTRA DRY	Use for heavy-duty fabrics or items that should be very dry.	9	8
	CUPBOARD DRY ☐	Use this cycle to dry loads such as cotton, underwear, and linen (NOT appropriate for jeans).	9	8
	IRON DRY	Finishes the dry cycle in a moist state appropriate for Ironing.	9	8
Synthetics		For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.	4.5	4
Synthetics	EXTRA DRY	Use for heavy-duty fabrics or items that should be very dry.	4.5	4
	CUPBOARD DRY	Use this cycle to dry loads such as shirts, blouses, bed linen and table linen. (NOT appropriate for jeans).	4.5	4
	IRON DRY	Finishes the dry cycle in a moist state appropriate for Ironing.	4.5	4
WOOL		For machine washable and tumble dryable wool only.	2	2
ULTRA DELICATE		The ULTRA DELICATE cycle is designed for lingeries.	1.5	1.5

Operations

Cycle	Description	Max load (kg)	
		DV9	DV8
OUTDOOR	For water-proof items such as mountain clothing, skiwear and sports wear. Fabrics include functional technology finishes and fibres such as spandex, stretch, and micro-fibre. We recommend that you use this drying cycle after you wash your laundry using the OUTDOOR cycle with your washing machine.	2	2
SPORTS WEAR	Use for light sportswear such as sweatsuit.	2	2
QUICK DRY	60 min is automatically set as the drying time.	1	1
WARM AIR	For small items, pre-dried laundry and normal fabrics in 30 minutes.	-	-
COOL AIR	For all fabrics to need freshening tumbles without heating.	-	-
TIME DRY	<p>TIME DRY allows you to select the desired cycle time.</p> <p>Turn the Cycle Selector dial to TIME DRY, then press Time button to set the drying time. Press the Time button repeatedly to scroll through the time settings. The drying time increase in every 30 minutes up to 150 minutes.</p> <p>After drying the laundry, you may want to dry it more. To extend the drying time, select the TIME DRY cycle. The cycle time differs with the laundry conditions.</p>	-	-

NOTE

For better drying results, turn the laundry inside out before drying it.
Overloading the dryer may not yield the same results.

Drying guide

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

Bedspreads & Comforters	<ul style="list-style-type: none"> Follow the care label instructions or dry on the Cotton (CUPBOARD DRY ⇐) and High temperature. Make sure the item is thoroughly dry before using or storing. May require repositioning to ensure even drying.
Blankets	<ul style="list-style-type: none"> Use Cotton (CUPBOARD DRY ⇐) and dry only one blanket at a time for best tumbling action. Make sure the item is thoroughly dry before using or storing.
Cloth Nappies	<ul style="list-style-type: none"> Use the Cotton (CUPBOARD DRY ⇐) and the High temperature settings for soft, fluffy diapers.
Down-filled Items (jackets, sleeping bags, comforters, etc.)	<ul style="list-style-type: none"> Use the Cotton (CUPBOARD DRY ⇐) and the Low or Low temperature setting. Adding a couple of dry towels shortens drying time and absorbs moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	<ul style="list-style-type: none"> DO NOT dry on a heat setting. Use the COOL AIR cycle (no heat). <p>⚠ WARNING</p> <ul style="list-style-type: none"> Drying a rubber item with heat may damage it or be a fire hazard.
Pillows	<ul style="list-style-type: none"> Use the Cotton (CUPBOARD DRY ⇐). Add a couple of dry towels to help the tumbling action and to fluff the item. DO NOT dry kapok or foam pillows with heat. Use the COOL AIR cycle.
Plastics (shower curtains, outdoor furniture covers, etc.)	<ul style="list-style-type: none"> Use the COOL AIR or TIME DRY cycle. The dry level will be lowered to protect the laundry.

THINGS TO AVOID:

- Fiberglass items (curtains, draperies, etc.).
- Woolens, unless recommended on the label.
- Vegetable or cooking oil-soaked items.

Operations


Special features

Child Lock


A function to prevent children from playing with your dryer.

Activating/Deactivating

If you want to activating/deactivating the Child Lock, press both the **Wrinkle Prevent** and **Dry Level** buttons simultaneously for 3 seconds.


The "Child Lock 

NOTE

- When the power is turned on, the Child Lock function is available.
- Once you set the Child Lock function, no button, except for the **Power** button, will respond until you release the Child Lock function.
- If the dryer is powered on again, the Child Lock function stays on.
- When other buttons, except for the **Power** button, do not respond, check the "Child Lock 

Delay End

You can set the dryer to finish your drying cycle automatically at a later time, choosing a delay of between 1 to 24 hours (in 1 hour increments). The hour displayed indicates the time at which the dry will be finished.

1. Manually or automatically set your drying machine according to the type of laundry you are drying.
2. Press the **Delay End** button repeatedly until the required delay time is set. If the delay time is set, the Delay End function becomes ON state.
3. Press the **Start/Pause** button. The "Delay End 
4. To cancel a Delay End function, press the **Power** button and then turn the dryer on again.

Smart Check

This function enables you to check the status of the dryer using a smartphone.

NOTE

The Smart Check function has been optimized for:

Galaxy & iPhone series (cannot be supported for some models)

Downloading the Samsung Smart Washer app

Download the Samsung Smart Washer app to your mobile phone from the Android market or Apple App store and install it. You can easily find it by searching for “Samsung Smart Washer”.

Using the Smart Check function

1. Hold down the **Time** and **Mixed Load Bell** buttons at the same time for 3 seconds when an check occurs to run the Smart Check function. Alternatively, the Smart Check function can be run if no button is pressed after the dryer is turned on.
2. The LED segments on the display panel rotate for 2 or 3 seconds and the Smart Check code is displayed on the dryer's display panel.
3. Run the **Samsung Smart Washer** app on your smart phone and tap the **Smart Check** button.

NOTE

‘Smart Check’ may be changed to ‘Smart Care’ according to the language selection.

4. Focus your smart phone's camera on the Smart Check code displayed on the dryer's display panel.

NOTE

- If light from a light bulb, fluorescent bulb or lamp is reflected on the display panel of the dryer, the smart phone may not be able to easily recognize the Smart Check code.
 - If you hold the smart phone at a too wide angle relative to the front of the display panel, it may not be able to recognize the check code. For best results, hold the smart phone so that the front of the display panel and the smart phone are parallel or nearly parallel.
5. If it focuses correctly, the Smart Check code is automatically recognized, and the detailed information of the status of your dryer, the check and the countermeasures are displayed on your smart phone.
 6. If the smart phone fails to recognize the Smart Check code more than twice, please enter the Smart Check code displayed on your dryer's display panel into the Samsung Smart Washer app manually.

Maintenance

WARNING

Do not clean the dryer by directly spraying water onto the dryer. Do not clean the dryer with benzene, thinner, alcohol, or acetone.

- Otherwise, it may cause discoloration, deformation, damage, electric shock or fire.

When cleaning the product, be sure to unplug the power cord.

NOTE

During the drying cycle, the control panel or the door may accumulate moisture.

Clean the heat exchanger

Since the surface of the heat exchanger is sharp, clean it with a soft brush or vacuum cleaner. (It is recommended to clean it at least once every month.)

CAUTION

Do not touch the heat exchanger with your hand. Otherwise, it may cause an injury.

Control panel

Clean with a soft, damp clothes. Do not use abrasive substances.

Do not spray cleaners directly on the panel.

The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.

Apply such products away from your dryer and wipe up any spills or overspray immediately.

Stainless steel tumbler

To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.


Remove the cleaner residue and dry with a clean cloth.

Dryer exterior


The entire dryer has a high-gloss finish. Clean with a soft, damp cloth. Do not use abrasive substances. Protect the surface from sharp objects as they may scratch or damage the finish.

Do not place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.

Dumping condensed water

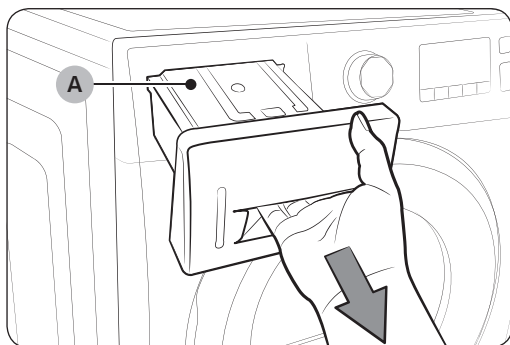

A. Water-tank

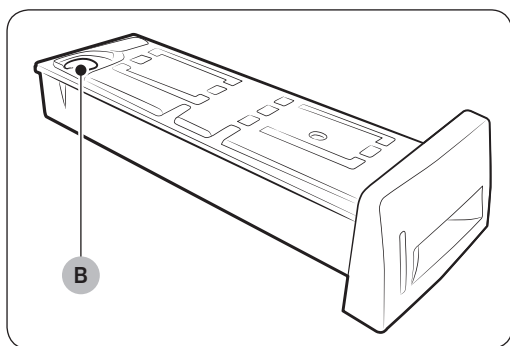

B. Drain hole

1. Pull the water-tank forwards to separate it.

CAUTION


When removing the water tank from the product, hold the **water-tank (A)** using both hands as it is heavy and take care not to spill any water inside the tank. Otherwise, it may cause an injury to your wrist.

2. Remove the condensed water by running it through the **drain hole(B)** of the water tank.
 - Remove the condensed water in the tank after every drying operation.

WARNING


Since there is a danger of water leaking if you do not drain the water after using the product, make sure to drain the water.

NOTE


If you empty the water tank and press the **Start/Pause** button, the "Water Tank " Full in the LED panel is turned off.

Maintenance


Cleaning the heat exchanger filter

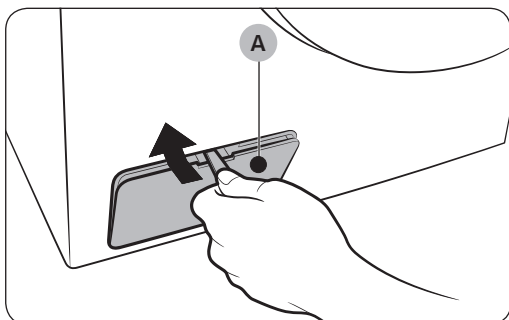



1. Use a key or coin to open the cover (A).

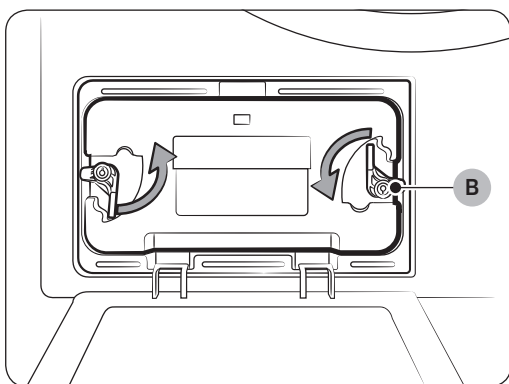

2. Unlock the fixer (B).

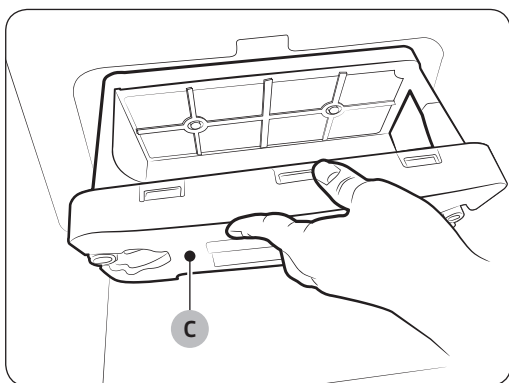

3. Remove the heat exchanger filter (C).

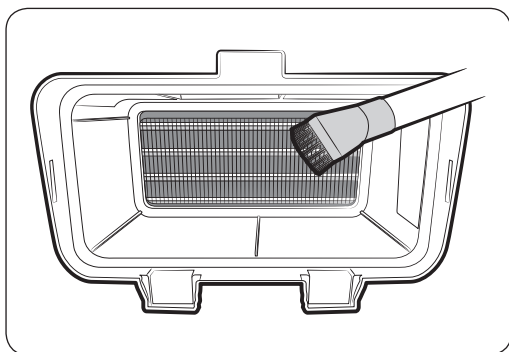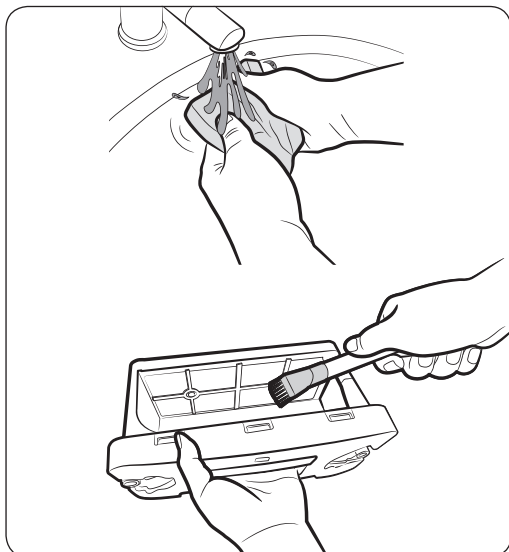

! CAUTION

When assembling the heat exchanger filter after cleaning it, make sure to that the fixer is set to the lock position.

4. If the heat exchange filter is not cleaned regularly, a display indicator will be turned on or blinked as a reminder.
If so, check the heat exchanger filter and clean it to make sure that the filter is not blocked with lints.

! CAUTION

- Remove the sponge from the filter assembly and clean it by rubbing in running water. Dust off the mesh part with soft brush. After cleaning with water, dry the Heat Exchanger Filter thoroughly before reinserting it back.
- Clean the heat exchanger filter after every 2 cycle is completed.
- When the indicator is turned on or blink, check the heat exchanger and clean it to make sure that the filter is not blocked with lints.

5. Clean it with a soft brush or vacuum cleaner. (It is recommended to clean it at least once every month.)

! CAUTION

Do not touch the heat exchanger with your hand. Otherwise, it may cause an injury.

Troubleshooting

Check these points if your dryer...

Problem	Solution
Doesn't run.	<ul style="list-style-type: none"> • Make sure the door is latched shut. • Be sure the power cord is plugged into a live electrical outlet. • Check the home's circuit breaker and fuses. • Press the Start/Pause button again if the door is opened during the cycle. • Empty the water in the condensed water tank. • Clean the filter case.
Doesn't heat.	<ul style="list-style-type: none"> • Check the home's circuit breaker and fuses. • Select a heat setting other than COOL AIR. • Check the case filter and Heat Exchanger Filter and clean them if necessary. • Dryer may have moved into the cool-down phase of the cycle.
Doesn't dry.	<ul style="list-style-type: none"> • Check all of the above, plus... • Do not overload. 1 wash load = 1 dryer load. • Sort heavy items from lightweight items. • Large, bulky items like blankets or comforters may require repositioning to ensure even drying. • Check that the dryer is draining properly to extract adequate water from the load. • Load may be too small to tumble properly. Add a few towels. • Clean the filter case. • Clean the Heat Exchanger Filter.
Is noisy.	<ul style="list-style-type: none"> • Check the load for objects such as coins, loose buttons, nails, etc. Remove promptly. • Be sure the dryer is leveled properly as outlined in the installation instruction. • It is normal for the dryer to hum due to the high velocity of air moving through the dryer drum and fan.

Problem	Solution
Dries unevenly.	<ul style="list-style-type: none"> Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the EXTRA DRY setting if desired. If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for best drying results.
Has an odour.	<ul style="list-style-type: none"> Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with the surrounding room air. This is normal as the dryer draws the air from the room, heats it, pulls it through the tumbler, and exhausts it outside. When these odors linger in the air, ventilate the room completely before using the dryer.
Shuts off before load is dry.	<ul style="list-style-type: none"> Dryer load is too small. Add more items or a few towels and restart the cycle. Dryer load is too large. Remove some items and restart the dryer.
Lint on clothes.	<ul style="list-style-type: none"> Make sure the case filter is cleaned before every load. With some loads that produce high amounts of lint, it may be necessary to clean the filter case during the cycle. Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (for example, a pair of black linen pants) Divide larger loads into smaller loads for drying Check pockets thoroughly before drying and drying clothes.
Garments still wrinkled after Wrinkle Prevent.	<ul style="list-style-type: none"> Small loads of 1 to 4 items work best. Load fewer garments. Load similar-type garments.
Odours remain in clothing after Cool air.	<ul style="list-style-type: none"> Fabrics containing strong odors should be washed.

Troubleshooting

Information codes

Information codes may be displayed to help you better understand what is occurring with your dryer.

Code	Meaning	Solution
tC	Air temperature sensor check.	Clean the filter case or heat exchanger filter. If the problem continues call for service.
tC5	Compressor temperature sensor check.	Turn the power on after 2-3 minutes and start again from the beginning.
dC	Running the dryer with door open.	Close the door and then restart. If the problem continues call for service.
HC	Compressor overheat.	Call for service.
9C2	It occurs when low voltage is detected.	Check if the power cord is plugged in. If the problem continues, please contact the service center.
5C	The water tank is full of water. The drain pump is out of order.	Empty the water tank, turn the power on again and start again from the beginning. If the problem continues call for service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

Do not let an unauthorized engineer disassemble or repair the product.

Appendix

Fabric care chart

The following symbols provide garment care direction. The Clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash cycle

	Normal
	Permanent Press / Wrinkle Resistant / Wrinkle Control
	Gentle / Delicates
	Hand Wash

Water Temperature**

...	Hot
..	Warm
.	Cold

NOTE

** The dot symbols represent appropriate wash water temperatures for various items. The temperature range for Hot is 41-52 °C, for Warm 29-41 °C and for Cold 16-29 °C. (Wash water temperature must be a minimum of 16 °C for detergent activation and effective cleaning.)

Bleach

	Any Bleach (when needed)
	Only Non-Chlorine (color-safe) Bleach (when needed)
	Tumble Dry Cycle

Normal

	Permanent Press / Wrinkle Resistant / Wrinkle Control
	Gentle/ Delicates

Special instructions


	Line Dry / Hang to Dry
	Drip Dry
	Dry Flat

Heat setting







...	High
..	Medium
.	Low
○	Any Heat
●	No Heat/Air

Appendix






Iron dry or steam temperatures

	High
	Medium
	Low

Warning symbols for laundering

	Do Not Wash
	Do Not Wring
	Do Not Bleach
	Do Not Tumble Dry
	No Steam (added to iron)
	Do Not Iron


Dry-clean

	Dry-clean
	Do Not dry-clean
	Line Dry/ Hang to Dry
	Drip Dry
	Dry Flat

Protecting the environment

This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.

Specification

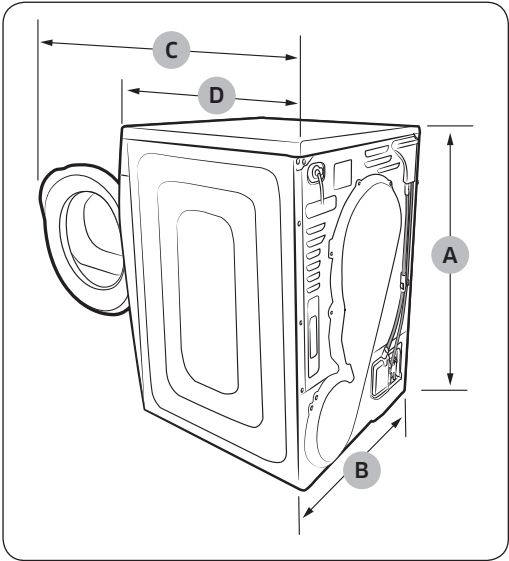

TYPE		FRONT LOADING DRYER	
DIMENSIONS	A. Height	85.0 cm	
	B. Width	60.0 cm	
	C. Depth with door open 90°	109.4 cm	
	D. Depth	60.0 cm	
WEIGHT		50 kg	
ELECTRICAL REQUIREMENTS		220-240 V / 50 Hz	950-1100 W
ALLOWABLE TEMPERATURE		5-35 °C	

Appendix

Consumption data

Model	Program	Load (kg)*	Energy (kWh)	Max. Duration (Minutes)
DV9 Series	Cotton Cupborad**	9	2.2	190
		4.5	1.12	120
	Cotton Iron	9	1.7	155
	Synthetics Cupboard	4.5	0.85	78
DV8 Series	Cotton Cupborad**	8	1.98	170
		4	1.04	110
	Cotton Iron	8	1.54	140
	Synthetics Cupboard	4	0.78	72

1. * : Weight of dry laundry

** : EN 61121:2013 test program

2. All data without a “star” against it was calculated using EN 61121:2013

Consumption data can vary from the nominal values given above depending in the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any extra options selected.

Sheet of household tumble driers

Data sheet for Domestic Tumble Driers
As detailed in EU regulation No. 392/2012

NOTE

“ * ” Asterisk(s) means variant model and can be varied (0-9) or (A-Z).

Samsung							
Model Name		DV9*K60****		DV8*K60****			
Capacity		kg		9.0		8.0	
Type		Condenser					
Energy Efficiency							
A + + + (highest efficiency) to D (least efficient)				A + +			
Energy Consumption							
Annual Energy Consumption (AE_C) ¹⁾		kWh/yr		258.0		235.0	
Automatic dryness detector		Yes					
Energy consumption (E_dry) standard cotton programme at full load		kWh		2.20		1.98	
Energy consumption (E_dry.1/2) standard cotton programme at partial load		kWh		1.12		1.04	
off mode and left-on mode							
The power consumption off-mode (P_o) at full load		W		0.50			
The power consumption in left-on mode (P_l) at full load		W		5.00			
Duration of the left-on mode		min		10			
Programme to which the information on the label and the Sheet relate ²⁾				Cotton + CUPBOARD DRY + (Wrinkle Prevent off)			
programme duration of the standard program							
Weighted Programme time standard cotton programme at full load and partial load		min		150		136	
Programme Time (T_dry) standard cotton programme at full load		min		190		170	
Programme Time (T_dry.1/2) standard cotton programme with partial load		min		120		110	
condensation efficiency class							
A (most efficient) to G (least efficient)				B			
Average condensation efficiency at full load		%		81			
Average condensation efficiency at partial load		%		81			
Weighted condensation efficiency		%		81			
Airborne noise emissions							
Dry at full load		dB (A) re 1 pW		65			
Built in				No			
Name of company				Samsung Electronics Co., Ltd.			

Appendix

- 1) Energy consumption is measured as the annual 9 kg 258 kWh (8 kg 235 kWh) used per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.
- 2) 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.
Consumption data can vary from the nominal values given above depending in the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any extra options selected.

Memo

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
UK	0330 SAMSUNG (7267864)	www.samsung.com/uk/support
IRELAND (EIRE)	0818 717100	www.samsung.com/ie/support



DC68-03709C-02