



Dreamland

**LUXURY
HEATED THROW**



 
 
 
**TYPE F2015
F2016
F2018**



Operating instructions



ILLUSTRATIVE GUIDE

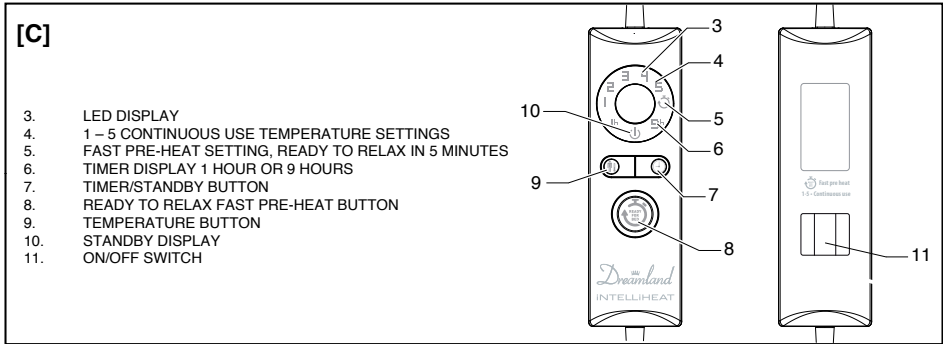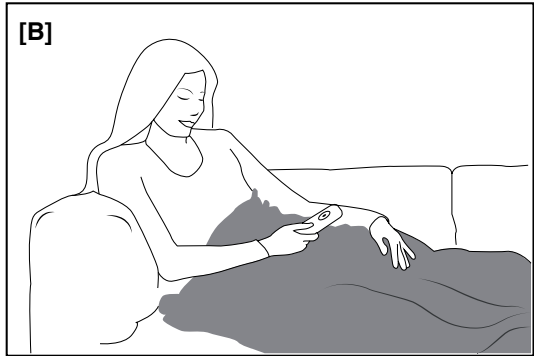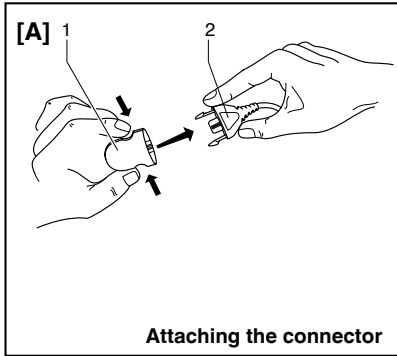

INTRODUCTION

EN

Dear customer, thank you for choosing our product. We feel certain you will appreciate its quality and reliability as it was designed and manufactured with customer satisfaction in mind. These instructions for use comply with the European Standard EN 82079.

IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.



ATTENTION! Instructions and warnings for a safe use.



Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.

ⓘ NOTE: should any part of this manual be difficult to understand or any doubt arise, contact the company at the address indicated on the last page before using the product.

ⓘ NOTE: Partially sighted persons can consult the digital version of these instructions for use on the website www.dreamlanduk.co.uk

INDEX

Introduction	Page 1	Storing the throw	Page 6
Safety warnings	Page 1-3	Trouble shooting	Page 7
Symbols	Page 4	Disposal	Page 7
Description of the appliance	Page 4	Warranty	Page 8
Positioning and fitting instructions	Page 4	Illustrative guide	I
Using your throw	Page 4	Technical data	II
Cleaning and Maintenance	Page 6		

SAFETY WARNINGS

- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage due to transportation. In doubt, do not use the appliance and contact an authorised service centre.




**WARNING! Risk of suffocation.**






Children shall not play with the packaging. Keep the plastic bag out of the reach of children.

- This appliance must be used only for the purpose for which it was designed, as a throw for home use. Any other use is considered not compliant and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit, if any (see illustrative guide).
- This appliance can work automatically at a frequency of 50 Hz or 60 Hz.
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.



Children under the age of three are not to use this appliance due to their inability to react to overheating.

- This appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
-  DO NOT use the appliance with wet hands or damp feet.
-  DO NOT pull the supply cord or the appliance itself to remove the plug from the socket.
-  DO NOT pull or lift the appliance by the supply cord.

- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed. You must make sure that the electric cable is positioned safely.
-  DO NOT expose the appliance to humidity or atmospheric agents (rain, sun, etc.) or extreme temperatures.
- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, contact an authorised technical service centre before switching it on again.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit.
-  DO NOT use this appliance to warm animals.
-  DO NOT place the control unit under the pillow or between the sheets or blankets.
- If the appliance is used on an adjustable bed, check that the throw and cord do not become trapped or rucked, for example in hinges.
-  DO NOT tuck in.
- This appliance is not intended for medical use in hospitals.
-  DO NOT use if wet.
















DO NOT USE FOLDED OR CREASED.



DO NOT INSERT PINS OR NEEDLES.

- For the features of the appliance, refer to the external packaging.
- Use the appliance only with the supplied accessories that are an essential part of the appliance.

SYMBOLS

	<i>Protection class II</i>		<i>Prohibited actions</i>
	<i>Carefully read the operating instructions</i>		<i>Important note</i>
	<i>Warning</i>		<i>Children under 3 years old not allowed</i>
	<i>Do not use folded or creased</i>		<i>Do not insert pins or needles</i>
	<i>Wash at maximum 40° C on a wool programme</i>		<i>Do not bleach</i>
	<i>Tumble dry, low heat</i>		<i>Do not dry clean</i>
	<i>Do not iron</i>		

DESCRIPTION OF THE APPLIANCE

Refer to the illustrative drawing at the beginning of this instructions booklet to verify your appliance equipment.

- | | |
|--|--|
| 1. Throw connector | 7. Timer/standby button |
| 2. Control connector | 8. Ready to Relax fast pre-heat button |
| 3. Led display | 9. Temperature button |
| 4. 1-5 Continuous use temperature settings | 10. Standby display |
| 5. Fast pre-heat setting Ready to Relax in 5 minutes | 11. On/off switch |
| 6. Timer display 1 hour or 9 hours | |

POSITIONING AND FITTING INSTRUCTIONS



ATTENTION! Your appliance must ONLY be used as a heated throw, i.e. over the occupant in the bed, chair or sofa.

POSITIONING THE THROW (Diagram [B] on page I)

- When using the throw on a chair, sofa or bed, place it over you to keep you warm and cosy, but do not wrap it tightly or sit on the blanket as this may cause the overheat protection system to activate.
- Do not fold or bend the wired areas, as these actions could result in activating the over heat protection system.

USING YOUR THROW



WARNING! DO NOT use this appliance if there are visible signs of damage.



WARNING! NOT suitable for children under the age of 3.

Your Dreamland Intelliheat throw is designed to FAST PREHEAT and it also responds to temperature changes in use.

The digital Intelliheat control has 6 temperature settings (Diagram [C] page I).

EN



WARNING! This appliance is only to be used with the control unit supplied with it. The reference of the control unit is specified on the label sewn onto the appliance.



WARNING! DO NOT place the control unit under the pillow or under the sheets when in use.



WARNING! When using the throw never position the control unit or the cable over or under the throw. Never cover the control unit with the electric throw.

Connect the control connector into the throw socket then plug into the mains socket (Diagram [A]). Switch on your Intelliheat throw from the back of the control (Diagram [C] (11)), by positioning the switch ON (I). The temperature setting (Diagram [C] (4)) will default to the last one used, providing it has been set to that number for a period longer than 5 minutes.

WHEN USING YOUR THROW, PRESS THE READY TO RELAX FAST PRE-HEAT BUTTON, THEN AFTER 5 MINUTES, WHEN YOU ARE READY TO SETTLE DOWN, SELECT A SETTING FROM 1 TO 5 TO FIND YOUR PREFERRED CONTINUOUS USE TEMPERATURE.

READY TO RELAX FAST PREHEAT: Press the Ready to relax, fast pre-heat button on the front of the control (8) (Diagram [C]). The ready to relax icon will be illuminated in red (Diagram [C] (5)) on your LED Display. Your throw will be lovely and warm in just 5 minutes.

TO SET FOR CONTINUOUS USE: RELEASE the Ready to relax fast pre-heat button, and press the temperature button (9) (Diagram [C]) to select your preferred temperature setting from 1-5. This will be illuminated in orange on the (3) LED display (Diagram [C] (4)).

1 OR 9 HOURS AUTO SHUT OFF TIMER: The Intelliheat control has an AUTOMATIC SHUT OFF TIMER. To set the timer, press the timer button (7) (Diagram [C]) and select either 1h or 9h. This will be illuminated in green on the (3) LED Display (6) (Diagram [C]).

TIMER OFF/STANDBY: When the set time period has elapsed, the throw will automatically switch off and the standby light will be illuminated in blue on the (3) LED display (10) (Diagram [C]). If you wish to switch your throw back on again, press the timer button (7) (Diagram [C]) selecting either 1 or 9 hours.

MANUAL SWITCH OFF THE THROW: Switch off the back of your Intelliheat control (11) (Diagram [C]) to off (O) position.

MEMORY FUNCTION: After using your throw for more than 5 minutes, the Intelliheat control will remember your last temperature setting.

DISCONNECT: To disconnect your throw from the mains socket, switch the control to OFF position on the back of your Intelliheat control (O) (11) (Diagram [C]), and then safely disconnect the plug from the mains socket.

CLEANING AND MAINTENANCE

EN

Your throw is suitable for washing. Check the washing instructions on the label of your throw to wash it correctly.



WARNING! Always disconnect the appliance from the mains supply before cleaning or performing maintenance.

BEFORE WASHING OR STORING YOUR THROW:

1. Disconnect the control from the mains socket.
2. Disconnect the connector (2) (Diagram [A]) from the throw by pressing the push buttons at the sides of the control connector (1).
3. Ensure that the controls are not connected and none of the wires have worn through the fabric.
4. It is important to measure the throw before washing and check that the dimensions are approximately the same before drying.



MACHINE WASHING

- The throw can be machine washed at 40°C on a wool programme.
- Only the gentle spin cycle is to be used. DO NOT use an extra spin cycle.



TUMBLE DRYING

- Tumble dry at a low temperature.
- DO NOT use the throw until it is completely dry.

HANGING THE THROW OUTSIDE TO DRY

- The throw must be stretched back to approximately its original size during the drying process. This is best done whilst damp, working from side to side, stretching a piece at a time. This procedure may need to be repeated a few times until fully dry.
- Make sure the wires are not kinked or twisted. It is easier to check the wires by placing the throw against the light.
- If problems arise with the wires after having dried the throw or if it does not return to its original size, return it to our authorised Service Centre for a safety check.



WARNING! Examine the appliance against the light to make sure the cables are not bent or twisted.



WARNING! If the appliance does not resume its original size or if problems arise with the internal cables contact an authorised service centre for a safety check.



WARNING! Hang the appliance without applying pegs so as not to damage it.

STORING THE THROW

When not in use, store as follows:

When storing your throw, allow it to cool down before folding.

- Make sure your throw is dry if it has been washed.
- Fold your throw loosely being careful not to bend the wires too forcefully.

- It is recommended to store the throw in the bag it was purchased in.
- Store the throw in a dry place.



WARNING! ⚠ **DO NOT crease the appliance by placing items on top of it during storage**

The fabric may discolour over time. This does not compromise the safety and/or performance of the product in any way.

Examine the appliance and its supply cord frequently for signs of wear or damage. If there are such signs or in the case of malfunction, contact our authorised technical service centre.

TROUBLE SHOOTING

This appliance is built to the very highest of standards. Follow the trouble shooting guide if the unit fails to operate. If you don't find any solution, discontinue use and return it to our Service Centre for a Safety inspection.

Problem	Solution
You feel a tingling sensation while in use.	This can be quite common and is completely harmless. Contact the after sales service for further information.
Damage to the control unit.	Discontinue use and return it to our Service Centre for a safety inspection.
Fabric rucking or creasing.	
Wear or tear on the fabric.	
Heat discoloration of fabric.	
The product has been misused or accidentally damaged.	

DISPOSAL



The packaging of the appliance is made of recyclable materials. Dispose of it in accordance with the environmental protection regulations.



Pursuant to Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the crossed bin symbol on the appliance or its packaging indicates that the appliance must be disposed of separately from other waste at the end of its useful life.

The user must therefore take the appliance to an appropriate recycling centre for electrical and electronic equipment. Alternatively, instead of handling the disposal, the user can hand over the appliance to the retailer when a new, equivalent one is purchased. The user can hand over electronic products measuring less than 25 cm to retailers of electronic products having a sales area of at least 400 m² free of charge and with no obligation to buy. Appropriate separate collection for the subsequent procedure for the decommissioned appliance for recycling, which includes treatment and environmentally friendly disposal helps prevent adverse effects on the environment and health and promotes reusing and/or recycling materials that the appliance consists of.

WARRANTY

This product is guaranteed for a period of 2 years from the date of purchase against material, mechanical and electrical defects. The warranty is binding if it is accompanied by a valid receipt of payment. This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided that is not connected to an unsuitable electricity supply, dismantled, interfered with in any way damaged, through misuse, fair wear and tear. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

PLEASE NOTE, THE COST OF A SAFETY INSPECTION IS NOT COVERED BY THIS GUARANTEE. A CHARGE WILL BE MADE IN RESPECT OF ANY PRODUCT RETURNED UNDER THIS GUARANTEE, WHERE NO FAULT IS FOUND.

This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer. This guarantee does not confer any rights other than those expressly set out above and in particular we shall not be liable for any indirect or consequential loss or damage. Nothing in this guarantee or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights. In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice. If a defect appears and after checking that the throw is being used properly in accordance with the instructions, return it with a valid proof of purchase, as soon as possible to the manufacturer's Service Centre. This guarantee is valid in the UK only.

SERVICE CENTRE

PO Box 166 – Middlewich – Cheshire – CW10 0ZU - Tel: **0333 0050305**

E-mail: customerservice@imetec.co.uk

www.dreamlanduk.co.uk

TECHNICAL DATA

Dreamland **OVERBLANKET**
TYPE F2015 220-240 V 50/60 Hz 150 W

Technical specifications and care instructions for Dreamland TYPE F2015 OVERBLANKET. The product is rated for 220-240 V, 50/60 Hz, and 150 W. It features a no fire, no baby (0-3), and CE mark. Care instructions include a maximum temperature of 40°C, a triangle symbol, a square symbol, a crossed-out square symbol, a crossed-out circle symbol, a crossed-out triangle symbol, and a crossed-out square symbol with a diagonal line.

Dreamland **OVERBLANKET**
TYPE F2016 220-240 V 50/60 Hz 150 W

Technical specifications and care instructions for Dreamland TYPE F2016 OVERBLANKET. The product is rated for 220-240 V, 50/60 Hz, and 150 W. It features a no fire, no baby (0-3), and CE mark. Care instructions include a maximum temperature of 40°C, a triangle symbol, a square symbol, a crossed-out square symbol, a crossed-out circle symbol, a crossed-out triangle symbol, and a crossed-out square symbol with a diagonal line.

Dreamland **OVERBLANKET**
TYPE F2018 220-240 V 50/60 Hz 150 W

Technical specifications and care instructions for Dreamland TYPE F2018 OVERBLANKET. The product is rated for 220-240 V, 50/60 Hz, and 150 W. It features a no fire, no baby (0-3), and CE mark. Care instructions include a maximum temperature of 40°C, a triangle symbol, a square symbol, a crossed-out square symbol, a crossed-out circle symbol, a crossed-out triangle symbol, and a crossed-out square symbol with a diagonal line.



Dreamland

M1002690
170317

