 


John Lewis

Asuka Wardrobe

Stock numbers 803/13907

Thank you for purchasing this Asuka wardrobe, please read this instructions carefully before use to ensure safe and satisfactory operation of this product.

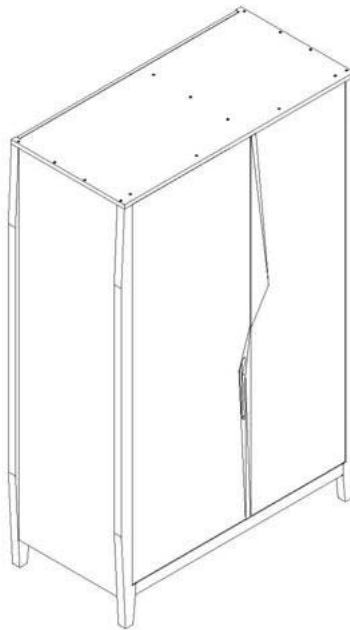

This item is **Heavy,** **Necessary tools**



Pre-assembly preparation









Please ensure instructions are read in full before attempting to assemble this product. Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

This product takes approximately **40 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Fittings and parts checklist


1 2	Door frame x 1 Side panel left x 1	C	15mm Screws x 20 
3 4	Side panel right x 1 Middle panel x 1	D	Hanging rail support x 6 
5 6	Top panel x 1 Bottom panel x 1	E	Brackets x 2 & strap x 1 
7 8	Back panel x 1 Shelf panel x 1	F	Wedges x 2 
A	30mm Screws x 60 	G/H	Long Hanging rail x 2 Short Hanging rail x 1  
B	Shelf support x 4 		

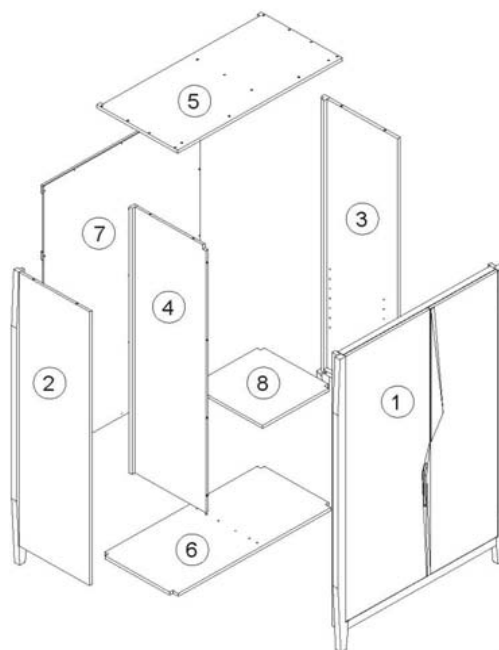 

Step by step assembly instructions


I.

 Using the screw C to fix the hanging rail support D to the inside of right and left panels and the middle panel as shown below.

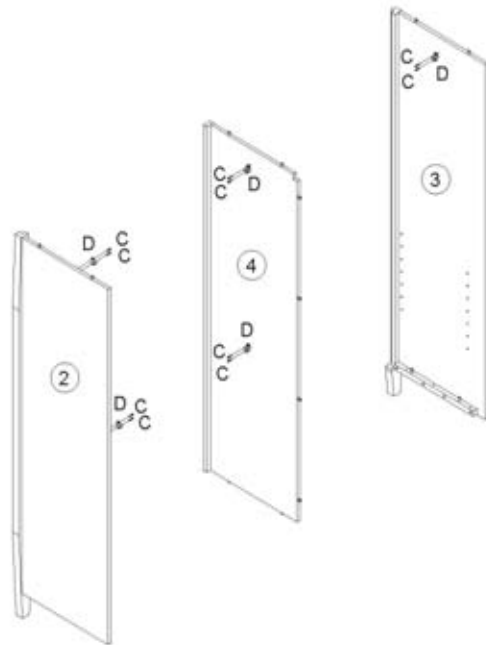




2.

Using the screw A , fix the bottom 6 to the side panels 2,3 as shown below, then attach the middle panel 4 to the bottom panel 6 using screw A.

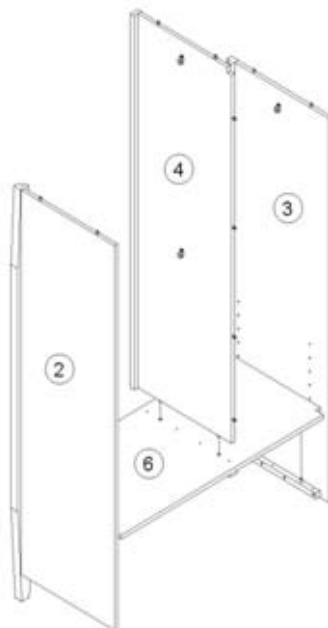


3.

Attach the door frame 1 onto the side panels 2,3 and middle panel 4, using 30mm screw A. Then fix the bottom 6 onto the side panels , middle panel and door frame, using the 30mm screw A.

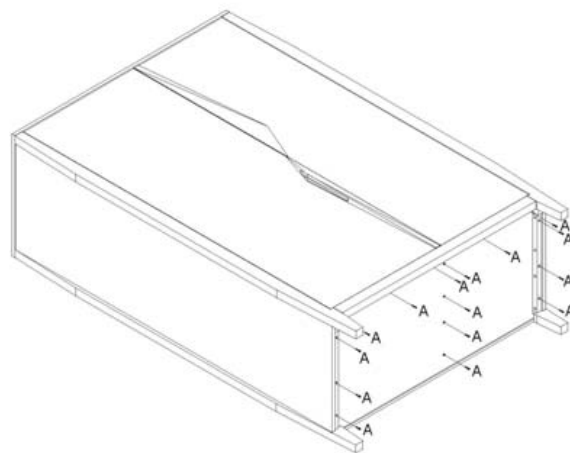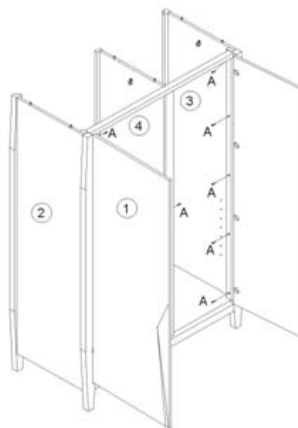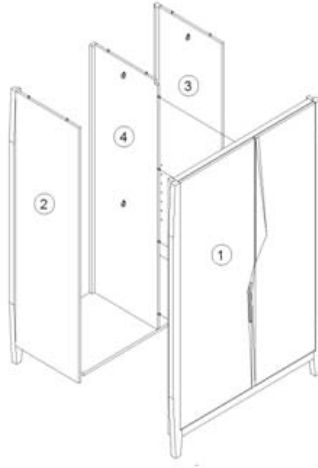


4.

Attach the Top panel 5 onto the side panels and middle panel using the 30mm screws.

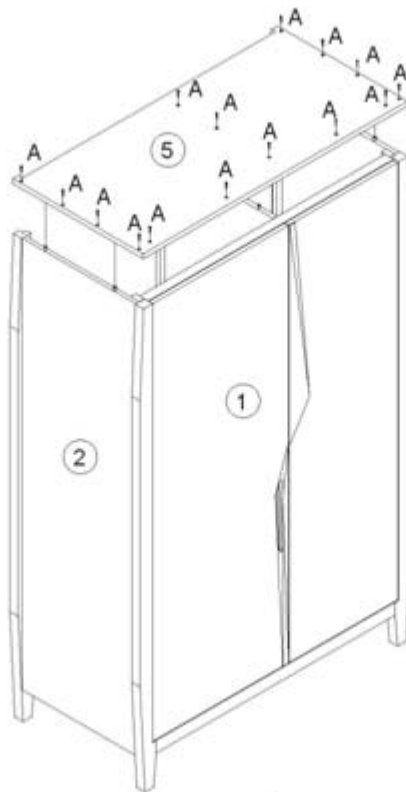


5.

Attach the Back panel 7 to the rear of wardrobe using the 30mm screws A.

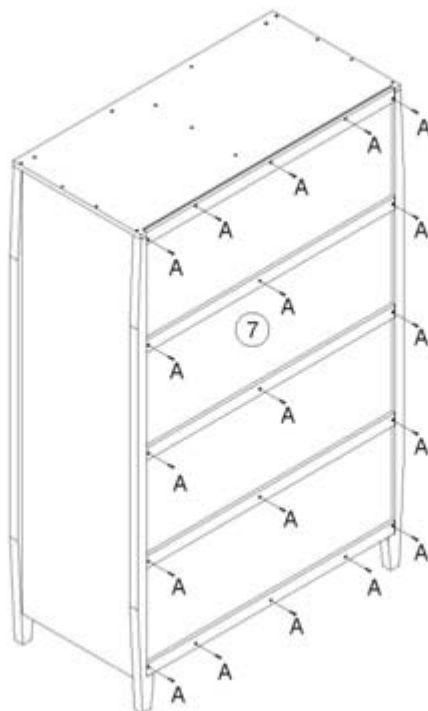


6.

Push the 4 shelf support B into the pre drilled holes , place the shelf 8 onto the support and using screw C, screw the shelf onto it's supports as shown below, put the hanging rail G and H onto their support D.

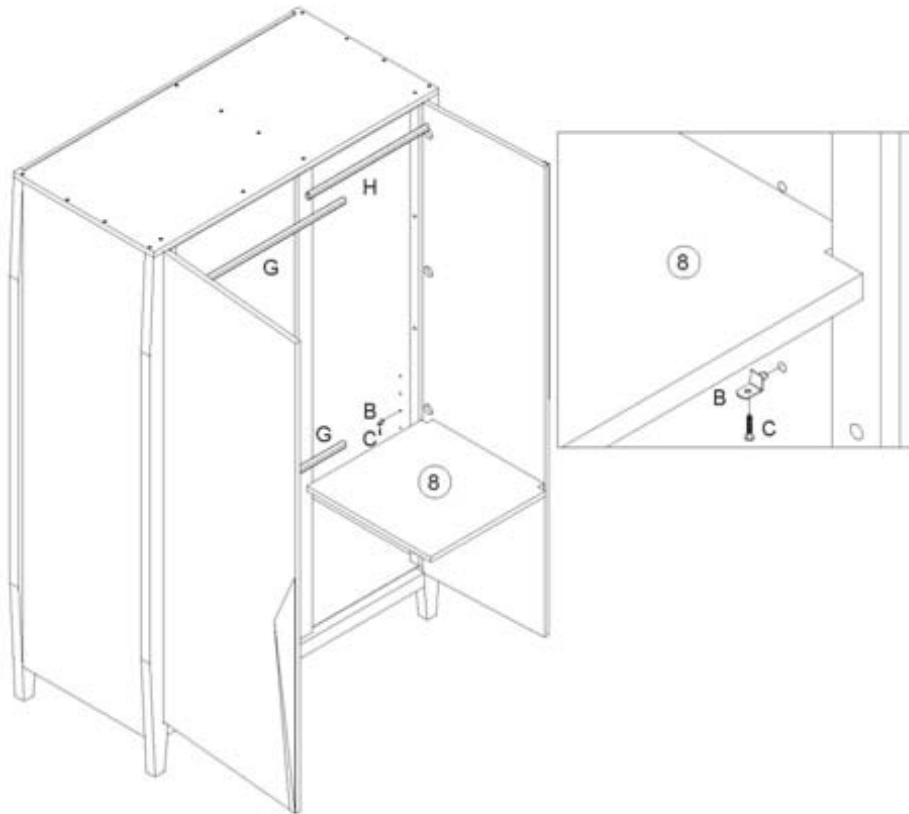


Wall fixing - if in doubt seek professional advice

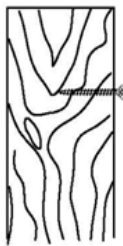


Wood

if fixing to wood
make sure that it
isn't chipboard as
screws can easily pull
away from the core
structure

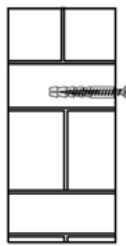

Brick or Masonry

Use an appropriate
wall plug provided you
are sure your wall is
sound

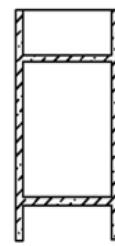

Cavity wall

Special toggle
wall plugs are
needed. Seek
expert advice

7.


Attach the wall bracket using screws suitable for your type of wall, see wall fixing above.

8.

Screw one of the brackets on to the top of the wardrobe in the middle at the back, using the short screws provided, position the wardrobe against the wall where you want it to go, place the second bracket onto the wall above the one fixed to the wardrobe and mark where the holes come on the wall, Move the wardrobe away from the wall.


9.

Place the wardrobe back against the wall so the two brackets match up and tie them together with the plastic strap provided, The plates need not match exactly ,but the plastic tie must go through each plate, Close the strap, but do not over tighten it.

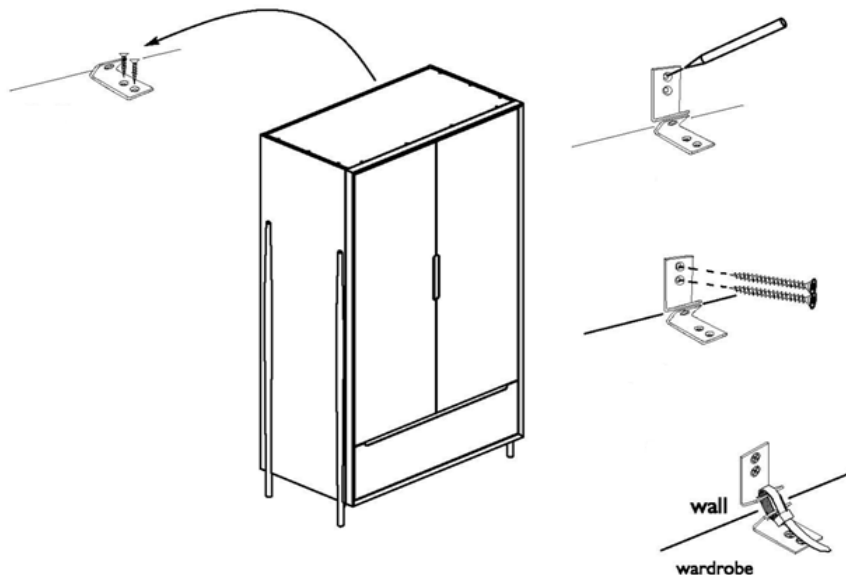


10.

If the wardrobe is not level on your floor, use the wedges provided, snap them off, so they do not protrude out from the wardrobe legs, you can also snap them lengthways.

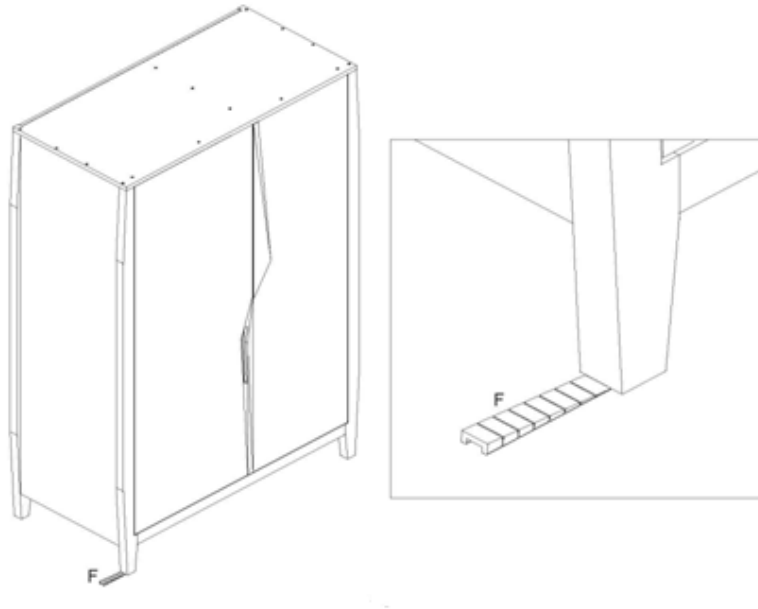

11.

Check the doors are aligned correctly, If necessary adjust the door hinges as show below.

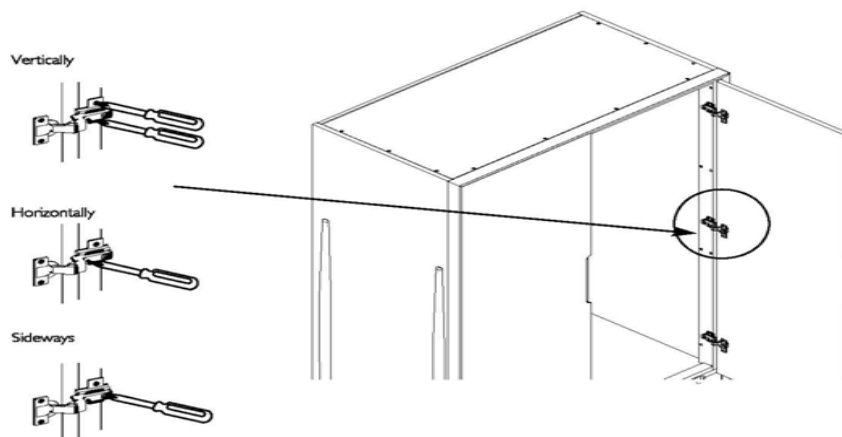

Care and maintenance

Wood Furniture

Wood displays different grain patterns depending on which way it is cut -for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber -these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.

When using the surface for serving food and drinks it is best to use protective mats and coasters. Spillages should be wiped up as soon as possible.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time. Use of cleaning materials containing abrasive compounds, acidic or caustic reagents and any bleaches containing oxidising reagents should be avoided as prolonged use may damage the lacquer surface.

Wipe up spills immediately. If sticky marks occur on the surface they can be removed with a dilute solution of warm soapy water. The offending area should be rubbed lightly and then completely dried immediately afterwards, before replacing any mats etc.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

Safety Instructions

Never drag furniture when moving it, always lift it. Please take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN

www.johnlewis.com