 


Cotswold Trolley

 
Thank you for purchasing this Cotswold Trolley. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

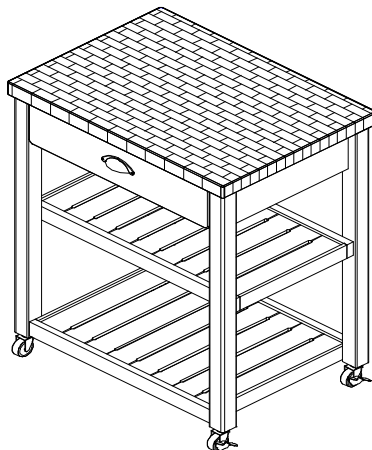

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools

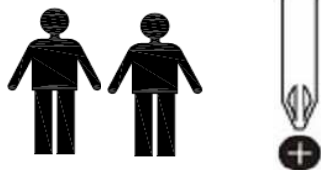

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the branch from whom you bought this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use.



 
 





TAKE CARE WHEN LIFTING to avoid personal injury and (or) damage to the product.

This product takes approximately **40 MINUTES** to assemble and requires two people.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

 
Read this leaflet in full before commencing assembly.

Fittings Checklist

M		N		O		P		Q	
	Handle x 1		Short Screw x 2		Bolt x 16		Cam Lock x 16 pcs. + 1 pc. Spare		KD Screw x 2
R		S		T		U			
	Allen Key x 1		Long Screw x 8		Castor x 2		Locking Castor x 2		


Parts Checklist

A	Top Panel	x 1
B	Bottom Shelf	x 1
C	Middle Shelf	x 1
D	Left Side Panel	x 1
E	Right Side Panel	x 1
F	Back Panel	x 1
G	Rail	x 1
H	Front Drawer	x 1
I	Right Drawer	x 1
J	Left Drawer	x 1
K	Back Drawer	x 1
L	Bottom Drawer	x 1

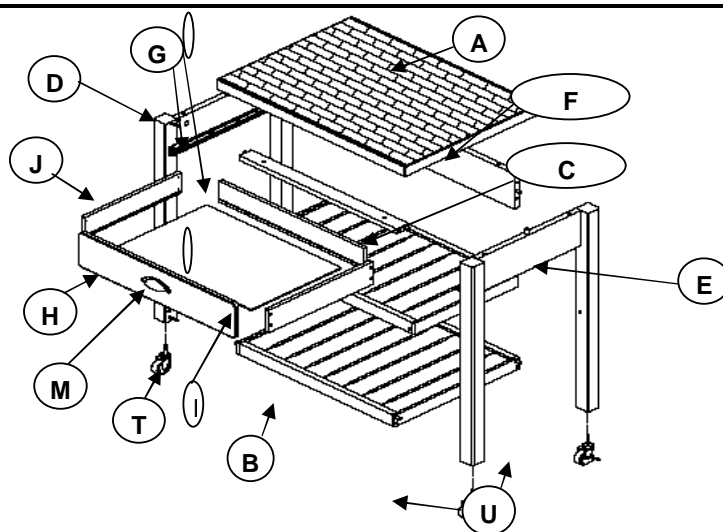 


Step by step assembly instructions

 - 1** Lay **Left Side (D)**, **Right Side (E)**, **Back Panels (F)**, **Bottom Shelf (B)** and **Rail (G)** on the smooth surface or on the carton
Fix **16 x Cam Lock (P)** to **D, E, F, B, & G** tighten by Cross Head Screw Driver (not provided).

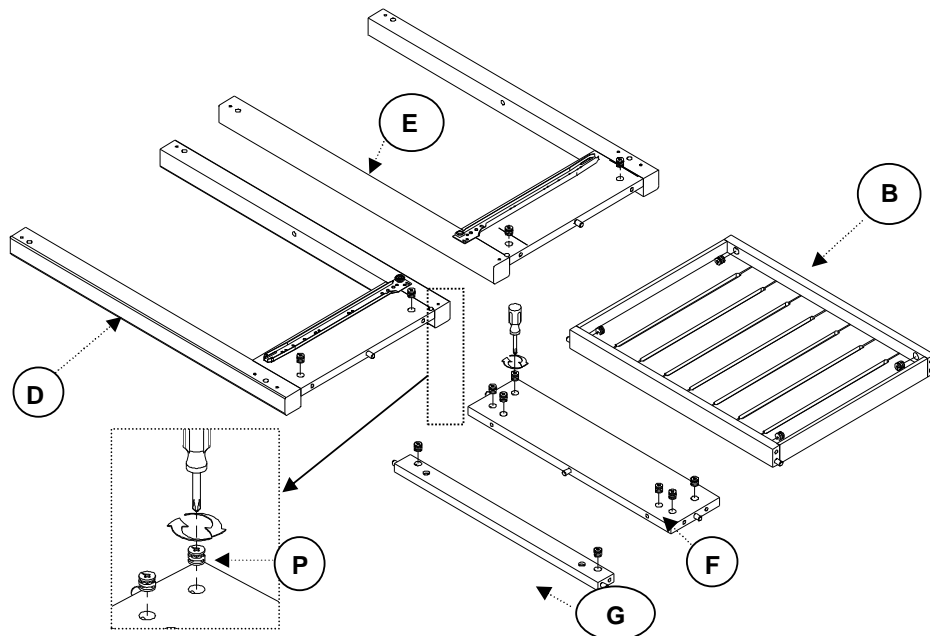


 - 2** Fix **16 x Bolt (O)** to **Right Side (D)** & **Left Side Panels (E)** and **Top Panel (A)** by using Cross Head Screw Driver.

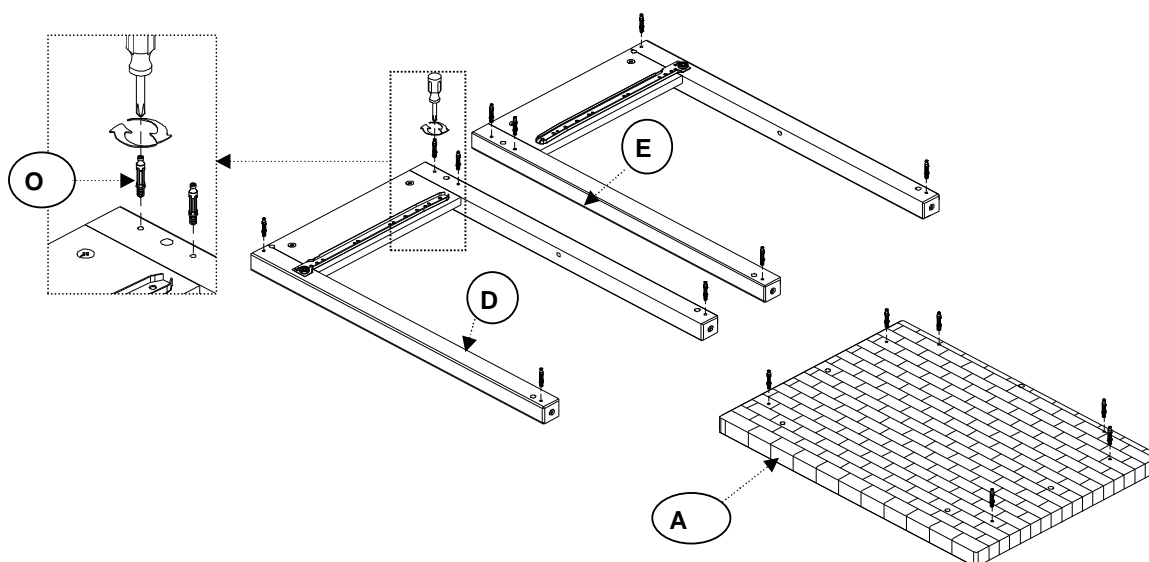


3

 
- 3** Attach **Bottom Shelf (B)**, **Back Panel (F)**, and **Rail (G)** to **Left Side Panel (D)** by using the Cross Head Screw Driver to turn the **Cam Lock (P)** clockwise as shown in the diagram.
Attach **Middle Shelf (C)** to **Left Side Panel (D)** fix by using **2 x KD Screw (Q)** tighten by **Allen Key (R)** (provided).

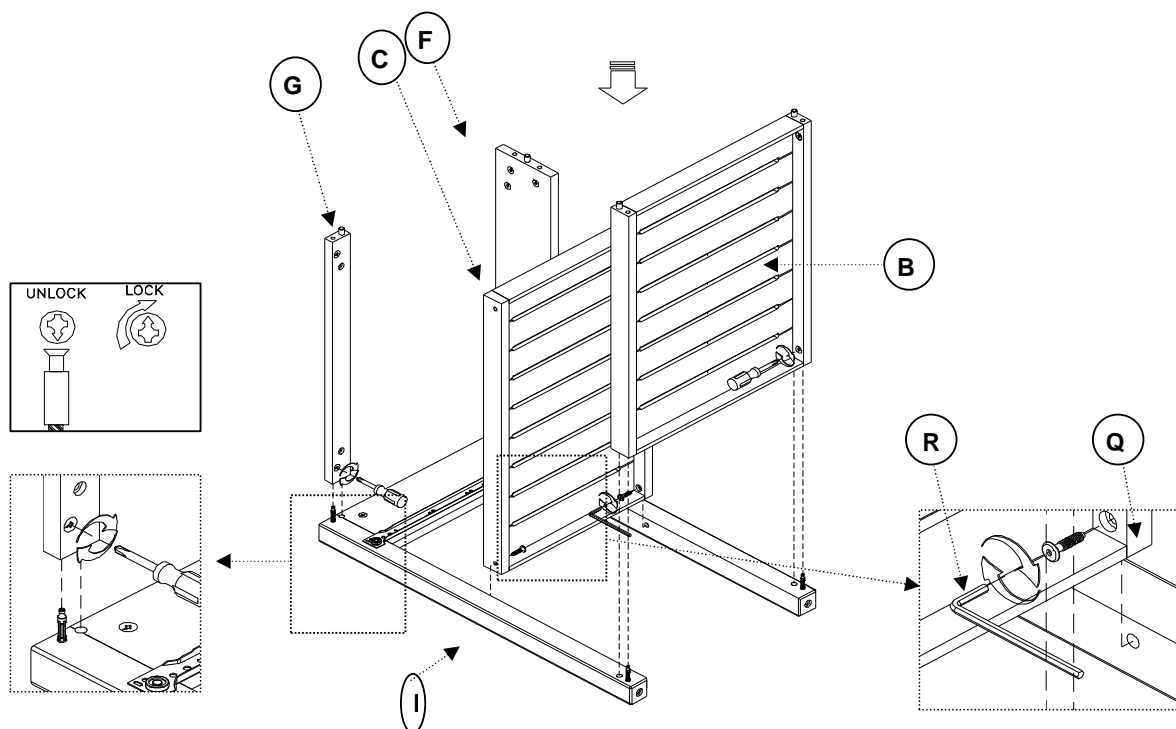

 
- 4** Attach **Right Side Panel (E)** to **Bottom Shelf (B)**, **Back Panel (F)**, **Rail (G)** and **Middle Shelf (C)** by using the Cross Head Screw Driver tighten **Cam lock (P)** turn clockwise as diagram shown
Fix **Middle Shelf (C)** to **Left Side Panel (D)** by using **2 x KD Screw (Q)** tighten by **Allen Key (R)**.

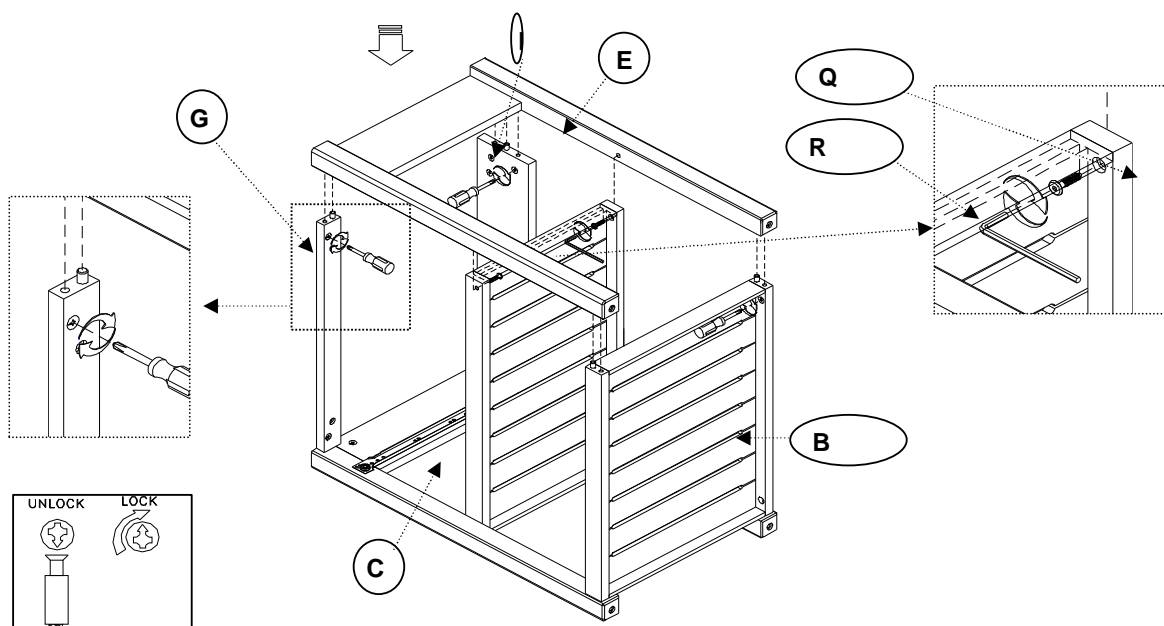

 
- 5** Attach **2 x Castor (T)** and **2 x Locking Castor (U)** to **Left (D) & Right (E) Side Panels**.

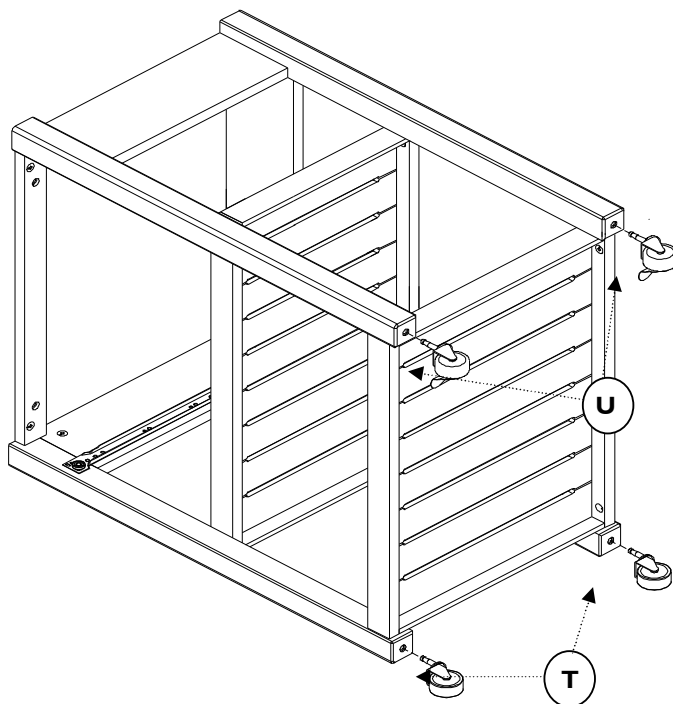

 
- 6** Using two people turn the Trolley upright.
Attach **Top Panel (A)** as shown by using the Cross Head Screw Driver turn **Cam Lock (P)** clockwise at **Left (D), Right (E) Side Panels** and **Back Panel (F)**.
Fix **Rail (G)** to **Top Panel (A)** fix by using **2 x KD Screw (Q)** tighten by **Allen Key (R)**.

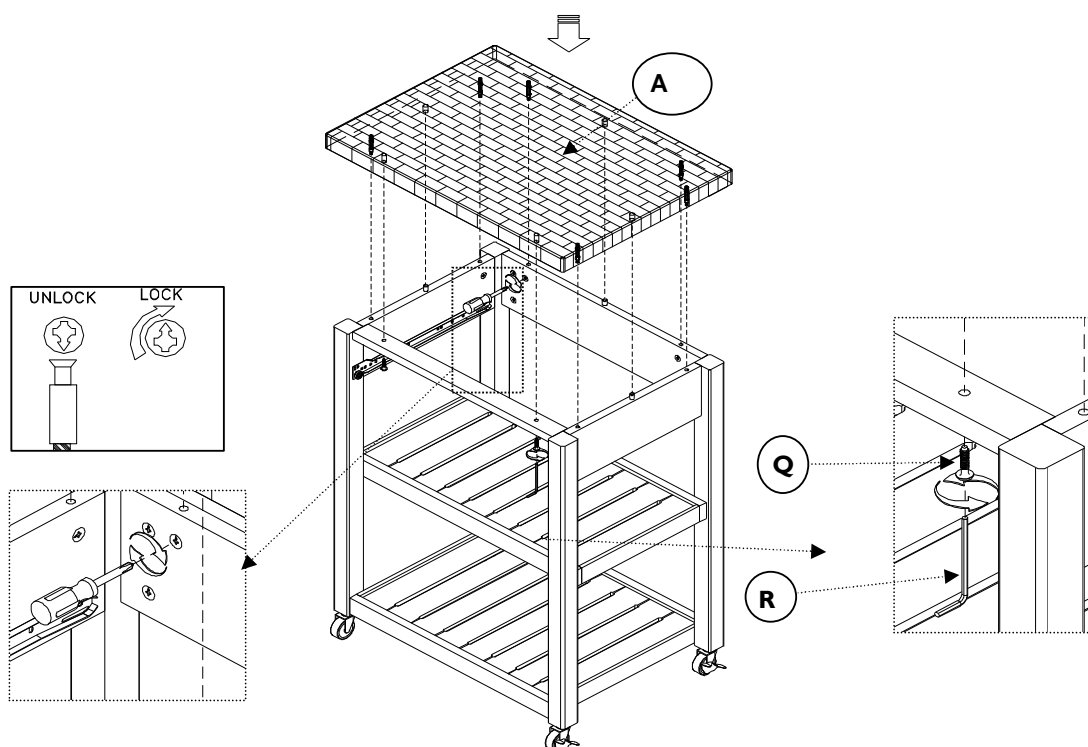

 - 7** Attach **Front (H)**, **Right (I)**, **Left (J)**, **Back (K)**, **Bottom (L)** **Drawers** together by using **8 x Long screw (S)** tighten by Cross Head Screw Driver.
Attach **1x Handle (M)** by using **2 x Short screw (N)** tighten by Cross Head Screw Driver.

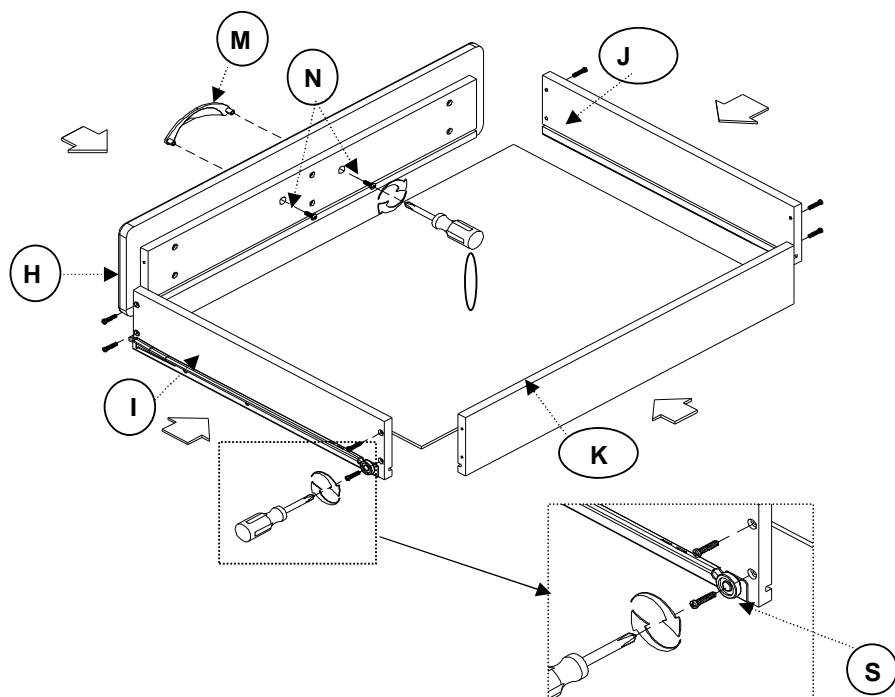

 - 8** Put the drawer in place as shown in diagram.

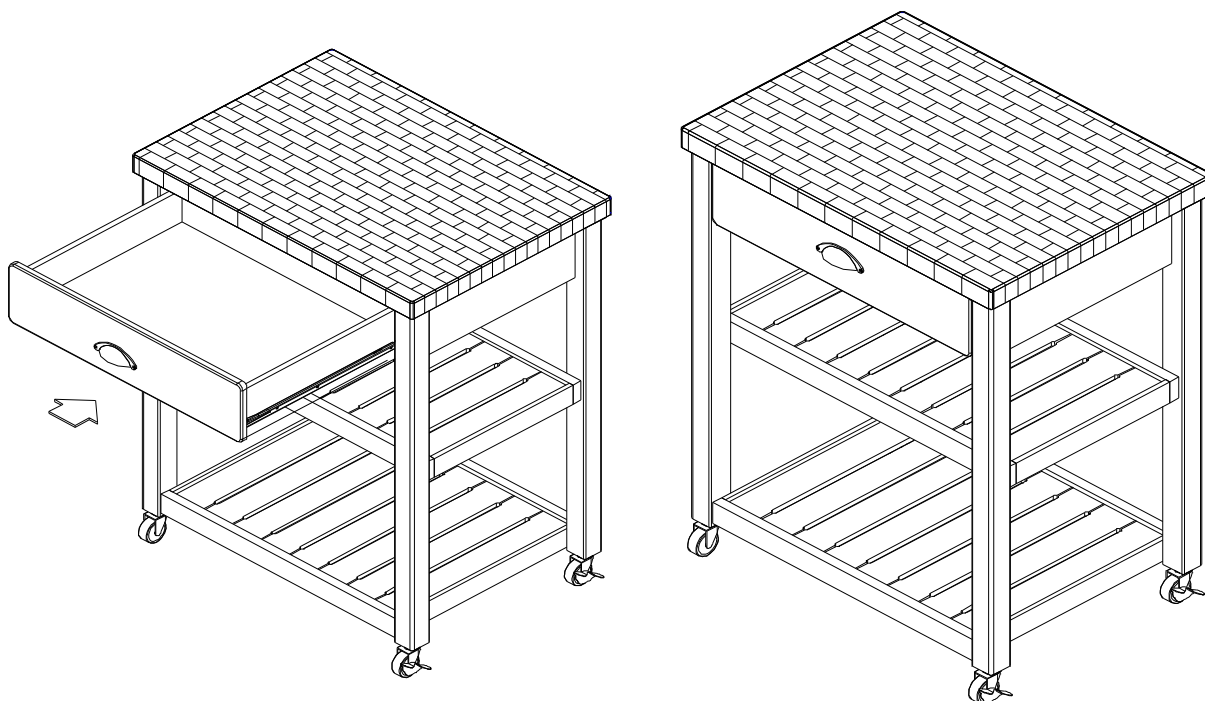

Care and Maintenance

Wood Furniture

Wood displays different grain patterns depending on which way they cut, these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Wood veneers also allow distinctive patterns to be created on flat surfaces, such as side apron, by the way the slivers are arranged.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

This trolley should be cleaned using a soft damp cloth and dried immediately.

Do not use a very wet cloth or allow any liquid to contact with the trolley for a long period of time as this could permanently damage the surface especially any hot water.

Do not use any abrasive cleaner or harsh detergent as this can damage the surface of the trolley.

Do not drag any object across the trolley as this can cause permanent damage.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

Safety Instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

This product complies with BS 4875-5: 2001

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street, London, SW1E 5NN

www.johnlewis.com



3

κ 6 pcs.

of the

way

n

can

eat
d by

iry.
son.