


ercol

Chiltern open display cabinet

Stock number 877/34230

Thank you for purchasing this Chiltern display cabinet. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product

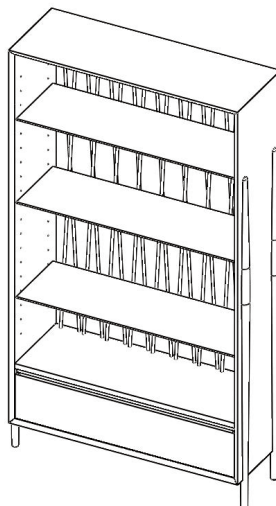

This cabinet is designed to be attached to the wall


Please ensure instructions are read in full before attempting to attach this product either flat against the wall or at right angles to the wall.

WARNING if the glass is chipped or broken stop using the product and consult the manufacturer or the supplier

This product is
HEAVY,



Necessary Tools

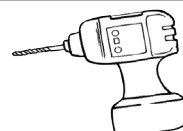

TAKE CARE WHEN LIFTING to avoid personal injury and (or) damage to the product.

Please check the pack contents before attempting to fix this product to the wall. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN.**


Fittings and parts checklist

A	M5 20mm pan head crew x 2	
B	Wooden fixing block x 2	
C	Shelf supports x 12	


Step by step instructions

SPECIAL NOTE: Put the glass shelves in place, **AFTER** the cabinet is fixed to the wall.


1. Place the wooden fixing blocks on top of your Chiltern display cabinet as shown in Fig.1 depending on where you would like your cabinet to stand, either flat against the wall (2 blocks) or at right angles to it (one block). Place the cabinet against the wall.
2. Mark with a pencil round the circular end of the fixing block(s) where it touches the wall, Fig.1

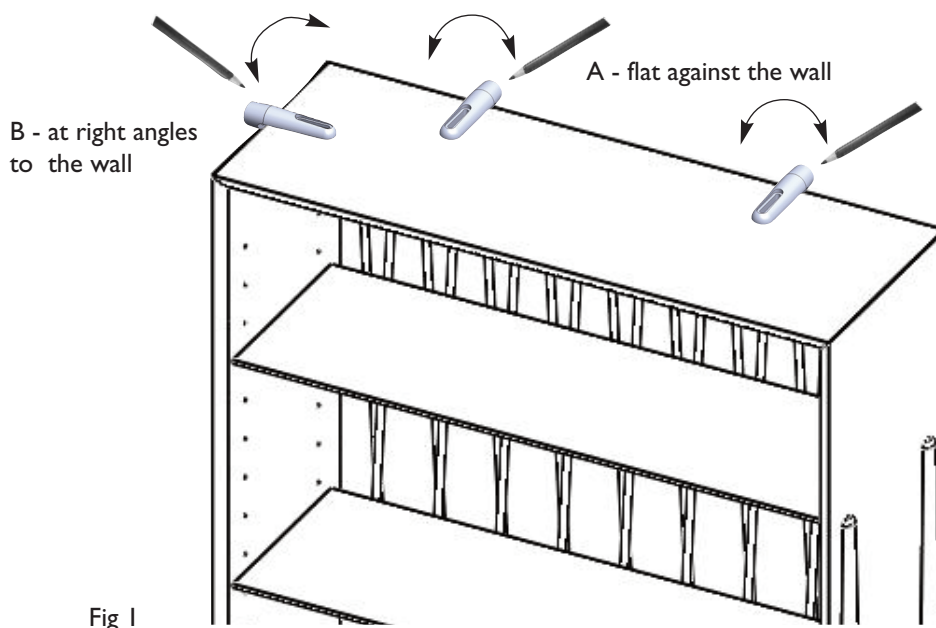

3. Move the cabinet away from the wall and place the wall fixing block back on its mark on the wall, then mark the screw hole position on the wall. Drill a hole into the wall. Repeat if cabinet is to go flat against the wall.
4. Using fixings appropriate to your type of wall, attach the fixing block(s) to the wall as fig 2.

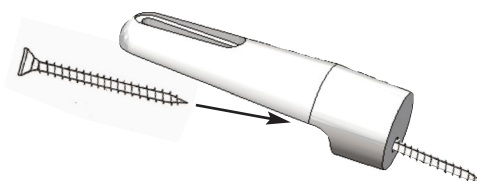

5. Move the cabinet into it's place against the wall underneath the fixing block(s). Then using the screw(s) provided affix the cabinet to the fixing block(s) as fig.3

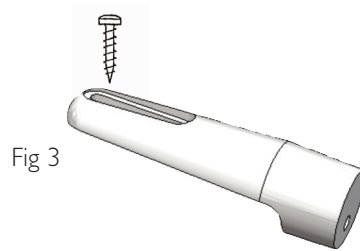


Wall fixing - if in doubt seek professional advice




Wood

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure

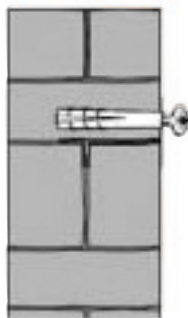

Brick or Masonry

Use an appropriate wall plug provided you are sure your wall is sound


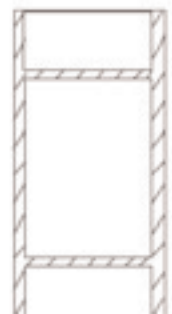


Cavity wall

Special toggle wall plugs are needed. Seek expert advice

6. Take four shelf supports and unlock them by turning the screw anti clockwise then pull the top of each support upwards to open it wide enough to take the glass shelf. Put these opened shelf supports in position in the cabinet, two on each side Fig. 4.

7. Slide the glass shelf into position and press down on the top of each of the supports so the shelf is held snugly in place and turn the screw clockwise to lock it Fig. 5.
Repeat for the other two shelves.

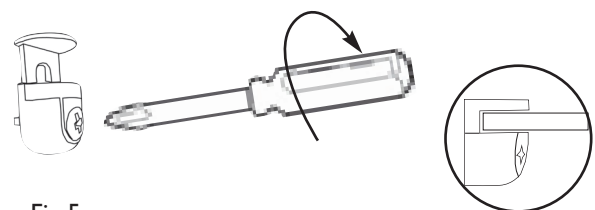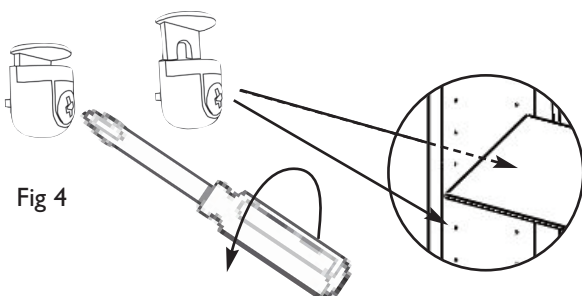

Care and maintenance

Wood Furniture

Wood displays different grain patterns depending on which way it is cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth. Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time. Wipe up spills immediately. If sticky marks occur on the surface they can be removed with a dilute solution of warm soapy water.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

Safety Instructions

Never drag furniture when moving it, always lift it. Please take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

Warning:

- a) Do not place very hot or very cold items on the glass surfaces unless adequately thick table mats are used to prevent such items from coming into contact with the glass.
- b) Do not sit or stand upon the glass surfaces
- c) Do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.
- d) When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary; do not use washing powders or any other substances containing abrasives since these substances scratch glass.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX

www.ercol.com