



## CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	5
3. PRODUCT DESCRIPTION.....	7
4. ACCESSORIES.....	8
5. CONTROL PANEL.....	9
6. PROGRAMME TABLE.....	10
7. OPTIONS.....	13
8. STEAM FUNCTION.....	14
9. BEFORE FIRST USE.....	16
10. DAILY USE.....	16
11. HINTS AND TIPS.....	19
12. CARE AND CLEANING.....	20
13. TROUBLESHOOTING.....	24
14. TECHNICAL DATA.....	26
15. INSTALLATION.....	27

## FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:  
**www.aeg.com**



Register your product for better service:  
**www.registeraeg.com**



Buy Accessories, Consumables and Original spare parts for your appliance:  
**www.aeg.com/shop**

## CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

## 1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.



- Read the supplied instructions.

### 1.1 Children and vulnerable people safety



#### **WARNING!**

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

### 1.2 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used

- only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
  - Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, where the appliance door can not be fully opened.
  - The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
  - Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
  - Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
  - Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels. (if applicable)
  - If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
  - Obey the maximum load volume of 9kg (refer to the "Programme chart" chapter).
  - Do not use the appliance if industrial chemicals have been used for cleaning.
  - Wipe away lint that has accumulated around the appliance.
  - Do not run the appliance without a filter. Clean the lint filter before or after each use.
  - Do not dry unwashed items in the tumble dryer.
  - Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should

be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

## 2. SAFETY INSTRUCTIONS

### 2.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always move the appliance vertically.
- The rear surface of the appliance must be put against the wall.
- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

### 2.2 Electrical connection



#### **WARNING!**

Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.

- This appliance complies with the E.E.C. Directives.

## 2.3 Use



### **WARNING!**

Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Do not dry the damaged items which contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.



### **WARNING!**

Only fill the water reservoir for steam treatment with distilled water. Do not use tap water or any additives! It can cause damage to the appliance.

- The condensed water from this appliance's condensed water container can also be used, if it is filtered first (e.g. with a coffee filter).
- Only operate the steam programmes with distilled water!
- Once the drying cycle or steam programme has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.
- Be careful when interrupting the steam programme: Do not open the machine door during the steam phase. Hot steam may result in burns. The display shows a message to indicate the steam phase.

## 2.4 Internal light



### **WARNING!**

Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting.
- To replace the internal light, contact the Authorised Service Centre.

## 2.5 Care and cleaning



### **WARNING!**

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

## 2.6 Compressor



### **WARNING!**

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

## 2.7 Disposal




### **WARNING!**

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

### 3. PRODUCT DESCRIPTION

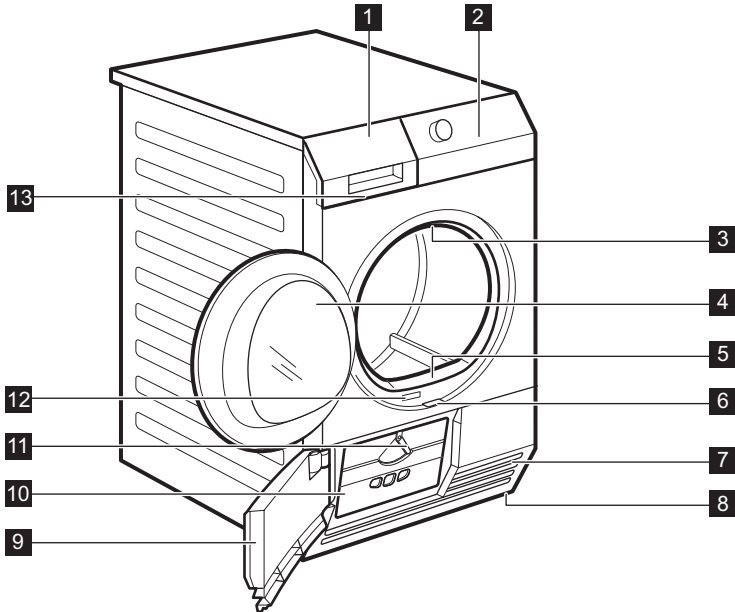


- |   |   |
|---|---|
| <b>1</b> Water container                            | <b>8</b> Adjustable feet                            |
| <b>2</b> Control panel                              | <b>9</b> Heat exchanger door                        |
| <b>3</b> Internal light                             | <b>10</b> Heat exchanger cover                      |
| <b>4</b> Appliance door                             | <b>11</b> The knob to lock the heat exchanger cover |
| <b>5</b> Filter                                     | <b>12</b> Rating plate                              |
| <b>6</b> The button to open the heat exchanger door | <b>13</b> Water re-circulation filter               |
| <b>7</b> Airflow slots                              |   |

**i** The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance (see separate leaflet).

## 4. ACCESSORIES

### 4.1 Stacking kit

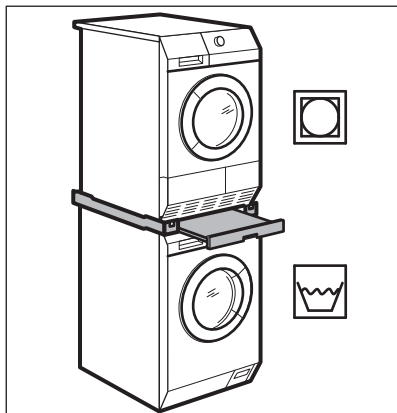


Accessory name: SKP11, STA8, STA9  
Available from your authorized vendor.

Stacking kit can be used only with the washing machines specified in the leaflet. See the leaflet attached.

Read carefully the instructions supplied with the accessory.

### 4.2 Draining kit

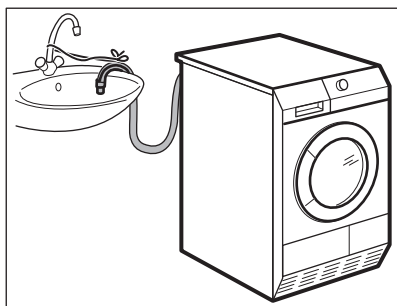

Accessory name: DK11.


It is available from your authorized vendor (can be attached to some types of the tumble dryers)

The accessory for through draining of the condensed water into a basin, siphon, gully, etc. After the installation, the water container is drained automatically. The water container must stay in the appliance.

The installed hose must be on the height from minimum of 50 cm to maximum of 1 m from floor level. The hose cannot be in loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

### 4.3 Pedestal with the drawer

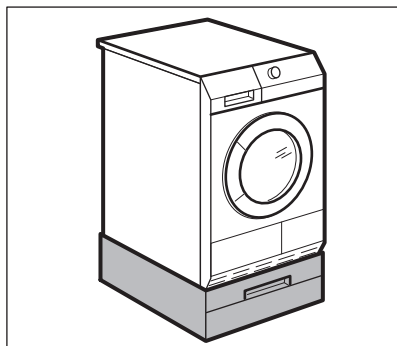

Accessory name: PDSTP10.

It is available from your authorized vendor.


To put the appliance higher at the level what helps to easy load and remove the laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products and more.

Read carefully the instructions supplied with the accessory.



## 5. CONTROL PANEL

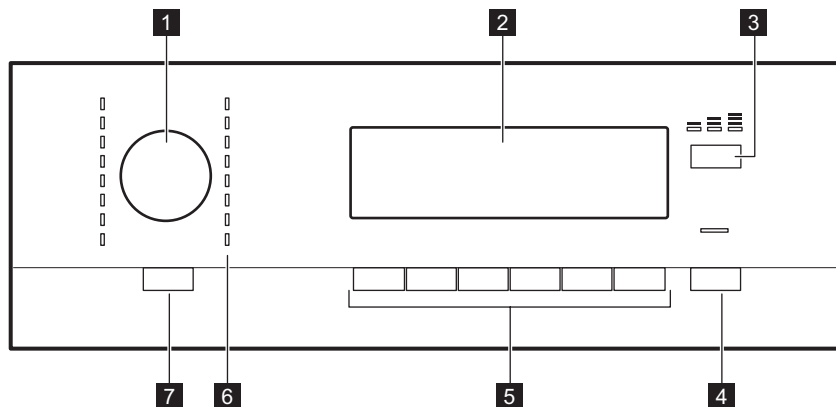

- |                             |   |
|-----------------------------|---|
| <b>1</b> Programme dial     | <b>6</b> Programme indicators                     |
| <b>2</b> Display            | <b>7</b> On/Off button with the Auto Off function |
| <b>3</b> Steam button       |   |
| <b>4</b> Start/Pause button |   |
| <b>5</b> Options buttons    |   |

### 5.1 Display












Symbol on the display	Symbol description
	extra laundry dryness: default, moderate, maximum
	anti-crease phase duration: default, interval (30min. - 120min.)
	laundry was spun at: 800 — 1800 rpm default
	buzzer on
	child lock on

Symbol on the display	Symbol description
	time dry option on
	indicator: <i>fill the water container for steam system</i>
	indicator: <i>clean the steam system filter</i>
	indicator: <i>drain the water container</i>
	indicator: <i>clean filter</i>
	indicator: <i>do the check of the heat exchanger</i>
	indicator: <i>drying phase</i>
	indicator: <i>steam action phase</i>
	indicator: <i>cooling phase</i>
	indicator: <i>crease guard phase</i>
	delay start option on
2.00	cycle time indication
10' - 2.00	time programme selection (10min.-2h)
30' - 20h	delay start selection (30min.-20h)

## 6. PROGRAMME TABLE


Programmes	Load <sup>1)</sup>	Properties / Fabric mark
<b>COTTONS</b>		
Extra Dry	9 kg	Drying level: extra dry. /
Cupboard Dry <sup>2) 3)</sup>	9 kg	Drying level: cupboard dry. /
Iron Dry <sup>2)</sup>	9 kg	Drying level: applicable for iron. /
Jeans	9 kg	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). /

Programmes	Load 1)	Properties / Fabric mark
Bed Linen	3 kg	To dry bed linen such as: single and double sheet, pillowcase, bed-spread. / 
Duvets	3 kg	To dry one or two duvet and pillows (with feather, down or synthetic fillings). / 
Extra Quick Mixed	3 kg	To dry cotton and synthetic fabrics, uses low temperature. / 
Time Drying	9 kg	With this programme you can use the option Time Drying and set the programme duration. / 
<b>SYNTHETICS</b>		
Extra Dry	3,5 kg	Drying level: extra dry. / 
Cupboard Dry <sup>2)</sup>	3,5 kg	Drying level: cupboard dry. / 
Iron Dry	3,5 kg	Drying level: applicable for iron. / 
Silk/Lingerie	1 kg	To dry silk/lingerie with warm air and gentle movement. / 

Programmes	Load 1)	Properties / Fabric mark
Wool 4)	1 kg	<p>To dry the cloths made of wool . The cloths become soft and cosy. We recommend to remove the cloths immediately after the programme end. To increase or to decrease the level of the remaining moisture of the laundry you can use the function Dry Plus.</p>  <p>The image shows the Woolmark logo, which consists of a stylized wool knot, and the text 'WOOLMARK' with a registered trademark symbol. Below it is a label that says 'WOOL HAND WASH SAFE'.</p>


1) The maximum weight refers to dry items.

2) **For test institutes only:** Standard programmes for tests are specified in the EN 61121 document. If is necessary to correct the remaining moisture level of the laundry, adjust the programme with the Dry Plus option. Clean the filter after each cycle .

3) The  Cottons Cupboard Dry programme is the "Standard cotton programme" and it is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

4) The wool drying cycle of this tumble drying machine has been tested and approved by The **Woolmark** Company. The cycle is suitable to dry wool garments, which are labelled "hand wash" provided that the garments are washed in a **Woolmark** endorsed hand washing cycle and tumble dried according to the instructions issued by the manufacturer. **1780SW13W**.

## 6.1 Programmes and options selection

Programmes 1)	Options			
	Dry Plus	Anti-crease	Spun at RPM	Time Drying
Cottons; Extra Dry	■	■	■	
Cottons;  Cupboard Dry	■	■	■	
Cottons; Iron Dry	■	■	■	
Jeans	■	■	■	
Bed Linen	■	■	■	
Duvets	■		■	
Extra Quick Mixed	■	■	■	


Programmes <sup>1)</sup>	Options			
	Dry Plus	Anti-crease	Spun at RPM	Time Drying
Time Drying		■		■
Synthetics; Extra Dry	■	■	■	
Synthetics; Cupboard Dry	■	■	■	
Synthetics; Iron Dry	■	■	■	
Silk/Lingerie	■	■	■	
Wool	■		■	


<sup>1)</sup> Together with the programme you can set 1 or more options.


## 7. OPTIONS

### 7.1 Dry Plus

This option helps to get the laundry more dried. There are 3 possible selections:

\* - the default selection which is related to the programme.

\*\* - the selection to get the laundry lightly dried.

\*\*\* - the selection to get the laundry more dried.

### 7.2 Anti-crease

Extends anti-crease phase (30 minutes) at the end of the drying cycle to 90 minutes. This option prevents laundry from creases. Laundry can be removed during the anti-crease phase.

### 7.3 Spun at RPM

This option helps to set the best condition to dry the laundry.

If you know the initial spin speed when you washed you can use this option. Higher spin speed causes that the laundry contains less water.

### 7.4 Buzzer

When the buzzer option is activated you can hear the buzzer at the:

- cycle end
- anti-crease phase start and end
- cycle interruption

The buzzer option is by default always on. You can use this function to activate or deactivate the sound.



You can activate the Buzzer option with all programmes.

### 7.5 Time Drying

Operates only with the Time Drying programme. Lets the user to set special time of drying programme from minimum 10 min. to maximum of 2 hours (in 10 min. steps).

### 7.6 Delay Start



Lets to delay the start of a drying programme from minimum of 30 minutes to maximum of 20 hours.

1. Set the drying programme and options.
2. Push the Delay Start button again and again.

the necessary time of the delay come into the view on the display (e.g. 12h if the programme has to start after 12 hours.)

3. To activate the Delay Start option, push the Start/Pause button. The

time to start decreases on the display.

## 8. STEAM FUNCTION

Steam removes an odour, as the outdoor air.

Decreases or removes creases. Makes the pieces of clothing more flexible.

The pieces of clothing after steam programme are easy to iron.




At the start, because of wide types of fabrics, apply small steam loads. You easily get the experience, which helps you to use the sufficient steam loads.

At the end of cycle, if you will not iron, put the pieces of clothing on the clothes hanger.

### 8.1 How to fill water container for steam system



#### CAUTION!

Use only distilled or demineralized water. Always when the container is empty the indicator  is on and you cannot start the steam programmes.




For the first time you can use the water attached in the bottle.

The condensed water is also applicable for steam system. The condensate water must be filtered e.g. with a coffee filter to remove small pieces of fluff.


If you dry with standard and steam programmes, the water container for steam system fills automatically.

To fill water container:

1. Turn on the appliance.
2. Set 1 of the steam programmes.
3. Pull the water container. Keep it in horizontal position.

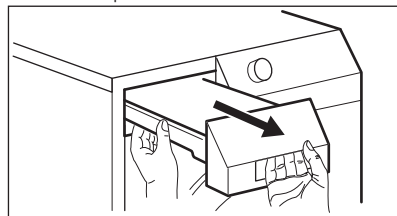

4. Fill the water. until you hear the acoustic signal.

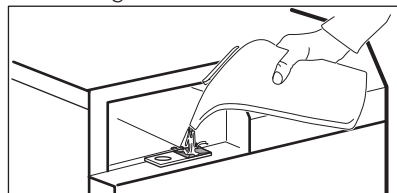

The acoustic signal sounds when the water container for steam system is full.


5. Put the water container.

### 8.2 Steam

This option is to set the required steam load. It depends on the: type, weight and volume of the laundry.

There are 3 possible selections:

 minimum load

 moderate - the default load

 maximum load










## 8.3 Steam programmes

Programmes	Load <sup>1)</sup>	Properties
Cottons	<b>3 kg</b>	To dry and remove the creases from the cotton pieces of clothing. Frequently it is not necessary to iron the cloths after this cycle.
Synthetics	<b>1,5 kg</b>	To dry and remove the creases from the synthetic pieces of clothing. Frequently it is not necessary to iron the cloths after this cycle.
Refresh	<b>1 piece</b>	For 1 suit or up to 2 suit jackets or pair of trousers or similar clothes. Also applicable for removing odours. <b>For dry clothes only.</b> The clothes become soft and cosy. We recommend to remove the clothes immediately after the programme end.

<sup>1)</sup> The maximum weight refers to dry items.

## 8.4 Steam chart

Programmes / types of the clothes	Steam	Load <sup>1)</sup>
Cottons	— minimum	<b>0,5 - 1 kg</b>
	≡ moderate	<b>1 - 2 kg</b>
	≡≡ maximum	<b>2 - 3 kg</b>
Cottons / shirts	— minimum	<b>1 - 2 items</b>
	≡ moderate	<b>3 - 4 items</b>
	≡≡ maximum	<b>5 - 6 items</b>
Synthetics	— minimum	<b>0,2 - 0,5 kg</b>
	≡ moderate	<b>0,5 - 1 kg</b>
	≡≡ maximum	<b>1 - 1,5 kg</b>

Programmes / types of the clothes	Steam	Load <sup>1)</sup>
Synthetics / shirts	 minimum	<b>1 - 2 items</b>
	 moderate	<b>3 - 4 items</b>
	 maximum	<b>5 items</b>
Refresh / casual	 minimum	<b>1 - 2 items</b>
	 moderate	<b>3 - 4 items</b>
	 maximum	<b>5 - 6 items</b>
Refresh / business	 minimum	<b>1 - 2 trousers</b>
	 moderate	<b>1 - 2 jackets</b>
	 maximum	<b>1 suit</b>

<sup>1)</sup> The maximum weight refers to dry items.

## 9. BEFORE FIRST USE

Before you use the appliance for the first time do these operations:

- Clean the tumble dryer drum with a moist cloth.
- Start a short programme (e.g. 30 minutes) with moist laundry.
- Fill up the steam water container before using a steam programme for the first time (see chapter on "*Care and cleaning - Fill up the steam water container*").



At the beginning of drying cycle (3-5 min.) there could be a slightly higher sound level. It is because of start of the compressor that is normal for compressor powered appliances such: refrigerators, freezers.

## 10. DAILY USE

### 10.1 Preparing the laundry

- Close the zippers.
- Close the fasteners of the duvet covers.
- Do not keep ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from the pockets.
- If an item has the internal layer made of cotton, turn it inside out. Make sure that the cotton layer is always external
- We recommend that you set the correct programme applicable for the type of fabrics that are in the appliance.







- Do not put fabrics with strong colours together with fabrics with light colours. Strong colours can bleed.
- Use an applicable programme for cotton jersey and knitwear to prevent the items to shrink.
- Make sure that the laundry weight is not more than the maximum weight that is in the programme table.
- Dry only the laundry that is applicable for tumble dryer. Refer to the fabric label on the items.

#### Special notes about the Steam system

- The following textiles cannot be treated using a Steam programmes: woollen knitwear, leather, textiles with large metal, wooden or plastic parts, textiles with rusting metal parts, oilskins or wax cotton garments.
- To smooth or freshen laundry with a Steam programme, sort laundry by

size, weight, material and colour. Only smooth textiles together that are similar in terms of size, weight, material and colour.

- Do not dry new, coloured textiles together with light-coloured laundry items. Colours may fade (check colour fastness of fabric when damp in an inconspicuous area).
- Do not use dry cleaning sets in combination with Steam programmes.
- Before treating garments with an Iron Aid programme, remove stains by washing or using localised stain removal.
- Turn items with double-layered fabrics inside out (e.g. with cottonlined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Fabric label	Description
	Laundry that is applicable for tumble dryer.
	Laundry that is applicable for tumble dryer. Set the programme with standard temperature.
	Laundry that is applicable for tumble dryer. Set the programme with low temperature.
	Laundry that is not applicable for tumble dryer.

## 10.2 Loading the laundry



### CAUTION!

Do not lock the laundry in between the appliance door and rubber seal.

1. Pull the appliance door.
2. Load loosely the laundry.
3. Close the appliance door.

## 10.3 Turning on the appliance

To turn on the appliance:

Push the On/Off button.

If the appliance is on, some indications come in to the view on the display.

## 10.4 Auto Off function


To decrease the energy consumption, the Auto Off function turns off automatically the appliance:

- if the Start/Pause button was not pressed in the time of 5 minutes.
- after 5 minutes from the programme end.

Push the  On/Off button to turn on the appliance.

If the appliance is on, some indications come in to the view on the display.

## 10.5 Setting a programme

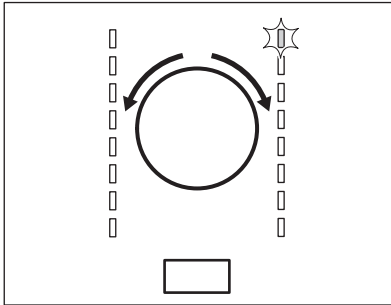

Use the programme dial to set the programme.


The possible time to complete the programme comes into the view on the display.



The drying time you see is related to the load of 5 kg for cotton and jeans programmes. For the other programmes the drying time is related to the recommended loads. The drying time of the cotton and jeans programmes with the load more than 5 kg is longer.

## 10.6 Options

Together with the programme you can set 1 or more special options.

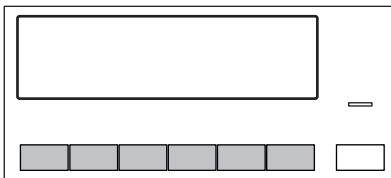

To activate or deactivate the option push the applicable button .

When the option is activated the LED above the button or symbol on the display comes into the view.

## 10.7 Child lock option


The child lock can be set to prevent the children to play with the appliance. The child lock option locks all push buttons and the programme dial (this option does not lock **On/Off** button).

You can activate the child lock option:

- before you push the **Start/Pause** button - the appliance cannot start
- after you push the **Start/Pause** button - programmes and option selection is off.

## Child lock option activation:


1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Select 1 of the available programmes.
4. Push at the same time and hold down the **Dry Plus** and **Anti-crease** buttons .

The symbol  comes into the view on the display.

5. To deactivate the child lock, push again the above buttons until the symbol goes out of the view.

## 10.8 Starting a programme

To start the programme:

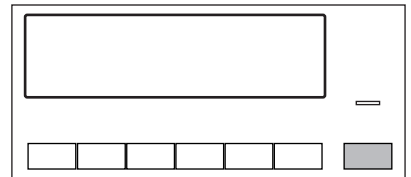

Push the **Start/Pause** button.

The appliance starts and the LED above the button does not flash but is stable.

## 10.9 Programme change


To change a programme:


1. Push the On/Off button to turn off the appliance.
2. Push again the On/Off button to turn on the appliance.
3. Set a new programme.

## 10.10 Programme end



Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

If the drying cycle is completed, the symbol  flashes on the display. If the Buzzer option is on, the acoustic signal sounds intermittently for 1 minute.

-  If you do not turn off the appliance, the crease guard phase starts. Laundry can be removed during this phase.

## 11. HINTS AND TIPS

### 11.1 Ecological hints

- Spin good the laundry before drying.
- Use the load volumes which are specified in the programme chart.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use the condensate as distilled water, e.g. for steam ironing. If it is necessary clean the condensate before (e.g. with a coffee filter) to remove possible small pieces of fluff.
- Always keep the airflow slots on the bottom of the appliance clear.
- Make sure that is good airflow in the appliance installation position.

### 11.2 Adjustment of the remaining laundry moisture degree

To change the default degree of the remaining moisture of the laundry:

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Push at the same time and hold down the **Dry Plus** and **Spun at RPM** buttons.

One of the symbols goes into the view on the display:

To remove the laundry:

1. Push the On/Off button for 2 seconds to turn off the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

 - the maximum dry laundry

 - the more dry laundry




 
 - the standard dry laundry

5. Push the **Start/Pause** button again and again until you set necessary degree.
6. To memorise the setting, push at the same time the **Dry Plus** and **Spun at RPM** buttons for approximately 2 seconds.

### 11.3 Deactivating the Tank indicator


1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Push at the same time and hold down the **Dry Plus** and **Buzzer** buttons.

One of 2 configurations is possible:

- the Tank indicator:  is on and the symbol  goes into the view - the water container indicator is permanently **on**
- the Tank indicator:  is off and the symbol  goes into the view - the water container indicator is permanently **off**

## 12. CARE AND CLEANING


### 12.1 Cleaning the filter

At the end of each cycle the symbol  *Filter* is on the display and you must clean the filter.




The filter collects the fluff. The fluff occurs while the cloths are dried in the tumble dryer.


1. Open the door. Pull the filter.

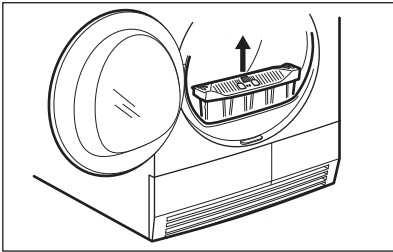


2. Push the hook to open the filter.

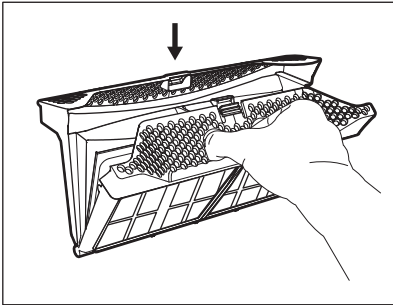


3. Use a moist hand to clean both parts of the filter.

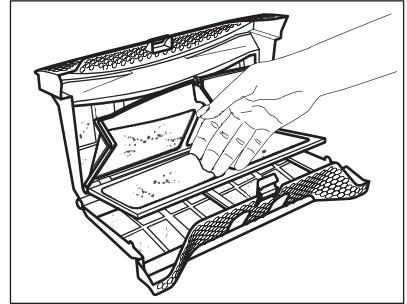

4. If necessary clean the filter with the brush under warm tap water and/or a vacuum cleaner. Close the filter.

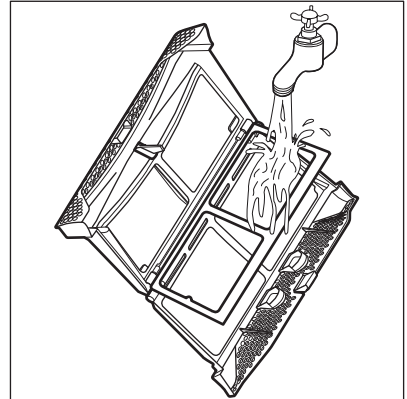


5. If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner. Put the filter inside the filter socket.

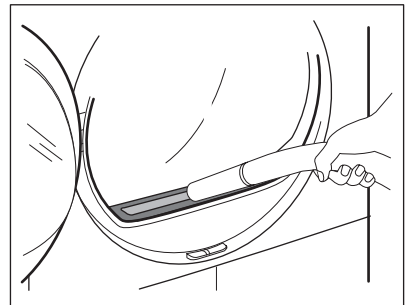

## 12.2 Draining the water container


Drain the condensed water container after each drying cycle.

If the condensed water container is full, the programme breaks off automatically.


The symbol  *Tank* is on the display and you must drain the water container.

To drain the water container:

1. Pull the water container and keep it in horizontal position.

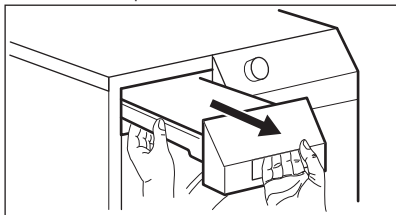


2. Move the plastic connection out and drain the water into a basin or equivalent receptacle.

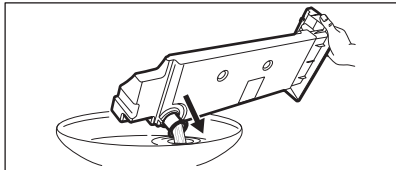


3. Move plastic connection in and install water container.
4. To continue the programme press the Start/Pause button.

## 12.3 Cleaning the heat exchanger

 
If the symbol  *Condenser* flashes on the display, do the inspection of the heat exchanger and its compartment. If there is a dirt, clean it.

To do the inspection:


1. Open the door. Pull the filter.

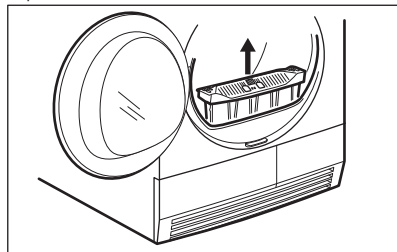


2. Move the release button on the bottom of the door to open the heat exchanger door.

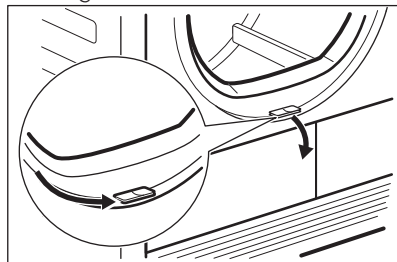


3. Turn the blockage to unlock the heat exchanger cover.

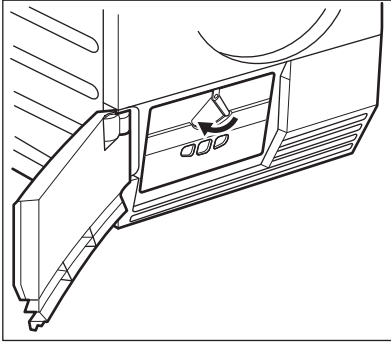

4. Lower the heat exchanger cover.

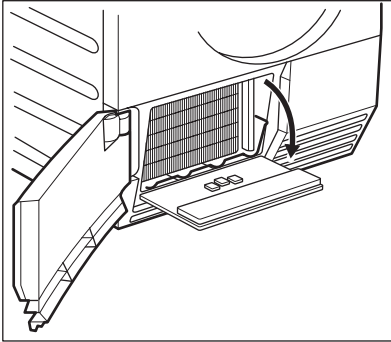

5. If necessary, remove the fluff from the heat exchanger and its compartment. You can use wet cloth and/or a vacuum cleaner with the brush.

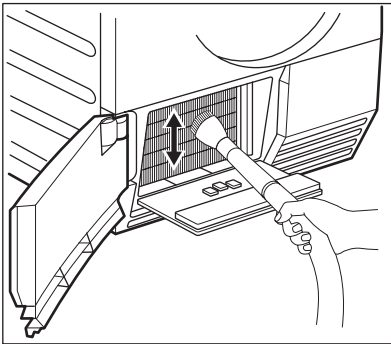


6. Close the heat exchanger cover.
7. Lock the blockage until it snaps.
8. Put the filter back.

## 12.4 Cleaning the steam system filter




### CAUTION!

Do not use the steam programmes without the steam system filter or with damaged or blocked filter.


If the symbol  (clean the steam system filter) is on the display you must clean the filter.

To clean the steam system filter:


1. Pull the water container. Keep it in horizontal position.

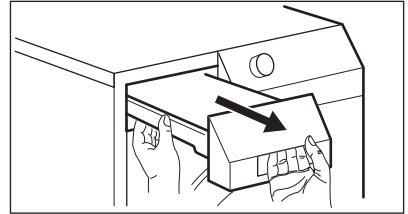

2. Pull the filter.

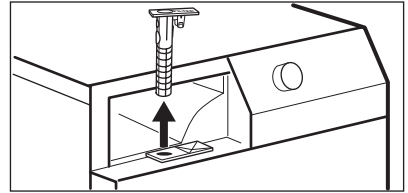

3. Clean the filter with warm water using a brush.

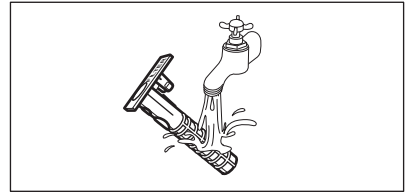


4. Put the filter inside the filter socket.
5. Put the water container.

## 12.5 How to drain the water from the steam system container


- i** The quality of the water in the container can get worse. If you will not use the appliance for long period drain the water from the container.

To drain the water:


1. Open the door.
2. Move the release button on the bottom of the door to open the heat exchanger door.

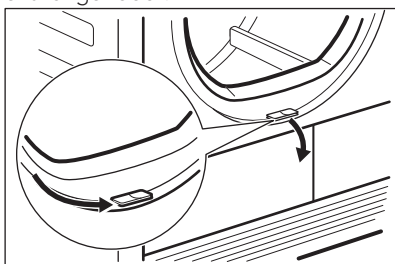


3. Turn the blockage to unlock the heat exchanger cover.

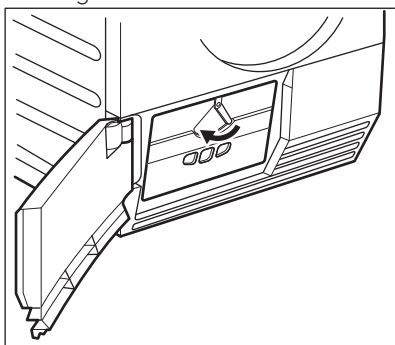


4. Lower the heat exchanger cover.

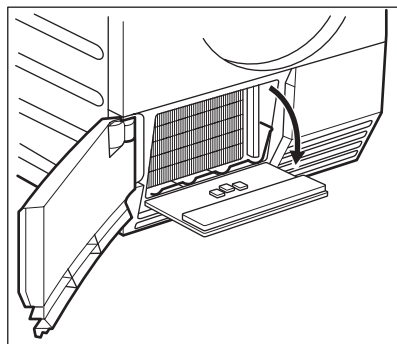

5. Open the cap from the pipe and drain the water.

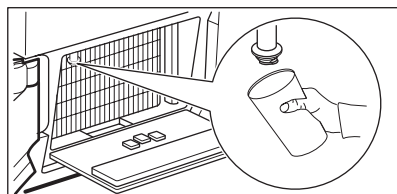

6. Close the cap.

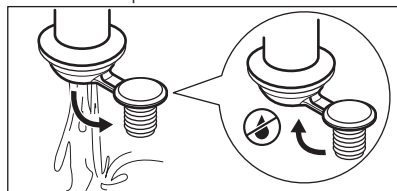

7. Close the heat exchanger cover.
8. Lock the blockage until it snaps.
9. Close the heat exchanger door.

## 12.6 Cleaning the drum



### WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth.



### CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

## 12.7 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



### CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

## 12.8 Cleaning the airflow slots

Use a vacuum cleaner to remove the fluff from the airflow slots.

# 13. TROUBLESHOOTING

Problem 1)	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to mains supply.	Connect in at mains socket. Check fuse in fuse box (domestic installation).
	The loading door is opened.	Close the loading door.
	The On/Off button was not pushed.	Push the On/Off button.
	The Start/Pause button was not pushed.	Push the Start/Pause button.
	The appliance is in the standby mode.	Push the On/Off button.
Unsatisfactory drying result.	Incorrect programme selection.	Do the selection of the applicable programme. <b>2)</b>
	The filter is clogged.	Clean the filter. <b>3)</b>
	The Dry Plus option was in minimum level. <b>4)</b>	Change the Dry Plus option to the moderate or maximum level. <b>4)</b>
	Too high volume of the load.	Obeys the maximum load volume.
	The airflow grill is clogged.	Clean the airflow grill in the bottom of the appliance.
	Dirt on the humidity sensor in the drum.	Clean the front surface of the drum.
	Incorrect remaining laundry moisture degree.	Adjust remaining laundry moisture degree. <b>5)</b>
	The heat exchanger is clogged.	Clean the heat exchanger. <b>3)</b>



Problem 1)	Possible cause	Remedy
The loading door does not closed	The filter not locked in the position.	Put the filter in the correct position.
	The laundry is locked between the door and the seal.	Put the load correctly in the drum.
<b>Err</b> (Error) on the display.	You try to change the programme or the option after the start of the cycle.	Turn the tumble dryer off and on. Make the new selection.
	The option you try to activate is not applicable with the selected programme.	Turn the tumble dryer off and on. Make the new selection.
No drum light	Defective drum lamp.	Contact the service centre to replace the drum lamp.
Abnormally elapsing time on the display.	The time to end is calculated on the basis of the volume and dampness of the laundry.	The automatic procedure — this is not the appliance malfunction.
Programme inactive.	The water container is full.	Drain the water container, push the Start/Pause button. <b>3)</b>
Drying cycle too short.	Too small laundry volume.	Do the selection of time programme. The time value must be related to the load. To dry 1 item or small quantities of the laundry we recommend to use short times.
	The laundry is too dry.	Do the selection of time programme or higher drying level (e.g. Extra Dry)
Drying cycle too long <b>6)</b>	The filter is clogged.	Clean the filter.
	Too high volume of the load.	Obey the maximum load volume.
	The laundry not spun sufficiently.	Spin correctly the laundry.
	Very high room temperature - this is not the appliance malfunction.	If possible, lower the room temperature.
Steam function		
Steam programme does not start.	There is no water in the container for the steam system. Indicator is on.	Fill the container with the distilled or demineralized water.

Problem 1)	Possible cause	Remedy
Unsatisfactory drying result.	Steam load too low.	Extend the steam load.
	Incorrect programme selection.	Do the selection of the applicable programme. 7)
	Incorrect load/type of the cloths.	Use applicable load/type of clothes.

1) If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? - contact the service centre and give the error code.

2) Follow the programme description — see PROGRAMME TABLE

3) See chapter CARE AND CLEANING

4) Only dryers with the Dry Plus option

5) See HINTS AND TIPS chapter

6) Note: After maximum 5 hours the drying cycle ends automatically.

7) Follow the steam programme description.

## 14. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 600 mm (maximal 640 mm)
Max. depth with the appliance door open	1090 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	<b>9</b> kg
Voltage	230-240 V
Frequency	50 Hz
Necessary fuse	13 A
Total power	1650 W
Energy efficiency class	<b>A++</b>
Energy consumption <sup>1)</sup>	<b>2,28</b> kWh
Annual energy consumption <sup>2)</sup>	259 kWh
Left—on mode power absorption	0,50 W
Off mode power absorption	0,50 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C

Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture

**IPX4**

- 1) With reference to EN 61121. 9kg of cotton centrifuged at 1000 rpm.
- 2) Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No 392/2012).

## 15. INSTALLATION

### 15.1 Unpacking




#### CAUTION!

Before use all parts of the transport packaging must be removed.


To remove the polystyrene blockages:

1. Open the door.
2. Pull plastic hose with the polystyrene blockages out from the drum.

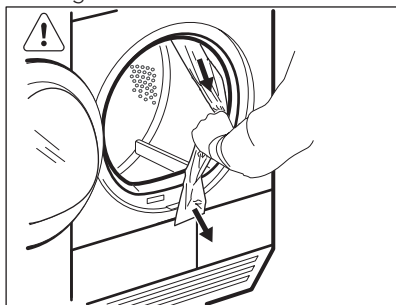


### 15.3 Installation under a counter

The appliance can be installed as freestanding or below the kitchen counter with correct space (see picture).

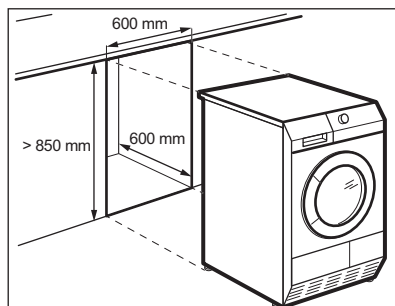



### 15.2 Feet regulation

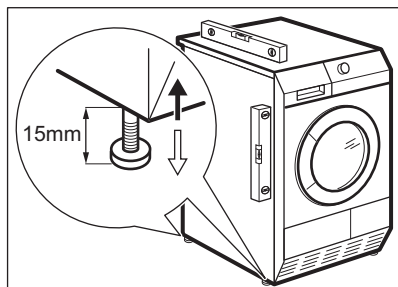It is possible to adjust the height of the tumble dryer. To do that adjust the feet.



## 16. ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances

marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.







[www.aeg.com/shop](http://www.aeg.com/shop)



136931130-B-262014

