

Writex desk

Stock number: 816/21301

Thank you for purchasing this Writex desk. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product



Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Necessary Tools




Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately **20 MINUTES** to assemble with **2 PEOPLE**.


The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.


Wall fixing - if in doubt seek professional advice

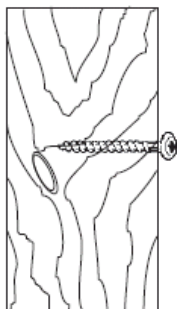

Wood
If fixing to wood
make sure that it
isn't chipboard as
screws can easily
pull away from
the core
structure

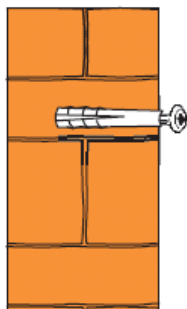

Brick or Masonry
Use an appropriate
wall plug provided
you are sure your
wall is sound

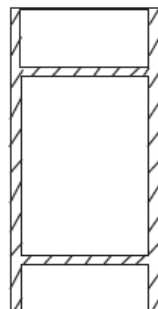

Cavity wall
Special toggle
wall plugs are
needed. Seek
expert advice


Fittings and parts checklist

1	Right leg x1		A	Bolt x 8	
			B	Flat washer x 8	
2	Left leg x 1		C	Allen key x 1	
			D	Bolt x 2	
3	Top x1		E	Refinery x 2	
			F	Allen key x 1	
4	Rail x 1		G	Wall plug X 2	
			H	Screw x 2	

Step by step assembly instructions


Step One

Remove the drawer by using finger as indicated show

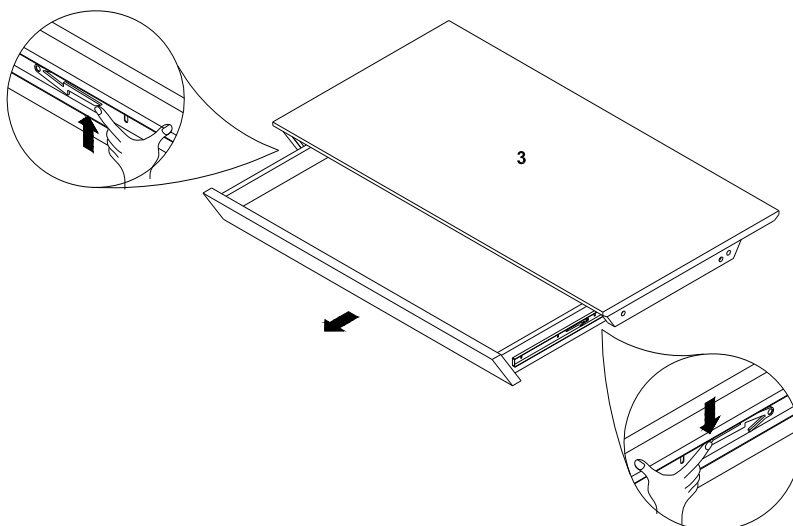


Step Two

Attach right leg (1) to right side of top (3) , secure with bolt (A) and Flat washer (B) by allen key (C) .

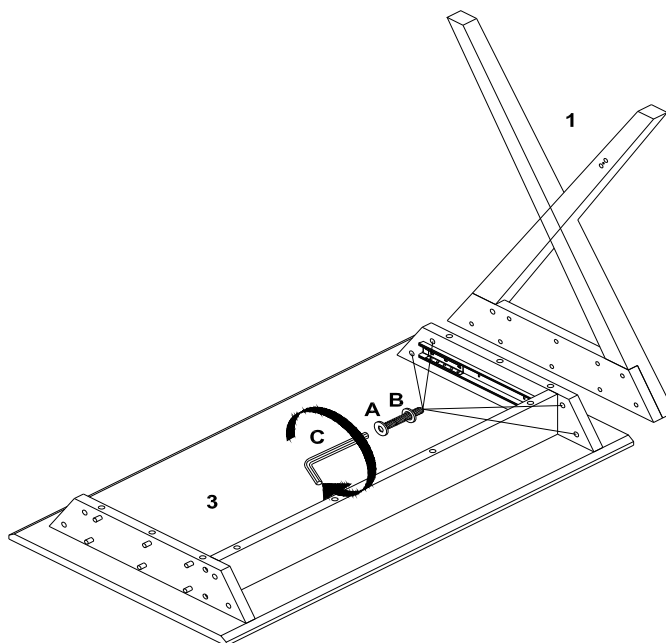


Step Three

Attach the rail (4) to right leg (1), use screw (D) secure by using screwdriver

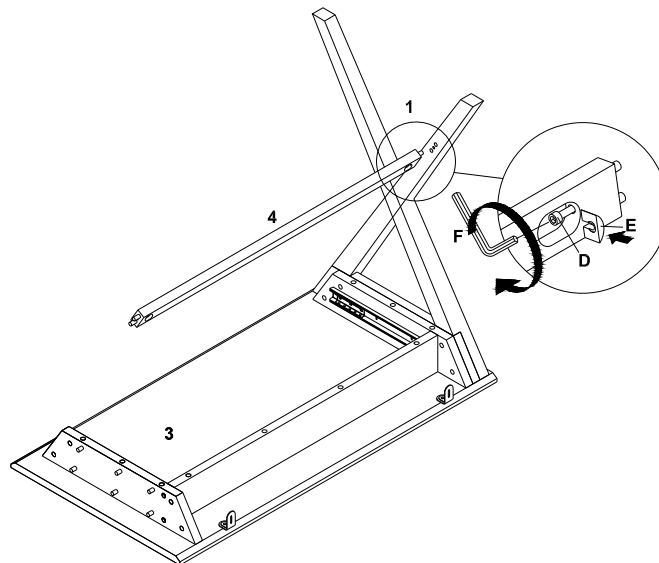


Step Four

Attach left leg (2) to left side of top (3), secure with bolt (A) and flat washer (B) by allen key (C). At the same time secure another end of rail to left leg (2), use screw (D) by screwdriver

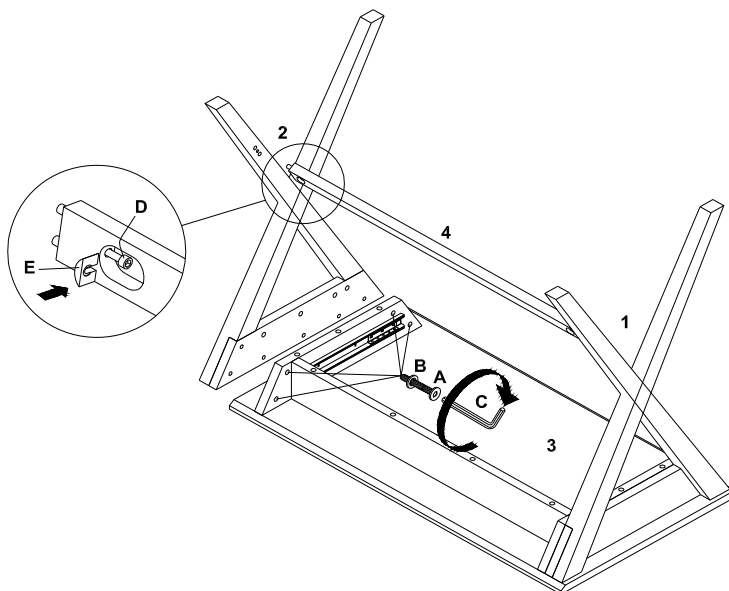

Step Five

Turn the desk .then push the drawer into desk as indicated show

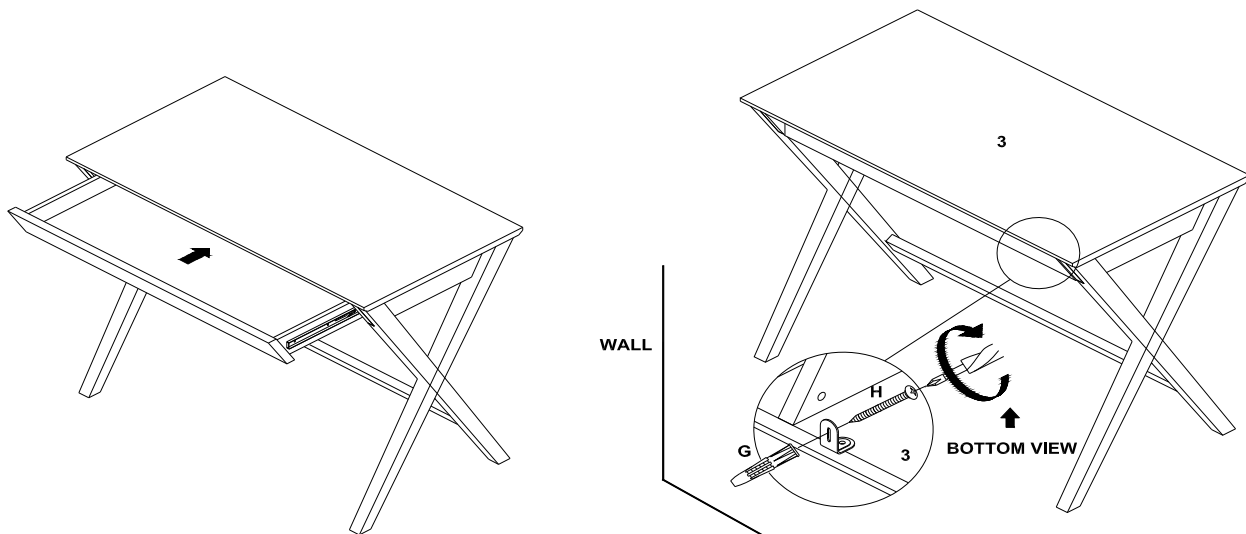

Care and Maintenance

Wood Furniture

Wood displays different grain patterns depending on which way they cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Wood veneers also allow distinctive patterns to be created on flat surfaces, such as table tops and drawer fronts by the way the slivers are arranged.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.

Waxed furniture will need to be given a coat of beeswax a couple of times a year to help maintain its luster.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters. Wipe up spills immediately and ensure that a mat or pad is placed under paper if you are writing.

Extendable dining tables should be left extended for the first few months to avoid an uneven appearance. Likewise, lamps and ornaments should also be moved regularly.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping

Safety Instructions

General warnings:

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN
www.johnlewis.com