


COLOSSEUM bookcase

Stock number: 80301


Thank you for purchasing this COLOSSEUM bookcase. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

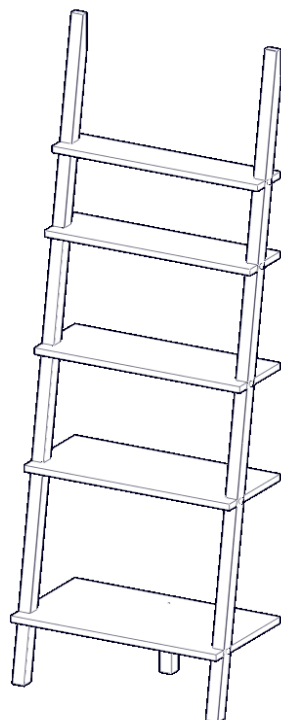

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Necessary Tools

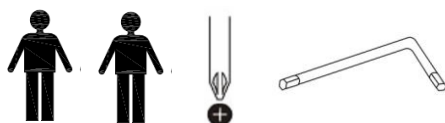

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.


 
 


This product takes approximately **20 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.

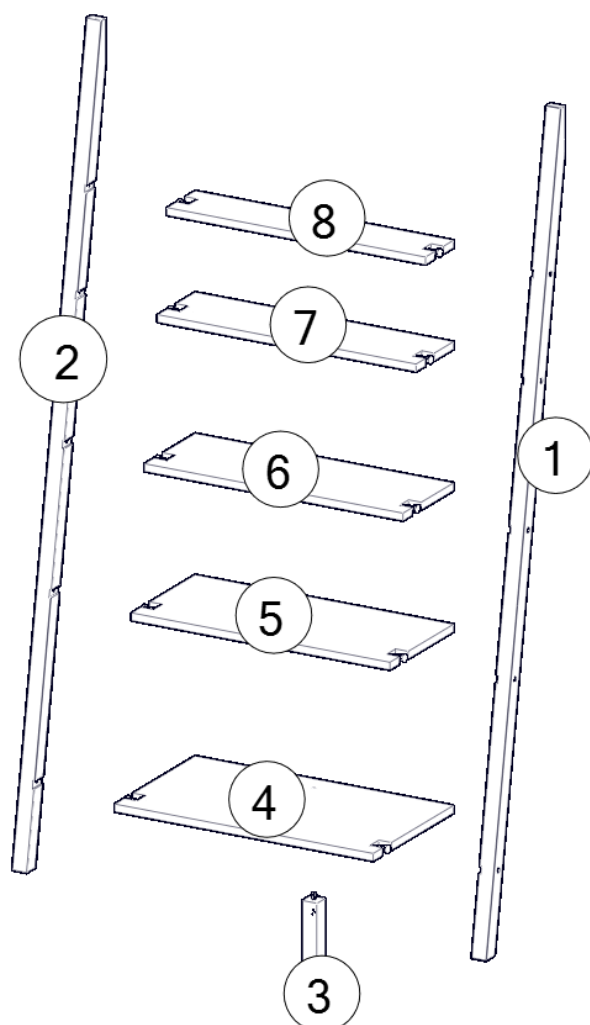Fittings and parts checklist




1	RIGHT rail x 1	2	LEFT rail x 1	3	Leg x 1
4	Fixed shelf A x 1	5	Fixed shelf B x 1	6	Fixed shelf C x 1
7	Fixed shelf D x 1	8	Fixed shelf E x 1		
A	Screw 7x70 x 10		D	Wall plug x 2	
B	Cover caps x 10		E	Allen key x 1	
C	Screw 5x80 x 2				

Step by step assembly instructions


Step One

1. Take the fixed shelf A (4) and lay it on the clean and flat surface with the predrilling holes uppermost.
2. Attach the one leg with screw (3) as shown in the picture.

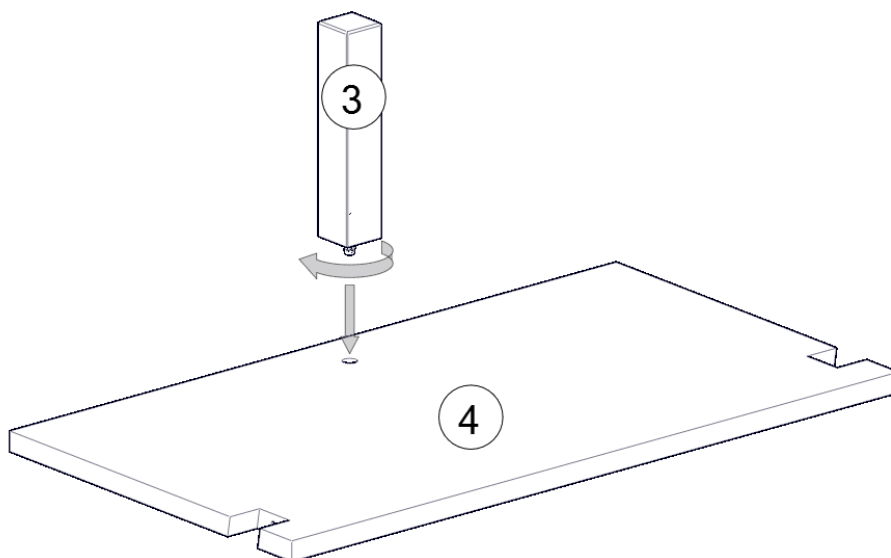


Step Two

1. Take the shelf A (4), leg (3) and lay them on the clean and flat surface as shown in the picture.
2. Locate the right rail (1) onto the fixed shelf A (4) as shown in the picture.
3. Insert the one screw (A) into the holes provided.
4. Tighten the screw (A) using the allen key (E).

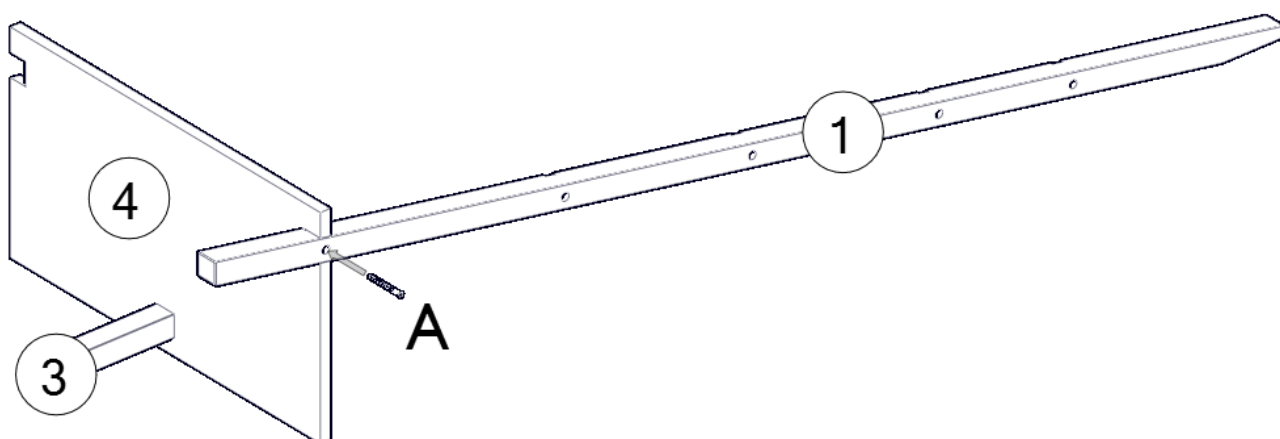


Step Three

1. Locate the fixed shelves B, C, D, E, (5,6,7,8) onto the right rail (1) as shown in the picture.
2. Insert the four screw (A) into the holes provided.
3. Tighten the screw (A) using the allen key (E).

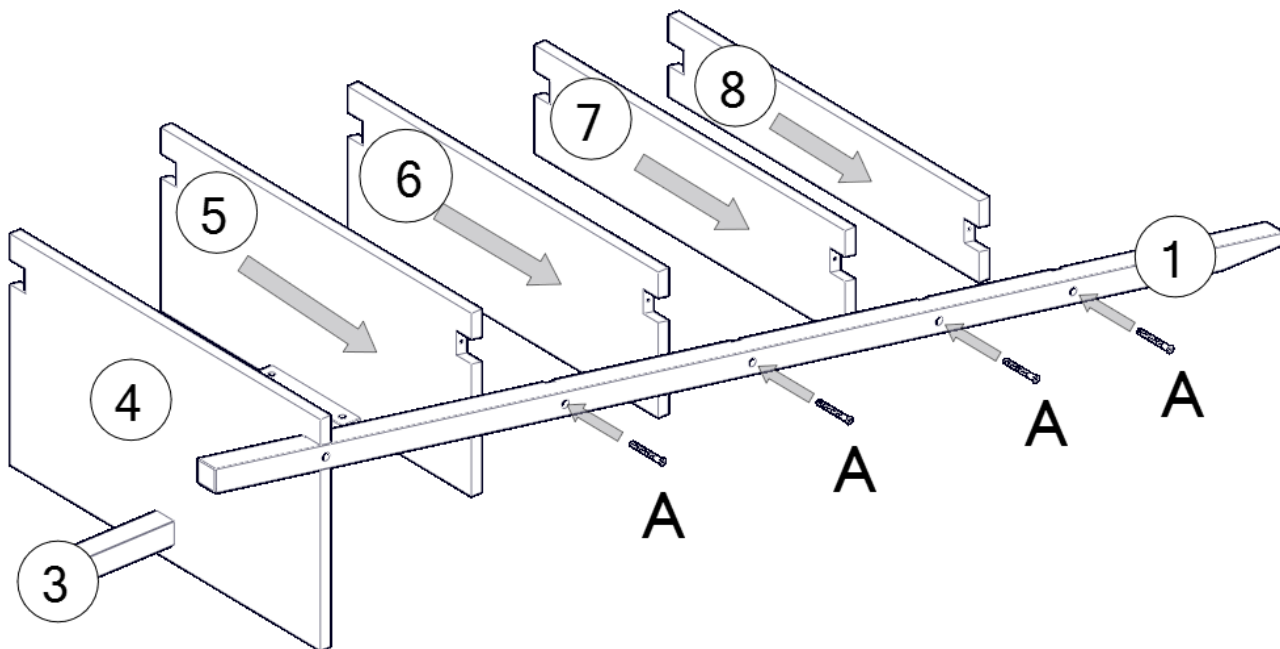


Step Four

1. Locate the left rail (2) onto the fixed shelves A, B, C, D, E, (4,5,6,7,8) as shown in the picture.
2. Insert the five screw (A) into the holes provided.
3. Tighten the screw (A) using the allen key (E).

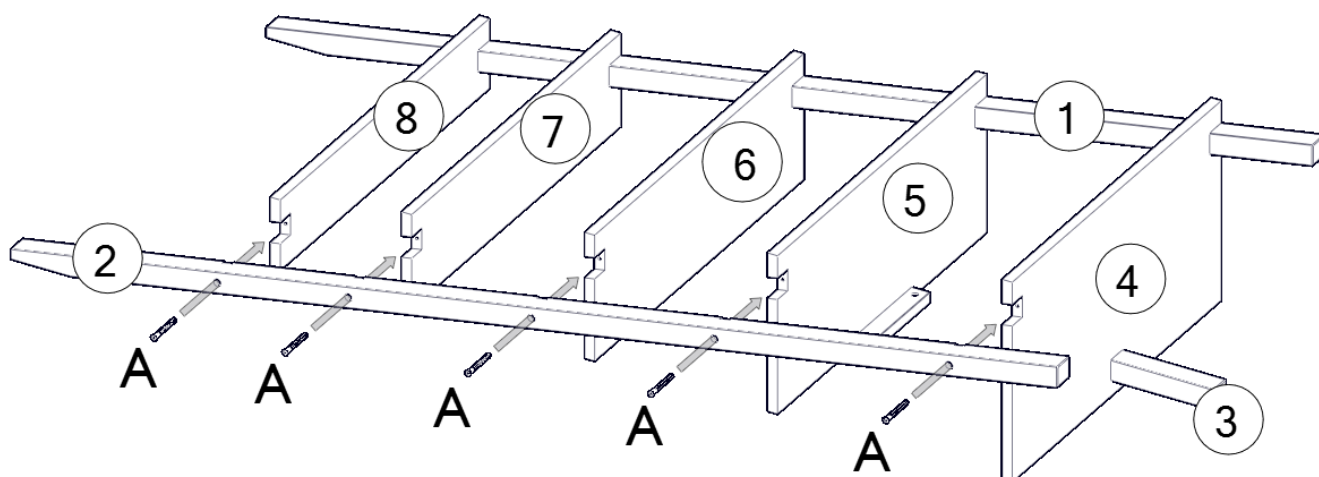


Step Five

1. With help, turn the carcase of the bookcase and place the unit against the wall in its final location.

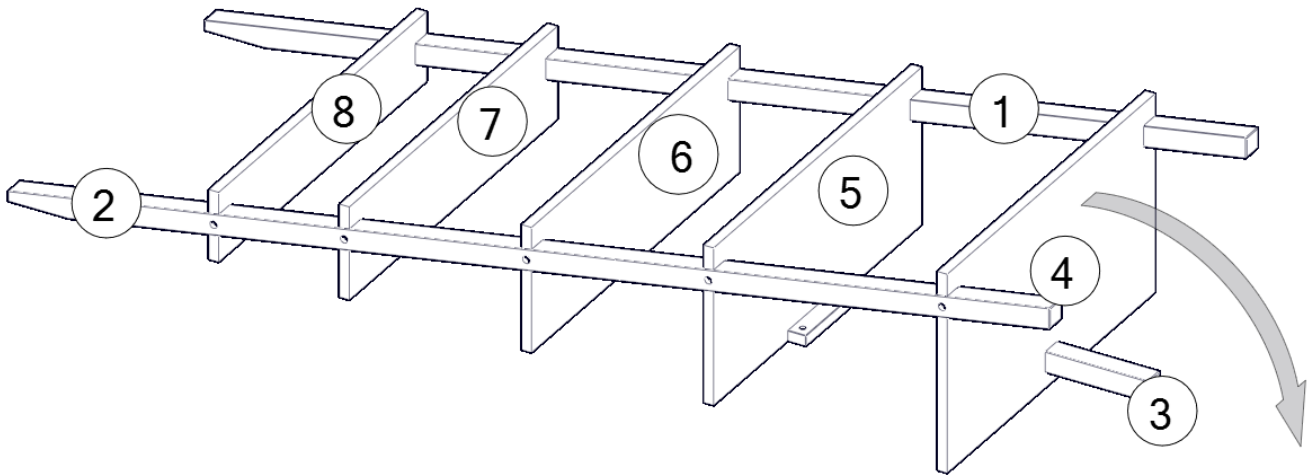


Step Six

1. Insert the ten cover caps (B) into the holes as shown in the picture.

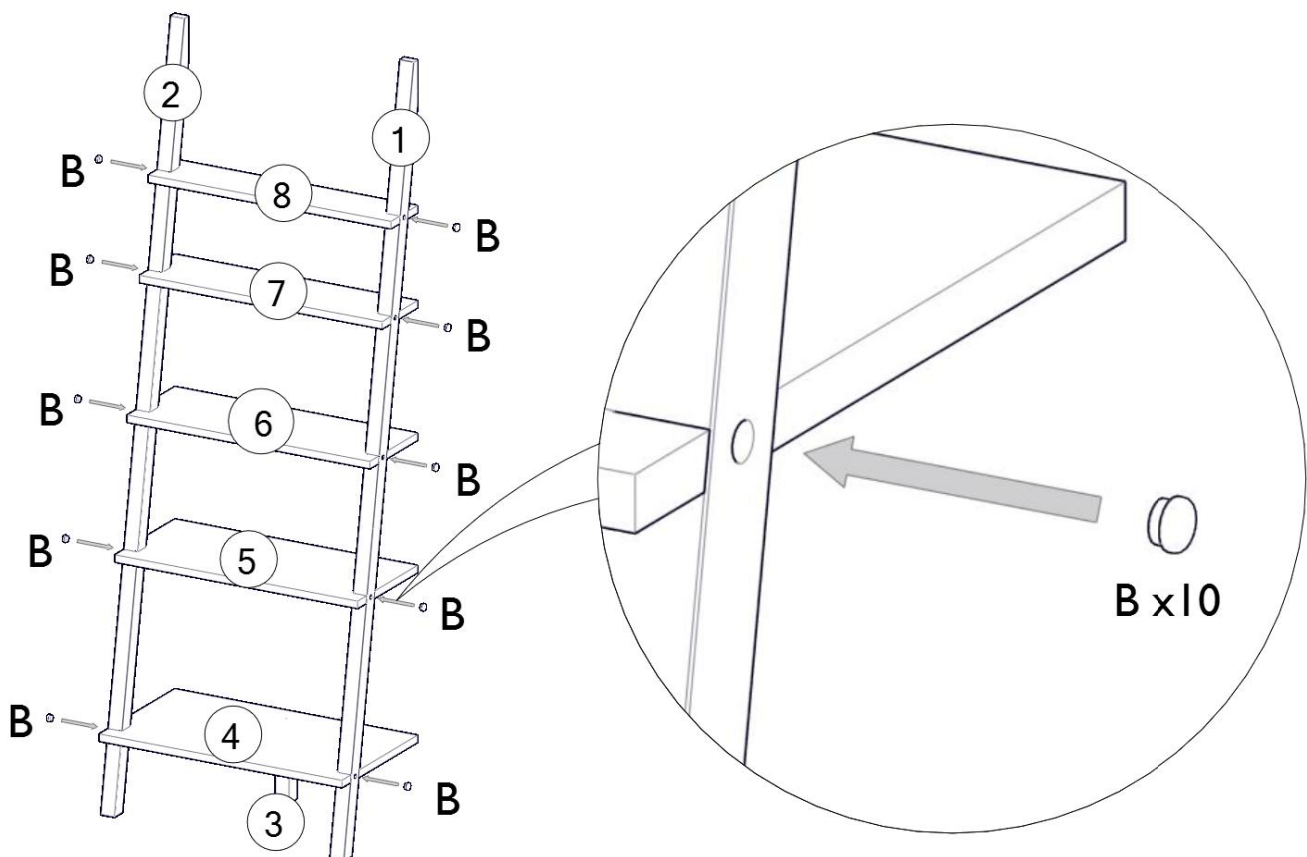


Wall fixing - if in doubt seek professional advice

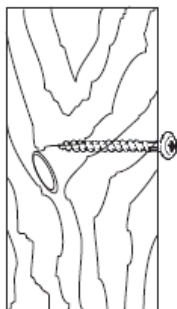


Wood

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure

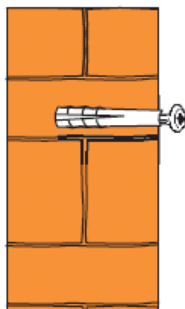

Brick or Masonry

Use an appropriate wall plug provided you are sure your wall is sound

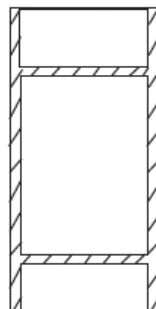


Cavity wall

Special toggle wall plugs are needed. Seek expert advice

Step Seven

1. Mark the drill hole positions.
2. Remove the unit and drill a 8mm diameter hole to a depth of 65mm in the marked positions.
3. Insert wall plug supplied.
4. With help, lift the unit up and aligning the holes, fix to the wall using the screws supplied and tighten fully.

The assembly is now complete.

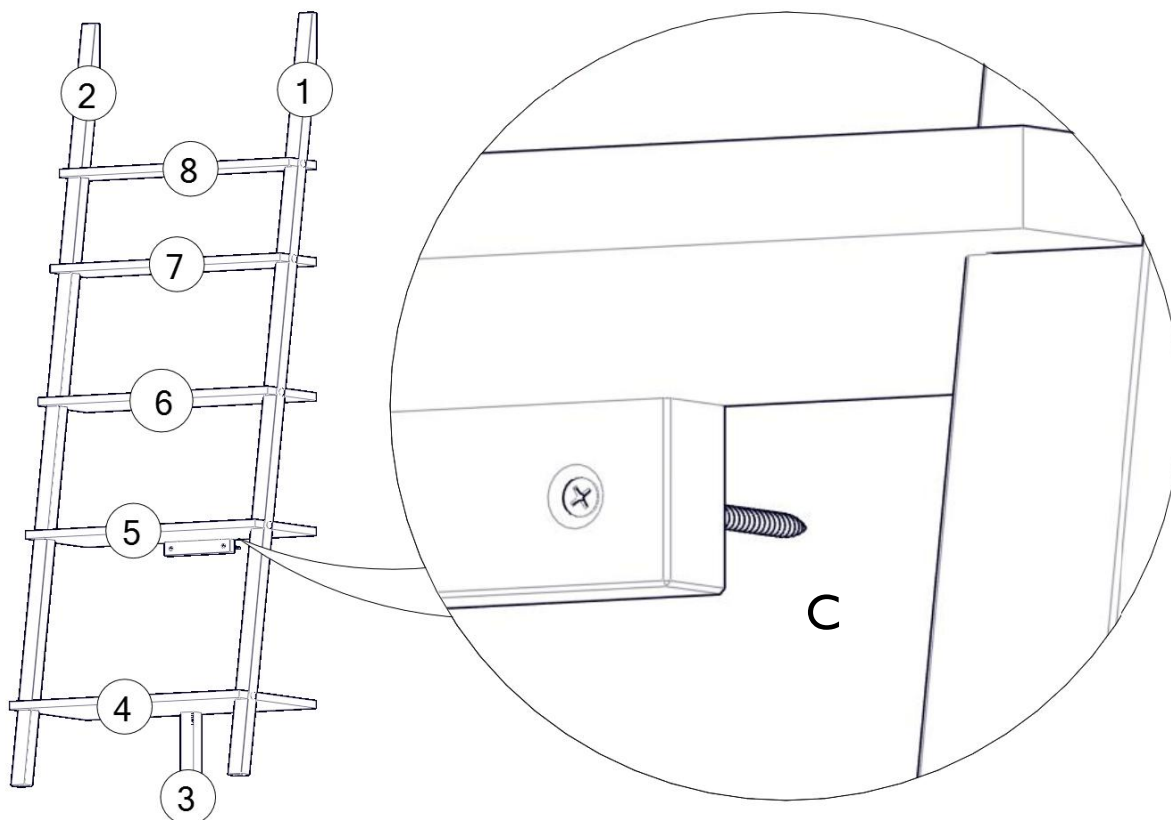

Care and Maintenance

Wood Furniture

Wood displays different grain patterns depending on which way they cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Wood veneers also allow distinctive patterns to be created on flat surfaces, such as table tops and drawer fronts by the way the slivers are arranged.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.

Waxed furniture will need to be given a coat of beeswax a couple of times a year to help maintain its luster.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters. Wipe up spills immediately and ensure that a mat or pad is placed under paper if you are writing.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping

Safety Instructions

General warnings:

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Specific warning for heavy items:

It is recommended that before moving heavy objects to a new location they are completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN

www.johnlewis.com