

Step by step assembly instructions

Step One

Marking the bracket positions

1. Carefully remove all the packaging, taking care not to damage the track.
2. When you have decided the location of the rail mark out the position of the fixing line, 10cm above the window recess and allow 15 cm either side for the curtains to stack back as shown in Fig 1. **The rail must be fitted at least 1.5m from the floor.**

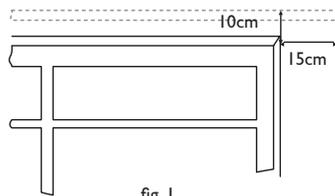


fig. 1

Mounting Rail end brackets

3. Take a rail end bracket, undo the small screw and separate the two parts (Fig. 2). This will make it easier to reach the screws to fix them to the batten or wall.
4. Holding the bracket up to the fixing line, mark off the holes for the screws with a pencil (Fig. 3). If you are mounting on to a batten drill a 2mm diameter hole in the batten to a depth of 30mm. Use a spirit level to ensure the holes are straight. Repeat on the other side of the window.
5. Once you have marked the position of the brackets drill holes, using the appropriate drill bit and using the appropriate wall plugs fix the brackets as shown in (Fig. 4).
6. Reassemble the rail end bracket, ensure that the small screw is securely fixed (Fig. 5).

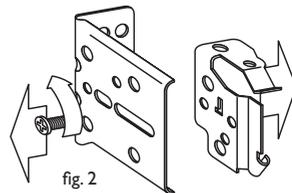


fig. 2

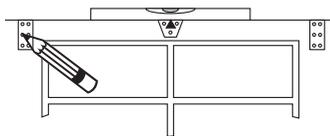


fig. 3

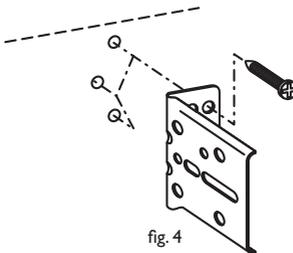


fig. 4

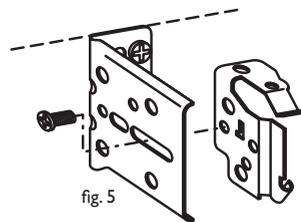


fig. 5

Step Two

Attaching the Curtain Track

1. Once the brackets are securely fixed, insert one end of the curtain track 'projection' lug into the receiving channel of the end bracket and push the front of the track to click-close it in position (Fig. 6).
2. Repeat the procedure on the other end, you may need to extend the track.
3. You can adjust the position of the track relative to the wall by loosening the small locking screws in the end brackets and then pulling the track out to suit (Fig. 7). Re-secure the screw upon completion.

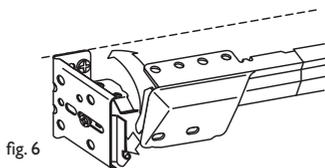


fig. 6

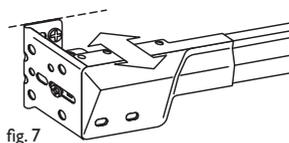


fig. 7

Step Three

Intermediate Bracket Supports

1. If you extend the curtain track horizontally by more than 30cm, you should use one or more intermediate support brackets. If you use one support bracket it should be positioned at the midpoint of the window recess. If you use more than one bracket, they should be evenly spaced along the track (Fig. 8).
2. When you have marked the position of the brackets, remove the whole track from the rail end brackets. Hold the brackets up to the fixing line, mark off the holes for the screws with a pencil. If you are mounting on to a batten drill a 2mm diameter hole in the batten to a depth of 30mm.
3. Once you have marked the position of the brackets, drill holes and fix the brackets securely (Fig. 9). If you are fixing directly to a wall use the appropriate wall plugs to fix the brackets.


 





fig. 8

4 Re-fit the track onto the rail end brackets ensuring it fits neatly under and into the support brackets. If you need to extend the support brackets, this can be done by loosening the fastening screws underneath and pulling the bracket backwards or forwards as shown in (Fig. 10).

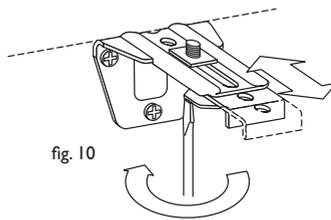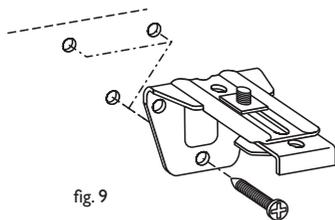

5. Underneath the support brackets you will find a locking clamp. You need a flat screwdriver to rotate the clamp (Fig. 11).


6. When you clip the bracket over the front of the outer section of the track, you must turn the locking clamp anti-clockwise. If you fit the bracket over the inner (narrower) section of the track you must turn the locking clamp clockwise to engage with the track correctly (Fig. 12).

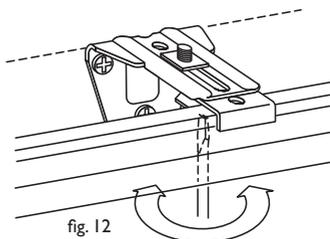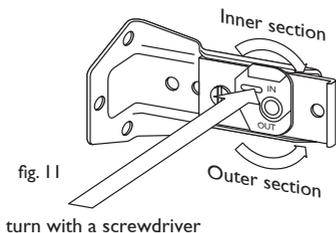

Step Four

Fitting Master Slide overlap and underlap arms



1. The Master Slide arms have four position options and you can choose which side to have the curtain overlap. Remove the small locking screw from the Master slide overlap and reposition the arms as required, Fig. 13.

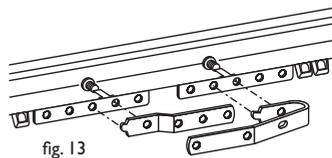

Step Five

Centring the Master Slides

1. Once you have fitted the overlap and underlap arms, centre the Master Slides.
2. Pull the outer draw cord to move the overlap Master Slide to its end of the track (Fig. 14).
3. Hold both cords taut and move the underlap Master Slide by hand to its end of the track.
4. Lift up the cord off the top peg behind the unknotted Master Slide, twist it once and place the loop created under the lower peg as shown in Fig. 15.
5. Pull the outside cord to tighten the loop. Check to ensure the Master Slides are still centred and adjust again if necessary.

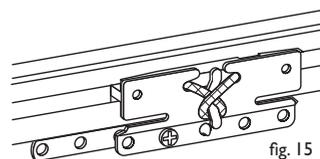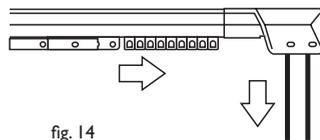


Step Six

Adjusting the cord length and fitting the tension pulley

1. Go to the masterslide with the knotted cord ends and pull down on the right hand knot to reduce the cord loop.(Fig. 16)

To prevent the risk of child strangulation the cord loop must be 1m maximum from the rail and the tension pulley must be fitted.

NOTE: it is the responsibility of the person fitting the rail to ensure that the cord length meets the stated requirements.

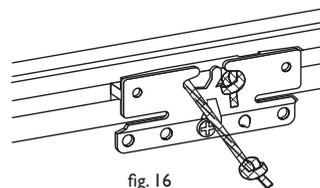

- Using the two screws supplied, fix the tension pulley at the correct height, directly in line with the pull cord as shown (Fig. 17).
- Extend the neck of the pulley and secure in higher position using a pin or small nail. Remove the central barrel of the pulley by pulling it down and then out (Fig. 18a). Place the cord inside the pulley and replace the barrel ensuring it clicks into place (Fig. 18b).



fig. 17

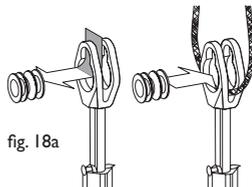


fig. 18a

fig. 18b

- Take up the slack of the cord and tie a knot behind the masterslide arm. If there is insufficient tension in the cord, reduce the cord length by adjusting the knot behind the masterslide arm. Cut the excess cord in front of the knot. (Fig. 19)

- If the cord becomes twisted, simply rotate the head of the pulley to untwist it (Fig. 20). The track is now ready to accept curtains.

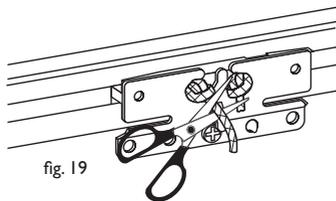


fig. 19



fig. 20

Safety Instructions



WARNING



It is essential that these instructions are followed to ensure the product works correctly and to prevent the risk of young children becoming entangled in the cord loop. If in doubt consult a professional fitter for advice.



WARNING

Young children have been strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children.

Cords may become wrapped around a child's neck.

Move cots and furniture away from window covering cords.

Do not tie cords together.

Make sure cords do not twist and create a loop.

PERSONS IN CHARGE OF CHILDREN ARE ULTIMATELY RESPONSIBLE FOR FOLLOWING THE SAFETY INSTRUCTIONS PROVIDED BY THE MANUFACTURER AND TO USE ANY SAFETY DEVICE SUPPLIED.

Only use a Step Ladder to install this product.

Do Not over reach. Always move the Step Ladder so that you are in a safe working position.

Do Not hold or lean on the track to support your weight.

We recommend you use two people for installation of larger tracks.

Take care when using power tools, use of a Residual Current Device (RCD) is recommended.

Always use eye protection when drilling.

Beware of hidden pipe runs and cables.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

PLEASE KEEP OUT OF THE REACH OF YOUNG CHILDREN.

SMALL PARTS - CHOKING HAZARD

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

PLEASE KEEP THE BATCH CODE ON THE PACKAGING FOR FUTURE REFERENCE IF ANY QUERIES