 


John Lewis
baby

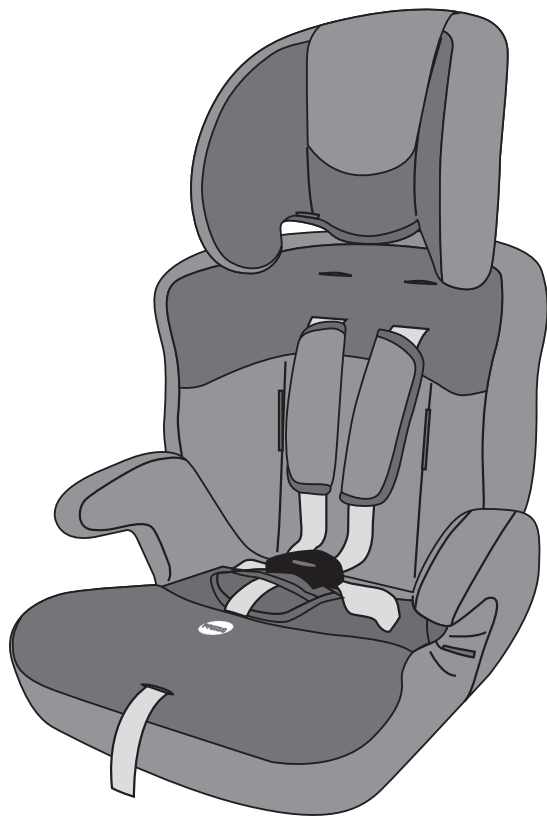

Group 1-2-3 car seat
Instruction Manual

**INSTRUCTIONS: RETAIN FOR FUTURE REFERENCE.
PLEASE READ CAREFULLY.**

 
Thank you for purchasing this John Lewis group 1-2-3 booster seat. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact your nearest John Lewis department store.


Do not discard any packaging until you are sure that you have all the parts.

Keep children clear during assembly as pack may contain small parts which may present a choking hazard. Dispose of plastic bags immediately - do not allow children to play with them.


Parts

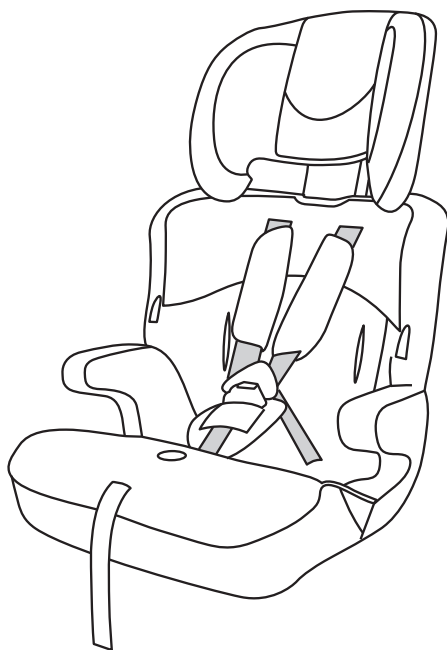


Seat Unit

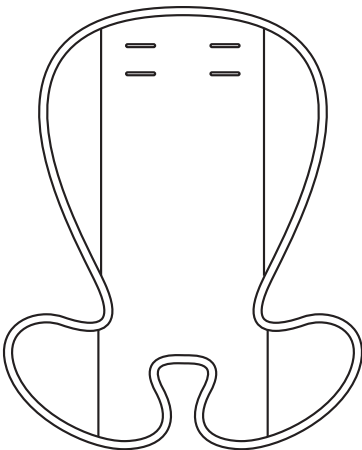 

Seat Liner

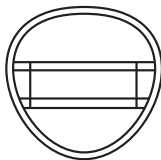 

Crotch Pad

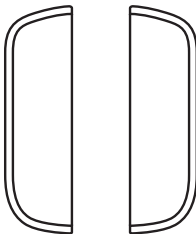 


Harness Pads

Note: Some parts may already be assembled as part of the seat unit.

Assembly

Fitting the seat back

 1. Lower the hooks at the base of the seat back onto the base.
2. Raise the seat back to secure it in place.

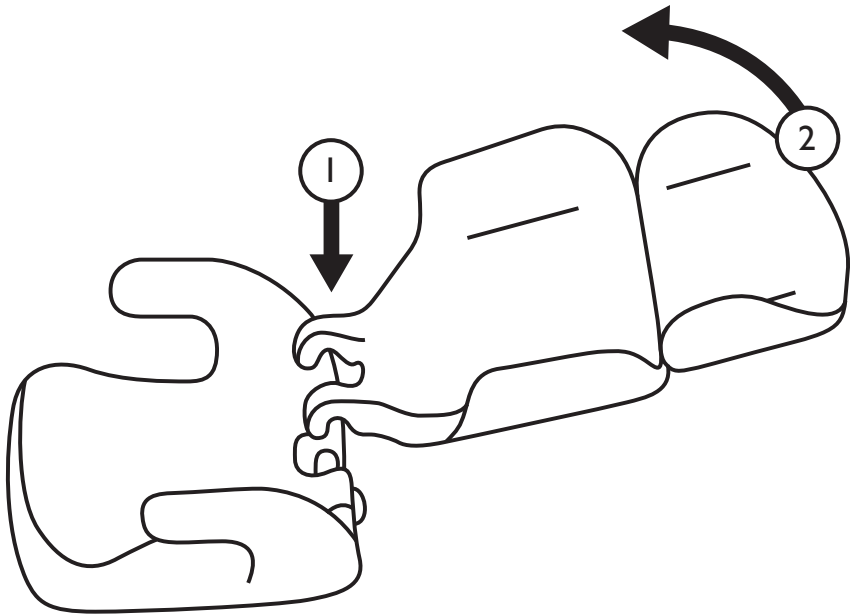


In Use

Group 1: 9-18 kg

This mode is recommended for children who weigh between 9kg (approximately 1 year) and 18kg.

The booster is fixed, facing forwards, to the seat in the vehicle using the 3-point seat belt. The child is secured in the booster using the 5-point harness.

 The booster should not be secured using a lap belt.

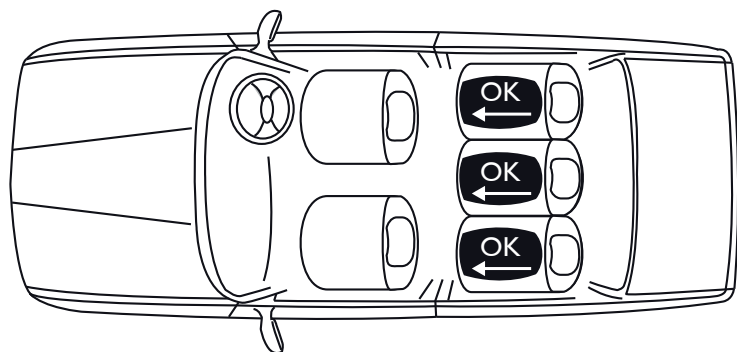


The seat should only be used in the rear of the vehicle, facing forwards as shown above, and only where a 3-point safety belt is present.

In Use

Seatbelt Routing

Route the vehicle's seatbelt as shown below, taking care to ensure the belt is routed around the rear of the seat and through the guides correctly.

 
Pull on the seatbelt after securing to ensure there is no slack in the belt.

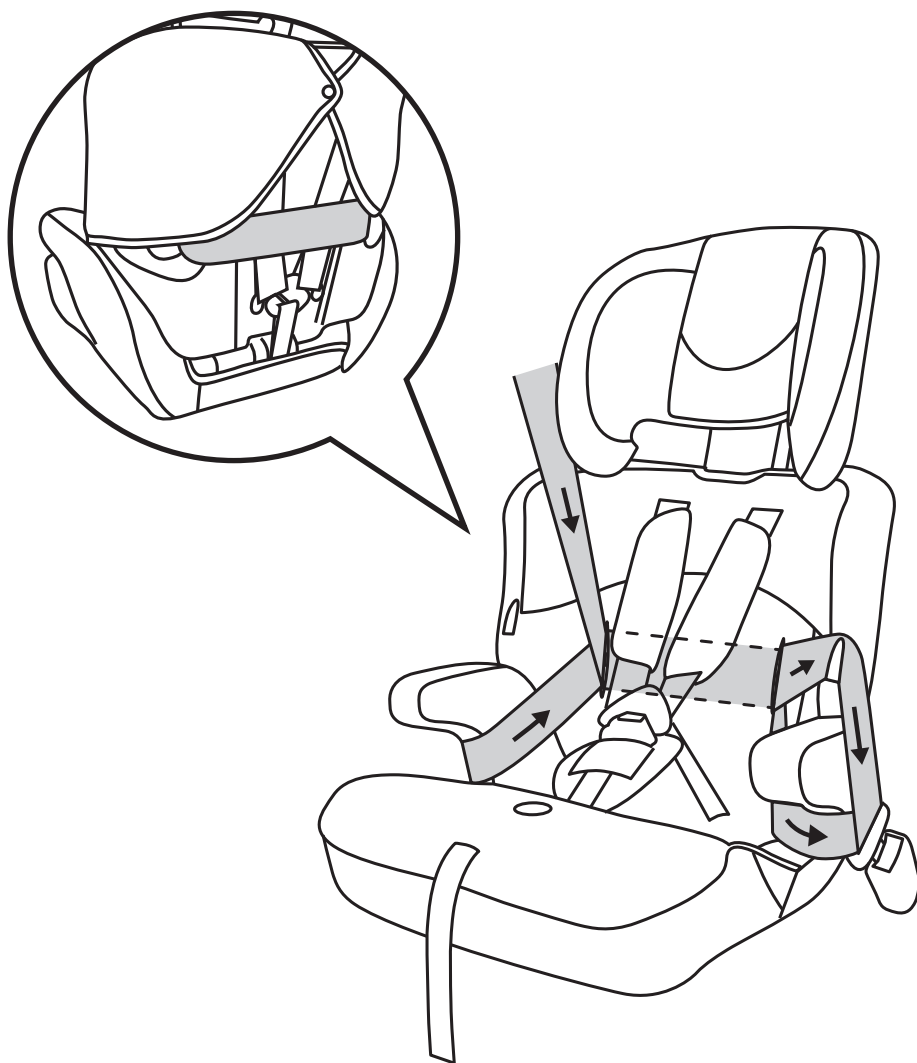

In Use

Securing Your Child

 Bring the harness clips together, and insert into the buckle together. An audible click will confirm correct attachment. Push the red button firmly to release.

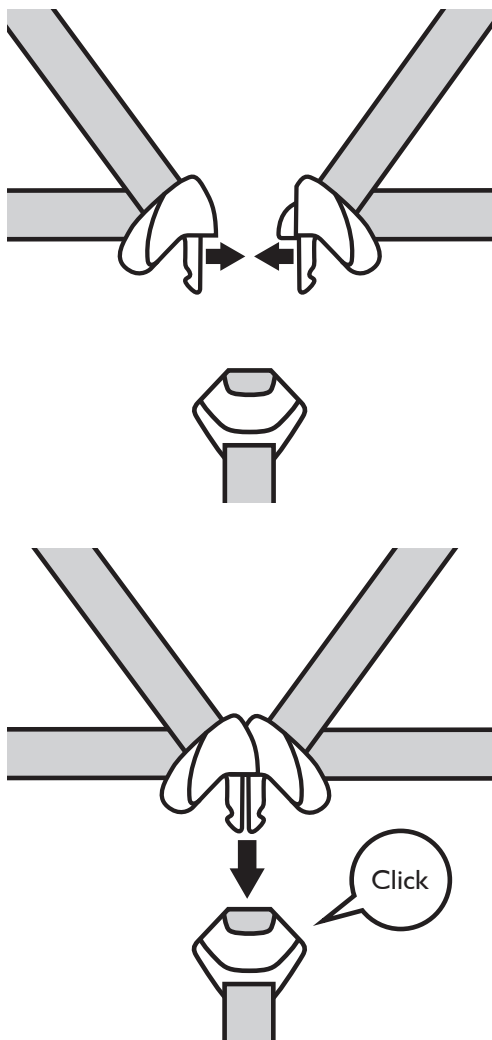


In Use

Adjusting the Harness

To tighten the harness, pull the belt at the base of the harness as indicated by the black arrow.

 To loosen the harness, press the button marked 'press' firmly, and pull gently on the harness straps as indicated by the white arrows.

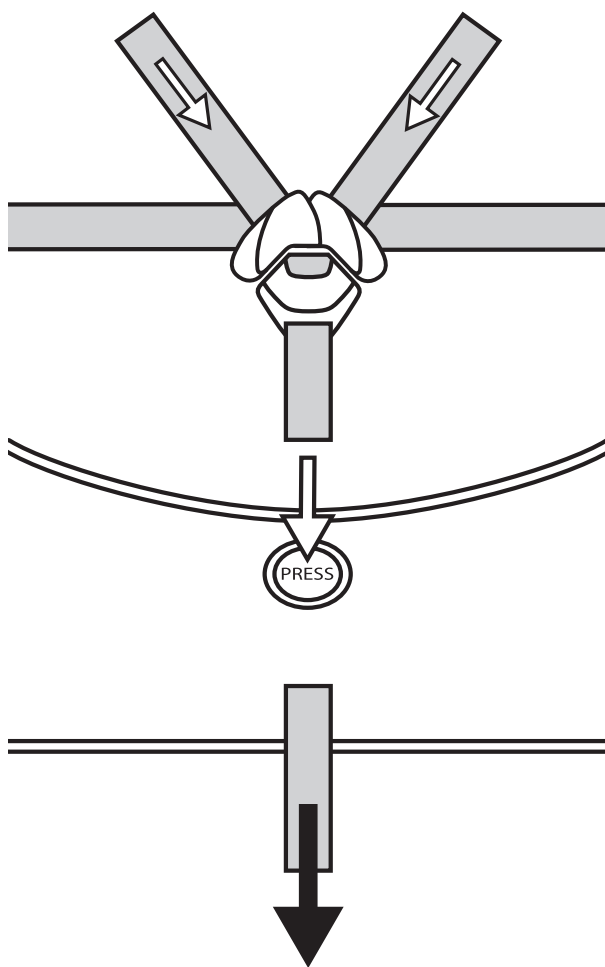


In Use

Adjusting the Harness

It is important that the shoulder straps sit no more than an inch above the shoulders of your child, and not too low or too high.



 
It may be necessary to change the height of the shoulder straps. In order to do this, the straps can be disconnected at the rear of the seat as shown below.

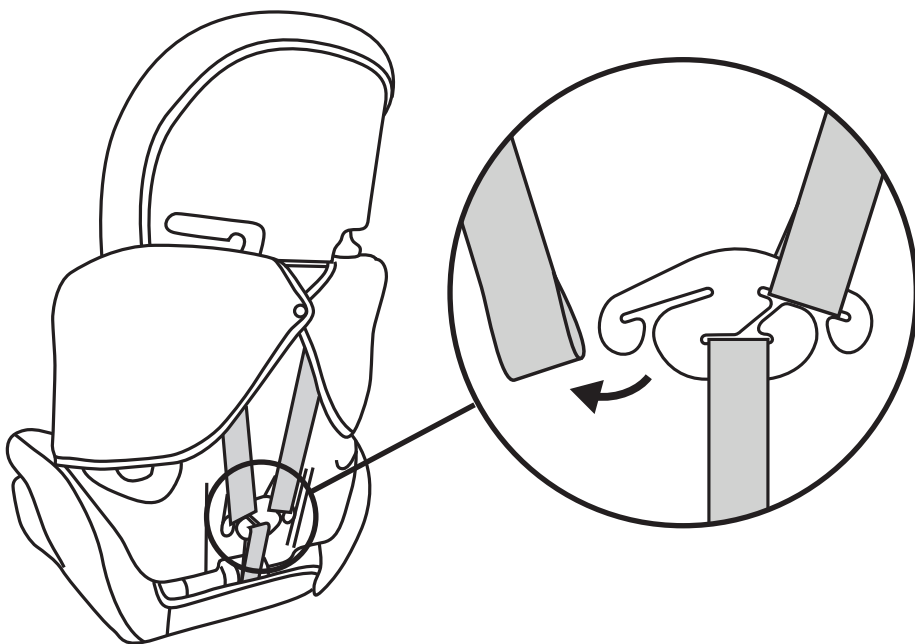

In Use

Adjusting the Harness

 
Thread the harness strap through the appropriate hole in the seat back for your child.

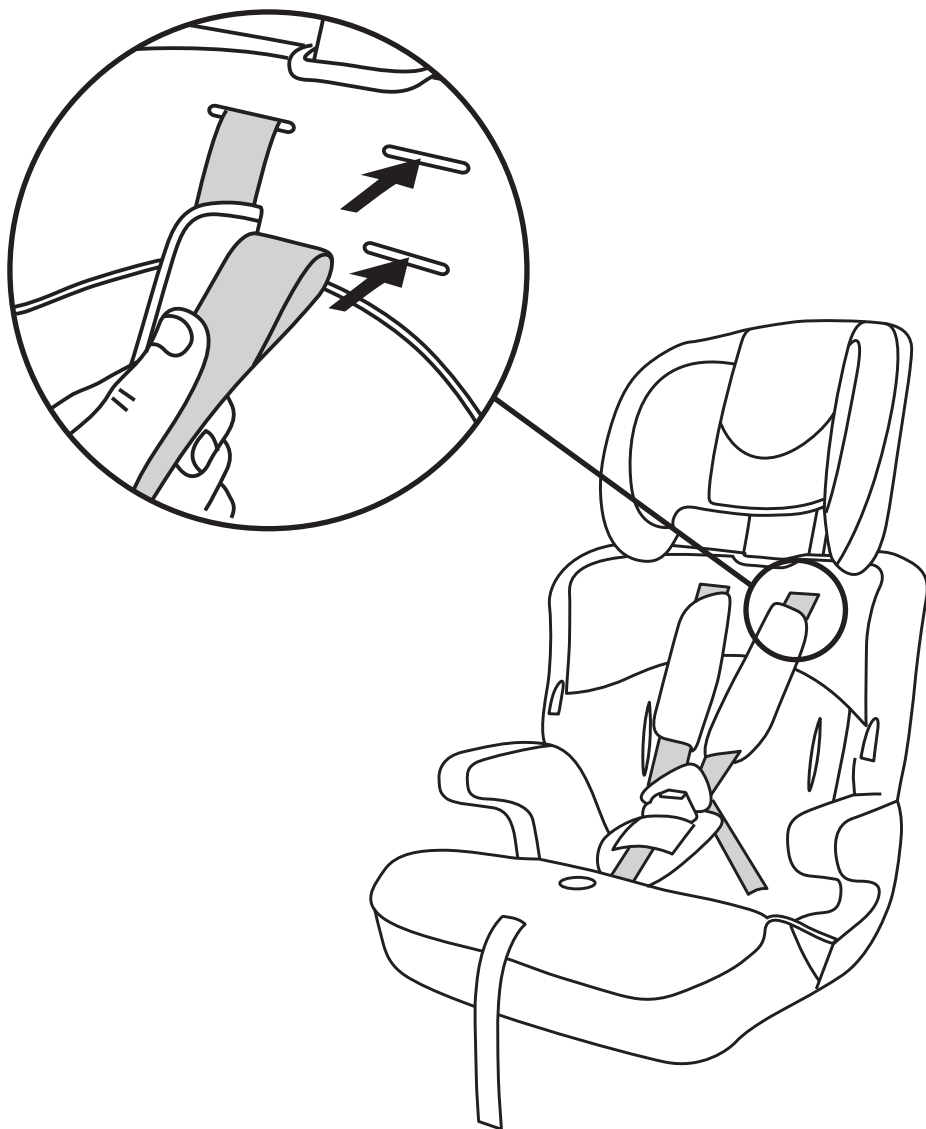

In Use

Adjusting the Harness

 It is important that the shoulder straps sit no more than an inch above the shoulders of your child, and not too low or too high.

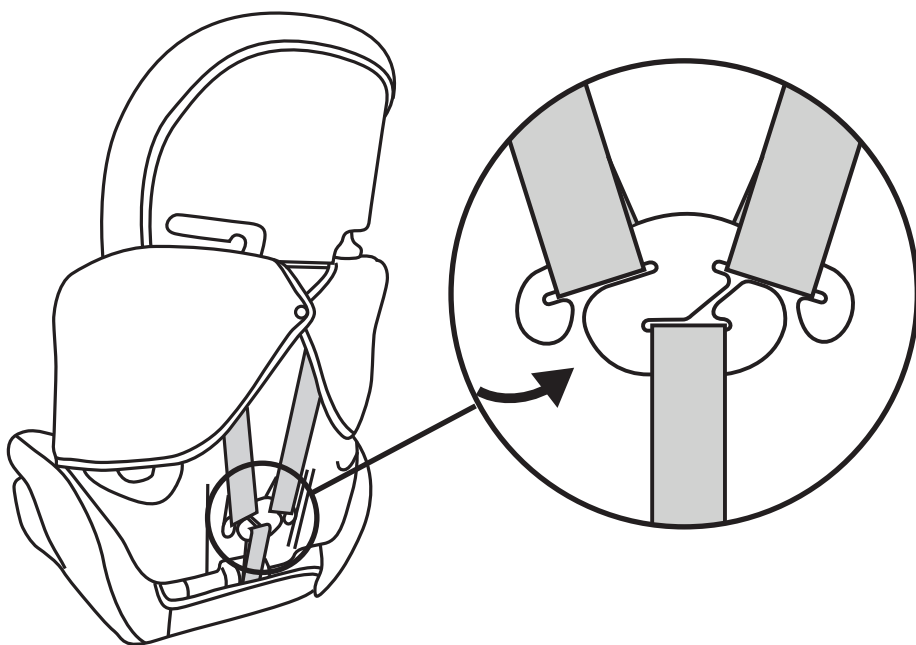


In Use

Group 2: 15-25 kg

This mode is recommended for children who weigh between 15kg and 25kg.

The booster is fixed, facing forwards, to the seat in the vehicle with the child using the 3-point seat belt.

 The booster should not be secured using a lap belt.

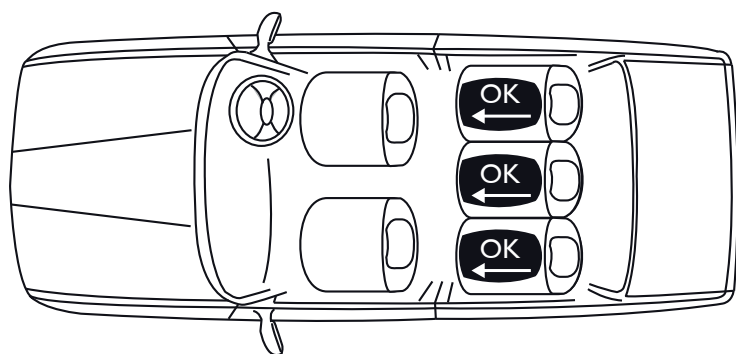

The seat should only be used in the rear of the vehicle, facing forwards as shown above, and only where a 3-point safety belt is present.

 
We recommend that you do not use the removable liner after the age of 18 months.

In Use

Removing the Harness

It is necessary to remove the harness when using the seat in group 2 mode.


To do so, firstly remove the straps from the connector on the rear of the seat. Store the connector. Thread the shoulder straps through the back of the seat.

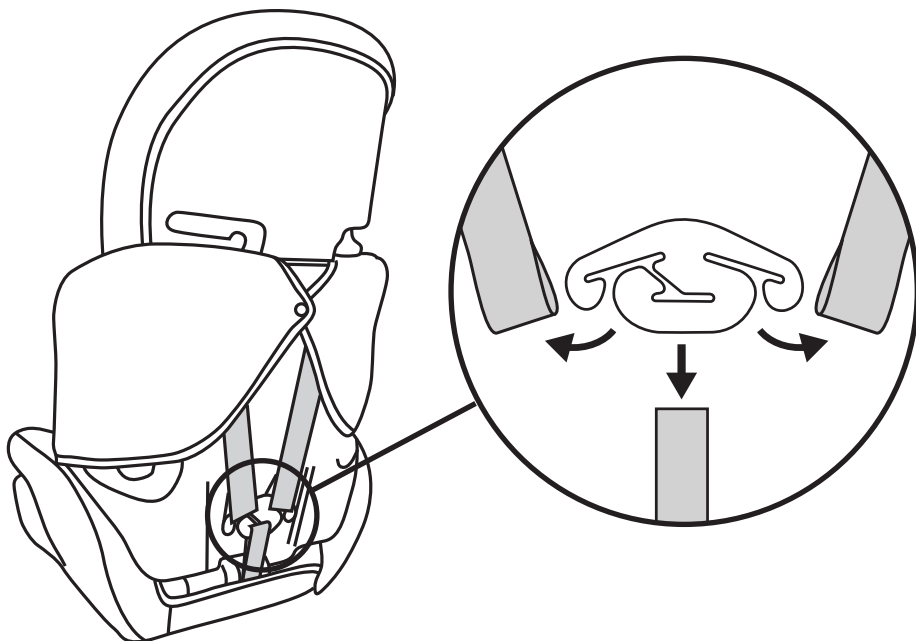

In Use

Removing the Harness

 
On the underside of the seat, locate the three point at which the harness threads through the base of the seat. Turn them to the side and push them through the base in order to remove the harness from the seat.

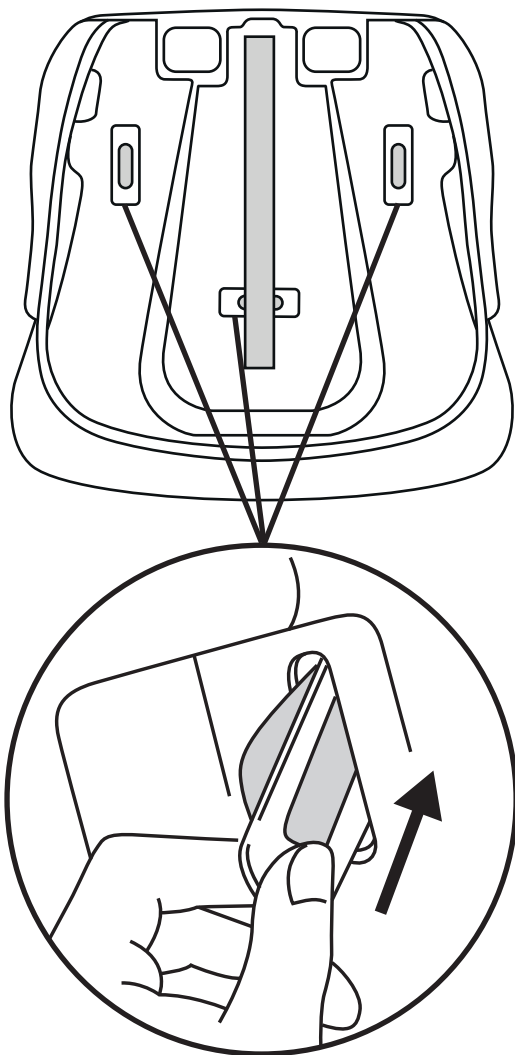

In Use

Securing Your Child

 
Place the seat in the vehicle and adjust the headrest accordingly. Secure your child into the seat using the vehicle's 3-point seat belt, ensuring that the belt passes through the guide in the headrest, and underneath the guide in the base, as shown below. Ensure there is no slack in the belt by gently pulling it tight.

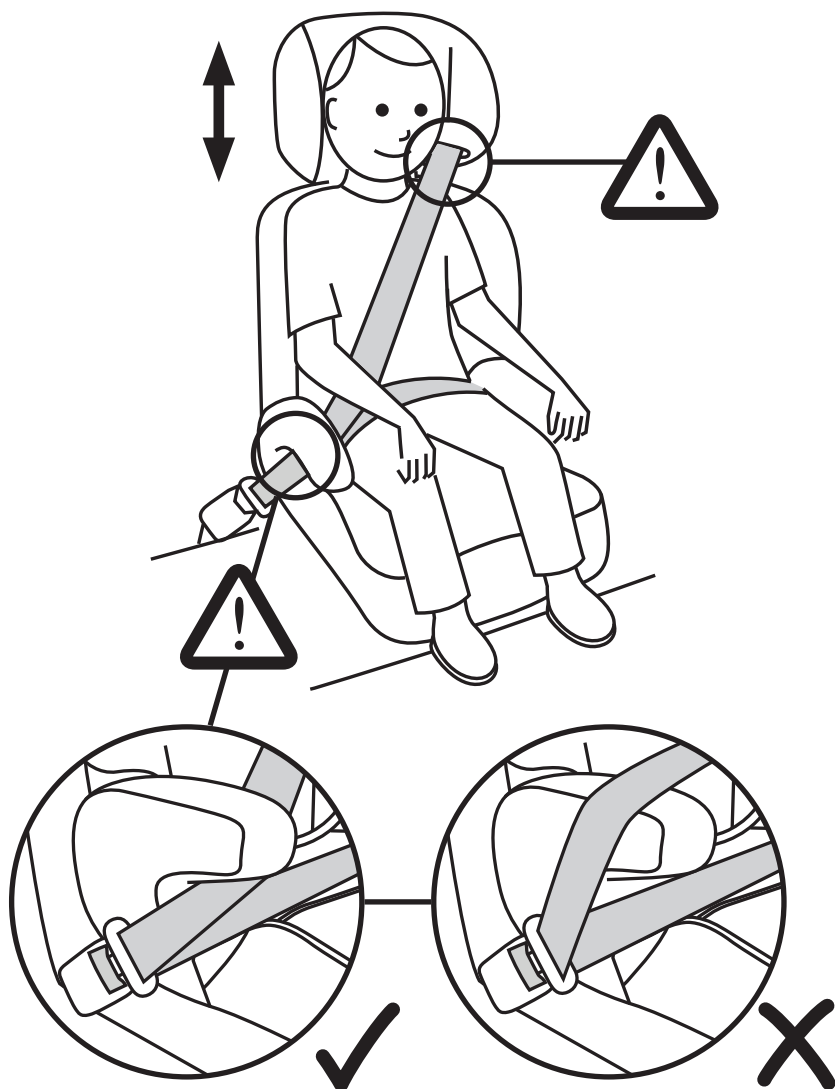


In Use

Incorrect Fitment

 It is important that your child is correctly fitted in their seat. Take care to ensure none of the below situations occur when securing your child.

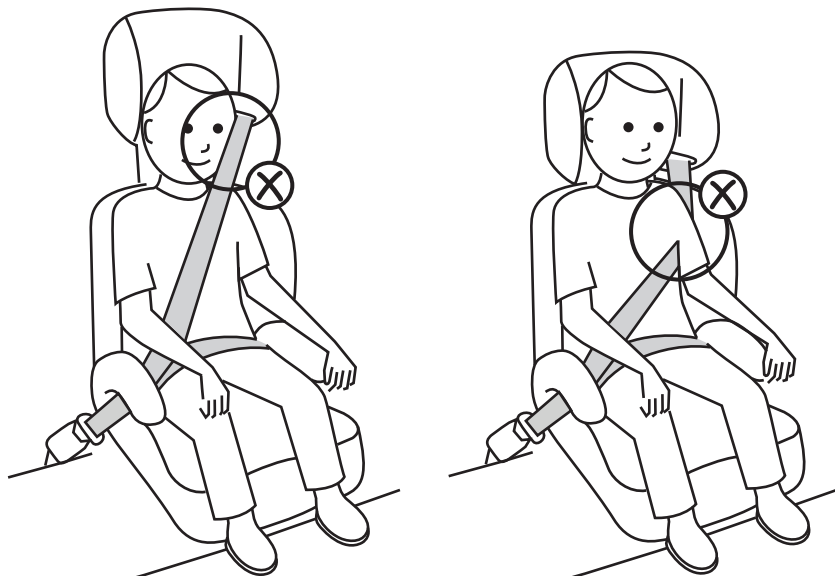

 In some cases, the strap attached to the seat belt buckle can be too long and ride too high under the armrest, preventing the car seat from being fixed firmly. If this happens, choose another location in the car. If you have any questions relating to this issue, you should contact the manufacturer.

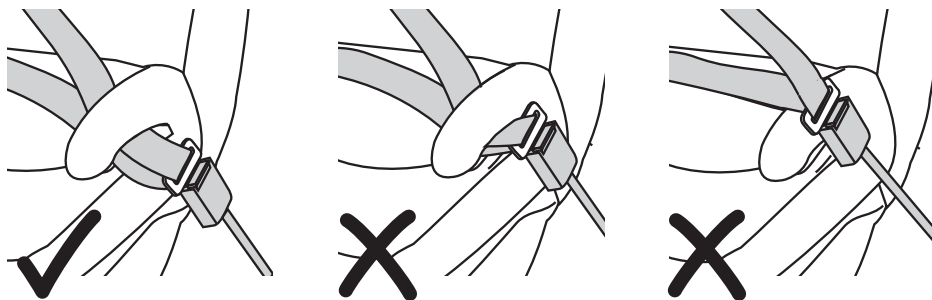


In Use

Group 3: 22-36 kg

This mode is recommended for children who weigh between 22kg and 36kg.

The booster is fixed, facing forwards, to the seat in the vehicle with the child using the 3-point seat belt.

 The booster should not be secured using a lap belt.

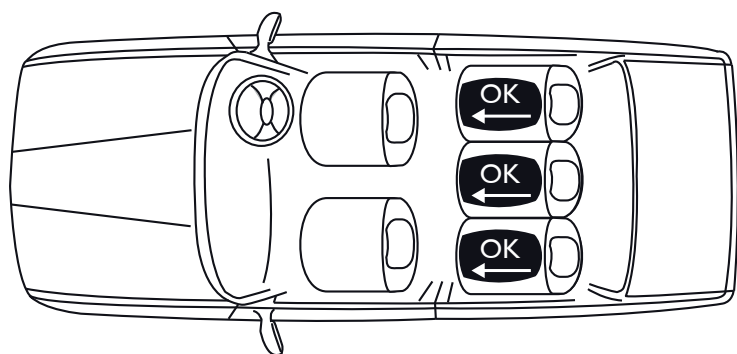


The seat should only be used in the rear of the vehicle, facing forwards as shown above, and only where a 3-point safety belt is present.

In Use

Removing the Seat Back

 
Remove the seat back as shown below.

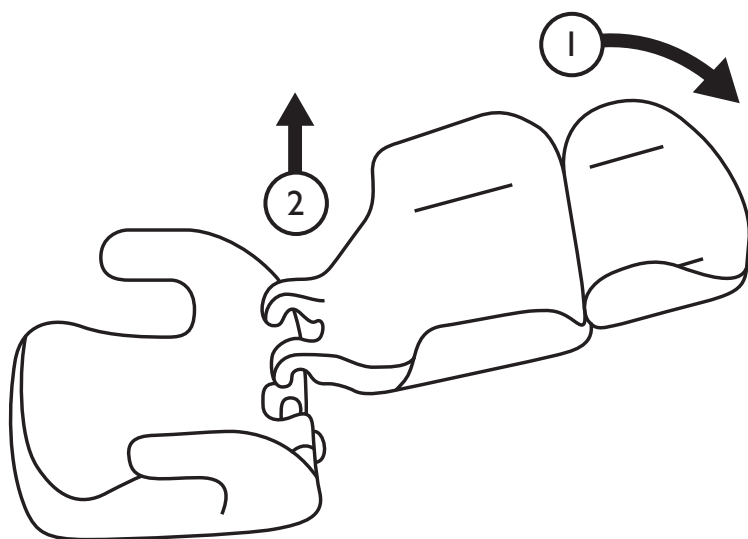

In Use

Securing Your Child

 
Place the seat in the vehicle. Secure your child into the seat using the vehicle's 3-point seat belt, ensuring that the belt passes underneath the guides, as shown below. Ensure there is no slack in the belt by gently pulling it tight.

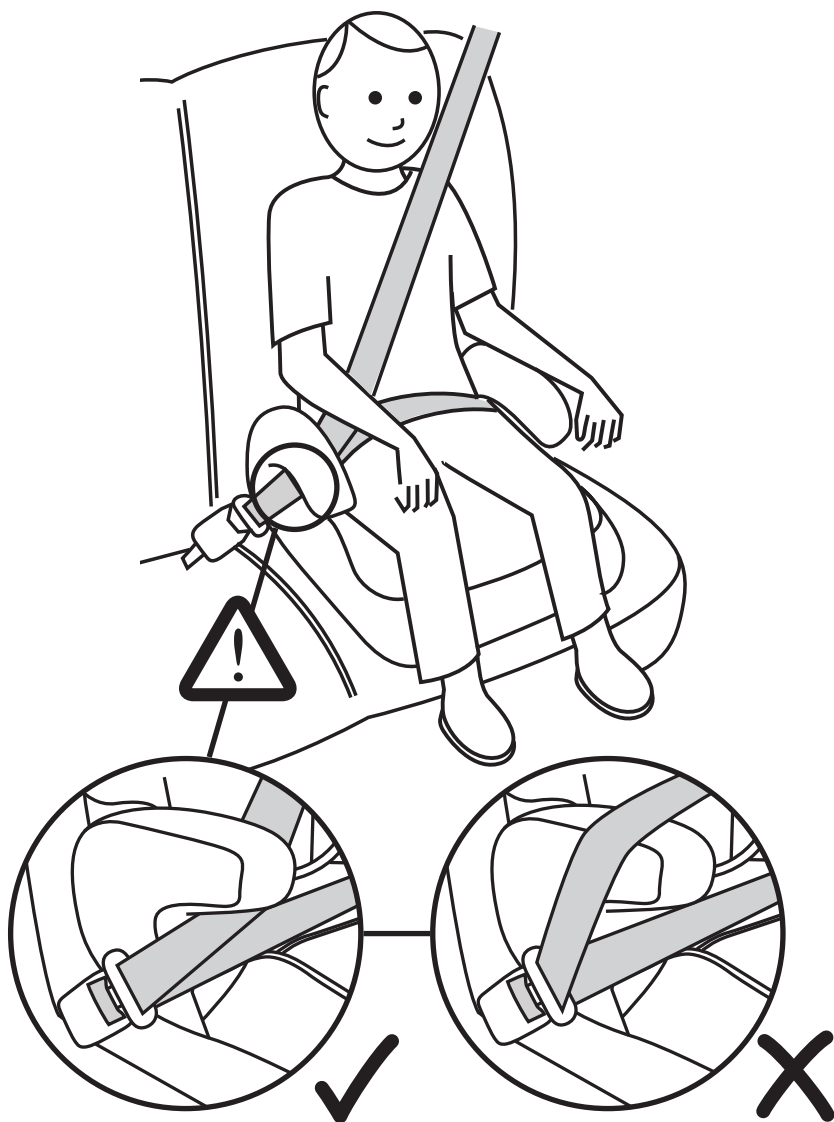




In Use

Incorrect Fitment

 It is important that your child is correctly fitted in their seat. Take care to ensure the below situation doesn't occur when securing your child.

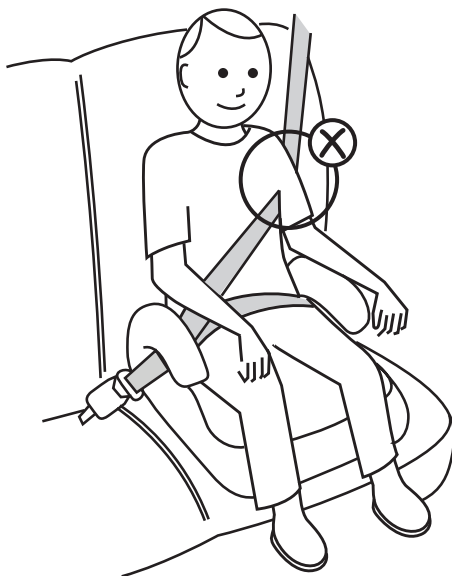

   
In some cases, the strap attached to the seat belt buckle can be too long and ride too high under the armrest, preventing the car seat from being fixed firmly. If this happens, choose another location in the car. If you have any questions relating to this issue, you should contact the manufacturer.

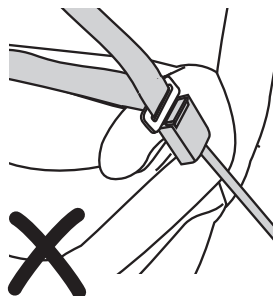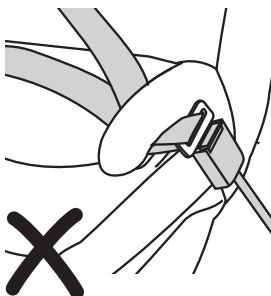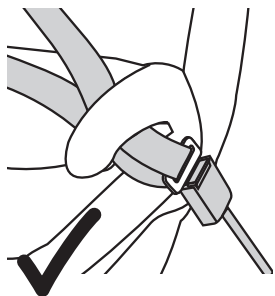

In Use

Storage of Instruction Manual

 When not in use, the instruction manual can be stored on the product as shown below.

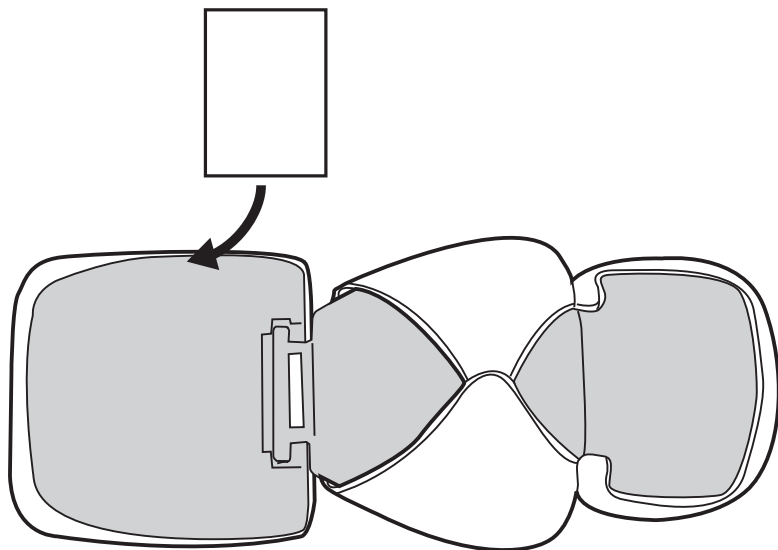

Care Instructions

Storage

Store this child seat in a safe place when not in use.

DO NOT place heavy objects on top of it.

Always store the child seat in a dry environment.

DO NOT store the child seat near a direct heat source such as a radiator.

Covers

The seat cover is easily removable and can be cleaned with a pH neutral soap and cold water.

Do not press, iron, dry clean, tumble dry or wring the covers.

Do not use solvents, caustic or abrasive cleaning materials.

Dry flat, away from direct heat and sunlight.

If the seat covers need to be replaced only use John Lewis certified parts. They are the only ones that are guaranteed to have been safety tested and designed to fit this seat.

Plastic/metal parts

Wipe clean using a mild soap and warm water.

You must not remove, dismantle or alter any part of the seat shell.

You must not oil or lubricate any part of the seat shell.

Inspection

Check your child seat regularly for wear and tear.

Seat may have a slight rattle when not in use, this is normal.

Check the adjustable parts of your child seat at intervals of about 6 months to ensure it is still fits correctly for your growing child.

Safety Information

This seat should always be used in the forward-facing position.

Please read these instructions carefully, familiarise yourself with the product before use and keep the instructions in a safe place for future reference. The use of accessories other than those supplied by the manufacturer may be unsafe.

This car seat is suitable for children weighing 15 - 36 Kg. The car seat is only suitable for use in the listed vehicles fitted with 3-point with retractor safety-belts approved to ECE Regulation No. 16.

Safety Information

WARNING: Use the adult three-point belt to restrain your child. Make sure that the lap strap of the belt goes across your child's thighs and never across their stomach. Take care to ensure that the diagonal part of the belt is kept clear from the child's neck area and is worn over the child's shoulder. Tighten the belt by pulling on the lap section of the three-point belt, so that it is tight enough (without slack). Make sure that the belts are not twisted. Prevent the car seat belt from becoming trapped by the seat reclining mechanism or in the car doors. Do not make any alterations to the seat or belts. Protect from direct sunlight as parts may become hot.

The car seat **MUST** be changed after an accident. The user must always ensure that baggage or other items/objects likely to harm the occupant of the car seat in the event of a crash are properly secured. Never place heavy objects on the rear parcel shelf as these may be thrown about during an accident.

The child restraint must not be used without the cover and this should not be replaced with any cover other than the one recommended by the manufacturer as the cover is an integral part of the restraint's performance. Never leave your child unattended in the seat.

The rigid elements and plastic parts of a child car seat must be fitted and positioned in such a way that, under conditions of normal vehicle use, they cannot become trapped under a moving seat or in the door of the vehicle. This child car seat is only effective when used in accordance with the manufacturer's instructions. Under no circumstances should you modify this car seat in any way.

NOTICE: This is a universal child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for that age group.

This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.

If in doubt, consult either the child restraint manufacturer or the retailer.

John Lewis

John Lewis, 171 Victoria Street,
London, SW1E 5NN,
United Kingdom

Customer Services,
PO Box 19615, Erskine,
PA8 6WU
Tel: 08456 049 049

..0529130