

220 STOPWATCH INSTRUCTIONS

Before you begin: remove the plastic film from the LCD display and battery insulation strip.

Features • Time/Calendar Display • Hour (12-24 Hour format) minute, second, month, date and day. • Stopwatch: 1/100 second for 30 minutes, 1 second up to 24 hours.

FUNCTION KEYS

A. MODE BUTTON:

Switch between normal time mode, stopwatch mode and alarm time mode.

B. STOP/START BUTTON:

Toggle between normal time and month/date display.

 
C. SPLIT/RESET BUTTON:

Toggle between normal time and alarm time display.

DISPLAY SYMBOLS


Normal Time Mode

1. Day of the Week
2. Hour
3. Minute
4. Second



ALARM TIME MODE

 1. Alarm Time
2. Alarm Icon




STOPWATCH MODE


Press **A** to activate this mode.

Press **C** to reset the stopwatch to "0:00" before using the stopwatch.

 
1. Accumulate elapsed time measurement: **B-B-B-B-C**

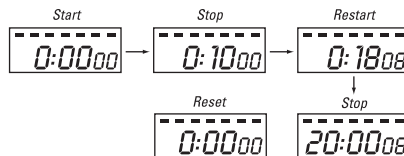

 
2. Split time measurement: **B-C-C-B-C**

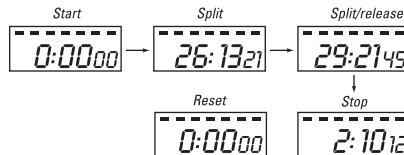

 3. Measurement between two competitors: **B-C-B-C-C**

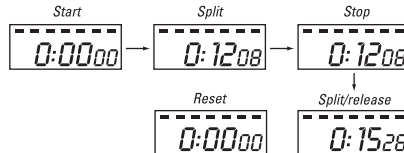

 Press **A** to return to the normal time mode.

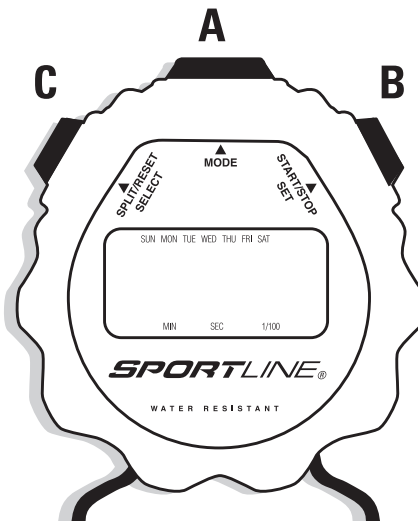


Please note: Before using your Sports Timer, remove battery insulation strip. (Insulation strip designed to preserve battery power)

TIME /CALENDAR SETTING

1. Press **A** three times to activate this mode.
2. Press **C** to select the setting items. The sequence will be: second > minute > hour > date > month > day.
3. Press **B** to increase the setting value and change 12/24-hour format when setting the hour.
4. Press **A** to return to the normal mode.

 Note: Press **B** to add one minute when the second is more than or equal to 30 and reset it to 00 when the value is less than 30.

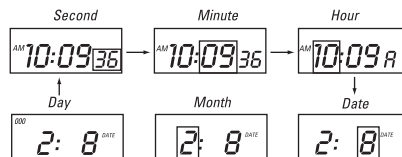

ALARM SETTING

1. Press **A** twice to activate this mode.
2. Press **B** to advance the hour value.
3. Press **C** to select the minute and Press **B** to change the minute value.
4. Press **A** to return to the normal mode.

Note 1: To turn the alarm ON/OFF, Press **B** and **C** at the same time.

Note 2: When the alarm is on, (1) it will last one minute without any button pressing then not sound again until the next day. (2) Press **B** to activate the snooze function, the alarm will start again after 5 minutes. It will sound up to one minute then not sound again until the next day. (3) Press **C** to stop the alarm.

 
HOURLY CHIME SETTING

To set the hourly chime ON/OFF, please do the following:

1. Press **C**, alarm time display, then hold **C** simultaneously.
2. Press **A** until all days of the week appear/disappear.

BATTERY REPLACEMENT

When the LCD becomes dim, replace with a new type LR44 battery.



GUARANTEE CERTIFICATE

If at any time within one (2) years from the purchase date of this product, it fails to perform properly because of defects in material or manufacturing, return it prepaid to:

E&B GIFTWARE, LLC, 585 Oak Ridge Road, Hazleton, PA 18202

Complete this Guarantee Certificate and enclose it (or a copy of it) with the product. To expedite replacement or repair, **do not** return the defective unit to the store from which it was purchased but return it directly to **SPORTLINE**.

(PLEASE PRINT CLEARLY)

NAME	TEL
ADDRESS	
CITY	
STATE	ZIP
STORE PURCHASED FROM	
DATE OF PURCHASE	PURCHASE PRICE
PROBLEM WITH PRODUCT	

REPLACEMENT

This product has been carefully designed, manufactured and packaged. If any parts are missing or damaged, please contact us at the address above and we will replace unit at no charge. (Guarantee does not cover crystal or battery.) By contacting **SPORTLINE, Inc.** rather than the company from which you purchased this product, we will be able to more rapidly service your needs.

AFTER WARRANTY

If the warranty period has expired and the unit is returned to Sportline for servicing, enclose \$7.50 for postage and handling. Send your unit insured to our Service Department listed below. If you are located outside the United States either return the unit by insured mail or to the dealer/ distributor where purchased.

SPORTLINE®
THE PROFESSIONAL'S CHOICE
E&B GIFTWARE, LLC, 585 Oak Ridge Road, Hazleton, PA 18202