

Recommended bulb (not included)

3 x 6W SES LED Golf ball

or

3 x 28W SES Eco halogen golf ball

When changing a bulb, always switch off at the mains and allow the bulb to cool before handling. Dispose of used bulbs carefully. Do not exceed the rated power stated or use a different shape bulb from that indicated on the fitting.

Specifications

Max. power: 3 x 40W

Voltage: 240V, 50Hz

IP rating: IP20

Weight: 1.2kg



Please keep these instructions for future reference.



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis do not operate instore take back, but as members of the Distributor Trade Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

We have taken great care to ensure that this product reaches you in perfect condition. However, should any parts be damaged or missing please contact the Product Helpline on (01202) 690945.

John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com

 
Made in China



User manual

Maya

Semi flush light

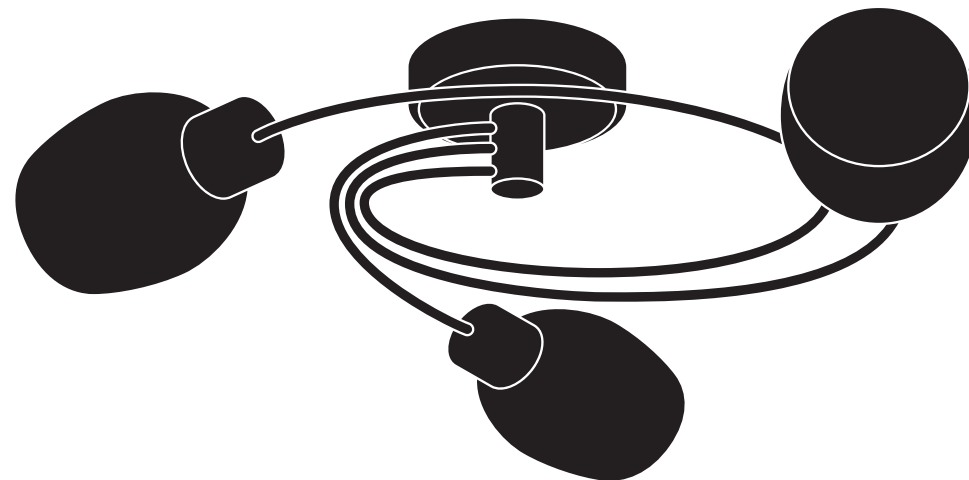

09/03/2021

Thank you for purchasing this Maya semi flush light. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

Warnings!

This is a Class 1 product and must be earthed.
Please read these instructions carefully before commencing any work.
It is recommended that this fitting is installed by a qualified electrician.
Install in accordance with the IEE Wiring regulations and the Building Regulations.
To prevent electric shock switch off at mains supply before installing or maintaining this fitting.
Ensure other persons cannot restore the electrical supply without your knowledge.
If you are in any doubt, please consult a qualified electrician.
This light fitting should be connected to a 5 amp fused circuit.
If replacing an existing fitting, make a note of the connections.
This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard, masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).
For your safety, always switch off the supply before cleaning or removing the shade.

Parts list	Image	Qty
Light fitting		1
Screws		2
Wall plugs		2
Shades		3

Assembly

Refer to assembly drawing opposite. Carefully unpack the carton, making sure all the parts are present before assembly.

Step 1

Existing ceiling roses must be completely removed before installation of a new product. Before removing the existing fitting or ceiling rose, **carefully note the position of each set of wires**.

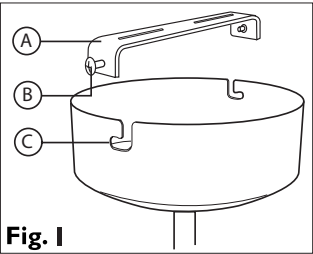 



Fig. 1

Step 2

Remove the fixing bracket (A) from the ceiling cover by removing side screws (B) and attach to the ceiling using the screws provided. Ensure there is a joist at the point of fixing to support the weight of the product. Take care to avoid damaging any concealed wiring and pipes.

Step 3

 Having identified the household wiring from your existing light fitting, connect to the connection block inside the product according to the diagram. When completed, ensure that there are no bare or loose strands of wire exposed.

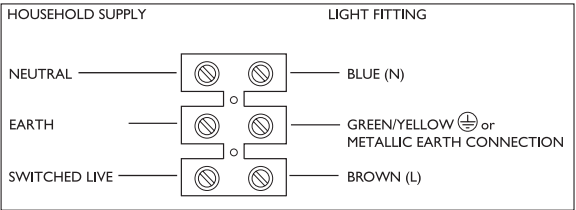


Check that

You have correctly identified the house wires.
The connections are tight.
No loose strands have been left out of the connection block.

Step 4

 This product has “L” shaped fixing slots to allow easy fixing to the ceiling strap. Locate the “L” slots (C) around the small screws (B) on the ceiling strap (A) (see Figure 1). Rotate the ceiling cover to attach the product to the strap. Tighten the screws to secure. Take care not to trap any wiring.

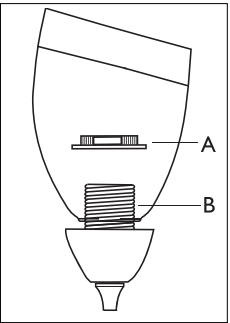

Step 5

To attach the glass shades remove shade ring (A) from threaded body (B), place glass over threaded body (B) and replace the shade ring (A), tighten with light pressure.

Step 6

Fit the recommended bulb as mentioned overleaf. Replace fuse or circuit breaker and switch on. Your light is now ready for use.

Care instructions

Finish - We recommend cleaning with a soft dry cloth.
Glass parts - Remove and wash in warm water or just use a damp cloth.
Do not use abrasive materials as these will damage the finish.