




Salsa coffee table

Stock number: 82089604

82089609

82089648

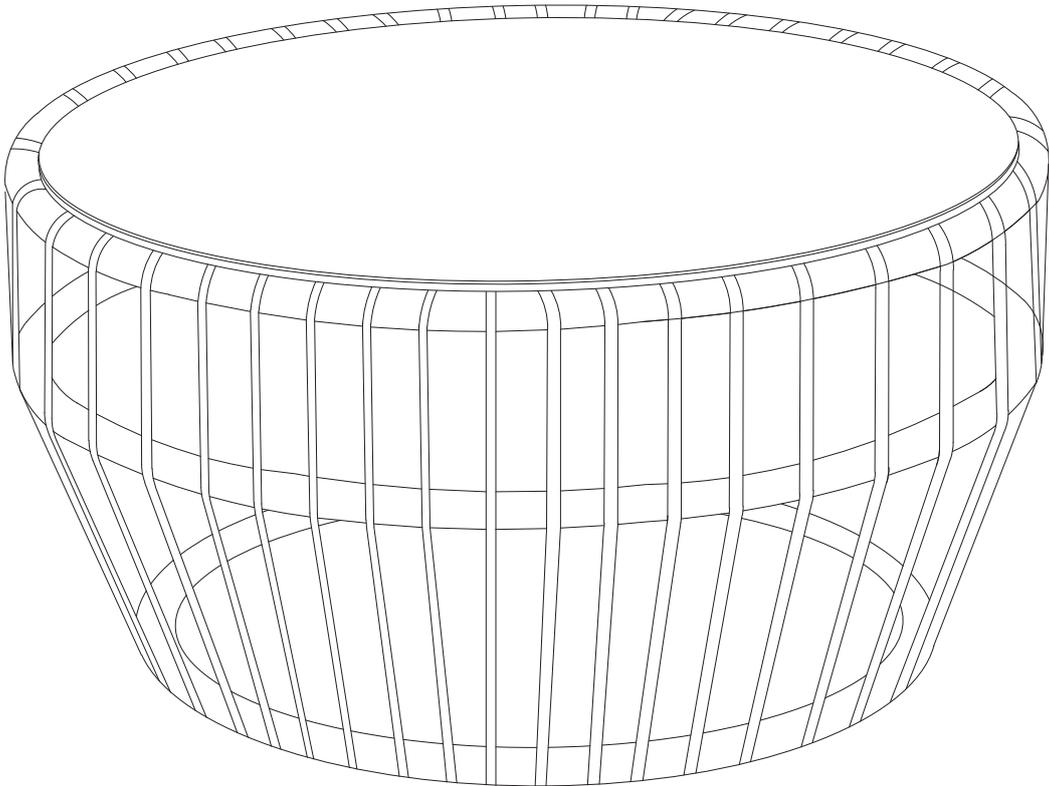

H40 W70 D70 cm

Thank you for purchasing this Salsa coffee table. This table requires no assembly. Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

At John Lewis, we are committed to making great products possible.

From our outdoor Design Team, to our Buyers, we work together to bring great design to life.

Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell.

We are all committed to designing and developing products to the highest industry standards.

We hope you are happy with your product and welcome any feedback or comments you may have.

The John Lewis Team

Care and maintenance

Do not use a wire brush when removing dirt from this item as it may damage the paint leaving the surface open to corrosion.

To extend the product life and appearance it is advisable to store the furniture in a cool dry place over winter. Ensure the furniture is clean and completely dry before putting into storage.

Do NOT enclose the product in a plastic or other non-permeable material as this creates moisture.

Safety instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

This furniture has been designed for domestic use only.

Do NOT use the table as a ladder.

If the glass is chipped or broken stop using the product and consult the manufacturer or supplier.

WARNING:

a) Do not place very hot or very cold items directly on glass surfaces.

b) Do not sit or stand on glass surfaces.

c) Do not strike the glass with hard or pointed items, or use the glass as a chopping surface.

d) Do not use washing powders or any other substances containing abrasives, as these may scratch the glass.

Handle with care! A damaged edge or scratched surface can in rare cases cause the glass to fail unexpectedly into many small pieces. Glass is most vulnerable when struck from the side.

PLEASE RETAIN THIS INFORMATION LEAFLET FOR FUTURE REFERENCE.