

Product information

- Indoor use only
- Dimmable - When used with dimmable bulbs
- Clean the fitting with a soft dry cloth. Do not use abrasive chemical cleaners as this will damage the finish

Aftercare and Troubleshooting

You've switched on the light, but it's not working:

1. Check your power supply is switched on
2. Turn off the light and check that the bulb is inserted correctly
3. Check the bulb is still in working order

If there are technical issues with this product that you can't solve, please contact your nearest John Lewis & Partners shop or call Technical Support on 03301 230106.

Specification

Max power: 2 x 10W
Recommended bulb:
2 x 10W E27 GLS LED bulb for maximum brightness.
Lower wattages can be used.
Rated input: 220 –240V, 50Hz
Bulbs not included
IP rating: 20
Weight: 1.12kg

2-year guarantee

At John Lewis & Partners we test every light to high quality standards. That means we can offer you a 2-year guarantee.

Recycling

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

John Lewis plc
SW1V 2QQ
johnlewis.com

Made in China



11/12/2023

Please retain these instructions for future reference.

JOHN LEWIS

& PARTNERS

CARNIVAL CEILING PENDANT USER GUIDE



Product Code:
41351004


Getting started

Thank you for purchasing this John Lewis & Partners product. For your safety, and to make sure everything is working properly, please read the instructions carefully before use.

Warnings

This is a Class 1 product and must be earthed. It is recommended that this fitting is installed by a qualified electrician. Install in accordance with the IEE Wiring regulations and the Building Regulations. To prevent electrocution switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge. If you are in any doubt, please consult a qualified electrician. This light fitting should be connected to a 5 amp fused circuit. If replacing an existing fitting, make a note of the connections. Always use the correct type and wattage bulb. Never exceed the wattage stated. Dispose of used bulbs carefully. This product is suitable for indoor use only on surfaces with normal flammability e.g. wood, plasterboard, masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles). For your safety, always switch off the supply and allow the fitting to cool down before changing lightbulbs, cleaning or removing shades. This product has a very low drop, when installed the light must not be in reach of a child. Do not install above bunk beds. This is not a toy.

Parts list

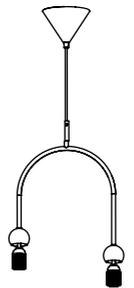Description	Image	Quantity
Light fitting		x 1
Shades		x 2
Shade fixing tubes		x 2
Fixing bracket		x 1
Hex key		x 1

Product assembly

Step 1

Carefully unpack the carton, making sure all the parts are present before assembly. Before removing the existing fitting, carefully note the position of each set of wires. Ensure there is a joist at the point of fixing to support the weight of the product.


Step 2

Using the fixing bracket (A) as a template, mark the position of the mounting holes. Taking care to avoid damaging concealed wires and pipes, drill holes and fit the appropriate wall plugs (B). Fix the fixing bracket to the ceiling using the appropriate screws (C).

Step 3


The hanging height of this product can be adjusted. Using the hex key provided, loosen the grub screw (D) under the ceiling cup. Pull the ceiling cup down the cable and loosen the grub screw (E) at the top of the cable.

Pull the cable through the cord grip (F) until the desired height is achieved. Re tighten the grub screw (E).

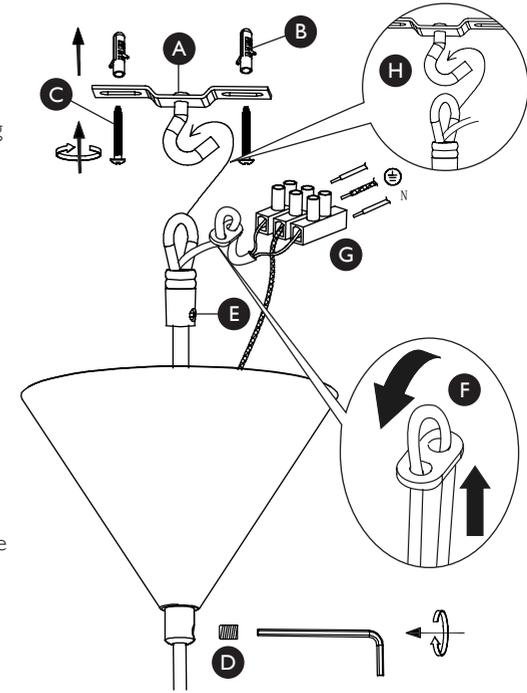

Step 4

Having identified the household wiring from your existing light fitting, connect to the connection block inside the product in the following way: (G) Check that: You have correctly identified the house wires. The connections are tight. No loose strands have been left out of the connection block.

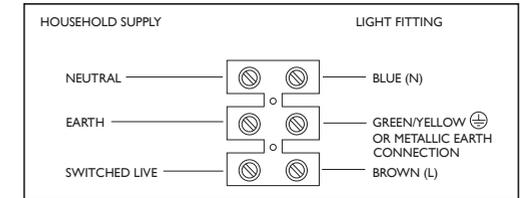

Step 5

Attach the product to the fixing bracket (A) by fitting the loop at the top of the cable onto the hook on the fixing bracket as shown above (H).

Move the ceiling cover back up the cable and re tighten grub screw (D).

Step 6

To fit the shades (I), first remove the shade fixing tubes (J) from the threaded lampholders. Place the shades over the lampholders and refit the shade fixing tubes. Secure in place.

Step 7

Fit the recommended bulbs (K). Your light is now ready for use.

