

1. INSTRUCTIONS FOR USE	52
2. SAFETY PRECAUTIONS	54
3. ENVIRONMENTAL CARE.....	56
4. GET TO KNOW YOUR APPLIANCE	57
5. AVAILABLE ACCESSORIES	60
6. USING THE HOB.....	64
7. USING THE OVEN	70
8. OVEN FUNCTIONS	76
9. CLEANING AND MAINTENANCE	86
10. EXTRAORDINARY MAINTENANCE	92
11. INSTALLING THE APPLIANCE	94



INSTRUCTIONS FOR THE USER: these contain user advice, the description of the controls and the correct procedures for cleaning and maintenance of the appliance.



INSTRUCTIONS FOR THE INSTALLER: these are intended for the qualified technician who must install the appliance, set it functioning and carry out an inspection test.



Further information about the products can be found at www.smeg.com



1. INSTRUCTIONS FOR USE



This manual is an integral part of the appliance. It must be kept in its entirety and in an accessible place for the whole working life of the appliance. We recommend reading this manual and all information it contains carefully before using the appliance. Installation must be carried out by qualified personnel in accordance with the standards in force. This appliance is intended for domestic use and conforms to the EC directives currently in force. The appliance has been built to carry out the following functions: **cooking and heating up food**; all other uses are considered unsuitable.



These instructions are valid only for the destination countries whose identifying symbols are included on the cover of this manual.



Never obstruct the openings and slots provided for ventilation and heat dispersal; this may cause malfunctions.



Do not use this appliance for heating rooms.



This appliance is marked according to European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

This directive defines the standards for the collection and recycling of waste electrical and electronic equipment applicable throughout the European union.



The identification plate with technical data, serial number and brand name is located in an exposed position either in the drawer (where present) or on the back of the appliance. A copy of the identification plate is included in the booklet. It should be applied to the appropriate space on the back of the cover. Do not remove this plate for any reason.



Before the appliance is put into operation, all labels and protective films applied on external surfaces must be removed.



Do not use metallic sponges or sharp scrapers as they will damage the surface. Use normal non-abrasive products and a wooden or plastic tool if necessary. Rinse thoroughly and dry using a soft cloth. Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.



Do not use plastic kitchenware or containers. The high temperatures inside the oven could melt the plastic, damaging the appliance.



Always check that the control knobs are in the “zero” (off) position when you finish using the appliance.



General instructions

GB-IE



Do not use sealed tins or containers in the appliance. Overpressure may occur inside the containers during cooking, creating a danger of explosion.



Do not cover the bottom of the oven with aluminium or tin foil sheets during cooking and do not place pans or trays on it to avoid damage to the enamelled surface.



Never place saucepans with bases which are not perfectly flat and smooth on the hob. Unstable cookware can lead to scalding.



Do not rest any weight or sit on the open door of the appliance. Excessive weight may jeopardise its stability.



The appliance becomes very hot during use. Suitable heat-proof gloves should be worn for all operations.



Do not use the hob if pyrolysis (where present) is taking place inside the oven.



If you intend to go away for a prolonged period of time, close the mains gas tap or the gas cylinder tap.



Take care that no objects are stuck in the door of the oven.



Do not open the storage compartment (where present) when the oven is on and still hot. The temperatures inside it may be very high.



If the surfaces are still very hot during cooking, do not pour water directly onto the trays. The steam could cause severe burns and damage enamelled surfaces.



All cooking operations must take place with the door closed. The dissipation of heat may cause hazards.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spare parts.



2. SAFETY PRECAUTIONS

Consult the installation instructions for safety standards on electrical or gas appliances and for ventilation functions. In your interests and for your safety the law requires that the installation and servicing of all electrical and gas appliances be carried out by qualified personnel in accordance with the standards in force. Our approved installers guarantee a satisfactory job.

Gas or electrical appliances must always be uninstalled by suitably skilled people.



Before connecting the appliance to the power grid, check the data on the plate against the data for the grid itself.



If the appliance is installed on a raised platform, secure it using suitable fastening systems.



Before carrying out installation/maintenance work, make sure that the appliance is disconnected from the power grid.



If cooking appliances are installed in motor vehicles (for example, camper vans, caravans etc.), they must only be used when the vehicle is stationary.



Install the appliance so that when opening the drawers or doors of units positioned at the level of the hob there is no possibility of making contact with pans positioned on top of it.



The plug to be connected to the power supply cable and its socket must be of the same type and conform to the standards in force. The socket must be accessible after the appliance has been installed.

Never disconnect the plug by pulling on the cable.



If the power supply cable is damaged, contact the technical assistance centre immediately and they will replace it.



The appliance must be connected to earth in compliance with electrical system safety standards.



During use the appliance and its accessible parts become very hot. Take care never to touch the heating elements. Keep children younger than 8 away from the appliance, unless under continuous supervision.



If a crack forms on the the glass ceramic cooking surface, turn off the appliance immediately and contact the technical assistance centre.



Never put inflammable objects in the oven: they could be accidentally ignited and cause fires.



General instructions

GB-IE



The appliance is intended for use by adults. Do not allow children to go near it or play with it.



This appliance may be used by children from the age of 8 and by people of reduced physical and mental ability or lacking in experience and knowledge, provided they are supervised or instructed on the safe use of the appliance and if they understand the associated risks. Do not allow children to play with the appliance. Do not allow unsupervised children to perform cleaning or maintenance operations.



Never attempt to repair the appliance. All repairs must be carried out by an authorised technician or at an authorised service centre. The improper use of tools can cause hazards.



This appliance must not be controlled using an external timer or remote control system.



Be aware of how rapidly the cooking zones heat up. Do not place empty saucepans on the heat. Danger of overheating.



Fats and oils can catch fire if they overheat. You are therefore recommended not to leave the appliance unattended while preparing foods containing oils or fats. If fats or oils catch fire, never put water on them. Place the lid on the saucepan and turn off the cooking zone.



Take care when using additional electrical appliances in the kitchen (e.g. blender, toaster etc.). Connecting cables must not come into contact with hot cooking zones.



Do not use steam jets for cleaning the appliance.
The steam could reach the electronics, damaging them and causing short-circuits.



Do not spray any spray products near the household appliance while it is in operation. Do not use spray products while the appliance is still hot. The gases contained in spray cans may catch fire.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spare parts.



3. ENVIRONMENTAL CARE

3.1 Our environmental care



Pursuant to Directives 2002/95/EC, 2002/96/EC and 2003/108/EC relating to the reduction of the use of hazardous substances in electrical and electronic appliances, as well as to the disposal of refuse, the crossed out bin symbol on the appliance indicates that at the end of the useful life of the product, it must be collected separately from other refuse. Therefore, the user must consign the product that has reached the end of its working life to the appropriate selective collection centres for electrical and electronic refuse, or deliver it back to the retailer when purchasing an equivalent product, on a one for one basis. Adequate selective collection for the subsequent forwarding of the decommissioned product to recycling, treatment and ecologically compatible disposal contributes to avoiding possible negative effects on the environment and on health and promotes the recycling of the materials of which the appliance consists. Illicit disposal of the product by the user will lead to the application of administrative sanctions.

The product does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

3.2 Your environmental care

Our product's packaging is made of non-polluting materials, therefore compatible with the environment and recyclable. Please help by disposing of the packaging correctly. You can obtain the addresses of collection, recycling and disposal centres from your retailer or from the competent local organisations.



Do not discard the packaging or any part of it, or leave it unattended. It can constitute a suffocation hazard for children, especially the plastic bags.


Your old appliance also needs to be disposed of correctly.

Important: hand over your appliance to the local agency authorised for the collection of electrical appliances no longer in use. Correct disposal enables intelligent recovery of valuable materials.

Before disposing of your appliance it is important to remove doors and leave shelves in the same position as for use, to ensure that children cannot accidentally become trapped inside during play. It is also necessary to cut the connecting cable to the power grid, removing it along with the plug.



4. GET TO KNOW YOUR APPLIANCE

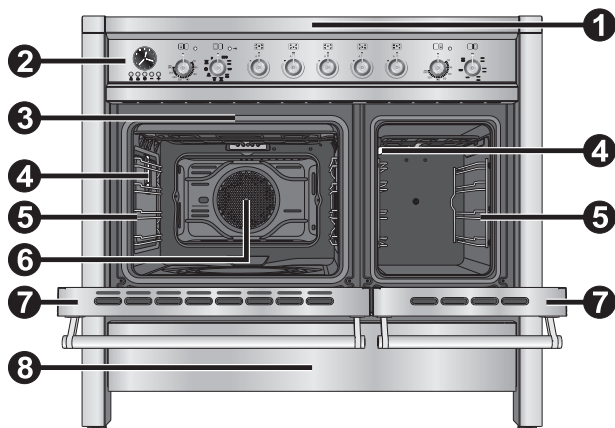

1 Cooking hob

2 Control panel

3 Oven seal

4 Oven light

5 Rack/tray support frames


6 Fan

7 Door

8 Storage compartment



4.1 Description of the controls on the front panel

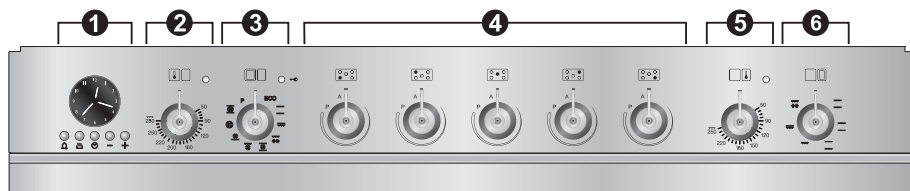

4.1.1 Programming clock

- 1 The programming clock allows to display the current time or to set a timer or a programmed cooking operation.

4.1.2 Temperature selection knob

- 2 The cooking temperature is selected by turning the knob clockwise to the required setting, between the maximum and the minimum settings.
When the indicator light is flashing, it indicates that the oven is heating up to the temperature set using the thermostat knob. Once the oven has reached the selected temperature, the light stops flashing and remains lit steadily until the oven is switched off. Moreover, the light switches on when the automatic cleaning cycle (pyrolysis) starts and remains lit until the cycle is complete.

4.1.3 Function selection knob

- 3 The oven's various functions are suitable for different cooking modes. After selecting the required function, set the cooking temperature using the thermostat knob. For more information on cooking functions, see: "8. OVEN FUNCTIONS".
The door locking device indicator light (🔒) only comes on when the automatic cleaning cycle is activated.

4.1.4 Cooking zone control knob

- 4 Using these knobs you can control the cooking zones of the induction hob. The hot plate controlled is indicated above every knob. Turn the knob to the right to adjust the operating power of the hot plate that goes from a minimum of 1 to a maximum of 9. The working power is indicated on a display positioned on the hob.



4.1.5 Auxiliary oven temperature knob

5

This knob allows to select the cooking temperature for the auxiliary oven. To set the knob on "O" turn it always anti-clockwise.

The indicator light comes on to indicate that the oven is heating up.

The indicator light goes out when the set temperature is reached. It flashes at regular intervals to indicate that the temperature inside the oven is being kept constantly at the set level.

4.1.6 Auxiliary oven function knob


6

This knob allows to select the cooking function for the auxiliary oven. The oven's various functions are suitable for different cooking modes. After selecting the required function, set the cooking temperature using the thermostat knob. For more information on cooking functions, see: "8. OVEN FUNCTIONS".



5. AVAILABLE ACCESSORIES

NOTE: Some models are not provided with all accessories.

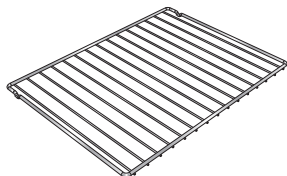


Rack: useful for holding cooking containers.




Tray rack: to be placed over the top of the oven tray; for cooking foods which may drip.





Oven tray: useful for collecting fat from foods placed on the rack above.

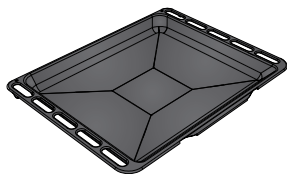


Deep oven tray: useful for baking cakes, pizza and oven-baked desserts.

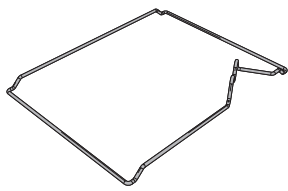

Rotisserie frame: supports the rotisserie rod.

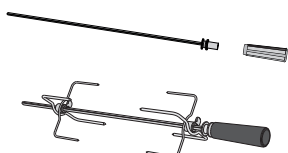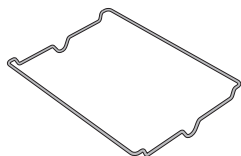

Rotisserie rod: useful for cooking chicken and all foods which require uniform cooking over their entire surface.

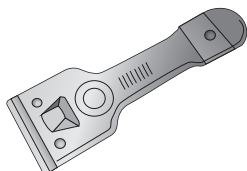

Scraper: useful for cleaning the glass ceramic hob.
Do not use on other surfaces.



- The oven accessories intended to come into contact with food are made of materials that comply with the provisions of regulation 1935/2004/EC.



- Accessories available on request:
Original supplied and optional accessories may be ordered from any Authorised Assistance Centre.
- Use only original accessories supplied by the manufacturer.




5.1 Using the rack

The racks and trays are equipped with a mechanical safety lock which prevents them from being taken out accidentally. To insert the rack or tray correctly, check that the lock is facing downwards (as shown in the figure).

To remove the rack or tray, lift the front slightly.

The mechanical lock (or the extension piece where present) must always face the back of the oven.

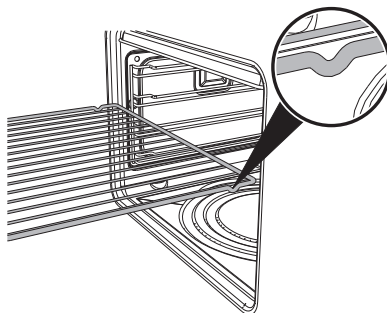

Gently insert racks and trays into the oven until they come to a stop.



In models with guides, clean the trays before using them for the first time. Cleaning will remove any manufacturing residues, which may otherwise scratch the sides of the oven cavity when trays are being inserted.

5.2 Using the support rack

The support rack is inserted into the tray (as shown in the figure).

Using this, foods can be cooked and the fat can be collected separately from the food which is being cooked.






5.3 Using the rotisserie rod

When cooking with the rotisserie, position the rod frame on the second runner (see 7.2 Oven runners). Once the rod frame is inserted, the shaped part must sit facing outwards (as shown in the figure).


Then prepare the rotisserie rod with the food, using the clip forks provided.

So that you can handle the rod with the food on it readily, screw on the handle provided.

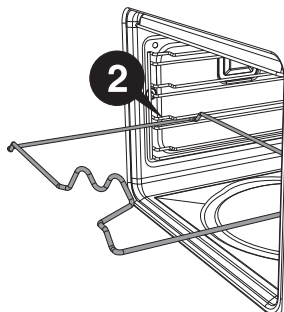


Having prepared the rotisserie rod with the food, position it on the guide frame as shown in the figure.

Insert the rod into the hole (detail B) so that it connects with the rotisserie motor. Make sure that the pin is placed correctly on the guide frame (detail A).

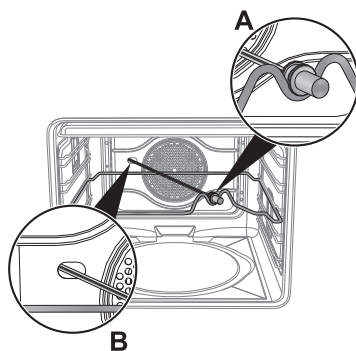

Main oven

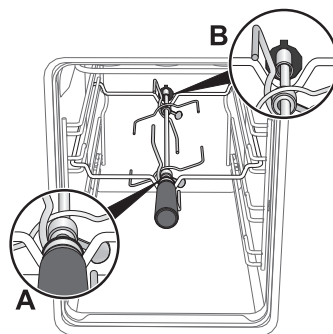

Auxiliary oven



6. USING THE HOB

6.1 General warnings and advice



On first connection to the electrical mains, an operating check will be carried out automatically and all indicator lights will come on for a few seconds.



After use, turn off the hot plates used returning the appropriate knob to the "O" position. Never rely solely on the cookware detector.



Never place metal objects, such as dishes or cutlery, on the induction hob surface as they may overheat: Danger of burns.



Take care not to spill sugar or sweet mixtures onto the hob when hot. Never place materials or substances which may melt (plastic or aluminium foil) on the hob. If this occurs, promptly switch off the cooking zones and remove the molten material with the scraper provided while the hot plate is still lukewarm to prevent the surface from being damaged.

The hob is equipped with an induction generator for each cooking zone. Each generator located under the glass ceramic cooking surface creates an electromagnetic field which induces a thermal current in the base of the saucepan. This means the heat is no longer transmitted from the hob to the pan but created directly inside the pan by the inductive current.

6.2 Layout of the cooking zones



Zone	Outer diameter (mm)	Max. absorbed power (W) *	Absorbed power in booster function (W) *
1	145	1400	2200
2	180	1850	3000
3	270	2600	3700
4	210	2300	3700

* power levels are indicative and can vary according to the pan used or the settings made.



To prevent damage to the appliance or adjacent units, all pans or griddles must be placed inside the perimeter of the hob.

6.3 Cookware suitable for use in induction cooking

On first connection to the electrical mains, an operating check will be carried out automatically and all indicator lights will come on for a few seconds.




Use only cookware with bases suitable for induction hot plates.


Suitable cookware:

- Enamelled steel cookware with thick bases.
- Cast iron cookware with an enamelled base.
- Cookware in multilayer stainless steel, ferritic stainless steel and aluminium with a special base.

Unsuitable cookware:

- Copper, stainless steel, aluminium, fireproof glass, wood, ceramic and terracotta cookware.

To see whether the pan is suitable, bring a magnet close to the bottom: if it is attracted, the pan is suitable for induction cooking. If you do not have a magnet, you can put a small amount of water in the pan, place it on a cooking zone and start the hot plate. If the symbol  appears on the display, it means the pan is not suitable.

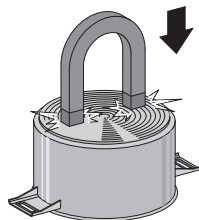


Use only cookware with a perfectly flat bottom. Using a cookware with an irregular bottom could jeopardise the efficiency of the heating system so that cookware is not detected on the hot plate.



6.4 Limiting the cooking duration

The hob has an automatic device which limits the duration of use.

If the cooking zone settings are not changed, the maximum duration of operation of each zone depends on the power level selected.

When the device for limiting the duration of use is activated, the cooking zone turns off, a short alert is sounded and if the zone is hot the symbol  will show on the display.

6.5 Protection from hob overheating

If the hob is used on full power for a long period, the electronics will have trouble cooling down if the room temperature is high. To avoid excessively high temperatures forming in the electronics, the power to the cooking zone is managed automatically.

6.6 Advice on energy-saving

- The diameter of the base of the saucepan must correspond to the diameter of the cooking zone.
- When buying a saucepan, check whether the diameter indicated is that of the base or the top of the container, as the top is almost always larger than the base.
- When preparing dishes with long cooking times, you can save time and energy by using a pressure cooker, which also makes it possible to preserve the vitamins in the food.
- Make sure that the pressure cooker contains enough liquid as, if there is not enough and it overheats, this may cause damage to both the pressure cooker and the cooking zone.
- If possible, always cover saucepans with a suitable lid.
- Choose a saucepan suitable for the quantity of food to be cooked. A large, half-empty saucepan leads to a waste of energy.




6.7 Power levels


The power in the cooking zone can be adjusted to various levels. The table shows the levels suitable for various types of cooking.

Power level	Suitable for
0	OFF position
U	Dishwarming
1 - 2	Cooking small amounts of food (minimum power)
3 - 4	Cooking
5 - 6	Cooking large quantities of food, roasting larger portions
7 - 8	Roasting, slow frying with flour
9	Roasting
P*	Roasting / browning, cooking (maximum power)

* See Booster function.

6.8 Cookware recognition

If there is no saucepan on a cooking zone or if the saucepan is too small, no energy will be transmitted and the symbol  will appear on the display.

If there is a suitable saucepan on the cooking zone, the recognition system notices it and turns on the hob to the power level set using the knob. Energy transmission is also interrupted when the saucepan is removed from the cooking zone (the symbol  will appear on the display). If the cookware recognition function is activated in spite of the saucepan or frying pan on the cooking zone being smaller than the zone itself, only the necessary energy will be transmitted.

Cookware recognition limits: The minimum diameter of the saucepan base is indicated by a circle inside the cooking zone. Pans with smaller diameters risk not being detected and therefore not activating the inductor.



6.9 Residual heat

If the cooking zone is still hot after being switched off, the symbol **H** will appear on the display. The symbol clears once the temperature drops below 60°C.



Supervise children carefully as they cannot readily see the residual heat indicator. The cooking zones remain hot for a certain period of time even after they have been turned off.

6.10 Heating accelerator

Each cooking zone is equipped with a heating accelerator that allows to supply the maximum power for a time that is proportional to the selected power.

Turn the knob to the left to the “A” position and then release; the symbol **A** appears on the display. Select the required heating power (1..8) within 3 seconds. The selected power and symbol **A** will flash alternately on the display.

The power level can be increased at any moment, the “maximum power” period will automatically be modified.



If the power is reduced, turning the knob anti-clockwise, the heating accelerator will automatically be disabled.



Up to four cooking zones can be activated simultaneously in the heating accelerator function (see 6.12 Power management). If a fifth zone is activated, the system will automatically deactivate one of the previously activated zones.

6.11 Booster function

The booster function allows to activate the cooking zone at maximum power as long as 10 minutes. It can be used to bring a large quantity of water to a boil rapidly or to broil meat.

Turn the knob clockwise to the “P” position for two seconds and then release; the symbol **P** will appear on the display. After 10 minutes the booster function will automatically be disabled and cooking will continue at power level “9”.




The booster function has priority over the heating accelerator function.



6.12 Power management


The hob is fitted with a power management module that optimises/limits consumption. If the overall set power levels surpass the maximum limits permitted, the electronic circuit board will automatically manage the power supplied by the hot plates.

The module will try to maintain the maximum possible power levels supplied and the levels imposed by the automatic management will appear on the display. The flashing of a power level indicates that it will automatically be limited to a new level selected by the power management module.

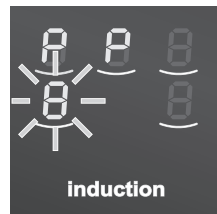


Priority is given to the last zone set.

6.13 Control lock

The control lock is a device that protects the appliance from accidental or inappropriate use. With all cooking zones turned off, simultaneously turn the first two knobs to the left (position "A"). Keep them turned until the symbols  appear on the display, then release the knobs.

In order to remove the control lock repeat the same operations previously described.



If the knobs have been kept rotated in the "A" position for more than 30 seconds a fault message  will appear on the display.



After a prolonged period of interruption to the power supply, the control lock will be deactivated. If this is the case, turn it back on as described above.



7. USING THE OVEN

7.1 Before using the appliance




- Remove any labels (apart from the technical data plate) from trays, dripping pans and the cooking compartment.
- Remove any protective film from the outside or inside of the appliance, including from accessories such as trays, dripping pans, the pizza plate or the base cover.
- Before using the appliance for the first time, remove all accessories from the oven compartment and wash them as indicated in "9. CLEANING AND MAINTENANCE".



Heat the empty appliance to the maximum temperature in order to remove any manufacturing residues which could affect the food with unpleasant odours.

7.2 Oven runners

The oven features 4 runners for positioning trays and racks at different heights. The insertion heights are indicated from the bottom upwards (see figure).

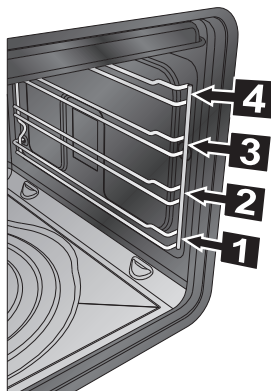

7.3 Cooling system

The appliance is equipped with a cooling system which comes into operation as soon as a cooking function starts. The fan causes a steady outflow of air that exits from the rear of the appliance and which may continue for a brief period of time even after the appliance has been turned off.

7.4 Internal oven lights

The oven lights switch on by selecting any function.



7.5 Storage compartment

The storage compartment is in the bottom of the cooker, underneath the ovens. To open it, pull on the bottom of the door.

It provides storage space for the appliance's metal accessories and must not be used to store flammable materials, cloths, paper etc.



Do not open the storage compartment when the oven is on and still hot. The temperatures inside it may be very high.

7.6 General warnings and advice for use




All cooking operations must be carried out with the door closed. The dissipation of heat may cause hazards.




During cooking, do not cover the bottom of the oven with aluminium or tin foil and do not place pans or oven trays on it as this may damage the enamel coating. If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven.



For the best cooking results, we recommend placing cookware in the centre of the rack.

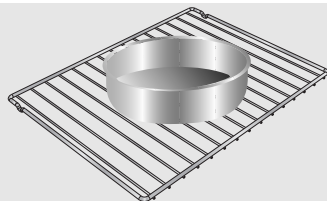

To prevent any steam in the oven from causing problems, open the door in two stages: keep it half open (5 cm approx.) for 4-5 seconds and then fully open. If you need to access the food, always leave the door open for as short a time as possible to prevent the temperature in the oven from falling and ruining the food.

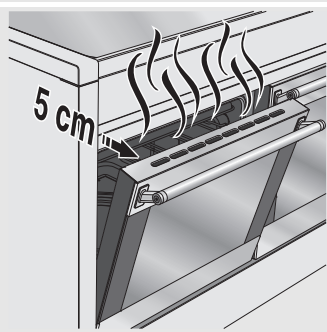




To prevent excessive amounts of condensation from forming on the internal glass, hot food should not be left inside the oven for too long after cooking.

While cooking desserts or vegetables, excessive condensation may form on the glass. In order to avoid this, open the door very carefully a couple of times while cooking.



Heat the empty appliance to the maximum temperature in order to remove any manufacturing residues which could affect the food with unpleasant odours.

7.7 Programming clock (main oven)

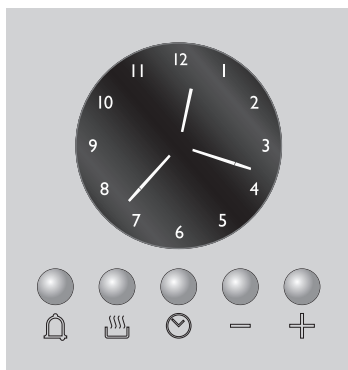

FUNCTION KEY LIST



TIMER KEY



END OF COOKING KEY



CLOCK ADJUSTMENT AND RESET



VALUE DECREASE KEY



VALUE INCREASE KEY



The programmer only controls the main oven.







The buzzer that sounds at the end of each programming will be made up of 10 buzzes repeated 3 times at intervals of about 1 minute. It can be stopped at any time by pressing any key.



7.8 Analogue clock operation





7.8.1 Setting the time



When the oven is used for the first time, or after an interruption in the electricity supply, the display flashes at regular intervals. Press the key  to stop the display flashing. Press key  again for 2 seconds; the current time can now be set. Press the value modification keys  or  to increase or decrease the setting by one minute for each pressure.

Press either of the value modification keys to display the current time. Five seconds after last pressing the key, the clock will start from the set time.

7.8.2 Timer

This function only activates the buzzer, without stopping cooking.

- Press  and the display will light up as shown in figure 1;
- Within 5 seconds press key  or  to set the timer. Each time a key is pressed, an outer segment representing 1 minute of cooking is lit or switched off (figure 2 shows 1 hour and 10 minutes).
- Five seconds after last pressing the key the countdown begins, at the end of which the buzzer activates.
- The current time can be viewed during the countdown by pressing key  once, press the key again to return to the timer display.

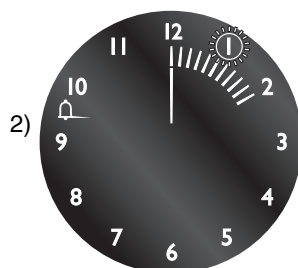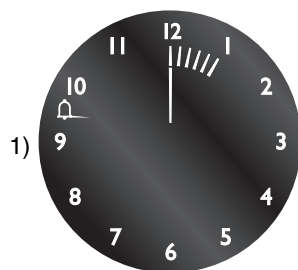

At the end of the countdown, the oven must be switched off manually by turning the thermostat and function selector knob to 0.





It is not possible to set a cooking time of more than 4 hours.



7.8.3 Programming

Cooking duration: the 2nd key can be pressed to set the cooking duration. Before it can be set, the thermostat knob must be turned to the required cooking temperature and the function selector knob to any setting. To set the cooking duration, proceed as follows:

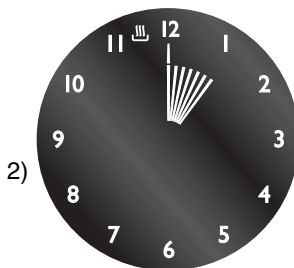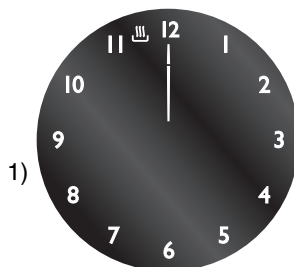


- Press key ; the pointer will go to position 12 and the adjacent symbol will flash (Fig. 1).
- Within 5 seconds press key or to set the cooking duration: each pressure on adds 1 minute to the cooking duration, and every 12 minutes a new inside segment will light up (figure 2 shows a cooking duration of 1 hour);
- Once the required duration is obtained, cooking will start about 5 seconds after the last pressure on or .
- The display will show the current time, represented by the constantly illuminated segments, and the minutes left to the end of the cooking time, represented by the flashing segments (each flashing segment means 12 minutes of cooking time left).
- At the end of the cooking time the timer will switch the oven heating elements off, the beeps will start to sound and the numbers on the dial will flash.
- The duration can also be reset by deleting the program selected: Press the central key for 2 seconds to cancel the set duration and the oven will have to be manually switched off if the cooking operation is in progress.



Warning: it is not possible to set cooking durations of more than 12 hours.





Cooking start: as well as setting a cooking duration, the cooking start time can also be set (with a maximum delay of 12 hours in relation to the current time). To set the cooking start/end time, proceed as follows:

- Set the cooking duration as described in the previous point.
- Within 5 seconds of last pressing key **+** or **-**, press key  again to set the cooking end time. Symbol  will flash on the display together with the current time, with internal segments illuminated to show the end of cooking time. Use keys **+** and **-** to set the cooking end time.
- 5 seconds after the last key is pressed, the display will show the current time and the cooking start and end times, which will be represented by the illuminated inside segments. The display segments will be constantly illuminated as long as the current time is not the same as the cooking start time; as soon as the current time reaches the set starting time, all the inside segments will start to flash, indicating that the oven has started cooking.
- At the end of the cooking time the timer will switch the oven heating elements off, the beeps will start to sound and the numbers on the dial will flash.
- To delete the entire set program, hold down the central key  for 2 seconds; if cooking has already started, the oven will have to be switched off manually.
- Here we can see a programming example: the current time is 7:06 and cooking is programmed to start at 8.00 and end at 9.00.
- At 8 o'clock the inside segments between 8 and 9 will start to flash, while the hours hand will remain still.



Warning: for the oven to start cooking operations after the programming procedures just described, the thermostat and functions switch knob must be correctly set on the required temperature and function.

7.8.4 Display brightness reduction

 
To reduce energy consumption in stand-by, briefly press key  to reduce the display brightness. To restore the normal brightness, press  again.



8. OVEN FUNCTIONS




STATIC: As the heat comes from above and below at the same time, this system is particularly suitable for certain types of food. Traditional cooking, also known as static or thermal radiation cooking, is suitable for cooking just one dish at a time. Perfect for all types of roasts, bread and cakes and in any case particularly suitable for fatty meats such as goose and duck.



FAN-ASSISTED STATIC: The operation of the fan, combined with traditional cooking, ensures uniform cooking even with complex recipes. Perfect for biscuits and cakes, even when simultaneously cooked on several levels.



 GRILL: Using only the heat released from the central element, this function allows to grill small portions of meat and fish for making kebabs, toasted sandwiches and any types of grilled vegetable side dishes.




FAN-ASSISTED GRILL: The air produced by the fan softens the strong heatwave generated by the grill, giving perfect grilling results even with very thick foods. Perfect for large cuts of meat (e.g. shin of pork).



FAN-ASSISTED BOTTOM: The combination of the fan with just the lower heating element allows cooking to be completed more rapidly. This system is recommended for finishing off the cooking of foods which are already well-cooked on the surface, but not inside, which therefore need a little more heat. Perfect for any type of food.



 CIRCULAR: The combination of the fan and the circular element (incorporated in the rear of the oven) enables different foods to be cooked on several levels, as long as they need the same temperature and same type of cooking operation. Hot air circulation ensures instant and uniform distribution of heat. It will be possible, for instance, to cook fish, vegetables and biscuits simultaneously (on different levels) without mixing odours and flavours.



ECO

ECO: indicates which function gives the least energy consumption. Using the grill and the bottom heating element plus the fan is particularly suitable for heating up food, as it provides low energy consumption.



 


Instructions for the user


GB-IE



WIDE GRILL: The heat coming from the grill element gives perfect grilling results, especially for thin and medium thickness meat and, in combination with the rotisserie (when present), it allows the food to be browned evenly at the end of cooking. Perfect for sausages, ribs and bacon. This function enables large quantities of food, particularly meat, to be grilled evenly.



 ROTISSERIE GRILL: The rotisserie functions in combination with the grill element allowing to perfectly brown food.




TURBO: The combination of fan-assisted cooking and traditional cooking enables different foods to be cooked on several levels extremely quickly and efficiently, without any transfer of odours and flavours. Perfect for large volumes that call for intense cooking.




ROOF: This function allows to complete the cooking of foods that require a greater temperature at the top, without affecting their browning.

 Moreover, it is particularly suitable for warming food.



 BOTTOM: The heat coming solely from the bottom allows to complete the cooking of foods that require a greater basic temperature, without affecting their browning.



PYROLYSIS: When this function is set, the oven reaches temperatures of up to 500°C, destroying all the grease which forms on the internal walls.



8.1 Cooking advice and instructions

8.1.1 General advice

We recommend preheating the oven before putting food in.

- For cooking on several levels, we recommend using a fan-assisted function to achieve uniform cooking at all heights.
- In general, it is not possible to shorten cooking times by increasing the temperature (the food could be well-cooked on the outside and undercooked on the inside).
- While cooking desserts or vegetables, excessive condensation may form on the glass. In order to avoid this, open the door very carefully a couple of times while cooking.

8.1.2 Advice for cooking meat

- Cooking times, especially for meat, vary according to the thickness and quality of the food and to consumer taste.
- We recommend using a meat thermometer for meat when roasting it. Alternatively, simply press on the roast with a spoon: if it is hard, it is ready; if not, it needs another few minutes cooking.

8.1.3 Advice for cooking desserts and biscuits

- Use dark metal moulds for desserts: they help to absorb the heat better.
- The temperature and the cooking duration depend on the quality and consistency of the dough.
- Check whether the dessert is cooked right through: at the end of the cooking time, put a toothpick into the highest point of the dessert. If the dough does not stick to the toothpick, the dessert is cooked.
- If the dessert collapses when it comes out of the oven, on the next occasion reduce the set temperature by about 10°C, selecting a longer cooking time if necessary.



8.1.4 Advice for cooking with the Grill and the Fan-assisted grill

- Using the Grill function (where present), meat can be grilled even when it is put into the cold oven; preheating is recommended if you wish to change the effect of the cooking.
- With the Fan-assisted grill function (where present), however, we recommend that you preheat the oven before grilling.
- We recommend placing the food at the centre of the rack.

8.1.5 Advice for defrosting and proving

- We recommend positioning frozen foods in a lidless container on the first shelf of the oven.
- The food must be defrosted without its wrapping.
- Lay out the foodstuffs to be defrosted evenly, not overlapping.
- When defrosting meat, we recommend using a rack positioned on the second runner with the food on it and a tray positioned on the first runner. In this way, the liquid from the defrosting food drains away from the food.
- The most delicate parts can be covered with aluminium foil.
- For successful proving, a container of water should be placed in the bottom of the oven.
















8.2 To save energy

To save energy while using the appliance, the following instructions may be followed:

- Stop cooking a few minutes before the time normally used. Cooking will continue for the remaining minutes with the heat which has accumulated inside the oven.
- Reduce any opening of the door to a minimum to avoid heat dispersal.
- Use the ECO function (where present) for cooking on a single runner.
- Keep the inside of the appliance clean at all times.



8.3 Cooking table (main oven)

TYPES OF FOOD	WEIGHT	FUNCTION
FIRST COURSES		
LASAGNE	3-4 kg	 Static
OVEN-BAKED PASTA	2 kg	 Static
MEAT		
ROAST VEAL	1.2 kg	 Fan-assisted static
LOIN OF PORK	1.2 kg	 Fan-assisted static
SHOULDER OF PORK	1.2 kg	 Turbo
ROAST RABBIT	1.2 kg	 Circular
TURKEY BREAST	1.5 kg	 Fan-assisted static
ROAST PORK NECK	2 kg	 Turbo
ROAST CHICKEN	1.2 kg	 Turbo
GRILLED MEATS		
PORK SAUSAGES	1.2 kg	 Fan-assisted grill
PORK CHOPS	1.2 kg	 Grill
HAMBURGERS	0.8 kg	 Grill
BACON	0.8 kg	 Fan-assisted grill
ROTISSERIE CHICKEN	1-1.2 kg	 Rotisserie grill
FISH		
SALMON TROUT	1.2 Kg	 Fan-assisted bottom



Instructions for the user

GB-IE

RUNNER POSITION FROM BOTTOM	TEMPERATURE °C	TIME IN MINUTES	
1	220 - 230	50 - 60	
1	220 - 230	40	
2	180 - 190	70 - 80	
2	180 - 190	70 - 80	
2	180 - 190	90 - 100	
2	180 - 190	70 - 80	
2	180 - 190	80 - 90	
2	180 - 190	190 - 210	
2	180 - 190	60 - 70	
		1 ST SURFACE	2 ND SURFACE
3	250 - 280	7 - 9	5 - 6
4	250 - 280	15	5
4	250 - 280	9	5
3	250 - 280	13	3
	250 - 280	70 - 80	
2	150 - 160	35 - 40	



TYPES OF FOOD	WEIGHT	FUNCTION		
PIZZA	1 kg		Fan-assisted static	
BREAD	1 kg		Circular	
FOCACCIA	1 kg		Turbo	
DESSERTS				
RING CAKE	1 kg		Fan-assisted static	
FRUIT TART	1 kg		Fan-assisted static	
SHORT PASTRY	0.5 kg		Fan-assisted bottom	
JAM TARTS	1.2 kg		Turbo	
PARADISE CAKE	1.2 kg		Fan-assisted static	
CREAM PUFFS	0.8 kg		Turbo	
LIGHT SPONGE CAKE	0.8 kg		Circular	
RICE PUDDING	1 kg		Turbo	
BRIOCHES	0.6 kg		Circular	
BRIOCHES (on multiple runners)				
SHORT PASTRY BISCUITS (on multiple runners)				

The times indicated in the following tables do not include the preheating times and are provided as a guide only.



Instructions for the user

GB-IE

RUNNER POSITION FROM BOTTOM	TEMPERATURE °C	TIME IN MINUTES
1	250 - 280	6 - 10
2	190 - 200	25 - 30
2	180 - 190	15 - 20
2	160	50 - 60
2	160	30 - 35
2	160 - 170	20 - 25
2	160	20 - 25
2	160	55 - 60
2	150 - 160	40 - 50
2	150 - 160	45 - 50
2	160	40 - 50
2	160	25 - 30
1 and 3	160 - 170	16 - 20
1 and 3	160 - 170	16 - 20












For cooking on multiple runners, we recommend that you use functions



, and only, and the 1st and 3rd runners.



8.4 Cooking table (auxiliary oven)

TYPES OF FOOD	WEIGHT	FUNCTION
MEAT		
ROTISSERIE CHICKEN	1-1.2 kg	 Rotisserie grill
ROTISSERIE PORK NECK	2.5 kg	 Rotisserie grill
ROAST RABBIT	1 kg	 Static
ROAST CHICKEN	1 kg	 Static
GRILLED MEATS		
PORK CHOPS	0.8 kg	 Grill
HAMBURGERS	0.6 kg	 Grill
PORK SAUSAGES	0.6 kg	 Grill
PORK SPARE RIBS	0.7 kg	 Grill
BACON	0.6 kg	 Grill



RUNNER POSITION FROM BOTTOM	TEMPERATURE °C	TIME IN MINUTES	
	220 - 250	70 - 80	
	200	200 - 220	
2	190 - 200	85 - 90	
2	190 - 200	80 - 85	
		1 ST SURFACE	2 ND SURFACE
4	250	13	5
4	250	7	3
4	250	15	
4	250	30 - 35	
4	250	10	3



9. CLEANING AND MAINTENANCE



Do not use steam jets to clean the appliance. The steam could reach the electronics, damaging them and causing short-circuits.



WARNING: For your safety, you are advised to wear protective gloves while performing any cleaning or extraordinary maintenance.



Do not use cleaning products containing chlorine, ammonia or bleach on steel parts or parts with metallic finishes on the surface (e.g. anodizing, nickel- or chromium-plating).



We recommend the use of cleaning products distributed by the manufacturer.

9.1 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let the appliance cool first.

9.2 Ordinary daily cleaning

To clean and preserve stainless steel surfaces, always use only specific products that do not contain abrasives or chlorine-based acids.

How to use: pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.

9.3 Food stains or residues

Do not use metallic sponges or sharp scrapers as they will damage the surfaces.

Use normal non-abrasive products and a wooden or plastic tool if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth.

Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.





9.4 Cleaning the glass ceramic hob



The glass ceramic hob should be regularly cleaned, preferably after every use, once the **H** symbol has disappeared from all displays.

Smudges from aluminium-based pans can be easily cleaned off with a cloth dampened in vinegar.

Remove any burnt residues after cooking with the scraper provided; rinse with water and wipe dry with a clean cloth. Regular use of the scraper considerably reduces the need for chemical detergents for the daily cleaning of the hob.


Never use abrasive or corrosive detergents (e.g. cleaning powders, oven sprays, spot-removers and wire sponges).

Dirt which may have fallen on the hob while cleaning lettuce or potatoes can scratch the hob when moving saucepans.

Consequently, remove any dirt from the cooking surface immediately.

Changes in colour do not affect the functioning and stability of the glass ceramic. These are not alterations to the material of the hob but just residues which have not been removed and have then carbonised.

Shiny surfaces can form due to the bases of saucepans, especially aluminium ones, rubbing on the surface, and due to the use of unsuitable detergents. These are difficult to remove with ordinary cleaning products. It may be necessary to repeat the cleaning process several times. Using aggressive detergents, or friction with the base of saucepans, can wear away the decoration on the hob over time and contribute to the formation of dark marks.

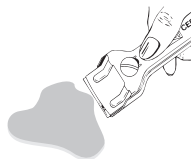

9.5 Weekly cleaning

Clean and maintain the hob once a week using an ordinary glass ceramic cleaning product. Always follow the manufacturer's instructions. The silicon in these products creates a protective, water-repellent membrane which also resists dirt. All marks stay on the membrane and can therefore be easily removed. After cleaning, dry the surface with a clean cloth. Make sure that there is no detergent left on the cooking surface as it will undergo an aggressive reaction when heated up and could modify the structure of the cooking surface.



9.6 Cleaning the oven



For the best oven upkeep, clean it regularly after having allowed it to cool. Take out all removable parts.

- Clean the oven racks with warm water and non-abrasive detergent. Rinse and dry.
- For easier cleaning, the door can be removed (see “10.3 Removing the door”).



The oven should be operated at the maximum heat setting for 15/20 minutes after use of specific products, to burn off the residues left inside the oven.




When the operation is complete, damp parts should be dried thoroughly.

9.6.1 Removing guide frames (where present)

Removing the guide frames and the self-cleaning panels enables the sides to be cleaned more easily.

To remove the guide frames:

- 1 Pull the frame towards the inside of the oven to unhook it from its housing **A**, then slide it out of the seats **B** at the back.
- 2 When cleaning is complete, repeat the above procedures to put the guide frames back in.

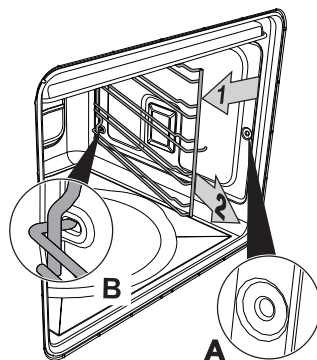



9.7 Cleaning the door glazing

The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll; remove stubborn dirt with a damp sponge and an ordinary detergent.




Do not use abrasive or corrosive detergents to clean the oven's door glass panels (e.g. powder products, spot-removers and wire sponges). Do not use rough or abrasive materials or sharp metal scrapers to clean the oven's glass doors since they may scratch the surface.

9.8 Removing the door seal (not on pyrolytic models)

To permit thorough cleaning of the oven, the door seal may be removed.

There are fasteners on all four sides to attach it to the edge of the oven. Pull the edges of the seal outwards to detach the fasteners. The seal must be replaced when it loses elasticity and hardens.

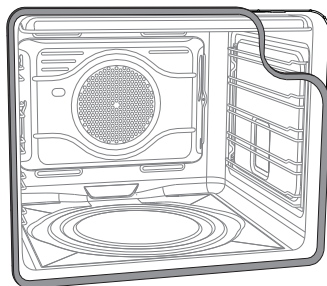

9.9 Cleaning the door seal

To keep the seal clean, use a non-abrasive sponge and lukewarm water. The seal should be soft and flexible (with the exception of pyrolytic models).

In pyrolytic models, the seal may flatten over time and lose its original shape. To restore it, pinch the seal all the way along. This also helps remove any dirt on the seal.



9.10 Pyrolysis: automatic oven cleaning

P

Pyrolysis may be carried out at any time of the day or night (if you wish to benefit from the lower cost of electricity overnight).



During the first automatic cleaning cycle, unpleasant odours may occur due to the normal evaporation of oily manufacturing substances. This is an absolutely normal phenomenon which disappears after the first cleaning cycle.



Before starting the automatic cleaning cycle, make sure that the oven does not contain any foods or large spills from previous cooking operations.



During the pyrolysis cycle, a door locking device makes it impossible to open the door.

9.10.1 Before starting the automatic cleaning cycle

Pyrolysis may be carried out at any time of the day or night (if you wish to benefit from the lower cost of electricity overnight).

- Completely remove all accessories from inside the oven, including the upper guard.
- Remove the guide frames, see “9.6.1 Removing guide frames (where present)”.



In order not to damage the internal glass panel, it should be cleaned in accordance with the usual procedure (see 9.7 Cleaning the door glazing) before starting the automatic cleaning cycle.

For very stubborn encrustations, lock the door using the pins provided and remove the glass panel. Spray an oven cleaning product onto the glass (read the warnings on the product); leave for 60 minutes, then rinse and dry the glass using kitchen roll or a microfiber cloth. After carrying out these operations, position the glass panel on the door again and remove the pins locking it..

- At the end of the cleaning cycle, when the oven has cooled down, reinsert the frames by repeating the previously used procedure in reverse order.
- Make sure that the oven door is firmly closed.



Refer to the following diagram for setting the cleaning cycle duration:

CLEANING DURATION	LIGHT DIRT	MEDIUM DIRT	HEAVY DIRT
	120 MIN.	165 MIN.	210 MIN.



During the automatic cleaning cycle, the fans produce a more intense level of noise due to a greater rotation speed; this is entirely normal and intended to facilitate heat dissipation.




At the end of pyrolysis, the fans will continue to operate for long enough to avoid overheating the walls of adjacent units and the front of the oven.




If the pyrolysis gives unsatisfactory results at minimum duration, it is recommended to set a longer time for successive cleaning cycles.

9.10.2 Setting the cleaning cycle

Turn the function selection knob to **P** to select the cleaning cycle.


Press and hold ; press  or  to set the duration of the cycle. The setting varies between a minimum of 2 hours and a maximum of 3 hours and 30 minutes.




Press  to confirm the start of the pyrolysis.

Two minutes after the cleaning cycle (Pyrolysis) starts, a door locking device will be tripped, preventing the door being opened. The appropriate light will switch on to indicate that the locking device has been activated.




At the end of the cleaning cycle the door locking device will remain active until the temperature inside the oven has reached a safety threshold. When the oven has cooled down, collect the residues from automatic cleaning with a damp microfibre cloth.

To select a cleaning cycle with a delayed start, after setting the duration press . The time when the cleaning cycle will terminate will appear on the display.

Press and hold , and press  or  to set the time at which you wish to terminate the cleaning cycle.



It is not possible to select any functions once the door locking device has been activated. Wait for  to go out.



10. EXTRAORDINARY MAINTENANCE

The oven requires periodic minor maintenance or replacement of parts subject to wear, such as gaskets, light bulbs, etc. Specific instructions for each operation of this kind are given below.



Before any intervention that requires accessing live parts, disconnect the appliance from the power supply.




If a problem cannot be resolved through ordinary maintenance or in case of other types of fault, contact your local technical support centre.


10.1 Replacing the light bulb

If a light bulb needs to be replaced because it is worn or burnt out, remove the guide frames; see “9.6.1 Removing guide frames (where present)”.

Then remove the bulb cover using a tool (e.g. a screwdriver).

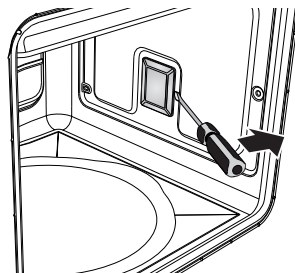


Remove the bulb by unscrewing (filament bulbs) or pulling it out (halogen bulbs) in the indicated direction. Replace the bulb with one of the same type (25W for filament bulbs or 40W for halogen bulbs).

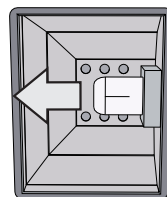

Press the cover down as far as it will go so that it attaches completely to the bulb support.

10.2 Replacing the light bulb (auxiliary oven)

If a light bulb needs to be replaced because it is worn or burnt out, unscrew the bulb cover. Remove the bulb by unscrewing it and then replace it with a similar bulb (25W).

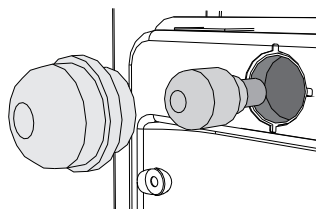





10.3 Removing the door

Open the door completely.


Insert two pins into the holes on the hinges towards the back of them until they engage.

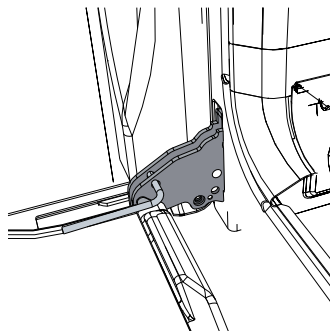

Grasp the door on both sides with both hands, lift it forming an angle of around 30° and remove it.

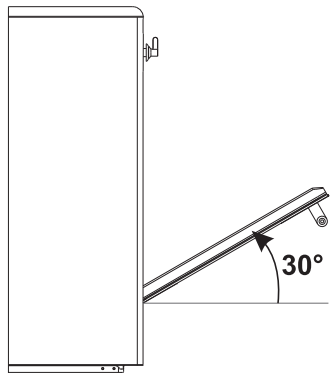

To reassemble the door, put the hinges in the relevant slots in the oven, making sure that grooved sections **C** are resting completely in the slots. Lower the door and once it is in place remove the pins from the holes in the hinges.

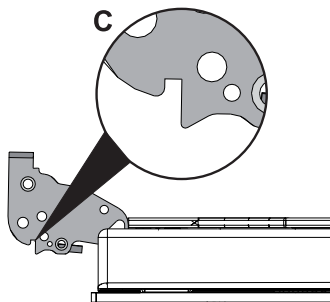



11. INSTALLING THE APPLIANCE

11.1 Installing in kitchen units



Veneers, adhesives or plastic coatings on adjacent furniture should be temperature-resistant (no less than 90°C). If they are not sufficiently temperature-resistant, they may warp over time.




The appliance must be installed by a qualified technician and according to the regulations in force.

Depending on the type of installation, this appliance belongs to class 2, subclass 1 (Fig. A - Fig. B) or class 1 (Fig. C).

It may be installed next to walls, one of which must be higher than the worktop, at a minimum distance of 50 mm from the side of the appliance, as shown in figures A and C relative to the installation classes.

Make sure that there is a minimum distance of 750 mm between the stoves of the hob and any shelf that may be installed directly above it. If a hood is installed above the hob, refer to the hood instruction manual to ensure the correct clearance is left.

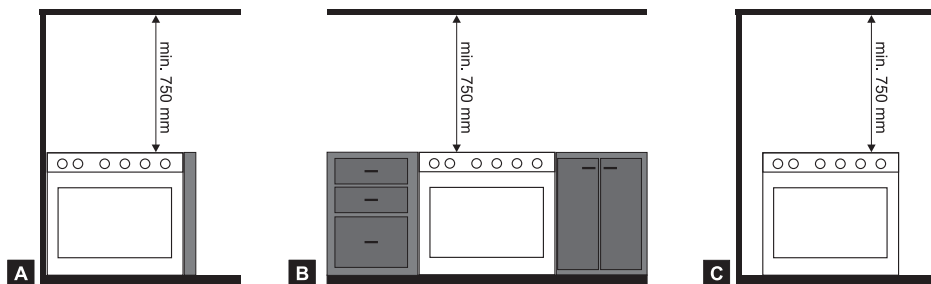

A Built-in appliance (Class 2 subclass 1)

B Built-in appliance (Class 2 subclass 1)

C Free-standing appliance (Class 1)



11.2 Electrical connection



Make sure the voltage and the cross-section of the power supply line match the specifications indicated on the identification plate positioned on the appliance. Do not remove this plate for any reason. A copy of the plate is attached to the instructions.



The appliance must be connected to the power supply by a qualified technician.



Before performing any operations, switch off the power supply to the appliance.



The appliance must be connected to earth in compliance with electrical system safety standards.



Where the appliance is connected to the power grid via plug and socket, both of these must be of the same type and connected to the power cable in accordance with current standards. The socket must be accessible after the appliance has been built in.

NEVER UNPLUG BY PULLING ON THE CABLE.



Should the earthing wire need replacing it must be longer than the conducting wires so that, if the plug is torn off the power cable, it is the last to be detached.



Avoid use of adapters and shunts as these could cause overheating and a risk of burns.









If a fixed connection is being used, fit the power line with an omnipolar circuit breaker with a contact opening gap equal to or greater than **3 mm**, in an easily accessible position close to the appliance.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance.

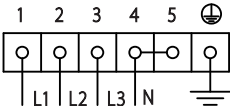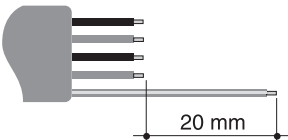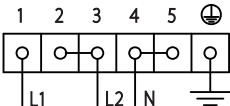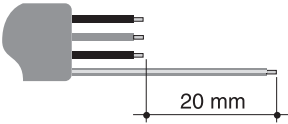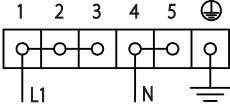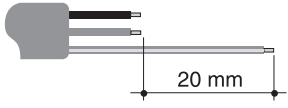

POSSIBLE CONNECTION TYPES	CABLE TYPE (if not present)
380 - 415 V 3N~ 	5-pole 5 x 2.5 mm² H05V2V2-F 
380 - 415 V 2N~ 	4-pole 4 x 4 mm² H05V2V2-F 
220 - 240 V 1N~ 	3-pole 3 x 6 mm² H05V2V2-F 




- Use H05V2V2-F cables withstanding temperatures of 90°C or higher.
- The values indicated above refer to the cross-section of the internal conductor.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.

The aforementioned power cables are sized taking into account the coincidence factor (in compliance with standard EN 60335-2-6).




11.3 Positioning the skirt

- Position the skirt above the top, taking care to align holes **A** with holes **B**.
- Secure the skirt to the top by tightening screws **C**.

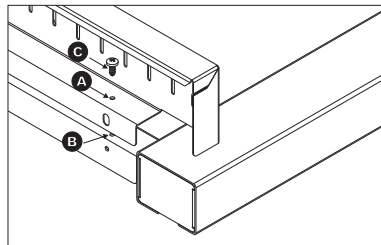

11.4 Positioning and levelling the appliance

 
After making the electrical and/or gas connections, properly level the appliance on the floor to ensure better stability. Screw or unscrew the bottom part of the foot until the appliance is stable and level on the floor.






11.5 Wall mounting instructions (some markets only)

- 1 Fasten a hook bolt (not supplied) into the wall at a height (**h**) of **800 mm** from the floor.

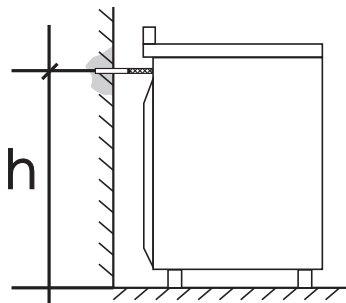

The installer must provide the hook bolt when installing the appliance.

- 2 Attach the snap hook to the chain.

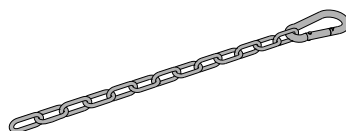

- 3 Attach the end of the chain to the hook bolt fastened in the wall.

- 4 Finally, connect the snap hook to the appropriate hole on the back of the appliance.

