

10 Tree Candles with Remote Control –Stock number 766 59257


Thank you for purchasing these 10 tree candles with remote control. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Please Note


- FOR INDOOR USE ONLY.
- These lights use LEDs that are not replaceable.
- Each candle requires 1 x AAA battery (not included).
- Remote Control Battery (CR2025) is included

Instructions for use

- Carefully remove the product from the package
- Open the battery box on each candle by twisting the base in an anti-clockwise direction and install the batteries.
- Turn on the product by pressing the ON switch on the remote control to test the lights are functioning correctly.
- The remote control will operate all 10 candles simultaneously
- Position each candle into the candle holder and then hang from individual branches of your Christmas tree using the inverted U bend positioned under the holder.
- Please ensure the branch chosen is sturdy to support the crystal counterbalance weight and ensure each candle is upright and free from obstruction.
- Please ensure each candle is positioned so that the remote control can function correctly.

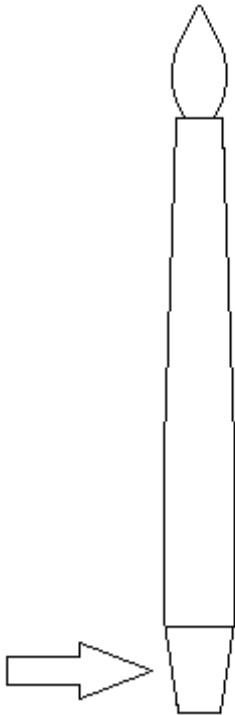

Remove base to insert battery.
1 x AAA required per candle

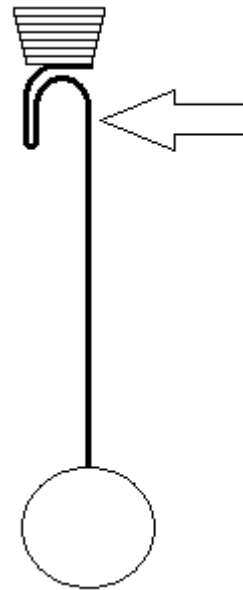

Position on a tree branch using the inverted U bend as indicated

Changing the Batteries

To change the batteries on the candles, unscrew the cap of each candle base and insert 1 x AAA size battery. Ensure the flat face (negative) end of the batteries align with the spring contacts within the battery compartment.

To change the battery on the remote control, release the locking mechanism on the base of the remote control and slide the battery tray out to expose the battery. Remove and replace ensuring that the battery is inserted with the correct polarity facing downwards. This is supported by the battery tray having sloping sides to support the shape of the battery. Batteries should be removed and replaced by adults only.

- Use only recommended batteries or those of the same or equivalent type.
- Do not mix old and new batteries or batteries of a different type.
- Batteries are to be inserted with the correct polarity. The supply terminals are not to be short circuited.
- Always remove exhausted batteries from the product.
- Remove batteries if the set is not used for extended periods of time.
- Do not attempt to re-charge non rechargeable batteries.
- Rechargeable batteries are to be removed from the item before recharging. Rechargeable batteries are only to be charged under adult supervision.
- Batteries contain substances that may be harmful to the environment and human health.
- Keep out of reach of children and seek immediate medical help if swallowed.
- Never throw batteries in a fire or attempt to open the outer casing.

Warnings

- This product is a decoration not a toy. Keep out of reach of young children as may contain small parts that could represent a choking hazard.

CE – Complies with the RoHS Directive



This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.



■ This symbol indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis do not operate in store take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

If you have any issues regarding this product please contact 01462 744500

Please retain this information leaflet for future reference.