


Washer Dryer

JLWD 1613

User Manual

John Lewis

Contents

Safety information	4	Daily Use - Washing only	23
Children and vulnerable people safety	4	Before first use	23
General Safety	5	Loading the laundry	23
Safety instructions	7	Filling the detergent and other treatments	23
Installation	7	Checking the position of the flap	24
Electrical Connection	7	Activating the appliance	24
Water Connection	7	Setting a programme	24
Use	7	Starting a programme without the delay start	24
Disposal	8	Behaviour of the appliance	25
Product description	9	Starting a programme with the delay start	25
Appliance overview	9	Cancelling the delay start	25
How to activate the child safety device	9	Interrupting a programme and changing an option	25
Installation on suspended flooring	9	Cancelling a running programme	25
Accessories	10	Opening the door when a programme or the delay start operates	25
Control panel	11	End of cycle	26
Control panel description	11	Fluff in the drum	26
Display	11	Draining water out after end of cycle	26
Programmes	14	Auto Stand-by function	26
Programme Chart	14	Daily use - Drying only	27
Automatic drying	16	Drying setting	27
Timed drying	17	Drying at automatic levels	27
Consumption values	19	Timed drying	27
Options	20	End of the drying programme	28
On/Off	20	Fluff in the drum	28
Programme dial	20	Daily use - Washing & Drying	29
Temperature	20	Non-Stop programme	29
Spin	20	Washing & Automatic drying	29
Dryness level	20	Washing & Timed drying	29
Time dry	21	End of the drying programme	30
Quick	21	Fluff in the drum	30
Delay start	21	How to remove fluff	30
Start/Pause	21	Hints and tips	31
Settings	22	The laundry load	31
Acoustic signals	22	Stubborn stains	31
Child Lock 	22	Detergents and other treatments	31
Permanent Extra Rinse	22	Ecological hints	31

Water hardness	32	Cleaning the detergent dispenser	34
Drying hints	32	Cleaning the drain filter	34
Items not suitable for drying	32	Cleaning the inlet hose and the valve filter	36
Garment labels	32	Emergency drain	37
Drying cycle duration	32	Frost precautions	37
Additional drying	32	Troubleshooting	38
General Tips	32	Introduction	38
Care and cleaning	33	Possible failures	38
External cleaning	33	Emergency door opening	40
Descaling	33	Technical Data	42
Maintenance wash	33	Repairs - after sales service	43
Door seal	33		

Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

Children and vulnerable people safety



Warning!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away unless continuously supervised.
- Children of less than 3 years of age should be kept away unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

General Safety

- Do not change the specification of this appliance.
- The appliance shall be installed as a freestanding product or below the kitchen worktop if space margins permit.
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from any appliances burning gas or other fuels.
- The operating water pressure at the water entry point from the outlet connection must be between 0.5 bar (0.05 MPa) and 8 bar (0.8 MPa).
- Do not exceed the maximum load of 9 kg (refer to the "Programme chart" chapter).
- The appliance must be connected to the water mains using the new supplied hose sets, or other new hose sets supplied by the Authorised Service Centre.
- Old hose sets must not be reused.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Wipe away lint or packaging debris that has accumulated around the appliance.

- Items that have been soiled with substances such as vegetable or mineral oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed separately with an extra amount of detergent before being dried in the washer dryer.
- Do not use the appliance if items have been soiled with industrial chemicals.
- Do not dry unwashed items in the wash dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, and rubber backed articles and clothes, or pillows fitted with foam rubber pads should not be dried in the washer dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- Never stop the washer dryer before the end of the drying cycle unless all items are quickly removed and separated so that residual heat can dissipate.
- The final part of the washer dryer cycle takes place without heat (cool down cycle) to ensure that items reach a temperature that will not cause damage to them.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- Clean the appliance with a moist cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

Safety instructions

Installation



The installation must comply with relevant national regulations.

- Follow the installation instructions supplied with the appliance.
- Do not install or use the appliance where the temperature can be less than 0°C or where it is exposed to the weather.
- Always keep the appliance vertical when being moved.
- Make sure that there is air circulation between the appliance and the floor.
- Remove all the packaging and the transit bolts.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Keep the transit bolts in a safe place. If the appliance is to be moved in the future they must be reattached to lock the drum to prevent an internal damage.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use a damaged appliance.
- Do not install the appliance where the appliance door cannot be fully opened.
- Adjust the feet to have the necessary space between the appliance and the flooring.
- When the appliance is in its permanent position, check that it is fully level with the aid of a spirit level. If it is not, adjust the feet accordingly.

Electrical Connection



Warning! Risk of fire and electric shock.

- The appliance must be earthed.

- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- UK and Ireland only. This appliance is fitted with a 13 A mains plug. If it is necessary to change the mains plug fuse, use only a 13 A ASTA (BS 1362) fuse.
- This appliance complies with the E.E.C. Directives.

Water Connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.

Use



Warning! Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the glass door while a programme is in operation. The glass can get hot.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.

- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Make sure that all metal objects are removed from the laundry.
- Only dry fabrics that are suitable to dry in the washer dryer. Follow the cleaning instruction on the item label.
- Plastic items are not heat resistant.
 - If a detergent ball is used, remove it before starting a drying programme.
 - Do not use a detergent ball if setting a non-stop programme.



Warning! Risk of injury or damage to the appliance.


- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the appliance.

Disposal

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

Product description

Appliance overview

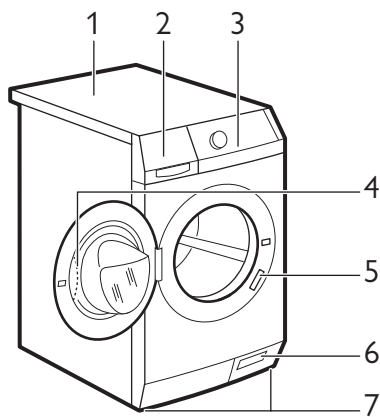


1. Worktop
2. Detergent dispenser
3. Control panel
4. Door handle
5. Rating plate
6. Drain pump filter
7. Feet for levelling the appliance

How to activate the child safety device

This device prevents children or pets from being closed in the drum.

Turn the device clockwise, until the groove is horizontal.

You cannot close the door.

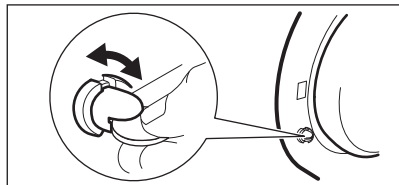

To close the door, turn the device anticlockwise until the groove is vertical.


Installation on suspended flooring

Suspended wooden floors are particularly susceptible to vibration.

To limit vibration we recommend placing a waterproof wooden panel, at least 15 mm thick, under the appliance. It should be screwed to at least 2 floor beams and should extend beyond the front feet.

If possible, install the appliance where the floor is more stable.


Accessories

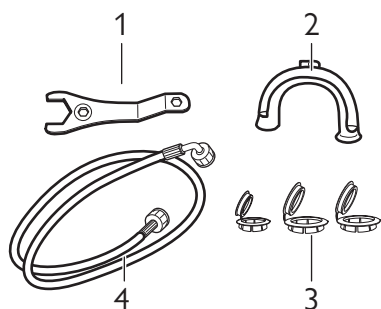

1. **Spanner**
To remove the transit bolts.
2. **Plastic hose guide**
To connect the drain hose on the edge of a sink.
3. **Plastic caps**
To close the holes on the rear side of the cabinet after the removal of the transit bolts.
4. **Inlet hose**
To connect the appliance to the cold water tap.


Control panel

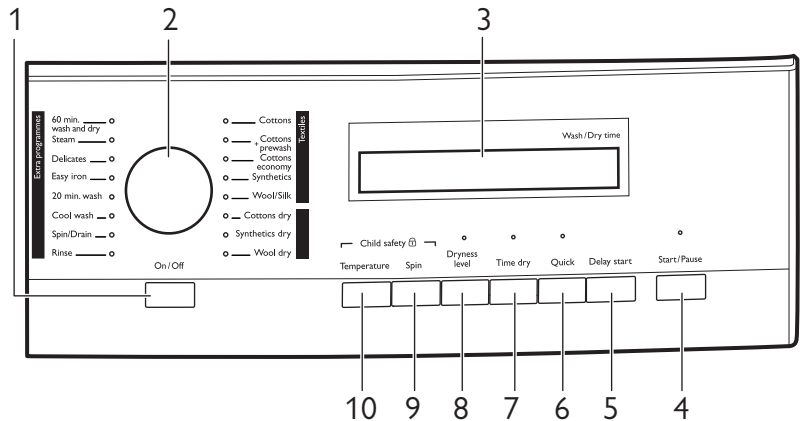

Control panel description



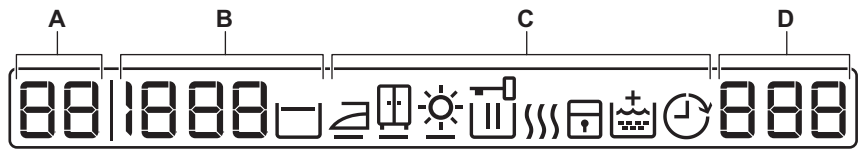


- 1. On/Off button
- 2. Programme dial
- 3. Display
- 4. Start/Pause button
- 5. Delay start button
- 6. Quick button (Reduced wash time)
- 7. Time dry button
- 8. Dryness level button
- 9. Spin selection button
- 10. Temperature selection button






 



Display



A	Temperature indicators:	
		Temperature indicator
		Cold water indicator

B	Spin indicators:	
		Spin speed indicator
		No Spin indicator ¹⁾
		Rinse Hold indicator

 1) Only available for Spin/Drain programme.

C	Dryness level symbols ¹⁾ :	
		Iron dry
		Cupboard dry
		Extra dry
	Display indicators ²⁾ :	
		Door locked - You cannot open the door when this symbol is on.
		Washing phase
		Drying phase
		Child safety lock
		Extra rinse
		Delay start

1) They come on when you set an automatic drying programme.

2) The symbols appear on the display when the related phase or function is set.

D	Time indicators:	
	1:25	Programme duration (washing and/or drying phase) When the programme starts, the time decreases in one minute steps.
	2h	Delay start When you press the delay start button, the display shows the delay start time.
	E20	Alarm codes If the appliance has a malfunction, the display shows alarm codes. Refer to "Trouble-shooting" chapter.
	Err	Error message The display shows this message for several seconds when: <ul style="list-style-type: none"> You cannot set a function with the washing programme. You try to change the washing programme while it operates.
	0	Programme is completed.

Programmes

Programme Chart

Programme Temperature range	Maximum load Maximum spin speed	Programme description (Type of load and soil level)
Textiles		
Cottons 95°C - Cold	9 kg 1600 rpm	White cotton and coloured cotton. Normal soil and light soil.
Cottons + Prewash 95°C - Cold	9 kg 1600 rpm	White cotton and coloured cotton. Heavy soil and normal soil.
Cottons economy ¹⁾ 60°C - 40°C	9 kg 1600 rpm	White cotton and fast-coloured cotton. Normal soil. The energy consumption decreases and the time of the washing programme is extended.
Synthetics 60°C - Cold	4 kg 1200 rpm	Synthetic items or mixed fabric items. Normal soil.
Wool/Silk 40°C - Cold	1,5 kg 1200 rpm	Machine washable wool, hand washable wool and other fabrics with «hand washing» care symbol ²⁾ .
Drying		
Cottons dry	6 kg	Drying programme for cotton items .
Synthetics dry	3 kg	Drying programme for synthetic items .
Wool dry	1 kg	Drying programme for woollens .
Extra programmes		

Programme Temperature range	Maximum load Maximum spin speed	Programme description (Type of load and soil level)
Rinse Cold	9 kg 1600 rpm	To rinse and spin the laundry. All fabrics , except woollens and very delicate fabrics. Reduce the spin speed accordingly to the type of laundry.
Spin/Drain ³⁾	9 kg 1600 rpm	To spin the laundry and to drain the water in the drum. All fabrics, except woollens and delicate fabrics.
Cool wash Cold	3 kg 1200 rpm	Mixed fabric (cotton and synthetic items) ⁴⁾ .
20 min. wash 40°C - 30°C	3 kg 1200 rpm	Cotton and synthetic items with light soil level or worn only once.
Easy iron 60°C - Cold	4 kg 800 rpm	Synthetic items requiring a gentle wash. Normal and light soil. ⁵⁾
Delicates 40°C - Cold	4 kg 1200 rpm	Delicate fabrics such as acrylics, viscose and mixed fabrics requiring gentler washing. Normal soil.
Steam 40°C	1.5 kg	Steam programme for cotton and synthetic items . This cycle helps to refresh and dewrinkle the laundry. Do not set this programme with items washed at a temperature lower than 40°C.
60 min. wash and dry 40°C - 30°C	1 kg 1200 rpm	Complete programme composed of a washing phase and of a drying phase for a small load of mixed fabrics (cotton and synthetic items).

1) The washing programme Cottons economy at 60°C with a load of 9 kg and the drying programme Cottons dry are the reference programmes for the data entered in the energy label, in compliance with EEC 92/75 standards.



The water temperature of the washing phase may differ from the temperature declared for the selected programme.


2) During this cycle the drum rotates slowly to ensure a gentle wash. It can seem that the drum doesn't rotate or doesn't rotate properly, but this is normal for this programme.

3) Set the spin speed. Make sure it is suitable for the type of fabric being washed. If you set the No Spin option then only the drain phase is available.

4) This programme is for daily use and has the lowest energy and water consumption whilst maintaining a good washing performance.

5) To reduce creasing, this cycle regulates the water temperature and performs a soft wash and spin phase. The appliance adds some rinses. This programme is not compatible with drying.

Programme options compatibility

Programme	Spin	---		Extra rinse ¹⁾	Quick ²⁾	Delay start
Cottons	■		■	■	■	■
Cottons + Prewash						
Cottons economy	■		■	■	■ ³⁾	■
Synthetics	■		■	■	■	■
Wool/Silk	■		■			■
Rinse	■					■
Spin/Drain ⁴⁾	■		■	■	■	■
Cool wash	■		■			■
20 min. wash	■		■	■	■	■
Easy iron	■		■			■
Delicates	■		■	■		■
Steam	■		■	■	■	■


1) If the permanent Extra Rinse option is activated, the appliance adds some additional rinses. In the Rinse programme, if you set a low spin speed the appliance performs delicate rinses and a short spin.



2) If you set the shortest duration, we recommend that you decrease the load size. It is possible to fully load the appliance, however the washing results can be less satisfactory.

3) For this programme you can set only the Extra Quick duration.

4) Set the spin speed. Make sure it is suitable for the type of fabric being washed. If you set the No Spin option then only the drain phase is available.

Automatic drying

Dryness Level	Type of fabric	Load
 Extra Dry For towelling materials	Cottons and Linen (bathrobes, bath towels, etc)	up to 6 kg

Dryness Level	Type of fabric	Load
 Cupboard Dry¹⁾ For items to be stored	Cottons and Linen (bathrobes, bath towels, etc)	up to 6 kg
	Synthetics and mixed fabrics (jumpers, blouses, underwear, household and bed linen)	up to 3 kg
	Silk items (blouses, shirts, clothing..)	up to 1 kg
	Wool items (woollen jumpers)	up to 1 kg
 Iron Dry Suitable for ironing	Cottons and Linen (sheets, tablecloths, shirts, etc)	up to 6 kg

1) **Hints for test institute** The test performance, in accordance with EN 50229, must be carried out with a FIRST drying load of the maximum declared drying capacity (load composition according to EN61121) by setting the AUTOMATIC CUPBOARD DRY for Cottons economy programme. The SECOND drying load with the residual load must be tested by setting the AUTOMATIC CUPBOARD DRY for Cottons economy programme.

Timed drying

Dryness Level	Type of fabric	Load (kg)	Spin speed (rpm)	Suggested duration (mins)
Extra Dry For towelling materials	Cottons and Linen (bathrobes, bath towels, etc)	6	1600	225 - 245
		4	1600	135 - 155
		2	1600	95 - 105
Cupboard Dry For items to be stored	Cottons and Linen (bathrobes, bath towels, etc)	6	1600	215 - 235
		4	1600	125 - 145
		2	1600	85 - 95
Cupboard Dry For items to be stored	Synthetics and mixed fabrics (jumpers, blouses, underwear, household and bed linen)	3	1200	135 - 145
		1	1200	40 - 50
	Wool (woollen jumpers)	1	1200	110 - 130
	Silk (blouses, shirts, clothes etc)	1	1000	80

Dryness Level	Type of fabric	Load (kg)	Spin speed (rpm)	Suggested duration (mins)
Iron Dry Suitable for ironing	Cottons and Linen (sheets, tablecloths, shirts, etc)	6	1600	185 - 205
		4	1600	95 - 115
		2	1600	75 - 85

Consumption values



Stated values are obtained in laboratory conditions with relevant standards. Different causes can change the data: the quantity and type of laundry and ambient temperature. Water pressure, the supply voltage and the temperature of inlet water may also affect the washing programme duration.



Technical specifications may be changed without prior notice to improve the quality of product.



At the start of the programme, the display shows the programme duration for the maximum load capacity.
During the washing phase the programme duration is automatically calculated and can be greatly reduced if the laundry load is lower than the maximum load capacity (e.g. Cotton 60°C, maximum load capacity 9 kg, the programme duration exceeds 2 hours; actual load 1 kg, the programme duration will be less than 1 hour).
When the appliance is calculating the real programme duration a dot flashes in the display.

Programmes	Load (kg)	Energy consumption (kWh)	Water consumption (litre)	Approximate programme duration (minutes)
Cottons 60°C	9	1.68	71	180
Cottons economy Cotton Energy Saving Programme 60°C ¹⁾	9	1.05	57	220
Cottons 40°C	9	1.05	71	175
Synthetics 40°C	4	0.65	52	110
Delicates 40°C	4	0.7	63	91
Wool/Handwash 30°C	1,5	0.35	57	58

1) «Cotton Energy Saving programme » at 60°C with a load of 9kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

Options

On/Off

Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated.

The Auto Stand-by function automatically deactivates the appliance to decrease the energy consumption when:

- You do not use the appliance for 5 minutes before you press the Start/Pause button. All settings are cancelled. Press the On/Off button to activate the appliance again. Set the washing programme and all possible functions again.
- 5 minutes after the end of the washing programme. Refer to "Auto Stand-by option".

Programme dial

Turn this dial to set a programme. The related programme indicator comes on.

Temperature

Press this button repeatedly to adjust the default temperature.

The indicator — — indicates the cold water.

The display shows the set temperature.

Spin

Press repeatedly this button to decrease the default spin speed or to set the available spin options.


The display shows the indicator of the set speed.

Additional spin options:

No Spin

- Set this option to remove all spin phases.
- Recommended for very delicate fabrics.
- To compensate for the absence of spinning, the rinse phase uses more water for some washing programmes.
- The display shows the indicator — — — .

Rinse Hold




- Set this option to reduce creasing.
- The washing programme ends with water in the drum. The drum turns regularly to reduce creasing.
- The door stays locked. You must drain the water to unlock the door.
- The display shows the indicator .



To drain the water, refer to "Draining water out after end of cycle".

Dryness level

Press this button to set one of 3 automatic dryness levels available. The display shows the symbol of the set level:

-  **Iron dry** – laundry to be ironed
-  **Cupboard dry** – laundry to be put in storage
-  **Extra dry** – laundry to be fully dried



You **cannot** set all automatic levels for each type of fabric (see pages 16-17).

Time dry

Press this button to set the time that suits the fabrics you have to dry. The display shows the set value.

Each time you press this button the time value increases by 5 minutes.



Drying durations may be restricted by the programme selected.

Quick

With this option you can decrease the programme duration.

- Press this button once to set "Shortened duration" for items with daily soil.
- Press this button twice to set "Extra Quick" for slightly soiled items only.



Some programmes accept only one of the two options.

Delay start

With this option you can delay the start of a programme from 30 minutes to 20 hours.

The display shows the related indicator and delay time.

Start/Pause

Press the Start/Pause button to start or interrupt a programme.

Settings

Acoustic signals

The acoustic signals operate when:

- You activate the appliance.
- You deactivate the appliance.
- You press the buttons.
- The programme is completed.
- The appliance has a malfunction.


To **deactivate/activate** the acoustic signals, press the Dryness level button and the Time dry button simultaneously for 6 seconds.



If you deactivate the acoustic signals, they continue to operate when the appliance has a malfunction.

Child Lock

With this option you can ensure that should children touch the panel, the settings will not be altered.

- To **activate/deactivate** this option, press the Temperature button and the Spin button simultaneously until the indicator  **comes on/goes off.**

You can activate this option:

- After you press the Start/Pause button: the options and the programme knob are locked.
- Before you press the Start/Pause button: the appliance cannot start.

Permanent Extra Rinse

With this option you can permanently have an extra rinse when you set a new programme.

- To **activate/deactivate** this option press the Quick button and the Delay start button simultaneously until the Extra rinse indicator **comes on/goes off.**

Daily Use - Washing only



Warning! Refer to Safety chapters.

Before first use

1. Pour 2 litres of water into the detergent compartment for washing phase. This activates the drain system.
2. Pour a small quantity of detergent into the compartment for washing phase.
3. Set and start a programme for cotton at the highest temperature without placing any laundry in the drum.


This removes all possible dirt from the drum and the tub.

Loading the laundry

1. Open the appliance door.
2. Put the laundry in the drum, one item at a time.
3. Shake the items before you put them in the appliance.


Make sure you do not put too much laundry in the drum.

4. Close the door firmly.

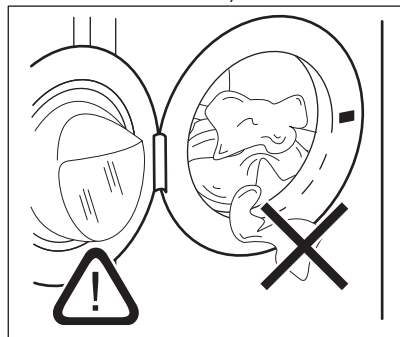

Caution! Make sure that no laundry becomes trapped between the seal and the door. There is a risk of water leakage or damage to the laundry.

Filling the detergent and other treatments

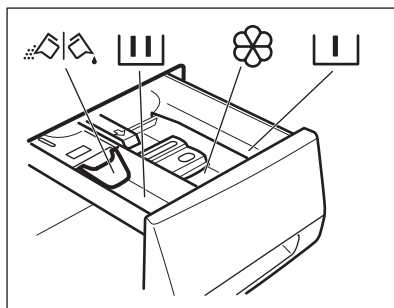

Compartment for prewash phase, soak programme or stain remover.



Compartment for washing phase.



Compartment for liquid treatments (fabric conditioner, starch).

MAX

Maximum level for quantity of liquid treatments.




Flap for powder or liquid detergent.




Always follow the instructions that you find on the packaging of the detergent products.

Checking the position of the flap


1. Pull out the detergent dispenser until it stops.
2. Press the lever down to remove the dispenser.

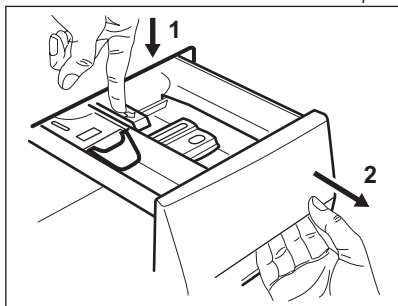

3. To use powder detergent, turn the flap up.

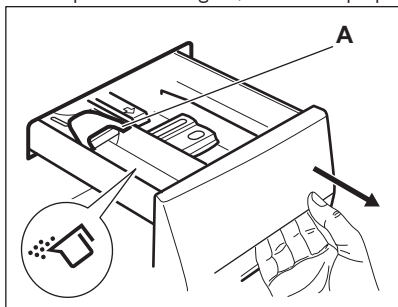

4. To use liquid detergent, turn the flap down.

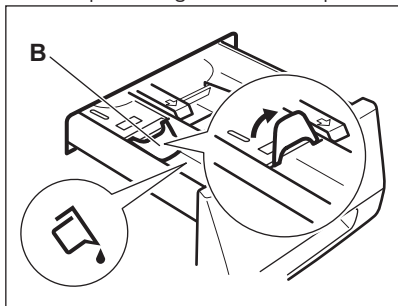

With the flap in the down position:

- Do not use gelatinous or thick liquid detergents.
 - Do not pour more liquid detergent than the limit shown on the flap.
 - Do not set the prewash phase.
 - Do not set the delay start function.
5. Measure out the detergent and the fabric conditioner.
 6. Carefully close the detergent dispenser. Make sure that the flap does not cause a blockage when you close the drawer.

Activating the appliance

1. Connect the mains plug to the mains socket.
2. Open the water tap.
3. Press the On/Off button to activate the appliance.

A short tune sounds.

Setting a programme


1. Turn the programme dial and set the programme:
 - The related programme indicator comes on.
 - The Start/Pause indicator flashes.
 - The display shows: the default temperature, the spin speed, the indicators of the programme phases and the programme duration.
2. If necessary, change the temperature, the spin speed, the cycle duration, or add available options. When you activate an option, the indicator of the set option comes on.



If you set something incorrectly, the display shows the message **Err**.

Starting a programme without the delay start

Press the Start/Pause button to start the programme.

The relevant indicator stops flashing and stays on.
On the display the indicator of the phase in operation starts to flash.
The programme starts, the door is locked. The display shows the indicator .



The drain pump can operate for a short time as the appliance fills with water.

Behaviour of the appliance



After approximately 15 minutes from the start of the programme:

- The appliance adjusts the cycle time automatically to the laundry load to achieve perfect washing results in the shortest possible time.
- The display shows the new time value.

Starting a programme with the delay start

1. Press the Delay start button repeatedly until the display shows the number of minutes or hours of delay required.

The related indicator comes on.

2. Press the Start/Pause button.

The appliance starts the countdown of the delay start.

When the countdown is completed, the programme starts automatically.




Before you press the Start/Pause button to start the appliance, you can cancel or change the setting of the delay start.

Cancelling the delay start

To cancel the delay start:

1. Press the Start/Pause button to pause the appliance.

The related indicator flashes.

2. Press the Delay start button repeatedly until the display shows .
3. Press the Start/Pause button again to start the programme immediately.

Interrupting a programme and changing an option

You can change only some options before they operate.

1. Press the Start/Pause button.
The related indicator flashes.
2. Change the option set.
3. Press the Start/Pause button again.
The programme continues.

Cancelling a running programme

1. Press the On/Off button to cancel the programme and to deactivate the appliance.
2. Press the On/Off button again to activate the appliance.

Now, you can set a new washing programme.



Before starting the new programme the appliance could drain the water. In this case, make sure that the detergent is still in the detergent compartment, if not fill the detergent again.

Opening the door when a programme or the delay start operates



If the temperature and level of the water in the drum are too high and/or the drum still rotates you cannot open the door.



While a programme or the delay start operates, the appliance door is locked.

1. Press the Start/Pause button.
The related door lock indicator goes off.
2. Open the appliance door.

3. Close the door and press the Start/Pause button.
The programme or the delay start continues.

End of cycle

When the programme has finished, the appliance stops automatically. The acoustic signal operates (if it is active).

In the display  comes on and the door locked indicator  goes off.

The indicator of the Start/Pause button goes off.

1. Press the On/Off button to deactivate the appliance.
5 minutes after the end of the programme, the energy saving function automatically deactivates the appliance.



When you activate the appliance again, the display shows the end of the last set programme. Turn the programme knob to set a new cycle.

2. Remove the laundry from the appliance.
3. Make sure that the drum is empty.
4. Keep the door ajar, to prevent mildew and odours

Fluff in the drum

During the washing and/or drying phase, some types of fabric, (sponge, wool, sweatshirt) could release fluff.

The released fluff could stick to the fabrics during the next cycle.

To prevent fluff in your laundry, we recommend that you:

- Do not wash dark fabrics after you have washed and dried light coloured fabrics (new sponge, wool, sweatshirt) and vice versa.
- Line dry these types of fabrics when they are washed the first time.
- Clean the drain filter.
- Clean the empty drum, the gasket and the door with a wet cloth after the drying phase.


Draining water out after end of cycle

The washing programme is completed, but there is water in the drum:

The drum turns regularly to reduce creasing.

The door lock indicator  is on. The door stays locked.

You must drain the water to open the door:

1. If necessary, decrease the spin speed.
2. Press the Start/Pause button.
The appliance drains the water and spins.
3. When the programme is completed and the door lock indicator  goes off, you can open the door.
4. Press the On/Off button for several seconds to deactivate the appliance.



The appliance drains and spins automatically after approximately 18 hours.

Auto Stand-by function

The Auto Stand-by function automatically deactivates the appliance to decrease the energy consumption when:

- You do not use the appliance for 5 minutes before you press the Start/Pause button. Press the On/Off button to activate the appliance again.
- After 5 minutes from the end of the washing programme. Press the On/Off button to activate the appliance again.
The display shows the end of the last set programme.
Turn the programme knob to set a new cycle.



If you set a programme or an option that ends with water in the drum, the Auto Stand-by **does not deactivate** the appliance in order to remind you to drain the water.

Daily use - Drying only



Warning! Refer to Safety chapters.



This appliance is an automatic washer dryer.

Drying setting



Warning! Make sure that the water tap is open.

1. Press the On/Off button for several seconds to activate the appliance.
2. Load the laundry one item at a time.
3. Turn the programme dial to the programme suitable for the items to dry. The display shows

the drying indicator .






To achieve a good drying performance **do not** exceed the maximum drying loads recommended in the user manual. **Do not** set a spin speed lower than the automatic speed of the set programme. You can dry your laundry in two ways:

Drying at automatic levels

The laundry can be dried at pre-defined levels of dryness:

1. Press the Dryness level button repeatedly until the display shows one of the dryness level indicators:

-  : IRON DRY level indicator for cotton items
-  : CUPBOARD DRY level indicator for cotton, synthetic, wool and silk items
-  : EXTRA DRY level indicator for cotton items

The display shows a time value, calculated on the default load size. If the load size is more or less than the default size, the appliance automatically adjusts the time value during the cycle.

2. Press the Start/Pause button to start the programme.

The display shows the door locked indicator



- . The drying indicator  starts to flash.





You cannot set all dryness levels for all types of laundry.

Timed drying

The laundry can also be dried with manual timed drying:

1. Press the Time dry button repeatedly to set the time value (refer to "Timed drying" table).
 - The display shows the set time value: e.g. . Each time you press this button the time value increases by 5 minutes.
 - After some seconds the display shows a new time value: e.g. . The appliance calculates also the duration of the anti-crease and the cooling phases.
2. Press the Start/Pause button to start the programme.
 - The display shows a new time value regularly.

- The drying indicator  starts to flash.
- The display shows the door locked indicator .




If you set only 10 minutes of drying, the appliance performs only a cooling phase.


If the laundry is not sufficiently dry, set a short drying time again.

- Clean the empty drum, the gasket and the door with a wet cloth after the drying phase.

End of the drying programme

The appliance stops automatically.

- The acoustic signals operate (if they are active).
- In the display  comes on.
- The Start/Pause indicator goes off.
- During the last minutes of the drying cycle the appliance performs a cooling and anti-crease phase. The door is still locked.

When the door locked indicator  goes off, you can open the door.

1. Press the On/Off button for several seconds to deactivate the appliance.

A few minutes after the end of the programme, the energy saving function deactivates the appliance automatically.

2. Remove the laundry from the appliance.

Make sure that the drum is empty.

3. Keep the door ajar to prevent mildew and odours.

Fluff in the drum

During the washing and/or drying phase, some types of fabric, (sponge, wool, sweatshirt) could release fluff.

The released fluff could stick to the fabrics during the next cycle.

To prevent fluff in your laundry, we recommend that you:

- Do not wash dark fabrics after you have washed and dried light coloured fabrics (new sponge, wool, sweatshirt) and vice versa.
- Line dry these types of fabrics when they are washed the first time.
- Clean the drain filter.

Daily use - Washing & Drying



Warning! Refer to Safety chapters.



This appliance is an automatic washer dryer.

Non-Stop programme

1. Press the On/Off button for several seconds to activate the appliance.
2. Load the laundry one item at a time.



To achieve a good drying performance **do not** exceed the maximum drying loads recommended in the user manual.

Do not set a spin speed lower than the automatic speed of the set programme.



3. Pour the detergent and any other treatments in the appropriate compartment.
4. Turn the programme dial to the washing programme.

The display shows the indicators of the different washing phases.

 
5. Set the available options.

Washing & Automatic drying

1. Press the Dryness level button repeatedly until the display shows one of the dryness level indicators:


-  : IRON DRY level indicator for cotton items
-  : CUPBOARD DRY level indicator for cotton, synthetic, wool and silk items

-  : EXTRA DRY level indicator for cotton items

The display shows the indicator . The time value on the display is the duration of the washing + drying cycles, calculated on a default load size.



For a good drying performance the appliance does not let you set a too low spin speed for the items to be washed and dried.

2. Press the Start/Pause button to start the programme.
The indicator of the set dryness level stays on.
The door locked indicator  goes on.
The display shows a new time value regularly.




During the last few minutes of the drying cycle the appliance performs the anti-crease and the cooling phases.

Washing & Timed drying

For a good drying performance the appliance does not let you set a too low spin speed for the items to be washed and dried.


1. Press the Time dry button to set the drying time value. The display shows 10 minutes.

The indicator  comes on in the display. The display shows the set drying value time, e.g. **40**. After several seconds the display shows the final time value **2:03**, that it is the total duration of the washing and drying cycles (washing + drying + anti-crease + cooling phases).



If you set only 10 minutes of drying after washing, the appliance calculates also the duration of the anti-crease and the cooling phases.

2. Press the Start/Pause button to start the programme.

In the display the indicator  comes on. The door is locked. The display shows a new time value regularly.

End of the drying programme

The appliance stops automatically. The acoustic signals operate (if they are active). For more information see "End of the drying programme" of the previous chapter.

1. Remove the laundry from the appliance. Make sure that the drum is empty.
2. Keep the door ajar to prevent mildew and odours.

Fluff in the drum

During the washing and/or drying phase, some types of fabric, (sponge, wool, sweatshirt) could release fluff.

The released fluff could stick to the fabrics during the next cycle.

To prevent fluff in your laundry, we recommend that you:

- Do not wash dark fabrics after you have washed and dried light coloured fabrics (new sponge, wool, sweatshirt) and vice versa.
- Line dry these types of fabrics when they are washed the first time.
- Clean the drain filter.
- Clean the empty drum, the gasket and the door with a wet cloth after the drying phase.

How to remove fluff

To remove the fluff inside the drum, set a special programme:

1. Empty the drum.
2. Clean the drum, the gasket and the door with a wet cloth.

3. Set the rinse programme.
4. Press the Spin button and the Time dry button simultaneously to activate the cleaning function until the display shows **CLE**.
5. Press the Start/Pause button to start the programme.

Hints and tips



Warning! Refer to Safety chapters.

The laundry load

- Divide the laundry into: white, coloured, synthetics, delicates and wool.
- Follow the washing instructions on the laundry care labels.
- Do not wash white and coloured items together.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first couple of times.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts.
- Empty pockets and unfold.
- Turn multilayered fabrics, wool and items with printed illustrations inside out.
- Remove hard stains.
- Wash heavy soil stains with a special detergent.
- Be careful with curtains. Remove the hooks and put the curtains in a washing bag or pillowcase.
- Do not wash laundry without hems or with cuts. Use a washing bag to wash small and/or delicate items (e.g. underwired bras, belts, tights, etc.).
- A very small load can cause balance problems with the spin phase leading to excessive vibration. If this occurs:
 - a. interrupt the programme and open the door (refer to "Opening the door when a programme or the delay start operates");
 - b. manually redistribute the load so that the items are spaced evenly around the tub;
 - c. press the Start/Pause button. The spin phase continues.

Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you pre-treat these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

Detergents and other treatments

- Only use detergents and other treatments specially made for washing machines:
 - powder detergents for all types of fabric,
 - powder detergents for delicate fabrics (40 °C max) and woollens,
 - liquid detergents, preferably for low temperature wash programmes (60 °C max) for all types of fabric, or special ones for woollens only.
- Do not mix different types of detergents.
- To help the environment, do not use more than the recommended quantity of detergent.
- Follow the instructions that you find on the on packaging of these products.
- Use the recommended products for the type and colour of the fabric, the programme temperature and the level of soil.

Ecological hints

- Always start a washing programme with the maximum load of laundry allowed.
- If necessary, use a stain remover when you set a programme with a low temperature.
- To use the correct quantity of detergent, check the water hardness of your domestic system. Refer to "Water hardness".

Water hardness

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener.

To find out the water hardness in your area, contact your local water authority.

Use the correct quantity of water softener. Follow the instructions that you find on the packaging of the product.

Drying hints

Prepare the drying cycle




- Open the water tap.
- Check if the drain hose is connected properly. Refer to installation chapter for more information.
- For the maximum laundry load of the drying programmes, refer to the drying programmes table.


Items not suitable for drying

- Very delicate items.
- Synthetic curtains.
- Pieces of clothing with metal inserts.
- Nylon stockings.
- Quilts.
- Bed covers.
- Duvets.
- Anoraks.
- Sleeping bags.
- Fabrics with residue of hair sprays, nail solvents or similar.
- Garments with foam-rubber or materials similar to foam-rubber.

Garment labels

When you dry the laundry, follow the indications on the labels of the manufacturers:

-  = The item can be tumble dried
-  = Dry at a high temperature
-  = Dry at a reduced temperature

-  = The item can not be tumble dried.

Drying cycle duration

The drying time can change depending on:

- speed of the last spin
- dryness level
- type of laundry
- weight of the load

Additional drying

If, at the end of the drying programme, the laundry is still damp, set a short drying cycle again.



Warning! To avoid creasing and shrinkage do not overdry the laundry.

General Tips

Refer to the «Drying programmes» table to find the **average** drying times.

To avoid the static charge at the end of the drying cycle:

1. Use fabric conditioner in the washing cycle.
2. Use special fabric conditioner for tumble dryers.

When the drying programme is completed remove the laundry promptly.

Care and cleaning



Warning! Refer to Safety chapters.

External cleaning

Clean the appliance with soap and warm water only. Fully dry all the surfaces.



Caution! Do not use alcohol, solvents or chemical products.

Descaling

If the water hardness in your area is high or moderate, we recommend that you use a water descaling product for washing machines.

Regularly examine the drum to prevent limescale and rust particles.

To remove rust particles use only special products for washing machines. Do this separately from the laundry wash.




Always follow the instructions that you find on the packaging of the product.

Maintenance wash

With the low temperature programmes it is possible that some detergent stays in the drum. Perform a maintenance wash regularly. To do this:





- Remove all laundry from the drum.
- Select the cotton programme with the highest temperature with a small quantity of detergent.

Door seal

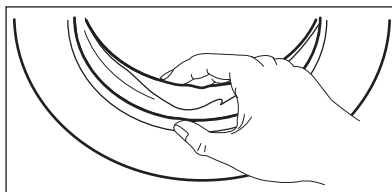

Regularly examine the seal and remove all objects from the inner part.

Cleaning the detergent dispenser

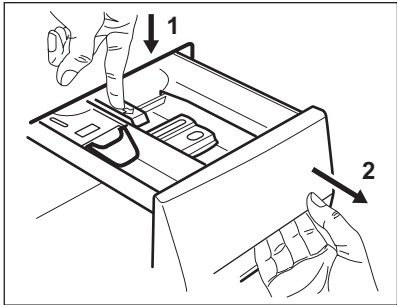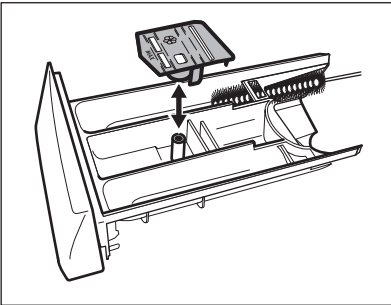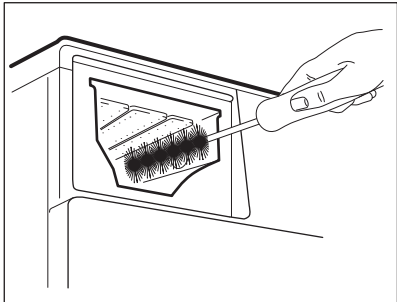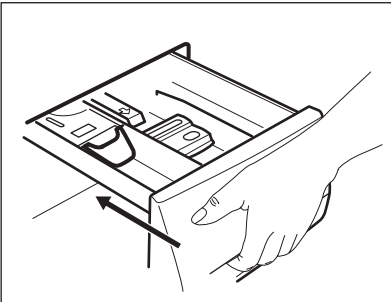1. 
2. 
3. 
4. 

Cleaning the drain filter



Do not clean the drain filter if the water in the appliance is hot.




Regularly check the drain pump filter and make sure that it is clean.




Repeat the steps 2 and 3 until the water stops flowing out.


1.

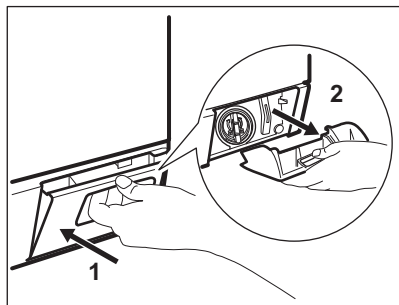


2.

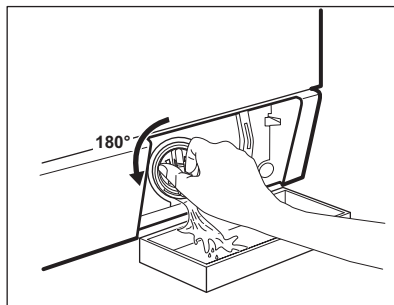


3.

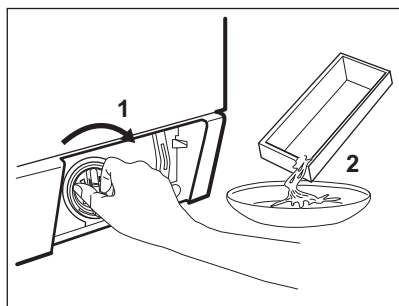


4.

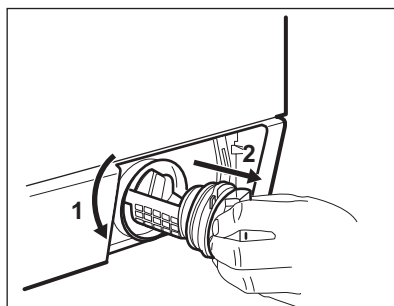


5.

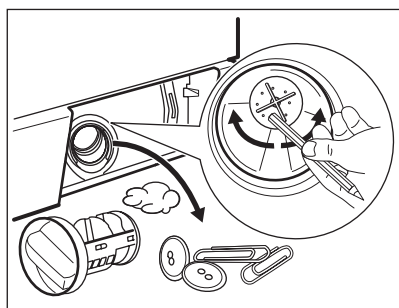

6.

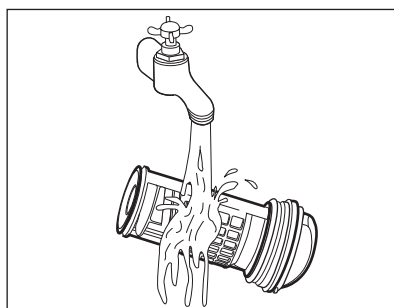


7.

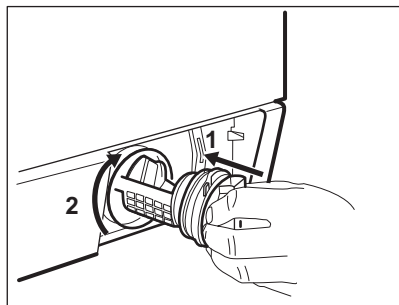

Always keep a rag nearby to dry up any water spillage.


8.

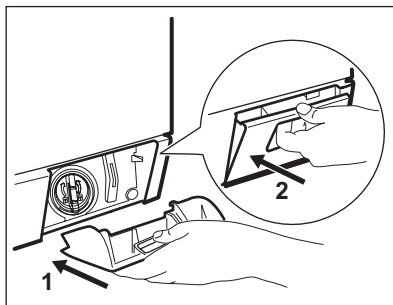


Make sure that the impeller of the pump can rotate. If it does not rotate, contact the Authorised Service Centre. Make sure also that you tighten the filter correctly to prevent leakages.

Cleaning the inlet hose and the valve filter


1.

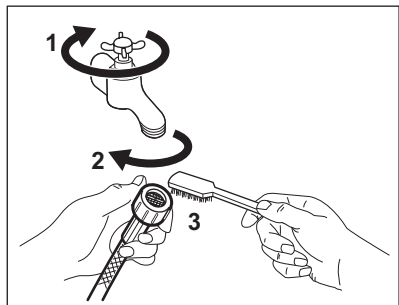

2.

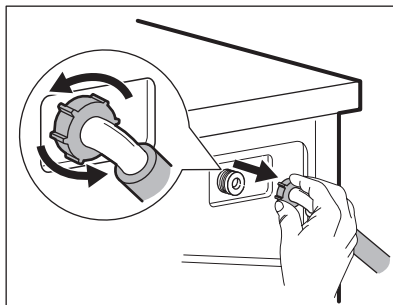

3.

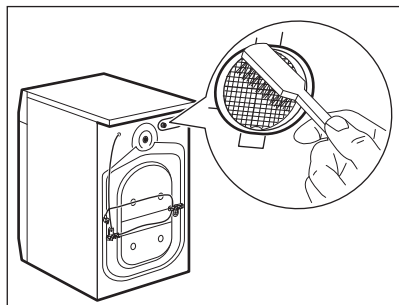

Emergency drain

Because of a malfunction, the appliance cannot drain the water.

If this occurs, do steps (1) through (8) of 'Cleaning the drain filter'. If necessary, clean the pump.

When you drain the water with the emergency drain procedure, you must activate the drain system again:


1. Put 2 litres of water in the main wash compartment of the detergent dispenser.
2. Start the programme to drain the water.

Frost precautions

If the appliance is installed in an area where the temperature can be less than 0° C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Put the two ends of the inlet hose in a container and let the water flow out of the hose.
4. Empty the drain pump. Refer to the emergency drain procedure.
5. When the drain pump is empty, install the inlet hose again.

4.

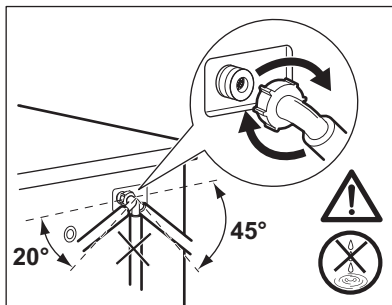

Warning! Make sure that the temperature is higher than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

Troubleshooting



Warning! Refer to Safety chapters.

Introduction

First try to find a solution to the problem (refer to the table). If the problem persists, contact the Authorised Service Centre.

With some problems, the acoustic signals operate and the display shows an alarm code:

- **E10** - The appliance does not fill with water properly.
- **E20** - The appliance does not drain the water.

- **E40** - The appliance door is open or not closed correctly. Please check the door!
- **E40** - The mains supply is unstable. Wait until the mains supply is stable.
- **E91** - No communication between electronic elements of the appliance. Switch off and switch on again.
- **E50** - The anti-flood device is on. Disconnect the appliance and close the water tap. Contact the Authorised Service Centre.



Warning! Deactivate the appliance before you do the checks.

Possible failures

Problem	Possible solution
The programme does not start.	<ul style="list-style-type: none">• Make sure that the mains plug is connected to the mains socket.• Make sure that the appliance door is closed.•• Make sure that there is not a damaged fuse in the fuse box.• Make sure that the Start/Pause button has been pressed.• If the delay start is set, cancel the setting or wait for the end of count-down.• Deactivate the Child Lock function if it is on.
The appliance does not fill with water properly.	<ul style="list-style-type: none">• Make sure that the water tap is open.• Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.• Make sure that the water tap is not clogged.• Make sure that the filter of the inlet hose and the filter of the valve are not clogged. Refer to "Care and cleaning".• Make sure that the inlet hose has no kinks or bends.• Make sure that the connection of the water inlet hose is correct.

Problem	Possible solution
The appliance does not fill with water and drain immediately.	<ul style="list-style-type: none"> Make sure that the drain hose is in the correct position. The hose may be too low.
The appliance does not drain the water.	<ul style="list-style-type: none"> Make sure that the sink spigot is not clogged. Make sure that the drain hose has no kinks or bends. Make sure that the drain filter is not clogged. If necessary, clean the filter. Refer to "Care and cleaning". Make sure that the connection of the drain hose is correct. Set the drain programme if you set a programme without drain phase. Set the drain programme if you set an option which ends with water in the tub.
The spin phase does not operate or the washing cycle lasts longer than usual.	<ul style="list-style-type: none"> Set the spin programme. Make sure that the drain filter is not clogged. If necessary, clean the filter. Refer to "Care and cleaning". This may be caused by balance problems. Adjust the items in the tub manually and start the spin phase again.
There is water on the floor.	<ul style="list-style-type: none"> Make sure that the couplings of the water hoses are tight and there is no water leakage. Make sure that the drain hose is not damaged. Make sure you use the correct type and quantity of detergent.
You cannot open the appliance door.	<ul style="list-style-type: none"> Make sure that the washing programme is finished. Set the drain or the spin programme if there is water in the drum. Make sure that the appliance receives electrical power. This problem may be caused by a failure of the appliance. Contact the Authorised Service Centre. If you need to open the door, please read carefully "Emergency door opening".
The appliance makes an unusual noise.	<ul style="list-style-type: none"> Make sure the levelling of the appliance is correct. Refer to installation leaflet. Make sure that the packaging and/or the transit bolts are removed. Refer to installation leaflet. Add more laundry to the drum. The load may be too small.
The cycle is shorter than the time displayed.	<ul style="list-style-type: none"> The appliance calculates a new time according to the laundry load. See the "Consumption Values" chapter.
The cycle is longer than the time displayed.	<ul style="list-style-type: none"> An unbalanced laundry load increases the duration time. This is the normal behaviour of the appliance.
The washing results are not satisfactory.	<ul style="list-style-type: none"> Increase the amount of detergent or use a different detergent. Use special products to remove stubborn stains before you wash the laundry. Make sure that you set the correct temperature. Decrease the laundry load.

Problem	Possible solution
You cannot set an option.	<ul style="list-style-type: none"> • Make sure that you press only the desired button(s).
The appliance does not dry or does not dry correctly.	<ul style="list-style-type: none"> • Turn the water tap on. • Make sure the drain filter is not clogged. • Reduce the laundry load. • Make sure you have set the correct cycle. If necessary, set the dryer for a short time again.
The laundry is covered with fluff.	<p>The fabrics washed in the previous cycle released fluff of a different colour:</p> <ul style="list-style-type: none"> • The drying phase helps to eliminate some fluff. • Clean the clothes with a fluff remover. <p>In case of an excessive amount of fluff in the drum run the special programme to clean it (refer to "How to remove fluff" for more details).</p>

After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the Authorised Service Centre.

If the display shows other alarm codes, deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

Emergency door opening

In case of power failure or functioning failure the appliance door remains locked. The washing programme continues when the power is restored. If the door remains locked in case of failure, it is possible to open it using the emergency unlock function.

Before opening the door:



Caution! Make sure that the water temperature is not too high and the laundry is not hot. If necessary, wait until they cool down.




Caution! Make sure that the drum is not rotating. If necessary, wait until the drum stops rotating.



Make sure that the water level inside the drum is not too high. If necessary, proceed with an emergency drain (refer to «Emergency drain» in «Care and cleaning» chapter).

To open the door, proceed as follows:

1. Press the On/Off button to switch the appliance off.
2. Disconnect the mains plug from the mains socket.
3. Open the filter flap.
4. Keep the emergency unlock trigger pulled downward and, at the same time, open the appliance door.

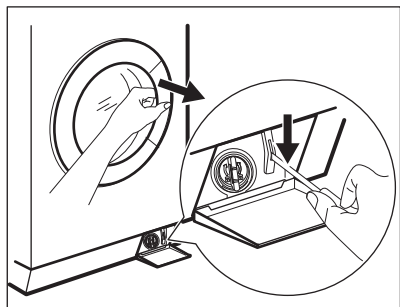

5. Take out the laundry and then close the appliance door.
6. Close the filter flap.

Technical Data

Dimension	Width/ Height/ Depth/ Total depth	600 mm/ 850 mm/ 605 mm/ 639 mm
Electrical connection	Voltage Overall power Fuse Frequency	230-240 V 2200 W 13 A 50 Hz
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture		IPX4
Water supply ¹⁾		Cold water
Water supply pressure 2)	Minimum Maximum	0,5 bar (0,05 MPa) 8 bar (0,8 MPa)
Maximum wash load	Cotton	9 kg
Maximum dry load	Cotton Synthetics	6 kg 3 kg
Spin Speed	Maximum	1600 rpm

1) Connect the water inlet hose to a water tap with a 3/4" thread.

2) The appliance works correctly if the water pressure is not lower than 0.05 MPa (0.5 bar). If you cannot connect the water inlet hose to the cold water tap of the primary hydraulic system, connect it to your domestic cold water storage system. Make sure not to exceed a distance of 5.02 m (16.5 ft) between the appliance inlet hose and the bottom of the water storage tank.

Repairs - after sales service

Your John Lewis appliance comes with a three year guarantee. Your original receipt acts as your guarantee. Please make sure you retain it. The guarantee does not cover you against faults caused by accidental damage or misuse. For further details visit johnlewis.com/customer-services. If it is not working correctly refer to the "Troubleshooting" chapter in this user manual. If a fault occurs which you can not resolve through following the advice and information contained within this instruction manual, the next step is to contact John Lewis technical support on:

0330 1230106

They will give you details for your local service engineer. Before calling out an engineer, please ensure you have read the details under the heading "Troubleshooting".

When you contact your local service engineer you will need to give the following details:

- 1. Your name, address and post code
- 2. Your telephone number
- 3. Clear and concise details of fault
- 4. The purchase date as found on your receipt
- 5. The model and serial number of the appliance.
So that you always have these numbers at hand, we recommend you to make a note of them here:
 - Mod.....
 - P.N.C.....
 - S.N.....

IMPORTANT: If you call out an engineer to a fault listed under the heading "Troubleshooting", or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Spare parts

Always insist on genuine spare parts.

An authorised service engineer should service this product, and only genuine spare parts should be used. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Please contact John Lewis technical support on 0330 1230106 for assistance.

Shopping is easy with John Lewis Shops

- John Lewis, Aberdeen 01224 625 000
- John Lewis, Basingstoke 01256 406200
- John Lewis, Bluewater 01322 624 123
- John Lewis, Brent Cross 020 8202 6535
- John Lewis, Birmingham 0345 604 9049
- John Lewis, Cambridge 01223 361 292
- John Lewis, Cardiff 02920 536 000
- John Lewis, Cheadle 0161 491 4914
- John Lewis, Chelmsford 0124 545 8400
- John Lewis, Cribbs Causeway 0117 959 1100
- John Lewis, Edinburgh 0131 556 9121
- John Lewis, Exeter 01392 284150
- John Lewis, Glasgow 0141 353 6677
- John Lewis, High Wycombe 01494 462 666
- John Lewis, Kingston 020 8547 3000
- John Lewis, Leicester 0116 242 5777
- John Lewis, Leeds 0113 3946299
- John Lewis, Liverpool 0151 709 7070
- John Lewis, Milton Keynes 01908 679 171
- John Lewis, Newcastle upon Tyne 0191 232 5000
- John Lewis, Norwich 01603 660 021
- John Lewis, Nottingham 0115 941 8282
- John Lewis, Oxford Street 020 7629 7711
- John Lewis, Peterborough 01733 344 644
- John Lewis, Reading 0118 957 5955
- John Lewis, Sheffield 0114 276 8511
- Peter Jones, Sloane Square 020 7730 3434
- John Lewis, Solihull 0121 704 1121


John Lewis, Southampton 02380 216 400
Knight & Lee, Southsea 02392 827 511
John Lewis, Stratford 020 8532 3500
John Lewis, The Trafford Centre 0161 491 4040
John Lewis, Watford 01923 244 266
John Lewis, Welwyn 01707 323 456

John Lewis at home

John Lewis, Ashford 01233 811 010
John Lewis, Chester 01244 393 880

John Lewis, Chichester 01243 813 030
John Lewis, Croydon 020 8662 4730
John Lewis, Horsham 01403 214 740
John Lewis, Ipswich 01473 275 850
John Lewis, Newbury 01635 263 980
John Lewis, Poole 01202 756 020
John Lewis, Swindon 01793 733 180
John Lewis, Tamworth 01827 300 580
John Lewis, Tunbridge Wells 01892 506 830
John Lewis, York 01904 557 950

ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances

marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.



132895212-A-442017 (Subject to change without notice.)