

Recommended bulb

1 x 6 Watt ES LED energy efficient classic clear bulb or

1 x 28W ES eco halogen classic bulb

Bulb not included

Specifications

Max. power: 40W

Voltage: 220-240V, 50Hz

Dimensions: H151 x W22 x D22cm

Weight: 3kg




Please retain these instructions for future use

John Lewis

User manual

Chrissie

Floor lamp

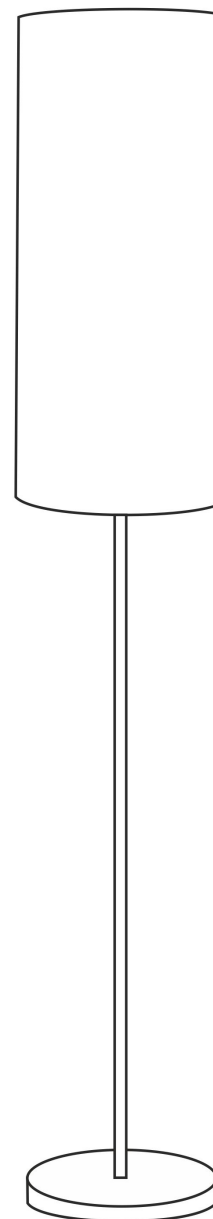

John Lewis Partnership

171 Victoria Street

London SW1E 5NN

johnlewis.com

Made in China

Thank you for purchasing this Chrissie floor lamp. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.


Warnings!

To prevent electric shock, switch off the mains supply before maintaining this product.

Ensure other persons cannot restore the electricity supply without your knowledge.

Always use the correct bulb type with the correct power rating as indicated in the 'specifications' section.

Never exceed the max. power rating.

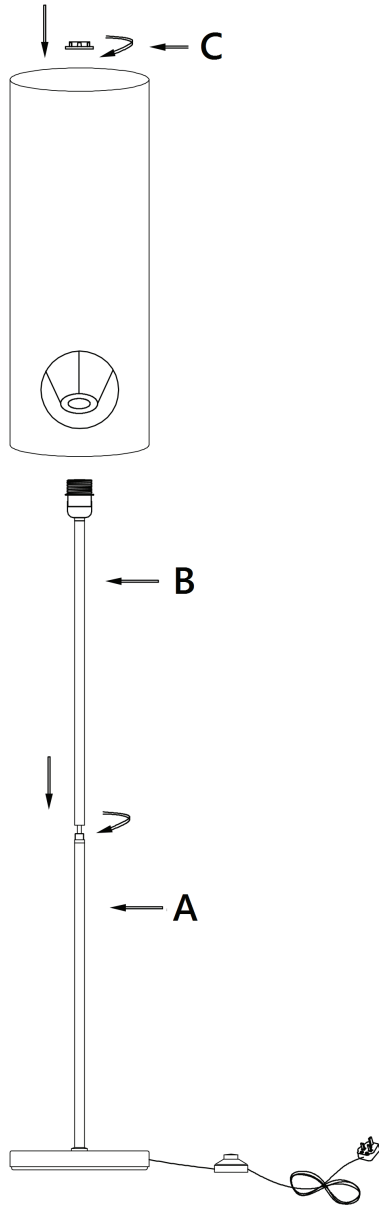

Assembly

1. Remove all protective packaging
IMPORTANT NOTICE
Plastic/plastic bags can be dangerous. To avoid danger and suffocation keep away from babies and children.
2. Screw metal lamp upper section B into lampbase lower section A until hand tight.
3. Ensure that the cable is not twisted, gently pull excess wire through foot part A and B.
4. Now remove the shade ring C, add the shade and secure with the shade ring.

Care instructions

Ensure that the product has been switched off allowed to cool, using a soft dry cloth wipe clean the shade and base sections only, do not wipe the bulb.

Before moving, ensure the product is switched off and to avoid damage lift the item by holding at part B only.