



Multi-Temp Jug Kettle
CPK17BPU

Cuisinart®

Congratulations on your purchase of the Cuisinart Multi-Temp Jug Kettle.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products visit our website www.cuisinart.co.uk

Contents

- Product Control Guide 4
- Important Safety Cautions 5
- Safety During Use 7
- Instructions for Use 8
 - A Control Panel 8
 - B Setting the Temperature. 9
 - C Operation 9
- Hints & Tips 11
- Cleaning & Maintenance. 11
- Descaling 11
- UK Guarantee & After Sales Service 12
- Wiring Instructions 13

Product Control Guide



Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- The appliance is not intended to be operated by means of external timer or separate remote-control system.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should always be supervised to ensure that they do not play with this product.
- Not for use by children. Keep out of reach of children during and after use.
- Whilst in use the surfaces will become hot. Do not touch hot surfaces. Always use the handle. Take care not to allow these to come into contact with other heat sensitive surfaces.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service" section for further information).
- Ensure all packaging materials and any promotional labels or stickers are removed from the kettle before first use.
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.

- Do not use any attachments or accessories other than those recommended or sold by Cuisinart.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not allow the lead to come into contact with hot surfaces.
- Always ensure that your hands are dry before removing the plug from the mains outlet. Never pull the plug out of the mains socket by the lead.
- Do not allow the lead to overhang the edge of a kitchen table or worktop.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or unit in water or other liquids.
- Unplug from the mains when not in use and before cleaning. Allow to cool before cleaning the appliance.
- For indoor, domestic use only.
- Do not wrap the lead around the main body of the appliance during or after use.
- This appliance should be used only for preparation of drinks as described within the instructions for use that accompany it. Please retain these instructions for future reference.
- Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Electrical Safety of Domestic Appliances).



WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.


Safety During Use


- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not exceed the maximum fill level as clearly marked on the water level indicator. If the kettle is overfilled, boiling water may be ejected.
- The kettle must only be used with the stand provided.
- Do not turn the kettle power on when there is no water in the jug.
- Always close the lid before plugging in and turning on the kettle.
- Whilst in use the surfaces will become hot. Do not touch hot surfaces. Always use the handle.
- Avoid steam from the nozzle and the lid.
- Do not open lid whilst the water is boiling as scalding may occur.
- Ensure that the kettle is switched off before removing the kettle jug from the base.
- To help prevent build-up of hard water limescale, empty the water from the kettle after each use.
- Switch off and unplug the appliance after use.

Instructions for Use

Before using for the first time we recommend operating the kettle 2 or 3 times. This will remove any dust or residue remaining from its manufacture. Fill to the MAX mark fill level (1.7L), bring to the boil and when boiling has finished and the kettle has switched off, discard the water and rinse out the inside.

A Control Panel

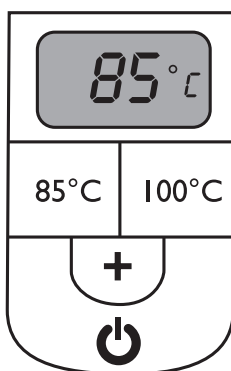

-  **On/Off button**
Used to turn the kettle on and off.
- +** **button**
Used to increase the temperature in increments of 5 degrees from 85°C through to 100°C.
- 85°C button**
Temperature setting for coffee and variety of teas (refer to quick reference guide on page 10).
- 100°C button**
Temperature setting for boiling water for a variety of teas (refer to quick reference guide on page 10).
- Digital display window (LCD)**
Displays current water temperature.

B Setting the Temperature

Achieving the correct water brewing temperature is essential for optimum flavour extraction of tea and coffee. The quick reference guide below shows the ideal brewing temperatures for different types of teas and coffees. Brewing temperature for green tea and black tea vary considerably; as green tea won't maintain its flavour or therapeutic properties if the water is too hot and black tea will never reach its peak if the water is not hot enough.

Water temperature	Drinks
85°C	White teas e.g. White Peach, Ginger and Lemon, Green teas e.g. Sencha, Gunpowder and Jasmine and black instant coffee
90°C	Oolong
95°C	French press/cafetiere coffee
100°C	Black teas e.g. Earl Grey, Ceylon and Darjeeling and herbal teas e.g. Chamomile, Peppermint and Dandelion

If drinks require a lower temperature than the above, the kettle should be supervised and switched off once it reaches the desired temperature. The LCD shows the temperature reading in 5 degree increments.

C Operation

- Open the lid by pressing the lid release button located on the top of the handle.
- Fill the kettle with the required amount of cold water. The water gauge is at the rear of the kettle and is marked with min (0.5L) and max (1.7L) and 2 cup and 4 cup markers.
N.B. Take care not to exceed the max mark as this may cause spitting or leaking from the spout when boiling.
- Push the lid closed; you will feel and hear a slight click.
- Align the kettle over the powerbase and gently lower it into position, sitting firmly on the base.
- Plug the kettle into the mains; the LCD and water indicator window on the back of the kettle will illuminate and the LCD will show the current water temperature (the water temperature will be displayed to the nearest 5 degrees, e.g. 20°C).
N.B. On initial use the LCD window will show the current water temperature.
- Press the 85°C button for coffee or green and white tea or the 100°C button for black or herbal teas (the selected temperature button will illuminate and the temperature selected will be shown in the LCD window, flashing continuously until the kettle is started).

- If you want to manually set the temperature, press the '+' button located on the handle. This will increase the temperature in 5 degree increments from 85°C through to 100°C. The temperature can only be increased from a starting temperature of 85°C.

- Press the On/Off switch to start boiling; a beep will sound for 1 second to indicate that heating has started.

N.B. If the on/off switch is pressed but the temperature has not been set, the kettle will default to 100°C.

- When the kettle has reached the selected temperature it will beep 5 times and switch off. The kettle can be switched off at any time by pressing the On/Off button located on the handle. When this happens, the LCD will display the actual water temperature. If the On/Off button is pressed again the LCD will display 100°C and it will boil to this temperature.

N.B. The temperature can be changed anytime during the boiling process by pressing one of the preset temperature options or setting the temperature manually. If the temperature selected during boiling is lower than the temperature of the water in the kettle, it will switch off immediately and beep 5 times; the LCD will display the current water temperature.

N.B. When the unit is not in operation for 1 minute it will switch into ECO stand-by mode. The LCD window and internal illumination on the control pad and water level indicator will stay on.

- Once the water has boiled and the kettle has switched off, carefully lift the kettle off the powerbase and pour the water into a suitable mug or cup.

- If the kettle is removed from the powerbase before it automatically switches off and is then put back on the powerbase it will not continue to boil and will need to be reset.

N.B. A couple of water droplets or condensation may appear on the powerbase, this is quite normal and not a leak.

N.B. Do not open the lid of the kettle when pouring or during the heating process as escaping steam may scald.

Hints & Tips

- Always use fresh, cold water each time you boil.

N.B. For your safety, always close the lid when the kettle is in use.

- If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.
- For best results, empty the kettle after each use. Do not leave water standing in the kettle. This is to help prevent build up of hard water limescale.

Cleaning & Maintenance

- Always unplug the appliance from the mains outlet before cleaning.
- Allow to cool before cleaning the appliance.
- Clean the exterior surface of the kettle with a clean damp cloth to preserve its original high quality finish. Dry and polish with a soft cloth.
- Clean the water filter with a soft, clean, damp cloth once a month or as necessary.
- Do not use abrasive cleaners or scouring agents of any kind on the interior or exterior of the kettle.

WARNING! Do not immerse the kettle or power base in water or other liquid. Ensure the electric kettle socket is kept dry.

Descaling

- To get the best performance from your Cuisinart Multi-Temp Jug Kettle, we recommend descaling it from time to time. Frequency depends on the hardness of your tap water and how often you use your kettle.
- We suggest use of a kettle descaler in order to dissolve the scale. Simply follow the manufacturer's guidelines on the packaging.
- Alternatively pour in enough white vinegar to cover the bottom of the kettle by about 2cm. Bring the vinegar to the boil; you may need to repeat this several times with cooled vinegar to remove the build-up completely. When the kettle is descaled, empty the kettle and rinse out several times with clean water. Take care not to inhale fumes.

UK Guarantee

This Cuisinart appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. No responsibility will be accepted for any damage caused in transit. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

The return address is:

Customer Care Centre
Conair Logistics
Unit 4 Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW


Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

UK Wiring Instructions

The wires in the mains lead are coloured in accordance with the following code:

- BLUE = NEUTRAL
- BROWN = LIVE
- YELLOW & GREEN = EARTH


As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L
- The wire which is coloured YELLOW & GREEN must be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 13A fuse.

If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 13A fuse must be fitted.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

www.cuisinart.co.uk