

# Contents

<b>1</b>	<b>Instructions</b>	<b>74</b>
1.1	General safety instructions	74
1.2	Instructions for using microwaves	75
1.3	Manufacturer liability	77
1.4	Appliance purpose	77
1.5	Identification plate	77
1.6	Disposal	77
1.7	This user manual	78
1.8	How to read the user manual	78
<b>2</b>	<b>Description</b>	<b>79</b>
2.1	General Description	79
2.2	Control panel	79
2.3	Other parts	80
2.4	Microwaves	80
2.5	Available accessories	81
<b>3</b>	<b>Use</b>	<b>82</b>
3.1	Instructions	82
3.2	First use	84
3.3	Using the accessories	84
3.4	Using the oven	85
3.5	Traditional cooking tips	94
3.6	Special functions	99
3.7	Preset recipes	108
3.8	Personal recipes	118
3.9	Settings	124
<b>4</b>	<b>Cleaning and maintenance</b>	<b>130</b>
4.1	Instructions	130
4.2	Cleaning the surfaces	130
4.3	Ordinary daily cleaning	130
4.4	Food stains or residues	131
4.5	Drying	131
4.6	Cleaning the door glazing	131
4.7	Cleaning the inside of the oven cavity	131
4.8	Vapor Clean	133
<b>5</b>	<b>Installation</b>	<b>137</b>
5.1	Electrical connection	137
5.2	Cable replacement	137
5.3	Positioning	138

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: [www.smeg.com](http://www.smeg.com)



## 1 Instructions

### IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY AND RETAIN FOR FUTURE USE.

#### 1.1 General safety instructions

##### Risk of personal injury

- **WARNING:** If the door or the door seal is damaged, the oven must not be used until it has been repaired by a competent person.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which offers protection against exposure to microwave energy.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- **WARNING:** During use the appliance and its accessible parts become very hot.
- Never touch the heating elements during use.
- Keep children under eight years of age at a safe distance if they are not constantly supervised.
- This appliance may be used by children aged at least 8 and by people of reduced physical and mental capacity, or lacking in experience in the use of electrical appliances, as long they are supervised or instructed by adults who are responsible for their safety.
- Children must never play with the appliance.
- The appliance must never be cleaned by unsupervised children.
- Switch off the appliance immediately after use.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Never attempt to extinguish a flame or fire with water.
- Have qualified personnel carry out installation and assistance interventions according to the standards in force.
- Do not modify this appliance.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.



- Do not try to repair the appliance yourself or without the intervention of a qualified technician.
- If the power supply cable is damaged, contact technical support immediately and they will replace it.

## Risk of damaging the appliance

- Do not use abrasive or corrosive detergents on glass parts (e.g. powder products, stain removers and metallic sponges).
- Use wooden or plastic utensils.
- Do not use a steam jet to clean the appliance.
- Do not obstruct ventilation openings and heat dispersal slots.
- Never leave the appliance unattended during cooking operations where fats or oils could be released.
- Do not use the appliance to heat rooms for any reason.
- Do not rest any weight or sit on the open door of the appliance.
- Take care that no objects are stuck in the doors.

## 1.2 Instructions for using microwaves

- Check the appliance visually during the cooking of foods in plastic or paper containers.



Improper use  
Danger of explosion



- When using the microwave to heat or reheat liquids, the boiling process may be delayed – boiling temperature can be reached without the formation of the usual "rolling boil". This delayed boiling and consequent superheating of the liquid can generate an explosion inside the appliance, or sudden boiling over of the superheated liquid can occur when removing the container from the appliance. To avoid these dangers, it is necessary to insert the supplied boiling rod (or a heat-resistant plastic spoon) in the container while heating.
- Use the microwave only for the preparation of food for consumption. Other types of applications are strictly forbidden



## Instructions

- (e.g. drying clothes, warming slippers, sponges, wet cloths or the like, dehydrating foods) because they can lead to the risk of injury or fire.
- Clean the appliance constantly and remove any food residue.
  - Do not use the microwave to dry food.
  - Do not use the microwave to heat oils or fry.
  - Do not use the appliance to heat foods or beverages containing alcohol.
  - Baby food should not be heated in sealed containers. Remove the cover or the teat (in the case of baby bottles). Always check the preparation's temperature once heating has completed, it should not be too high. For an even temperature and to avoid scalding stir or shake the contents.
  - Do not heat eggs in their shells or whole hard boiled eggs; they may explode even after the heating process has completed.
  - Before cooking food with a hard skin or peel (e.g. potatoes, apples, etc.) it is necessary to puncture the skin.
  - Do not heat food contained within food packages.
  - Do not use the microwave functions when the oven is empty.
  - Use cookware and utensils that are suitable for use in a microwave oven.
  - Do not use aluminium containers to cook food.
  - Do not use dishes with metallic decorations (gold-plated or silver).
  - The appliance operates in the 2.4GHz ISM band.
  - In compliance with the provisions relating to electromagnetic compatibility the appliance belongs to group 2 and class B (EN 55011).
  - This appliance complies with the standards and directives currently in force concerning safety and electromagnetic compatibility. It is however recommended for pacemaker wearers to maintain a minimum distance of 20-30cm between the microwave when it is operating and the pacemaker. Consult the pacemaker manufacturer for more information.



## 1.3 Manufacturer liability

The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than the one envisaged;
- Non-observance of the user manual provisions;
- Tampering with any part of the appliance;
- Use of non-original spare parts.

## 1.4 Appliance purpose

- This appliance is intended for cooking food in the home environment. Every other use is considered inappropriate. It cannot be used:
  - in employee kitchens, shops, offices and other working environments.
  - in farms/agritourism establishments.
  - by guests in hotels, motels and residential environments.
  - in bed and breakfast establishments.
- The appliance is not designed to operate with external timers or with remote-control systems.

## 1.5 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

## 1.6 Disposal



This appliance must be disposed of separately from other waste (Directives 2002/95/EC, 2002/96/EC, 2003/108/EC). The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.



### Power voltage Danger of electrocution

- Disconnect the main power supply.
- Disconnect the power cable from the electrical system.

To dispose of the appliance:

- Cut the power supply cable and remove it along with the plug (if present).
- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.

Our appliances are packed in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



### Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the packaging plastic bags.



# Instructions

## 1.7 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

- Read this user manual carefully before using the appliance.

## 1.8 How to read the user manual

This user manual uses the following reading conventions:

### Instructions



General information on this user manual, on safety and final disposal.

### Description



Description of the appliance and its accessories.

### Use



Information on the use of the appliance and its accessories, cooking advice.

### Cleaning and maintenance



Information for proper cleaning and maintenance of the appliance.

### Installation



Information for the qualified technician: Installation, operation and inspection.



Safety instructions



Information



Advice


1. Use instruction sequence.

- Single use instruction.



## 2 Description

### 2.1 General Description

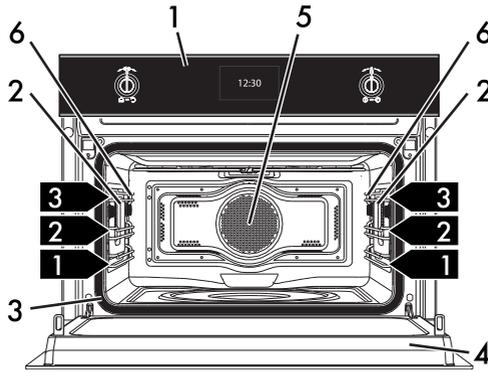

1 Control panel

2 LH light

3 Seal


4 Door

5 Fan

6 Rack/tray support frames

**1,2,3** Frame shelf

### 2.2 Control panel

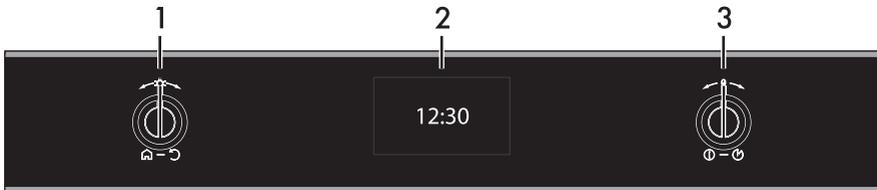

#### 1 Return knob

This knob allows you to return to the previous item in the appliance's menu. It also lets you manually turn the oven light on and off.

#### 2 Display

Displays the current time, the cooking parameters, and all the appliance's functions.

#### 3 Control knob

This knob allows you to turn the appliance on and off and select the various available functions.

Turn the knob right or left to change/select the required item. Press to confirm.



Keep the knob pressed in for at least 5 seconds to immediately complete any cooking operation.

EN




## Description

### 2.3 Other parts

#### Shelves

The appliance features shelves to position trays and racks at different heights. The insertion heights are indicated from the bottom upwards (see 2.1 General Description).

#### Cooling fan

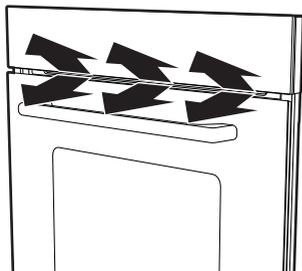

The fan cools the appliance and comes into operation during cooking.

The fan causes a steady outflow of air from above the door which may continue for a brief period of time even after the appliance has been turned off.

#### Interior lighting

The appliance's interior lighting comes on:

- When the door is opened.
- When any function is selected, apart from the Sabbath  and Vapor Clean  functions.
- Turning the return knob to the right or left when no function is selected (turn the temperature knob to the right or left again to switch off the internal lighting).

In order to save energy, the light turns off after a minute at the start of cooking (this function can be deactivated via the secondary menu).

#### 2.4 Microwaves

The appliance is equipped with a microwave generator called a magnetron. The microwaves generated are evenly emitted into the oven cavity in order to reach the food and heat it.

Heating takes place through the process of friction between the molecules contained within the food (mainly water molecules), with the consequent generation of heat.

The heat generated directly inside the food allows defrosting, re-heating or cooking in a shorter length of time compared to traditional cooking.

The use of suitable containers for microwave cooking allows the microwaves to reach the food in a uniform manner (see Materials suitable for microwaves).




## 2.5 Available accessories




Some models are not provided with all accessories.

### Rack

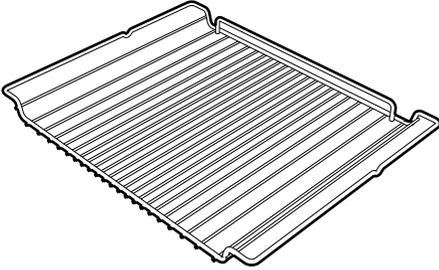


Used for supporting containers with food during cooking.

### Glass dish

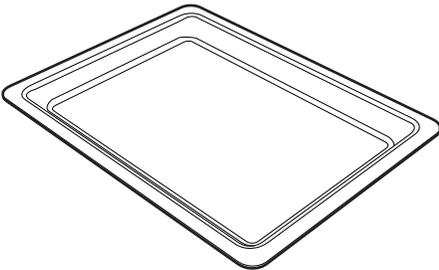

Used for any type of cooking and collecting fat from foods placed on the rack above.

### Tray rack

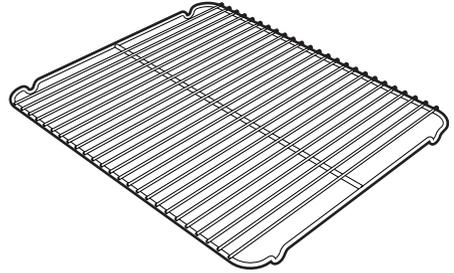

To be placed above the glass dish. To cook foods which may drip.

### Boiling rod



To be placed in containers when heating liquids, necessary to avoid delayed boiling.



The oven accessories that may come into contact with food are made of materials in accordance with the provisions of current legislation.



Original supplied and optional accessories can be requested to Authorised Assistance Centres. Use only original accessories supplied by the manufacturer.



## 3 Use

### 3.1 Instructions



**High temperature inside the oven during use**

**Danger of burns**

- Keep the oven door closed during cooking.
- Protect your hands wearing heat resistant gloves when moving food inside the oven.
- Do not touch the heating elements inside the oven.
- Do not pour water directly onto very hot trays.
- Do not allow children to approach the appliance when it is in operation.



**Improper use**

**Risk of damage to surfaces**

- Do not cover the bottom of the oven cavity with aluminium or tin foil sheets.
- If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven.
- Do not bang or drag cookware over the glazed bottom of the oven cavity.
- Do not pour water directly onto very hot trays.



**High temperature inside the oven during use**

**Danger of fire or explosion**

- Do not spray any spray products near the appliance.
- Do not use or leave flammable materials near the appliance.
- Do not use plastic kitchenware for cooking food (except with the microwave function).
- Do not put sealed tins or containers in the oven.
- Never leave the appliance unattended during cooking operations where fats or oils could be released.
- Remove all trays and racks which are not required during cooking.



## Materials suitable for microwaves

In general, in order for all of the food to be reached, the materials used for microwave cooking must be transparent to microwave energy.

Below is a table of materials to use and those not to use:

### MATERIALS TO USE

#### Glass\*

- Baking ware Always remove the covers.
- Glasses
- Glass jars

#### Porcelain

#### Ceramic

#### Plastic\*

- Containers Only where suitable for microwave use.
- Plastic wrap Where film is used it must not come into contact with the food.

\*only if heat-resistant

### NOT TO BE USED

#### Metal

- Aluminium foil
- Aluminium trays These can lead to arcing or sparks.
- Plates
- Metal utensils
- Freezer bags tie wraps

#### Wood

#### Crystal glasses

**Paper** Risk of fire.

**Expanded polystyrene containers** Risk of food contamination.

\*only if heat-resistant



Dishes must be free of metal decorations.

## Testing dishes



The microwave function can be used without any food inside the oven only for this test.

To check whether or not cookware is suitable for use with microwave cooking carry out this simple test:

1. Remove all accessories from the oven cavity.
2. Place the cookware to be tested on the rack inserted in the first runner.
3. Select the maximum power level (e.g. 1000W).
4. Set a cooking time of 30 seconds.
5. Start cooking.




**Unsuitable cookware**  
**Risk of damage to the appliance**

- If there is crackling or if sparks are emitted from the cookware then immediately terminate the test. In this instance the cookware is not suitable for microwave cooking.
6. At the end of the test the cookware must be either cold or slightly warm. If the cookware is hot then it should be considered as unsuitable for microwave use.



## 3.2 First use

1. Remove any protective film from the outside or inside of the appliance, including accessories.
2. Remove any labels (apart from the technical data plate) from the accessories and from the oven cavity.
3. Remove and wash all the appliance accessories (see 4 Cleaning and maintenance).
4. Heat the empty oven at maximum temperature (using the traditional functions) so as to remove any manufacturing residues.

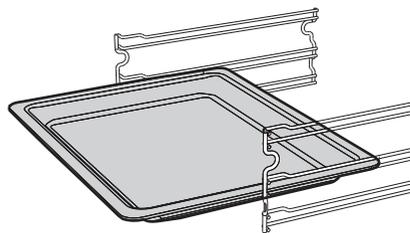

**High temperature  
Danger of burns**

- When using any of the microwave functions the rack can become very hot. Use heat-proof gloves for handling.



For the first reheating use a traditional function and not a microwave function.



Gently insert racks and trays into the oven until they come to a stop.




Clean the trays before using them for the first time to remove any residues left by the manufacturing process.

## 3.3 Using the accessories

### Racks and trays


Racks and trays have to be inserted into the side guides until they come to a complete stop.

- The mechanical safety locks that prevent the rack from being removed accidentally must face downwards towards the back of the oven.

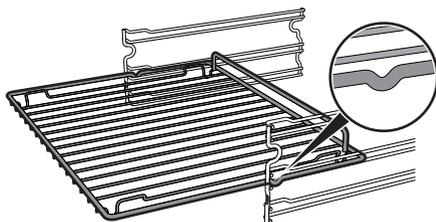

### Tray rack

The tray rack has to be inserted into the tray. In this way fat can be collected separately from the food which is being cooked.

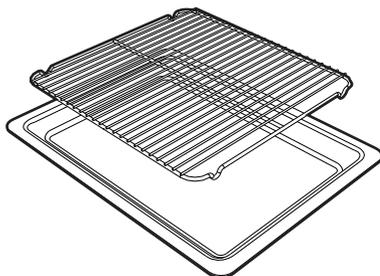



## Boiling rod

When using the microwave to heat or reheat liquids, the boiling process may be delayed while the liquids nevertheless exceed 100 degrees. To avoid this, place the boiling rod (or a heat-resistant plastic spoon) supplied into the container while heating.



### Improper use Danger of explosion/burns

- To avoid the danger of explosion inside the appliance or the sudden boiling over of superheated liquids, it is always necessary to immerse the boiling rod in the liquid being heated.




### High temperature Risk of damage to the accessory

- Use the boiling rod only with Microwave functions. The rod must not be used with combination and traditional functions.

## 3.4 Using the oven

### First use

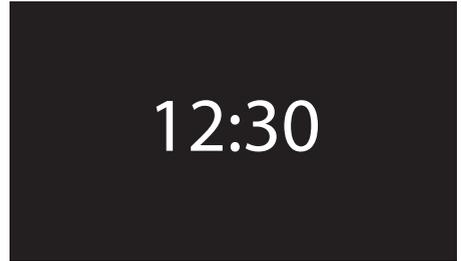

On the first use, or after a power failure, **00:00** will be flashing on the appliance's display. In order to be able to start any cooking operation, the current time must be set (if the oven is being turned on for the first time, it is also recommended you set the required language).

Press the control knob to enter the settings menu.



The appliance language is set to "English" by default.



When first connecting or after the power has been cut for a time it will be necessary to wait a few seconds before you can interact with the appliance.



# Use



## Microwave functions



**Improper use**  
**Risk of damage to the appliance**


When using the microwave functions, food must be placed in a suitable container on the rack inserted in the first runner.

**DO NOT USE CONTAINERS/ ACCESSORIES (trays, glass dishes, etc.) PLACED DIRECTLY ON THE FLOOR OF THE OVEN.**

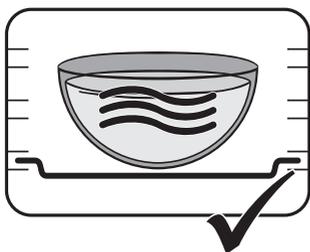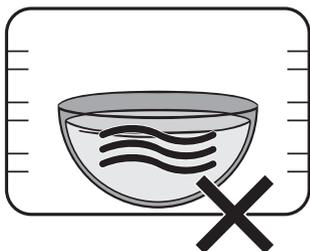


For perfect results with long microwave and combination cooking functions, food should be stirred once or twice during cooking.

1. Press the control knob to activate the appliance.
2. From the main menu, turn the control knob to select "cooking functions".
3. Select "cooking functions" from the menu by pressing the control knob.

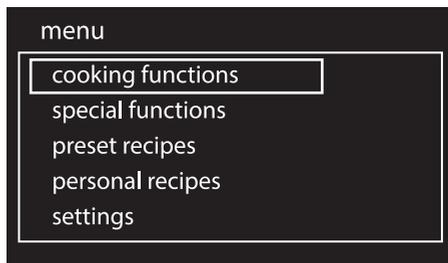

4. Turn the control knob to select the required function.

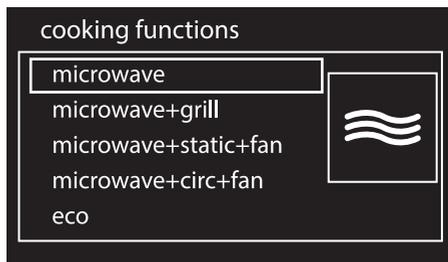


When cooking using only the microwave function, the appliance does not perform preheating. The food can be placed immediately inside the appliance.



5. Press the control knob to confirm the selection.




10. Press the control knob again to start microwave cooking.

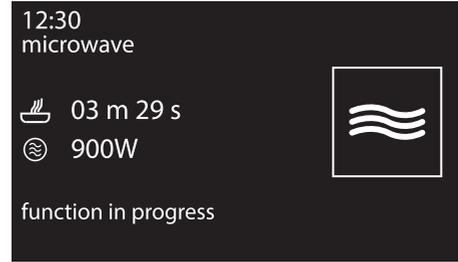


6. Turn the control knob to modify the cooking duration.



11. At the end of the cooking cycle, "microwave function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the control knob.

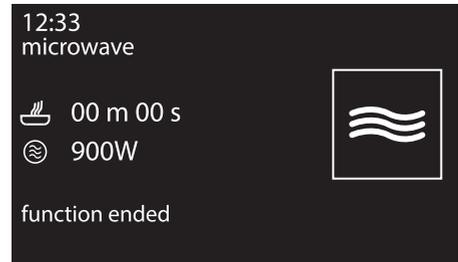

7. Press to confirm the set cooking duration.
8. Turn the control knob to change the microwave power level (from 100W to 1000W).

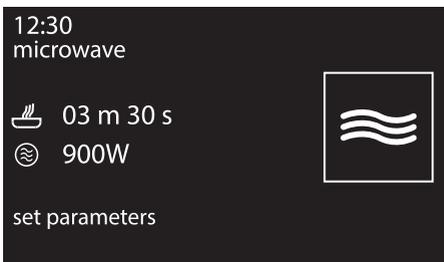

9. Press to confirm the set cooking duration.



# Use

## Microwave power levels

Below is a list of the power levels that can be selected:

Power (W)	Useful for
100	Defrosting food
200	
300	
400	Cooking meat or delicate cooking
500	
600	Re-heating and cooking food
700	
800	
900	
1000	Heating liquids

## QUICK START microwave function



The QUICK START function allows the microwave to be started quickly. This is useful for heating small quantities of liquid or food.

1. Press the return knob with the appliance in stand-by.
2. Press the control knob to confirm the QUICK START function.

12:30  
microwave

01 m 00 s

1000W



press right control to start

The appliance will start the microwave oven with the default settings.

## Combination functions



Combination cooking is a mix of traditional cooking and microwave operation.

## Combination functions list



Improper use

**Risk of damage to the appliance**

- Do not use the combination functions to heat or boil liquids.



**Microwave + Grill**

The use of the grill results in perfect browning of the food's surface. Using the microwave on the other hand leads to rapid internal cooking of the food.



**Microwave + Static + Fan**

The operation of the fan, combined with traditional cooking, ensures consistent cooking even with complex recipes. Using the microwave on the other hand leads to rapid internal cooking of the food.




**Microwave + Circulaire + fan**


For combination cooking of food in a short time thanks to the microwave action working together with hot air circulation.




1. Press the control knob to activate the appliance.
2. From the main menu, turn the control knob to select "cooking functions".
3. Press the control knob to confirm the selection.

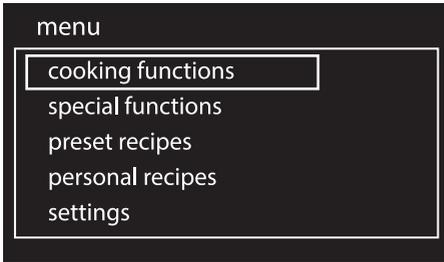

4. Turn the control knob to select a "combination" function.

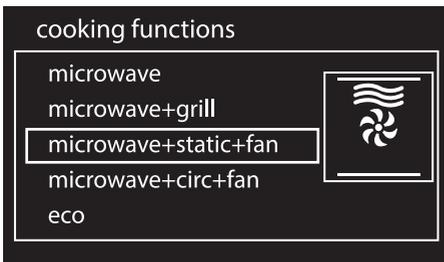


5. Press the control knob to confirm the selected function. The display shows the screen for setting the parameters of the selected combination function.

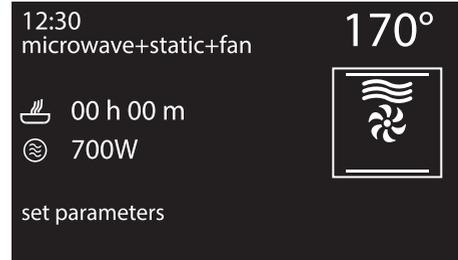

**i** With the combination Microwave+Grill function, given the type of cooking and in order to cook more quickly preheating is not performed.


6. Turn the control knob to modify the cooking temperature.
7. Press the control knob to confirm the cooking temperature set (for example 200°C).

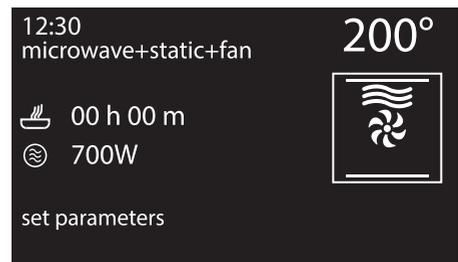




## Use


- Turn the control knob to modify the cooking duration.
- Press the control knob to confirm the cooking time set (for example 15 minutes).

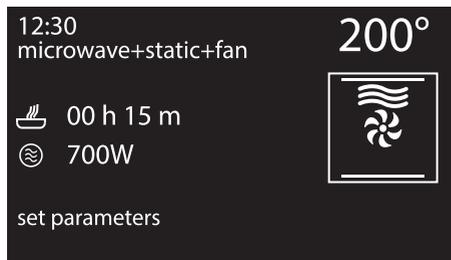

- The appliance will begin preheating. The display will show the chosen function, the pre-set temperature, the current time and the progress bar of the temperature reached (preheating).

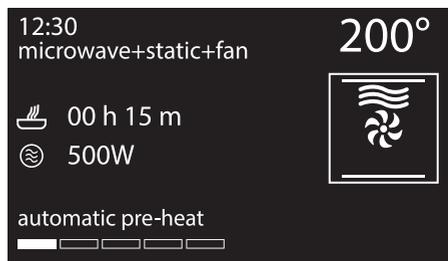

- Turn the control knob to change the microwave power level (from 100W to 700W).
- Press the control knob to confirm the microwave power level (for example 500W).

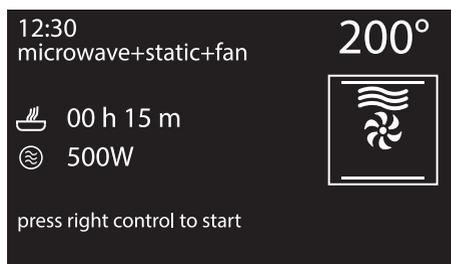

With the combination Microwave+Grill function, given the type of cooking and in order to cook more quickly preheating is not performed.

Turn the control knob to change the preset temperature. Press to confirm or wait 5 seconds.

- Press the control knob again to start the set combination cooking.



14. When the preheating stage is over, a buzzer will sound to indicate that the food can be placed inside the oven.

12:40  
microwave+static+fan **200°**

00 h 15 m  
 500W

put the food in the oven  
and press the right control

15. After placing the food in the oven, press the control knob to start cooking.

12:41  
microwave+static+fan **200°**

00 h 14 m  
 500W

function in progress



Cooking can be interrupted at any time by pressing and holding the control knob for a few seconds.

## Traditional functions

1. Press the control knob to activate the appliance.
2. From the main menu, turn the control knob to select "cooking functions".
3. Press the control knob to confirm the selection.

menu

cooking functions  
special functions  
preset recipes  
personal recipes  
settings

4. Turn the control knob to select a "traditional" function.
5. Press the control knob to confirm the selection.

cooking functions


microwave+circ+fan  
eco  
static  
grill  
fan assisted





# Use

6. The appliance will begin preheating. The display will show the chosen function, the pre-set temperature, the current time and the progress bar of the temperature reached (preheating).

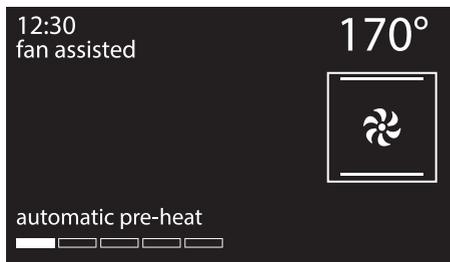

To extend the cooking time manually, press the control knob again. The appliance will resume its normal operation with the previously selected cooking settings.



For safety reasons, it is not possible to set the cooking end time by itself without setting the cooking duration.


## Interrupting a function

To interrupt a cooking function:

1. Press the return knob.
2. Select the required option.
3. Press the return knob to confirm.

Turn the control knob to change the preset temperature. Press to confirm or wait 5 seconds.

7. When the preheating stage is over a buzzer will sound to indicate that the food can be placed inside the oven and cooking will start automatically.

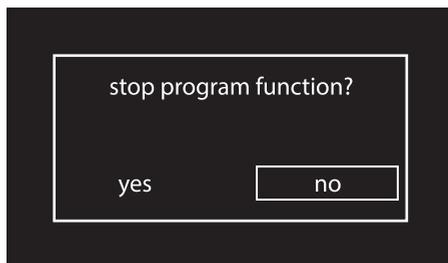

Keep the control knob pressed in for at least 5 seconds to interrupt cooking immediately at any time and return to the main menu.



## Traditional functions list

ECO

### Eco

The combination of the fan and the circulaire heating element, in ECO mode, is particularly indicated for cooking on a single shelf, with reduced power consumption.

### Static

As the heat comes from above and below at the same time, this system is particularly suitable for certain types of food. Traditional cooking, also known as static cooking, is suitable for cooking just one dish at a time. Ideal for pies, bread and casseroles. It is also suitable for fatty meat such as duck and goose.

### Grill

The heat coming from the grill element gives perfect grilling results above all for thin and medium thickness meat and, in combination with the rotisserie (where fitted), gives the food an even browning at the end of cooking. Ideal for grilled cheese and gratinating. This function enables large quantities of food, particularly meat, to be grilled evenly.



### Fan assisted

The operation of the fan, combined with traditional cooking, ensures consistent cooking even with complex recipes. Perfect for roasts.



### Fan with grill

The air produced by the fan softens the strong heatwave generated by the grill, perfectly grilling even very thick cuts of meat such as steaks, pork chops, etc.



### Fan + lower element

The combination of the fan with just the lower heating element allows cooking to be completed more rapidly. This system is recommended for sterilising or for finishing off the cooking of foods which are already well-cooked on the surface, but not inside, which therefore need a little more heat. Perfect for any type of food.



## Circulaire

The combination of the fan and the circulaire heating element (incorporated in the rear of the oven) allows you to cook different foods on several shelves, as long as they need the same temperatures and the same type of cooking. Hot air circulation ensures instant and even distribution of heat. It will be possible, for instance, to cook fish, vegetables and biscuits simultaneously (on different levels) without odours and flavours mingling.



## Turbo

The combination of fan assisted cooking and traditional cooking allows different foods to be cooked on several levels extremely quickly and efficiently, without odours and flavours mingling. Perfect for large volumes that call for intense cooking.

To obtain a rotisserie effect, set the temperature to maximum. When the appliance reaches maximum temperature, return the temperature to normal. This procedure seals the liquids inside the meat, and reduces shrinkage.

## 3.5 Traditional cooking tips

### General advice

- Use a fan assisted function to achieve consistent cooking at several levels.
- It is not possible to shorten cooking times by increasing the temperature (the food could be overcooked on the outside and undercooked on the inside).

### Advice for cooking meat

- Cooking times vary according to the thickness and quality of the food and to consumer taste.
- Use a meat thermometer when roasting meat, or simply press on the roast with a spoon. If it is hard, it is ready; If not, it needs another few minutes cooking.

### Advice for cooking with the Grill and the Fan with grill

- Meat can be grilled even when it is put into the cold oven or into the preheated oven if you wish to change the effect of the cooking.
- When using the Fan with grill function, we recommend that you preheat the oven before grilling.
- We recommend placing the food at the centre of the rack.



### Advice for cooking desserts/pastries and biscuits

- Use dark metal moulds: They help to absorb the heat better.
- The temperature and the cooking time depend on the quality and consistency of the dough.
- To check whether the dessert is cooked right through: At the end of the cooking time, put a toothpick into the highest point of the dessert. If the dough does not stick to the toothpick, the dessert is cooked.
- If the dessert collapses when it comes out of the oven, on the next occasion reduce the set temperature by about 10°C, selecting a longer cooking time if necessary.

### To save energy


- Stop cooking a few minutes before the time normally used. Cooking will continue for the remaining minutes with the heat which has accumulated inside the oven.
- Reduce any opening of the door to a minimum to avoid heat dispersal.
- Keep the inside of the appliance clean at all times.

### Timer during function



This function only activates the buzzer, without stopping cooking.

1. Press the control knob during a cooking function.
2. Turn the control knob right or left to set the duration (from 1 minute to 4 hours). After a few seconds, the symbol  stops flashing and the countdown starts.

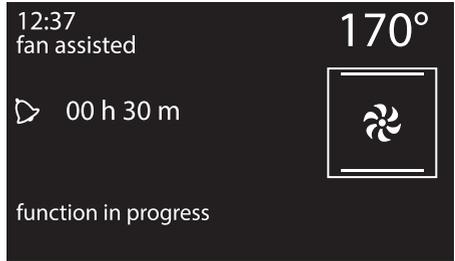

3. Wait for the buzzer to indicate that the time has finished. The symbol  flashes.



Turn the knob to the left or right to select another timer, or press the control knob to stop the buzzer.




## Use

### Timed cooking


**i** Timed cooking is the function which allows a cooking operation to be started and then ended after a specific length of time set by the user.

**i** Activation of timed cooking cancels any minute minder timer which may previously have been set.


1. After selecting a cooking function and temperature, press the control knob twice.
2. Turn the knob right or left to set the minutes of cooking from 00:01 to 13:00. Keep the knob turned to produce a faster increase or decrease.

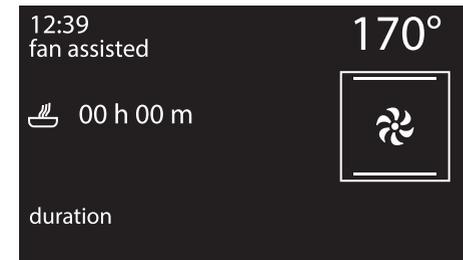

3. A few seconds after the required duration is set, the symbol stops flashing and timed cooking starts.

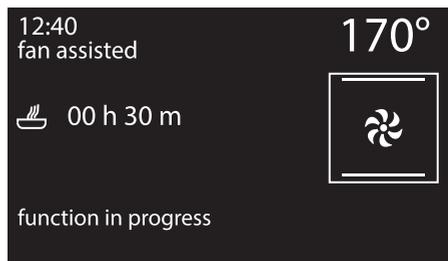

4. At the end of the cooking cycle, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the control knob.

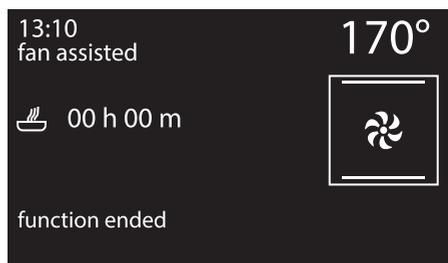



Turn the control knob to add some minutes of cooking time.



To extend the cooking time manually, press the control knob again. The appliance will resume its normal operation with the previously selected cooking settings.



To turn off the appliance see " Interrupting a function " .

### Modifying the data set during timed cooking

During operation, it is possible to modify timed cooking duration:

1. When the symbol  is steady and the appliance is in the cooking phase, press the control knob. The symbol  will start flashing.
2. Turn the control knob right or left to alter the preset cooking time.

### Delay cooking



Delay cooking is the function which allows a cooking operation to be stopped at an established time depending on the time set by the user, after which the oven will switch off automatically.

1. After selecting a function and a cooking temperature, press the control knob to set the cooking time.




2. Press the control knob before the symbol  stops flashing to set the cooking end time.
3. The symbol  flashes. Turn the knob right or left to set the cooking end time.




## Use


4. After a few seconds the symbols  and  stop flashing. The appliance waits for the delay start time.

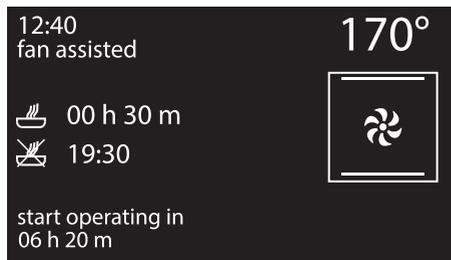


5. Based on the values set, the appliance will start a preheating stage of approximately 10 minutes.

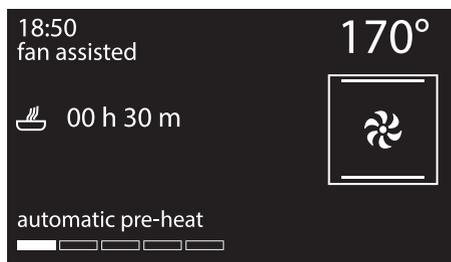

6. It will then proceed with the selected function.

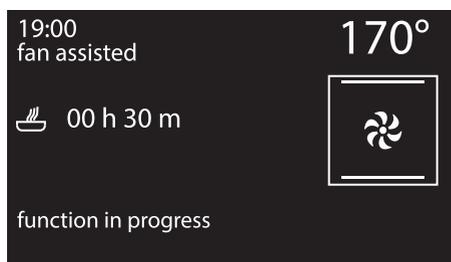

7. At the end of the cooking cycle, “function ended” appears on the display and a buzzer will sound that can be deactivated by pressing the control knob.

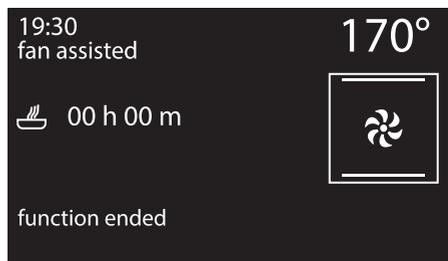

To extend the cooking time manually, press the control knob again. The appliance will resume its normal operation with the previously selected cooking settings.



For safety reasons, it is not possible to set the end of cooking time by itself without setting the cooking duration.



## Modifying the data set during programmed cooking



After modifying the cooking duration, the end of cooking time must be re-set.

During operation, it is possible to modify programmed cooking duration:

1. When the symbols  and  are lit steadily and the appliance is waiting for cooking to start, press the control knob. The symbol  will start flashing.
2. Turn the control knob to alter the previously set cooking time.
3. Press the control knob again. The symbol  switches off and  starts flashing. The display shows the cooking end time.
4. Turn the control knob to delay the cooking end time.
5. After a few seconds the symbols  and  stop flashing and programmed cooking restarts with the new settings.




If the cooking duration is modified, the cooking end time is deleted.

## 3.6 Special functions



The special functions menu contains some functions like the timer with the oven off, defrosting or cleaning functions.

1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **special functions** from the main menu.
3. Press the control knob to confirm.

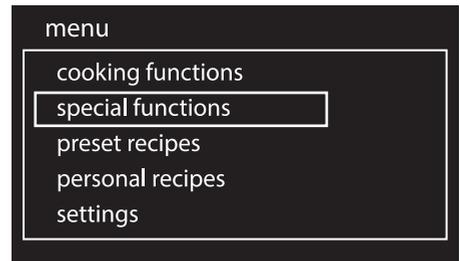



## Use

### List of special functions



#### Timer

This function sounds a buzzer when the time set has elapsed.



#### Defrost by weight

This function defrosts foods on the basis of the type and weight of the frozen product.



#### Defrost by time

This function allows you to defrost food on the basis of a selectable time.



#### Proving

The proving function, using the heat coming from the top, makes it possible to prove all types of dough, guaranteeing perfect results quickly.



#### Reheat

This function allows you to reheat previously cooked food kept cool or in the refrigerator.



#### Sabbath

This function allows food to be cooked in accordance with the provisions of the Jewish religion day of rest.



#### Vapor Clean

This function facilitates cleaning using the steam produced by a small quantity of water poured onto the bottom of the oven. (See "Cleaning and maintenance").




The more complex special functions are illustrated below.

For the **Vapor Clean** function see "4 Cleaning and maintenance".




## Timer

1. Turn the control knob to the right or left to select **timer** from the “special functions” menu.
2. Press the control knob to confirm.

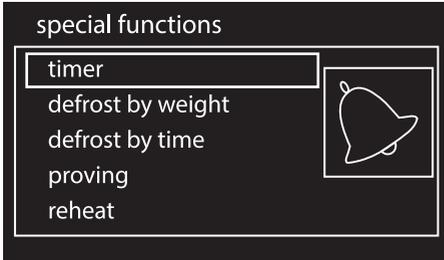

3. Turn the control knob right or left to set the duration (from 1 minute to 4 hours). After a few seconds, the symbol  stops flashing and the countdown starts.

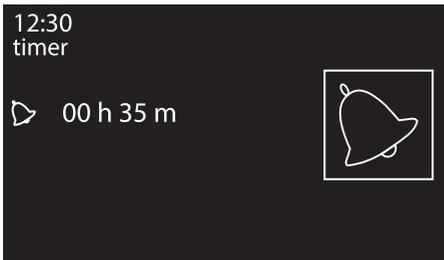

4. If you leave the timer setting screen, the symbol  will be displayed at the top left, indicating that a timer is active.



You must return the counter to zero to remove the special timer.



If a function is activated after setting a timer time, this time will be automatically used as a timer for the function, except for some special programs, automatic programs and personal recipes.




This function only activates the buzzer, without stopping cooking.




# Use

## Defrost by weight

1. Place the food inside the appliance.
2. Turn the control knob to the right or left to select **defrost by weight** from the "special functions" menu.
3. Press the control knob to confirm.

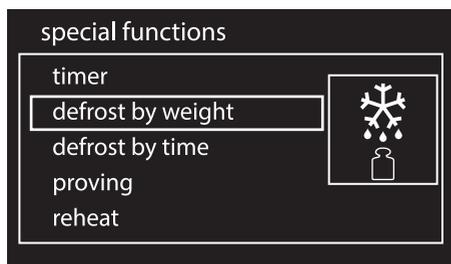


4. Turn the control knob to select the type of food to defrost.

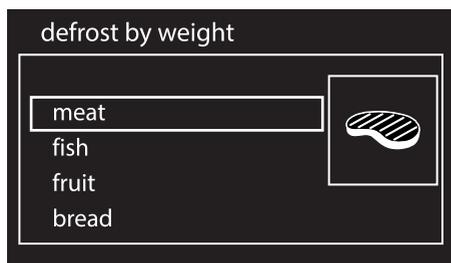


5. Turn the control knob to select the weight (in kilograms) of the food to defrost.



6. Press the control knob to confirm the set parameters.

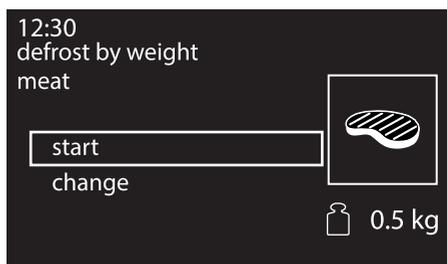

7. Press the control knob to start defrosting, or select change to further modify the set parameters.

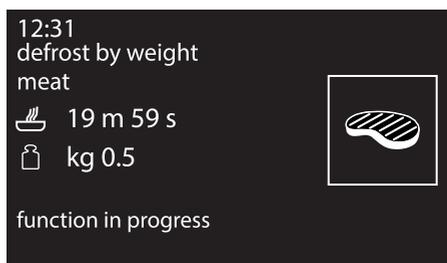



8. At the end of the function, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the control knob.

12:50  
defrost by weight  
meat  
 00 m 00 s  
 kg 0.5  
 function ended




Pre-set parameters:

Type	Weight (kg)	Time (default)
 Meat	0.1 to 1.1 (default 0.5)	20 m 00 s
 Fish	0.1 to 0.7 (default 0.4)	17 m 00 s
 Fruit	0.1 to 0.5 (default 0.3)	15 m 00 s
 Bread	0.1 to 0.5 (default 0.3)	05 m 00 s

\*Defrosting times may vary on the basis of the shape and size of the food to be defrosted.

## Defrost by time

1. Place the food inside the appliance.
2. Turn the control knob to the right or left to select **defrost by time** from the "special functions" menu.
3. Press the control knob to confirm.

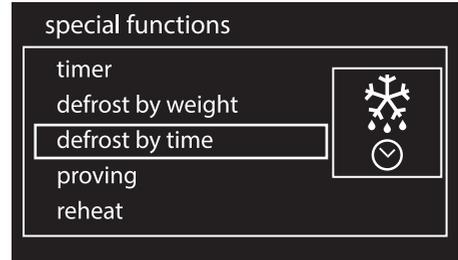


4. Turn the control knob to adjust the value (from 1 minute to 13 hours).






## Use

5. Press the control knob to confirm the set parameters.

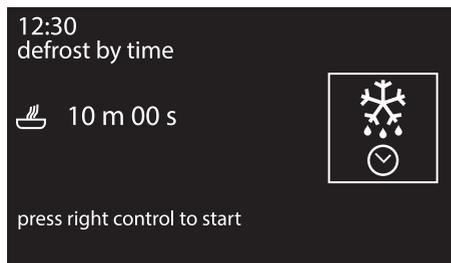


6. Press it again to start defrosting.
7. While the function is in progress, it is possible to further modify the defrosting duration. Turn the control knob to the right or left to make the required changes.
8. Press the control knob to confirm the new defrosting duration set. In any event, the defrosting will automatically resume 5 seconds from the last modification.
9. At the end of the function, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the control knob.

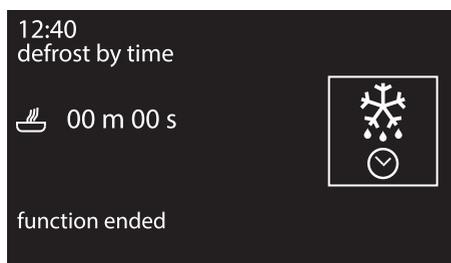


### "Turn" procedure

For best defrosting results it is recommended, when necessary, to turn the dish inside the oven cavity.

1. Put the dish in the oven, placing it parallel to the door.

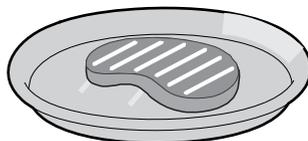

2. When the instruction "open door and rotate dish" is displayed, it is necessary to turn the dish.
3. Open the door and turn the dish 90°.

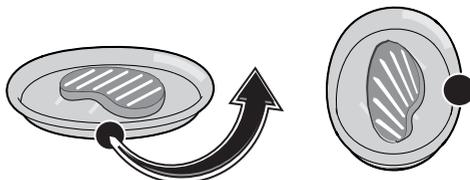

**i** If dish rotation is not performed the appliance will wait for one minute and then automatically continue defrosting.



4. Close the door and press the control knob to resume operation.
5. If necessary the appliance will again ask for rotation of the dish. The display will show the instruction "open door and rotate dish".
6. For the second rotation the door will need to be opened and the dish turned by 180°.




7. Close the door and press the control knob to resume operation.

## Proving

**i** For successful proving, a container of water should be placed in the bottom of the oven.

1. Position the dough to prove on the second level.
2. Turn the control knob to the right or left to select **proving** from the "special functions" menu.
3. Press the control knob to confirm.

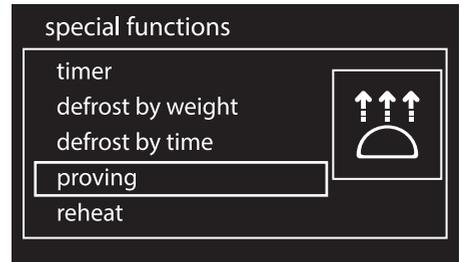

4. Press the control knob to start the function.






## Use

5. The appliance will begin preheating.




6. It will then proceed with the selected function.

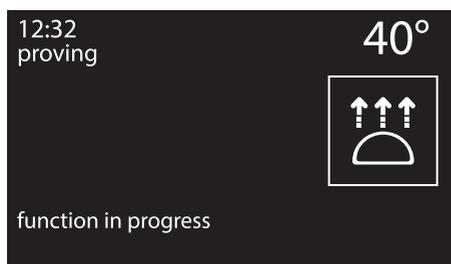

While the function is in progress, it is possible to set a timer for a maximum of 4 hours (see "Microwave functions"), a proving duration (see "Timed cooking") or delayed proving (see "Delay cooking").


7. Press the control knob to make the desired changes.

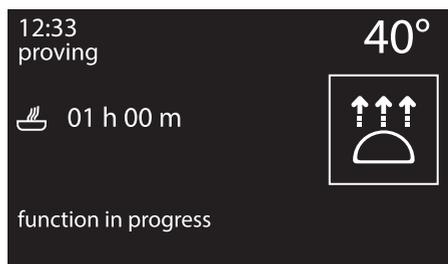

**i** Unless otherwise set, the proving will have a maximum duration of 13 hours.

**i** The light inside the oven will remain off during the proving function.

8. At the end of the function, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the control knob.

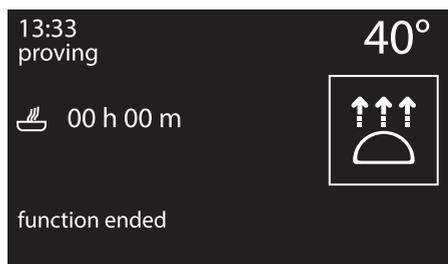

**i** When using the proving function the temperature cannot be altered.




## Reheat



This function allows you to heat previously cooked food which has been kept cool or in the refrigerator.

1. Place the food to be heated inside the appliance.
2. Turn the control knob to the right or left to select **reheat** from the "special functions" menu.

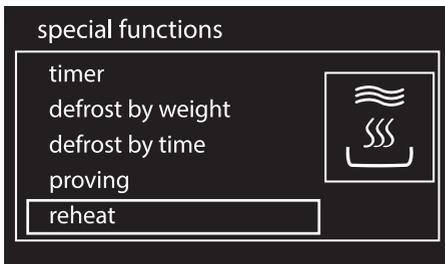

3. Press the control knob to confirm.



4. Turn the control knob to modify the reheating duration.
5. Press the control knob to confirm the parameters and start reheating.

## Sabbath



This function results in the appliance operating in a particular way:

- Cooking can proceed indefinitely, it is not possible to set any cooking duration.
- No preheating will be performed.
- The cooking temperature which can be selected varies between 60-100 °C.
- The oven light remains turned off, any action such as opening the door or manually turning on the oven via the control knob does not turn the lamp on.
- The internal fan remains turned off.
- Knob illumination and audible prompts remain disabled.



After activating the Sabbath function the settings cannot be altered.


Using the knobs will have no effect; only the control knob remains active to allow you to return to the main menu.

1. Turn the control knob to the right or left to select **sabbath** from the "special functions" menu.




## Use


2. Press the control knob to confirm.

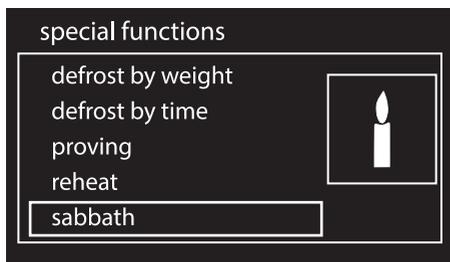

3. Turn the control knob to the right or left to change the heating temperature.

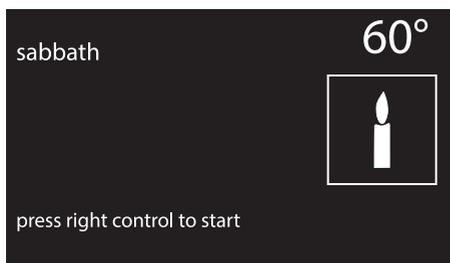

4. Press the control knob to start the Sabbath function.

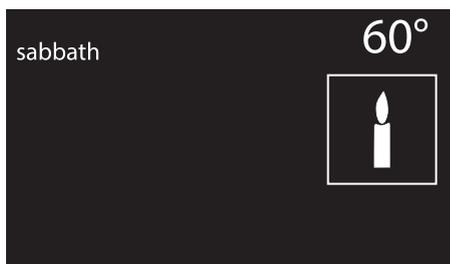


5. When finished, press and hold the control knob for at least 5 seconds to return to the main menu.

### 3.7 Preset recipes

**i** This mode allows you to select a pre-set food cooking program. The appliance will automatically calculate the optimum cooking parameters based on the weight entered.

1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **preset recipes** from the main menu.
3. Press the control knob to confirm.

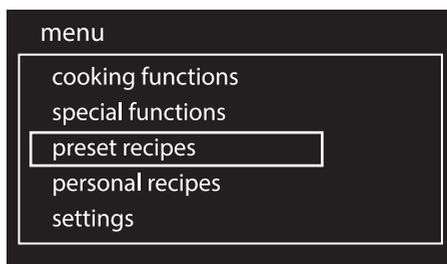



### Starting a preset recipe

1. Turn the control knob to the right or left to select the required type of dish from the "preset recipes" menu.
2. Press the control knob to confirm.



3. Select the sub-category of dish to cook and press the control knob to confirm.



4. Select the type of cooking (where possible, depending on the dish chosen) and press the control knob to confirm.




5. Turn the control knob to select the weight of the dish.






## Use


At this point it is possible to start the selected preset recipe, permanently modify the settings or perform delay cooking.

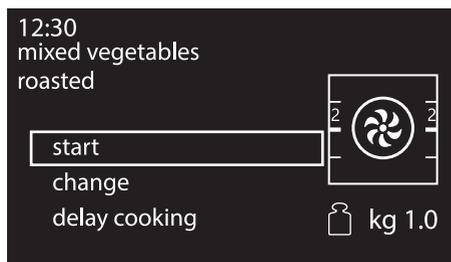


6. If you choose the **start** option, cooking will start with the preset recipe's predefined settings and the display will show all the parameters set.

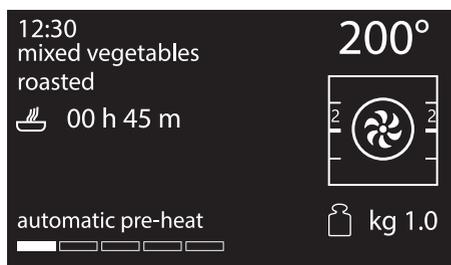

7. A specific message will indicate when you should put the dish in the oven and start cooking.

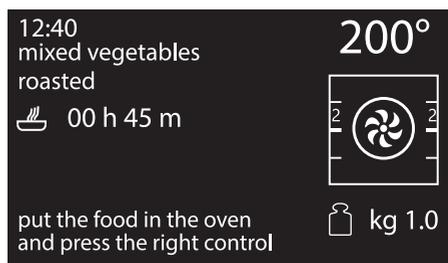

8. Press the control knob to start cooking.

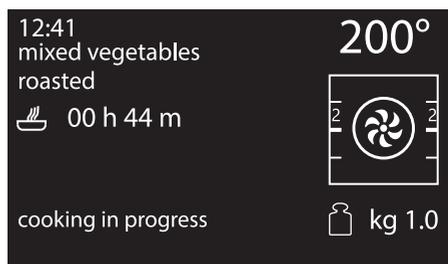

The time shown does not include the time to reach temperature.




Some predefined cooking parameters can be changed at any time, even after cooking has started.



## End of a preset recipe

1. When the preset recipe has finished, the appliance will warn the user with acoustic signals and the symbol  flashing.

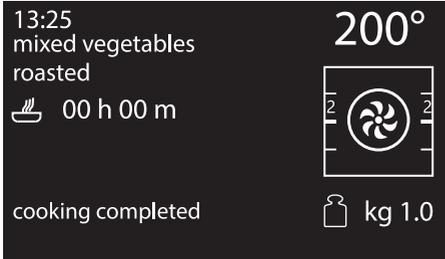

2. To perform a new cooking operation using the same parameters that are currently set, press the control knob (press twice if the acoustic signal is active). The appliance will begin cooking again automatically if it is still at temperature, otherwise it will start preheating.



Cooking in sequence is useful for cooking multiple dishes of the same type. For example, cooking several pizzas in quick succession.




It is not recommended to place food in the oven during the preheating stage. Wait for the corresponding message.


3. Press the return knob to exit and end the preset recipe.

## Permanently modifying a preset recipe

1. In the selected preset recipe, turn the control knob to the right or left to select **change** from the menu of the selected dish.
2. Press the control knob to confirm.

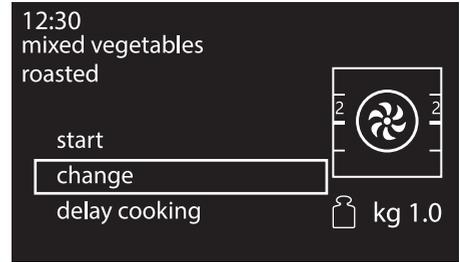

3. Turn the control knob to the right or left to select the **function** to associate with the preset recipe

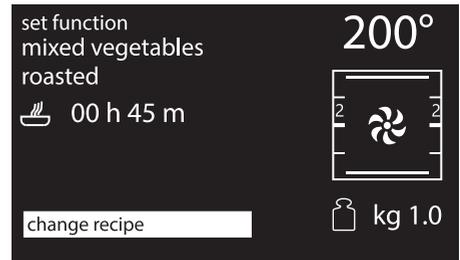


4. Press the control knob to confirm.




## Use

5. Turn the control knob to the right or left to select the **weight** of the dish to associate with the preset recipe.

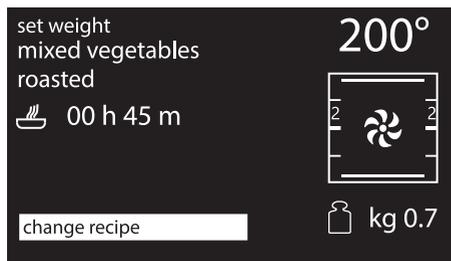

9. Turn the control knob to the right or left to select the cooking **temperature** to associate with the preset recipe.

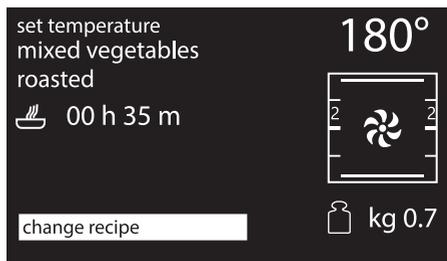


6. Press the control knob to confirm.

7. Turn the control knob to the right or left to select the cooking **duration** to associate with the preset recipe.



10. Press the control knob to confirm.

11. Turn the control knob to the right or left to select the **shelf** to associate with the preset recipe.

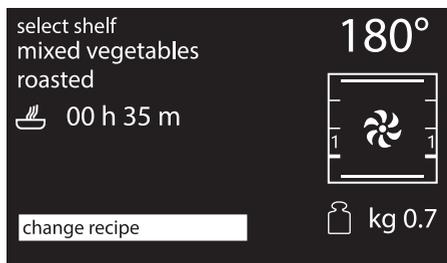


8. Press the control knob to confirm.

12. Press the control knob to confirm.




13. Pressing the control knob again will return to point 2 of the change sequence. Press the return knob to save the preset recipe. The appliance will ask to confirm the changes which have just been made.

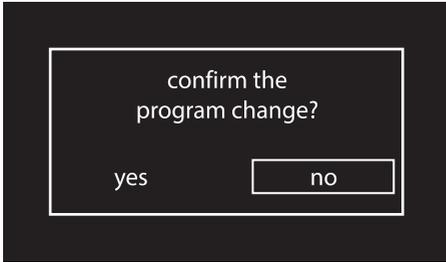

If the modifications are not confirmed, the preset recipe will remain unchanged.

14. If the change is confirmed the display will show confirmation of this.

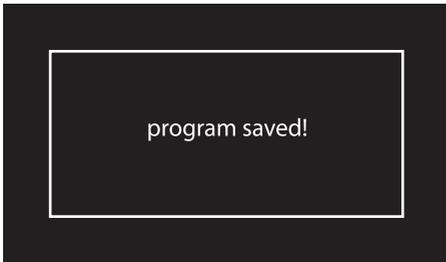



# Use

## Predefined programs table

### MEATS

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Roast beef	Rare	1		-	1	200	50
	Medium	1		-	1	200	60
	Well done	1		-	1	200	90
Roast pork	Fresh	1		300	1	190	60
Lamb	Medium	1.2		300	1	190	55
	Well done	1.2		300	1	190	60
Veal	Fresh	1		300	1	190	70
Pork spare ribs	Fresh	1		-	3	250	16
Pork chops	Fresh	1		-	3	250	15
Pork sausages	Fresh	1		-	3	250	12
Bacon	Fresh	0.5		-	3	250	7
Roast turkey	Fresh	1		300	2	200	55
Roast chicken	Fresh	1		300	2	200	50
Roast rabbit	Fresh	1		300	2	190	400

# Use



## FISH

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Fish	Fresh	0.5		300	1	160	30
Fish	Frozen	0.5		300	1	160	40
Sea bass	Fresh	0.5		300	1	160	20
Monkfish	Fresh	0.5		300	1	160	35
Snapper	Fresh	1		300	1	160	40
Turbot	Fresh	0.5		300	1	160	30

## VEGETABLES

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Grilled vegetables	Fresh	0.5		-	3	250	25
Roasted vegetables	Fresh	1		-	2	200	45
Roast potatoes	Fresh	1		300	2	220	30
Chips	Frozen	0.5		-	2	220	13

EN



## Use

### DESSERTS/PASTRIES

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Bundt cake	Fresh	1		-	1	160	60
Biscuits	Fresh	0.6		-	1	160	18
Muffins	Fresh	0.5		-	1	160	18
Profiteroles	Fresh	0.5		-	1	180	70
Meringues	Fresh	0.3		-	1	120	90
Sponge cake	Fresh	1		-	1	160	60
Strudel	Fresh	0.5		300	1	180	15
Tart	Fresh	0.8		-	1	170	40
Brioche bread	Fresh	1		-	1	180	40
Croissants	Fresh	0.6		-	1	160	30

### BREAD

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
White leavened bread	Fresh	1		-	1	200	30
Focaccia	Fresh	0.5		-	1	190	20

# Use



## PIZZA

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Pan baked pizza	Fresh	1		-	1	250	9
Pizza	Frozen	0.3		-	1	250	8
Stone baked pizza	Fresh	0.5		-	1	250	6

## PASTA

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Pasta bake	Fresh	2		-	1	220	40
Lasagne	Fresh	2		-	1	230	35
Lasagne	Frozen	0.3		500	1	230	9
Paella	Fresh	0.5		-	1	190	25
Quiche	Fresh	1		-	1	200	40
Soufflé	Fresh	0.5		-	1	180	25

## SLOW COOKING

Subcategory	Cooking	Weight (Kg)	Function	MW (W)	Shelf	Temp. (°C)	Time (minutes)
Veal	Fresh	1		-	1	90	360
Beef	Rare	1		-	1	90	105
Beef	Well done	1		-	1	90	380
Pork loin	Fresh	1		-	1	90	330
Lamb	Fresh	1		-	1	90	360


EN



## 3.8 Personal recipes

**i** This menu allows you to enter a personal recipe with the parameters you wish to use. On first use, the appliance will only offer you to add a new recipe. After saving your recipes, these will then be available in the relative menu.


1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **personal recipes** from the main menu.
3. Press the control knob to confirm.

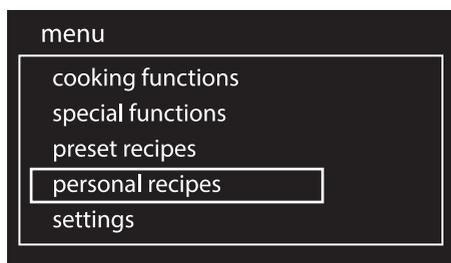


**i** Up to 10 personal recipes can be stored.

## Adding a recipe

1. Select **add** from the “personal recipes” menu.

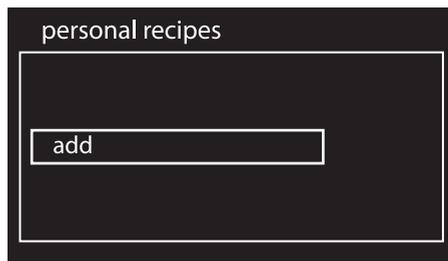


2. Turn the control knob to the right or left to select the **function** to associate with the recipe.

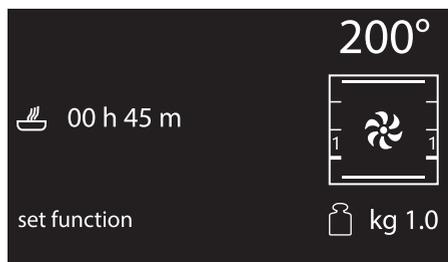

3. Press the control knob to confirm.



4. Turn the control knob to the right or left to select the **weight** of the dish to associate with the recipe.

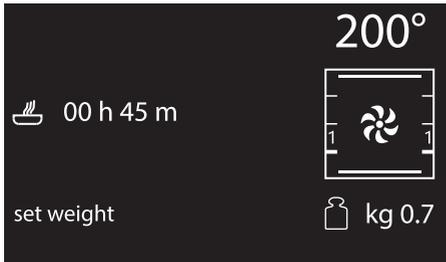


5. Press the control knob to confirm.




The weight can be set or modified up to 2.5 kg, but the user is responsible for ensuring that the dish will fit correctly inside the oven.

6. Turn the control knob to the right or left to select the cooking **duration** to associate with the recipe.

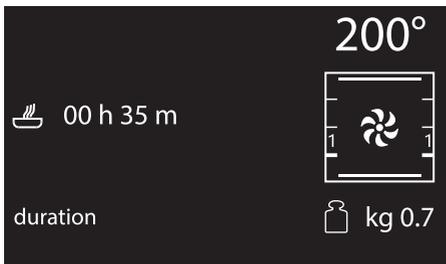


7. Press the control knob to confirm.

8. Turn the control knob to the right or left to select the cooking **temperature** to associate with the recipe.

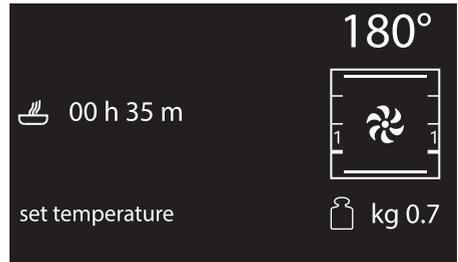

9. Press the control knob to confirm.

10. Turn the control knob to the right or left to select the **shelf** to associate with the recipe.

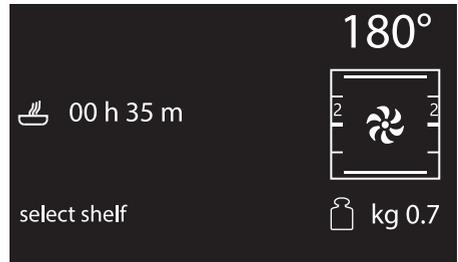


11. Press the control knob to confirm.



# Use

12. Pressing the control knob again will return to point 2 of the change sequence. You must press the return knob to save the recipe. The appliance will ask you to enter a name for the recipe you have just created.

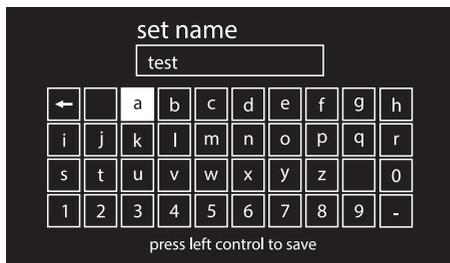


13. Enter the name of the recipe. Turn the control knob to select the characters to enter. Each time the control knob is pressed, a character of the name will be entered. The character  deletes the previous letter.

**i** The recipe name can contain maximum 10 characters, including spaces.

**i** The name must contain at least one character in order to store the recipe.

14. After entering the name of your recipe, press the return knob to confirm or cancel the information you have entered. Select **YES** if you wish to store the recipe.

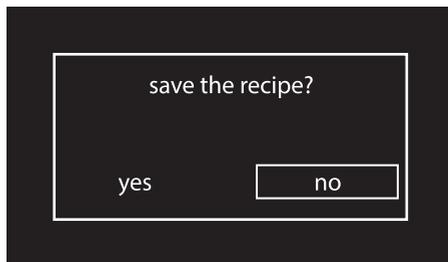

**i** If you select "NO", you will lose all modifications made.

15. If the change is confirmed the display will show confirmation of this.






## Using a personal recipe

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the "personal recipes" menu (in the example, the recipe **test** has been stored).




2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select **start**.

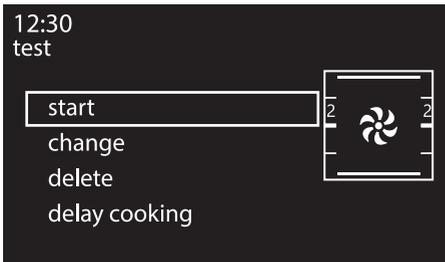

4. Press the control knob to confirm.

Cooking will start with the parameters previously set for the recipe.

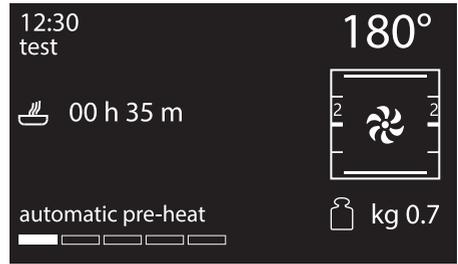


During cooking it is always possible to modify the temperature and cooking time, but this will not be saved to the recipe for future use.




## Modifying a personal recipe

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the “personal recipes” menu (in the example, the recipe **test** has been stored).

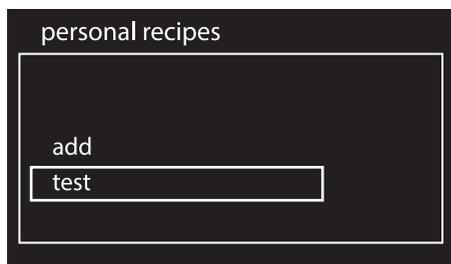

2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select **change**.

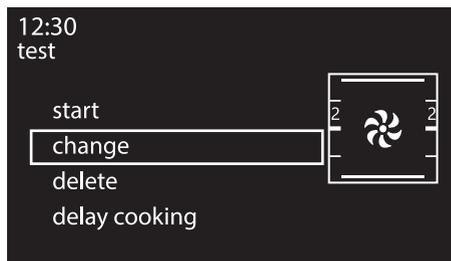


4. Press the control knob to confirm.
5. Repeat the same steps starting from point 2 in chapter “Adding a recipe”.

## Deleting a personal recipe

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the “personal recipes” menu (in the example, the recipe **test** has been stored).



2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select **delete**.

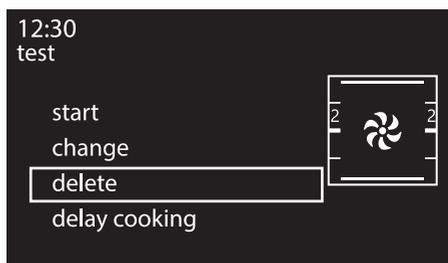

4. Press the control knob to confirm.



5. Confirm the deletion. Select YES to permanently delete the recipe.




6. If you confirm the deletion, the display will show a confirmation message.




## Delay cooking

1. Turn the control knob to the right or left to select a previously stored **personal recipe** from the "personal recipes" menu (in the example, the recipe **test** has been stored).

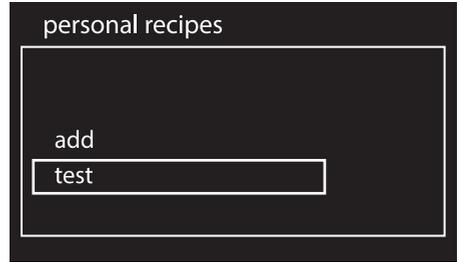

2. Press the control knob to confirm.  
3. Turn the control knob to the right or left to select **function delayed**.

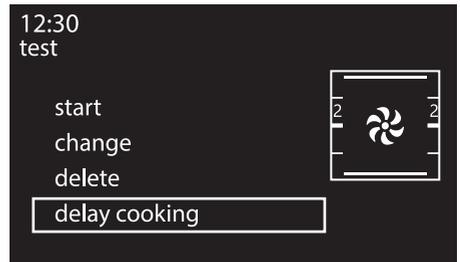


4. Press the control knob to confirm.




## Use

5. Turn the control knob to the right or left to select the cooking end time with the control knob. The symbol  flashes.

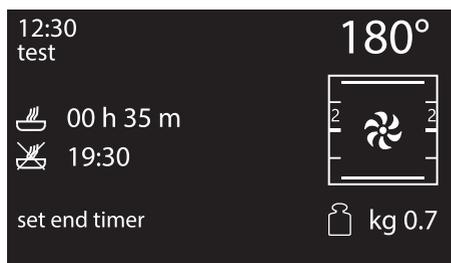

6. Press the control knob to confirm.

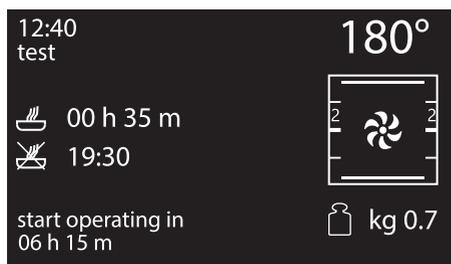


After a few seconds the symbol  will stop flashing. The appliance waits for the delay start time.

### 3.9 Settings

 The product configuration can be set using this menu.

1. On the clock screen, press the control knob to access the main menu.
2. Turn the control knob to the right or left to select **settings** from the main menu.
3. Press the control knob to confirm.

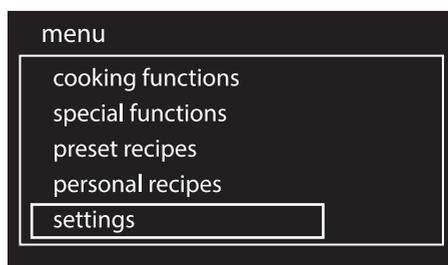





## Language

Sets the interface language from those available.

1. Turn the control knob to the right or left to select **language** from the “settings” menu.

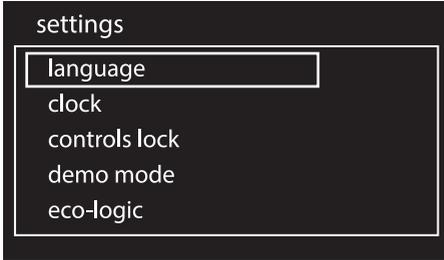


2. Press the control knob to confirm.
3. Turn the control knob to the right or left to select the required language.

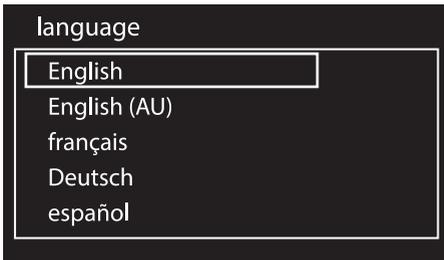


4. Press the control knob to confirm the selected language.

## Clock

Allows you to change time displayed.

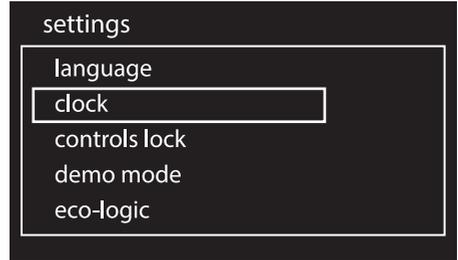

1. Turn the control knob right or left to set the hours.
2. Press the control knob to switch to changing the minutes.
3. Turn the control knob right or left to set the minutes.

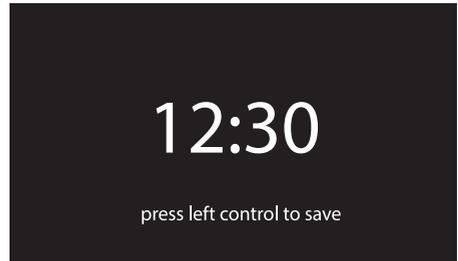


4. Press the return knob to confirm.




## Controls lock

Allows the appliance to automatically lock the controls after one minute of normal operation without any intervention from the user.

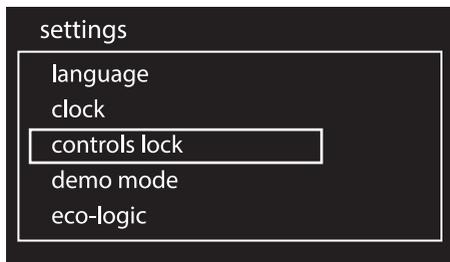

- To confirm activation of the controls lock, select **YES**.

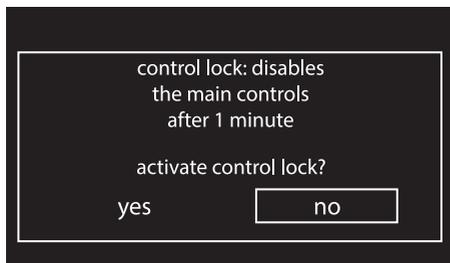

During normal operation it is indicated by the indicator light  coming on.


- To temporarily release the lock during cooking, hold the return knob down for 3 seconds. One minute after the last setting the lock will become active again.




If the control and return knobs are touched or change position, the display will show a warning for two seconds.

## Demo mode (for showrooms only)

This mode allows the appliance to deactivate all heating elements, while keeping the control panel active.

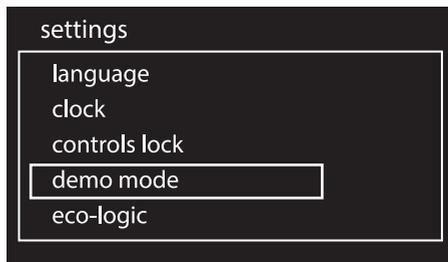

- To confirm the activation of the demo mode, select **YES**.

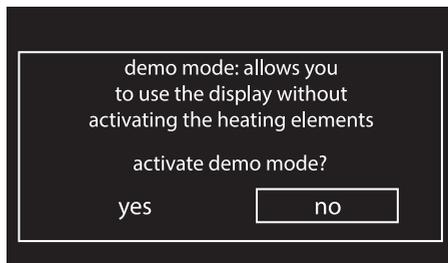

 If the mode is active, "demo mode" will be shown on the display.


 To use the appliance normally, set this mode to **OFF**.




## Eco-Logic (only on some models)

This mode allows the appliance to limit the power used. Suitable for simultaneous use with further home appliances.

If this option is enabled, the symbol  will appear on the display.

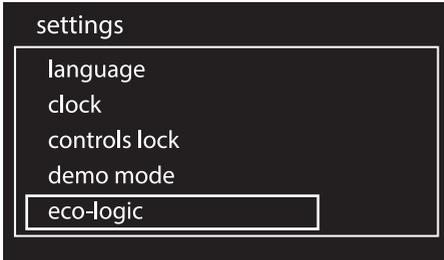


- To confirm the activation of eco-logic mode, select YES.

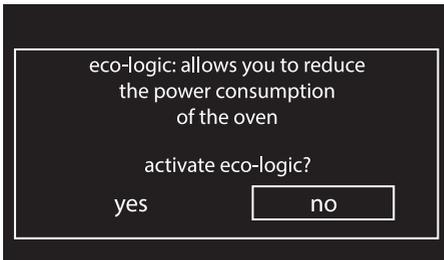


When eco-logic mode is active, preheating and cooking times may be extended.

## Sound

Whenever one of the knobs is pressed, the appliance beeps. This setting disables these sounds.

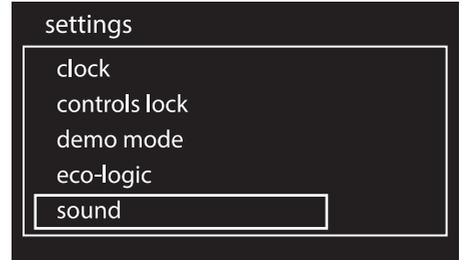

- To disable sounds when the knobs are pressed, select NO.

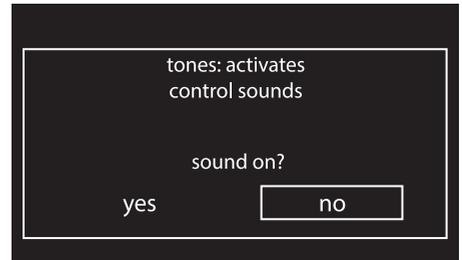




# Use

## Keep warm

This mode allows the appliance to keep cooked food warm (at low temperatures) after cooking finishes with a cooking cycle for which a duration has been set (if this is not manually interrupted), without altering the taste and smell obtained during cooking.

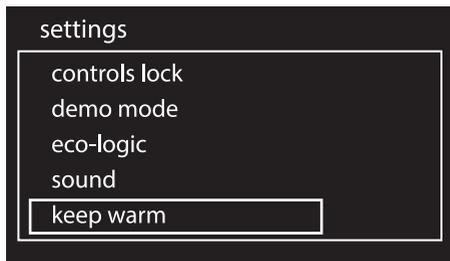


- To confirm the activation of the keep warm mode, select YES.




## Eco-Light

For greater energy savings, the light is automatically deactivated one minute after the start of cooking.

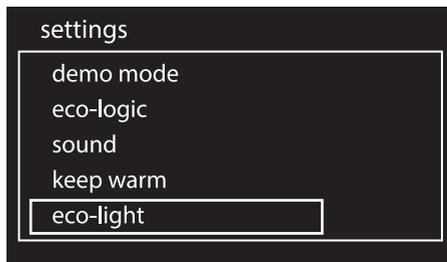

- To confirm the activation of eco-light mode, select YES.

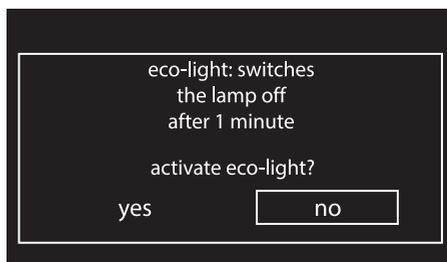


 To prevent the appliance from automatically turning the internal lamp off turn this mode to OFF.

 The manual on/off control is always available with both settings by turning the return knob to the right.




### Digital clock (only on some models)

Displays the time in digital format.

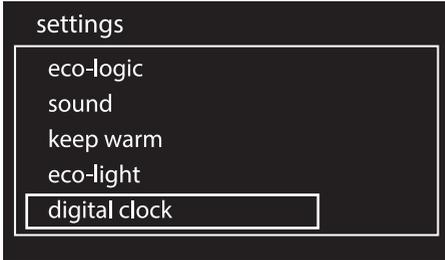

- To confirm the activation of the digital clock, select YES.

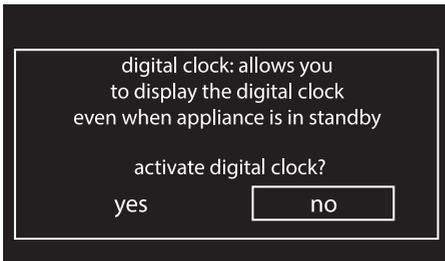

When no appliance function is active, the display will show the current time in digital format.





# Cleaning and maintenance

## 4 Cleaning and maintenance

### 4.1 Instructions



High temperature inside the oven during use

#### Danger of burns

- Perform cleaning only after letting the appliance cool down.



Improper use

#### Risk of damage to surfaces

- Do not use steam jets to clean the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).
- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts.
- Do not use rough or abrasive materials or sharp metal scrapers.
- Failure to clean the oven could adversely affect the life of the appliance and pose a hazard.
- Always remove food residues from the oven cavity.



Improper use

#### Danger of explosion/burns

- Do not use detergents with high alcohol content or which can release inflammable vapours. Subsequent heating could set off an explosion inside the appliance.



If a lamp is damaged, contact Technical support for a replacement. This fault will not affect the integrity of the appliance which can continue to be used.

### 4.2 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

### 4.3 Ordinary daily cleaning

Always use only specific products that do not contain abrasives or chlorine-based acids.

Pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.



## 4.4 Food stains or residues

Do not use steel sponges and sharp scrapers, as they will damage the surfaces. Use ordinary non-abrasive products with the aid of wooden or plastic utensils if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth.

Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.

## 4.5 Drying

Cooking food generates moisture inside the appliance. This is a normal phenomenon and does not affect the appliance's operation in any way.

Each time you finish cooking:

1. Let the appliance cool down.
2. Remove any dirt from inside the appliance.
3. Dry the interior of the appliance with a soft cloth.
4. Leave the door open until the inside of the appliance has dried completely.

## 4.6 Cleaning the door glazing

The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll. In case of stubborn dirt, wash with a damp sponge and an ordinary detergent.




We recommend the use of cleaning products distributed by the manufacturer.

## 4.7 Cleaning the inside of the oven cavity

For the best oven upkeep, clean it regularly after having allowed it to cool.

Take out all removable parts.

Clean the oven racks with warm water and non-abrasive detergents. Carefully rinse and dry damp parts.

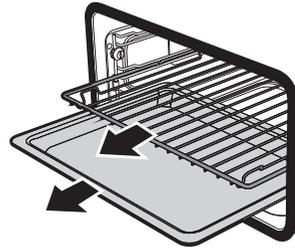

The oven should be operated at the maximum temperature for about 15-20 minutes after the use of specific products, to burn off the residues left inside the oven.




# Cleaning and maintenance

## Removing racks/trays support frames


Removing the guide frames enables the sides to be cleaned more easily. This operation should be performed each time the automatic cleaning cycle is used (on some models only).

To remove the guide frames:

1. Unscrew the two fastening pins of the frame.

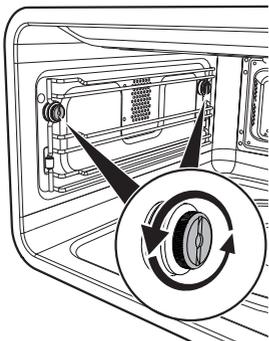

2. Pull the frame towards the inside of the oven.

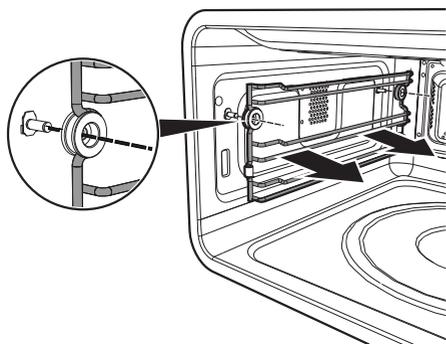


3. When cleaning is complete, repeat the above procedures to put the guide frames back in. Pay attention to the spacer bushings which need to be inserted correctly into the frames.


## Cleaning the top section

The appliance is fitted with a tilting heating element that makes it easier to clean the top part of the oven.

1. Free the upper heating element by gently lifting it and rotating its retaining latch by 90 degrees.

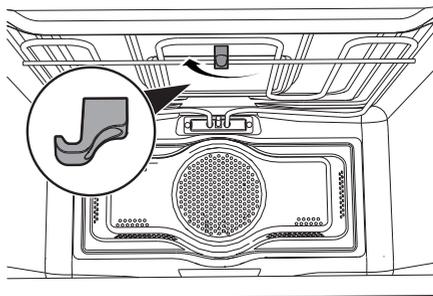

2. Gently lower the heating element until it stops.

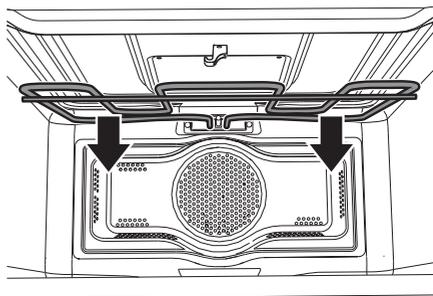

**Improper use**

**Risk of damage to the appliance**

- Do not excessively flex the element during cleaning.
3. When you have finished cleaning, place the heating element back in position and turn the retaining latch to lock it in place.



## 4.8 Vapor Clean



Vapor Clean is an assisted cleaning procedure which facilitates the removal of dirt. This process makes it possible to clean the inside of the oven very easily. The dirt residues are softened by the heat and steam, making them easier to remove afterwards.



### Improper use Risk of damage to surfaces


- Remove any large amounts of food residues or spills from previous cooking operations from the inside of the oven.
- Carry out assisted oven cleaning operations only when the oven is cold.

### Preliminary operations


Before starting the Vapor Clean function:

- Completely remove all accessories from inside the oven.

- Pour approx. 40 cc of water onto the floor of the oven. Make sure it does not overflow out of the cavity.

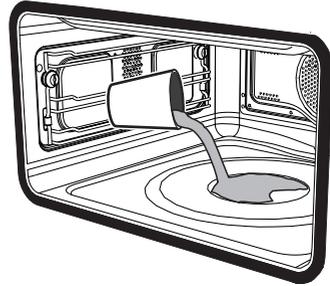

- Spray a water and washing up liquid solution inside the oven using a spray nozzle. Direct the spray against the side walls, upwards, downwards and towards the deflector.

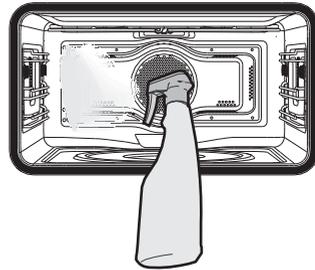

- Close the door.



We recommend spraying approx. 20 times at the most.




# Cleaning and maintenance


## Vapor Clean setting

**i** If the internal temperature is greater than that required for the Vapor clean function, the cycle will be stopped immediately and "Internal temperature unsafe, please wait until the oven is cool" will appear on the display. Leave the appliance to cool down before activating the assisted cleaning cycle.

1. Turn the control knob to the right or left to select the **vapor clean** function from the "special functions" menu. Then press it to confirm.

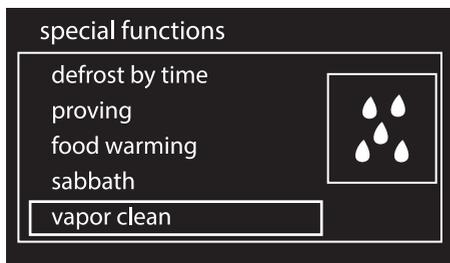


2. The duration and temperature of the cleaning cycle will appear on the display.

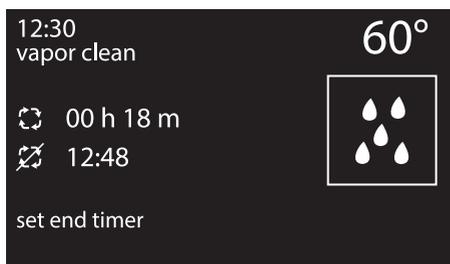


**i** The duration and temperature parameters cannot be modified by the user.

3. Press the control knob twice to start the cleaning cycle.

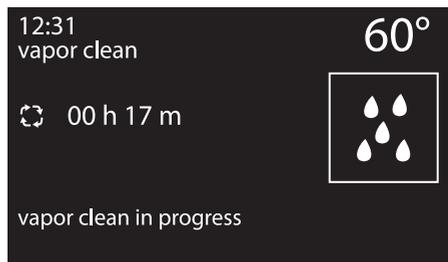

4. A buzzer will indicate the end of the vapor clean cycle.

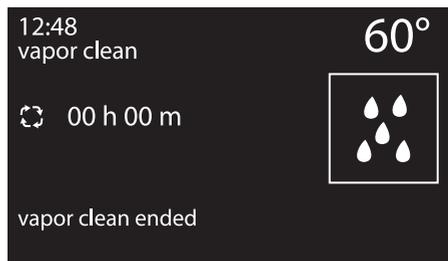



## Setting the programmed Vapor Clean cycle

It is possible to program the vapor clean start time, like any cooking function.

1. After selecting the vapor clean special function, press the control knob. The display shows the current time and the symbol  comes on.
2. Turn the control knob to set the time you wish the vapor clean cycle to finish.
3. After a few seconds, the symbols  and  remain lit steadily and the appliance waits for the set start time in order to start the cleaning cycle.

## End of the Vapor Clean cycle

1. Open the door and wipe away the less stubborn dirt with a microfibre cloth.
2. Use an anti-scratch sponge with brass filaments on tougher encrustations.
3. In case of grease residues use specific oven cleaning products.
4. Remove any remaining water from the oven.

For greater hygiene and to avoid food being affected by any unpleasant odours, we recommend that the oven is dried using a fan-assisted function at 160°C for approximately 10 minutes.



We recommend wearing rubber gloves for these operations.



For easier manual cleaning of parts that are difficult to reach, we recommend removing the door.



## Cleaning and maintenance

### What to do if...

The display is completely off:

- Check the mains power supply.
- Check whether an omnipolar breaker on/upline of the appliance supply line is in the "ON" position.

The appliance does not heat up:

- Check if it has been set to "demo" mode (for further details see "Demo mode (for showrooms only)").

The controls do not respond:

- Check whether it has been set in "controls lock" mode (for further details see "Controls lock").

The cooking times are longer than those indicated in the table:

- Check whether it has been set in "eco-logic" mode (for further details see "Eco-logic (only on some models)").

If the door is opened during a fan assisted function, the fan stops:

- This is not a fault. It is a normal operation of the appliance, useful when cooking foods in order to avoid excessive heat escaping. When the door is closed, the oven will return to normal operation.



If the problem has not been resolved or in the case of other types of fault, contact your local technical support centre.



If other ERRx error messages are indicated:

Note down the error message, function and set temperature and contact your local technical support centre.



## 5 Installation

### 5.1 Electrical connection



**Power voltage  
Danger of electrocution**

- Have the electrical connection performed by authorised technical personnel.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Disconnect the mains power supply.

#### General information

Check the grid characteristics against the data indicated on the plate.


The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.

Do not remove this plate for any reason.

The appliance works at 220-240 V~.

Use a three-pole cable (3 x 1.5 mm<sup>2</sup> internal conductors).

Perform the ground connection using a wire that is 20 mm longer than the other wires.

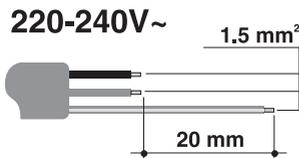

#### Fixed connection

Fit the power line with an omnipolar circuit breaker in compliance with installation regulations.

The omnipolar circuit breaker should be located near the appliance and in an easily reachable position, according to applicable electrical codes.

#### Connection with plug and socket

Make sure that the plug and socket are of the same type.

Avoid using adapters, gang sockets or extensions as these could cause overheating and a risk of burns.

### 5.2 Cable replacement



**Power voltage  
Danger of electrocution**

- Disconnect the mains power supply.

1. Unscrew the rear casing screws and remove the casing to access the terminal board.
2. Replace the cable.
3. Make sure that the cables (for the oven or any hob) follow the best route in order to avoid any contact with the appliance.



# Installation

## 5.3 Positioning



**Heavy appliance  
Crushing hazard**

- Position the appliance into the cabinet cutout with the help of a second person.



**Pressure on the open door  
Risk of damage to the appliance**


- Never use the oven door to lever the appliance into place when fitting.
- Avoid exerting too much pressure on the oven door when open.



**Heat production during appliance  
operation  
Risk of fire**

- Check that the carcass material is heat resistant.
- Check that the carcass has the required slots.
- Do not install the appliance in a recess which can be closed with a door, or in a cupboard.


## Position of the power cable

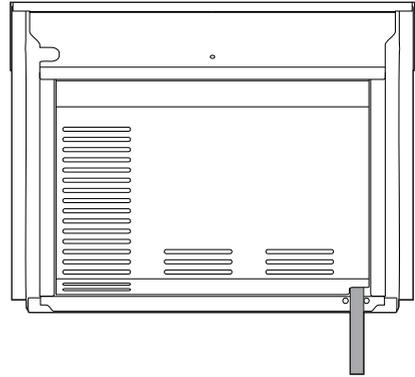

(rear view)

## Front panel seal


Glue the supplied seal to the rear part of the front panel to avoid water or other liquids from leaking in.

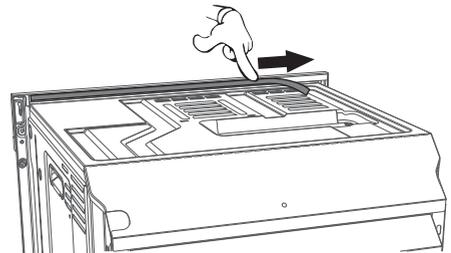




## Fastening bushings


Remove the bushing covers inserted on the oven front.

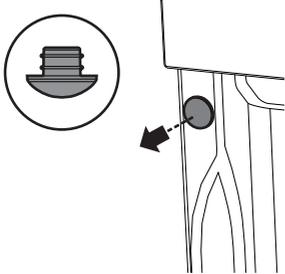


Mount the appliance into the recess.  
Secure the appliance to the piece of furniture using screws.

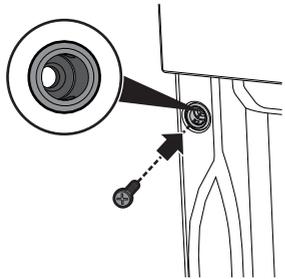


Cover the bushings with the previously removed covers.

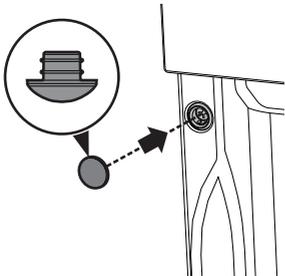

## Appliance overall dimensions (mm)

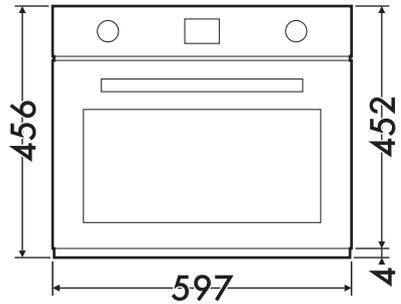

(front view)

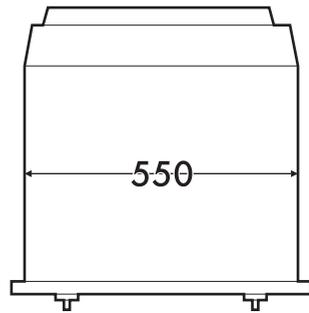


(top view)







# Installation

## Mounting under worktops (mm)

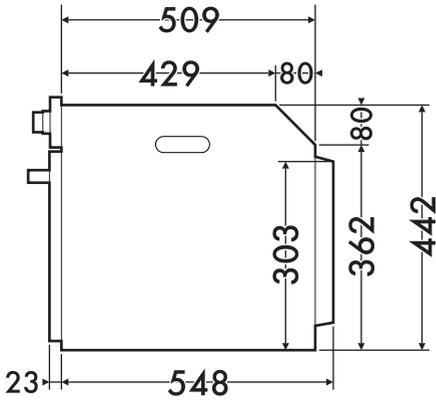


(side view)

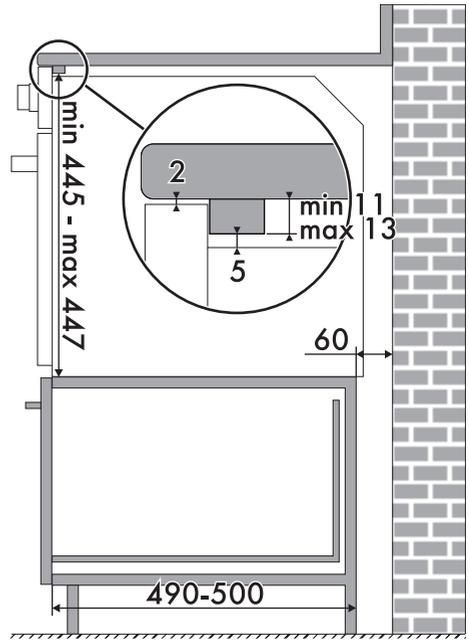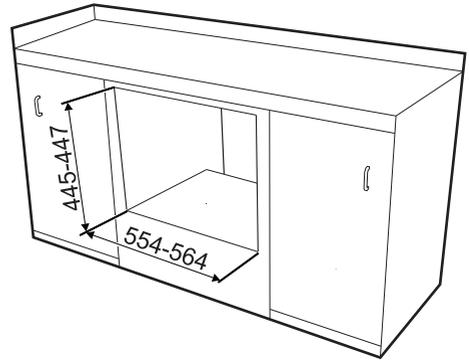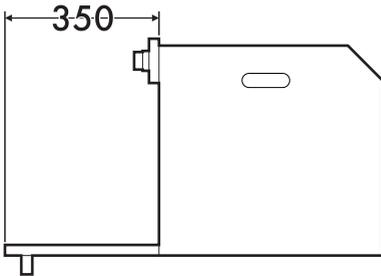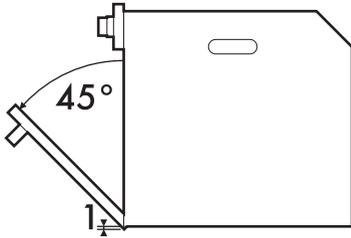


Make sure that the carcass rear/bottom section has an opening of approx. 60 mm.



## Mounting into a column (mm)

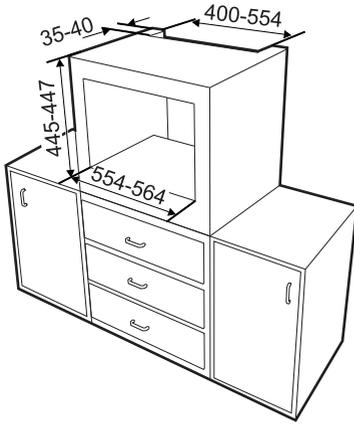

Make sure that the carcass top/rear section has an opening approx. 35-40 mm deep.

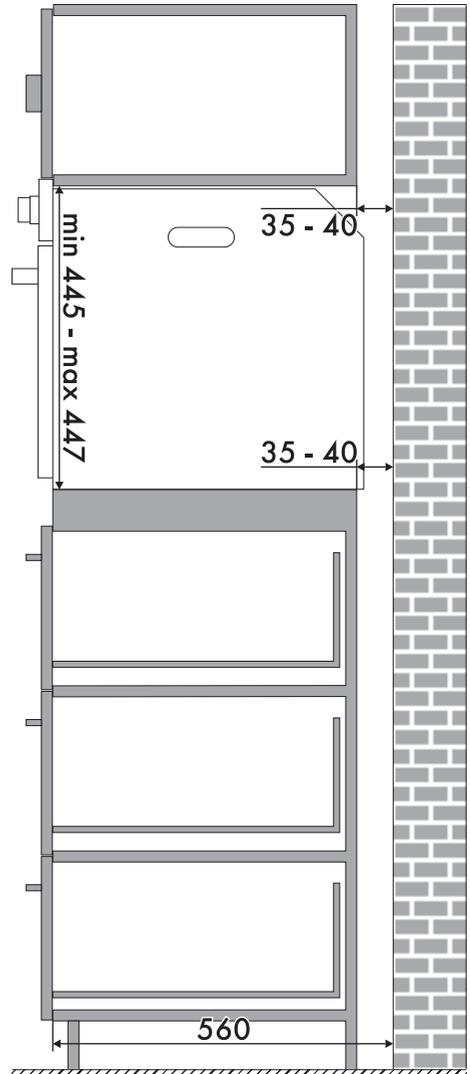

EN

