

Indoor and outdoor LED Lights

Thank you for purchasing this light-set. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Instructions for use

FOR INDOOR AND TEMPORARY OUTDOOR USE (during the festive season, parties or barbeques).

Includes a low voltage transformer.

Non-replaceable bulbs.

- 1) Remove the light-set from the package.
- 2) The light-set can only be connected to the transformer, which is enclosed in the box.
- 3) **The transformer is only suitable for indoor use.**
- 4) Ensure that the power source is the same as the specified power.
- 5) Position cable so it does not pose a trip hazard.
- 6) Avoid any damage to the isolation of the wiring.

This set contains a timer;

1: ON: the item will remain in operation until it is switched off manually

2: TIMER: the item will light up. After 6 hours of being lit, the lamp will switch off automatically. The set will turn on again automatically the following day at the time they were originally switched on.

3: OFF: the item is not in operation.

Warnings!

- 1) Do not connect the light set to the supply while it is still in the packaging.
- 2) Do not connect this light-set electrically to another light-set.
- 3) The power cord of the light-set cannot be replaced; if the cord is damaged the light-set should be destroyed.
- 4) Always disconnect set overnight or if unattended.
- 5) Do not cover transformer.



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



Please retain this information leaflet for future reference.

John Lewis Partnership 171 Victoria Street London SW1E 5NN
www.johnlewis.com