

John Lewis

Instruction manual 1.7L Kettle





Contents

3	Important safety information
5	Operational warnings
6	Parts list
6	Your kettle - diagram
7	Getting started
	Operating your kettle
	Automatic cut-off
8	Care instructions
9	Troubleshooting
10	Technical specification
11	Servicing and disposal
	Guarantee



Important safety information

Thank you for purchasing this John Lewis kettle. Please read the instructions and warnings carefully to ensure a long life for your product and safe usage.

This instruction manual should be retained for future reference. These warnings have been provided in the interest of safety. You **MUST** read them carefully before using the appliance. If you are unsure of what any of these warnings mean, please contact your nearest John Lewis branch or John Lewis Technical Support on 0330 123 0106.

- Unplug the kettle from the mains supply when not in use, when removing or attaching accessories or before cleaning any part of the appliance.
- This kettle is for household use only.
- To protect against fire, electric shock and injury, do not immerse the kettle, base, electrical cord or its plug in any liquid, including water.
- Do not use outdoors, or in damp conditions.
- Do not use near a source of heat or on a hot or unstable surface.
- Ensure that the power cord does not overhang the edge of your work surface.
- Before unplugging the power cord, switch the kettle off. When unplugging, hold the plug itself, not the power cord.

Important safety information continued

- Do not operate any appliance with a damaged cord or plug. Should the kettle malfunction, or if it is dropped or damaged in any manner, please stop using it and contact John Lewis Technical Support on 0330 123 0106 for repair.
- Do not use attachments or accessories which are not recommended by the manufacturer. They may cause a malfunction or injury.
- Do not attempt to repair this kettle yourself. This should only be carried out by authorised service personnel with specialist tools. Unauthorised dismantling or servicing will void the product warranty.
- Store out of direct sunlight.
- Do not use the kettle for any purpose not specified in this manual.
- This appliance is not intended to be operated by means of an external timer or separate remote-controlled system.

Operational warnings

When operating your appliance:

- Pour in water before switching on the kettle.
- Do not fill the kettle beyond the indicated maximum limit.
- Do not switch on the kettle when the lid is open. When the water is boiling, do not open the lid.
- Beware: steam from the spout can cause scalding. Water will remain hot for some time after boiling.
- Do not leave water sitting in the kettle after use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction by a person responsible for their safety concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of the reach of children under the age of 8.




WARNING: Polythene bags over the product or within packaging may be dangerous. To avoid the risk of suffocation, please keep away from babies and children.

Parts list

- 1 Kettle body
- 1 Kettle base with cord and 3-pin plug
- 1 Water filter

Your kettle - diagram

- ① Water filter
- ② Lid opening button
- ③ Water level window
- ④ Kettle body
- ⑤ On/Off switch
- ⑥ Kettle power base
- ⑦ Plug with 80cm cable

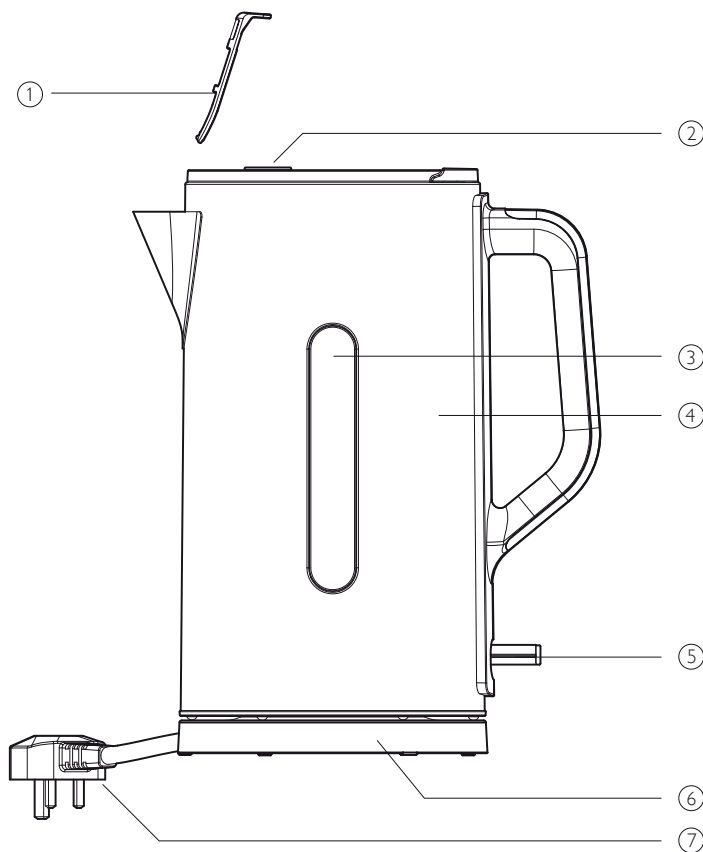

Getting started



Important: please follow these instructions before use.

- Remove all packaging from the kettle and cordless base and either retain or dispose of safely, according to local recycling provisions. Keep plastic packaging materials out of the reach of children.
- Retain the manual and the product purchase receipt for future reference.
- Remove all labels from the outer stainless steel surface.
- Remove the filter and wash with water.
- Fill the kettle and boil.
- The boiled water should be discarded and the kettle rinsed out with cold water.
- Repeat the boil and rinse steps at least three times to remove any dust from production.
- After the kettle has been rinsed out, re-fit the filter.

Operating your kettle

- Fill your kettle with fresh, cold water. Do not fill past the maximum fill line.
- Place your kettle on the cordless base and press the On/Off switch. The switch will illuminate to indicate that the kettle is on.
- When boiled, your kettle will automatically switch off. You will see the On light turn off.
- Remove your kettle from its base and use it.

Automatic cut-off

Your kettle is fitted with an On/Off switch which automatically turns off once the water has boiled. If the kettle has just boiled, wait a minute or so before re-boiling. Do not attempt to hold the On/Off switch in the on position or adjust the switch mechanism.

If the kettle is switched on while it contains no water, a protective safety cut-out will switch off the power. If this occurs, disconnect the kettle from the mains supply and leave to cool before refilling with cold water. This will protect the heating element. If kettle is lifted from its base while operating, it will automatically switch off.

Care instructions

Removing the scale filter

Allow the kettle to cool completely and unplug it from the mains electrical supply. Make sure that your hands are clean and free from soap, moisturiser or anything that could taint the water.

Empty the kettle and remove the filter. Rinse under a tap while brushing with a soft brush. Replace the filter. The filter may pose a choking risk: do not leave it unattended after cleaning.

Cleaning the kettle

- Allow the kettle to cool completely and unplug it from the mains before cleaning.
- Do not immerse the kettle or base in water.
- Use a soft, damp cloth to wipe the outside of the kettle. Dry with a soft, dry cloth.
- Ensure that all connectors and sockets are kept dry during this process.

Descaling

Descaling refers to the removal of calcium deposits which may form on the interior metal parts of the kettle.

- To get the best performance from your kettle, descale it from time to time. The required frequency will depend on the hardness of your tap water and how often you use the kettle.
- We suggest using a kettle descaler in order to dissolve deposits. Follow the directions on the descaler packaging.
- If a commercial descaler is not available, fill the kettle with enough white vinegar to cover the bottom of the kettle to a depth of about 1.5cm.
- Bring the vinegar to the boil.
- You may need to repeat this process several times with fresh vinegar to remove the calcium build-up completely.
- When the descaling process is complete, empty the kettle and rinse out several times with clean water.

Troubleshooting

Problem	Cause	Solution
Kettle will not turn on	<ul style="list-style-type: none">- Kettle has recently boiled- Kettle is not properly connected to mains- Fuse has failed	<ul style="list-style-type: none">- Let the water cool down before turning the kettle back on- Check that plug is connected- Replace fuse if necessary
Kettle lid will not open	Lid mechanism has a build-up of calcium deposits	Descale kettle by pouring a descaling solution through the spout
Water is spurting from the spout	<ul style="list-style-type: none">- The kettle may be overfull- The kettle may have descaling solution inside- The filter may not be in place	<ul style="list-style-type: none">- Check water level- Rinse kettle thoroughly- Check that filter is correctly fitted
Kettle will not switch off	<ul style="list-style-type: none">- Lid may not be closed- Limescale may have built up inside the kettle	<ul style="list-style-type: none">- Check that lid is firmly closed- Check inside kettle for limescale build-up

Technical specification

Capacity: MAX 1.7L

Rating: 220-240V~50Hz

Rated power 2750W

Stainless steel body

Plastic handle and handle cover

Plastic kettle lid

Plastic power base

White LED indicator light

Servicing and disposal

This product should only be repaired or serviced by an authorised service engineer. Only genuine, approved spare parts should be used.



This symbol indicates that this product should not be treated as normal household waste and should be recycled. John Lewis does not operate in-store take back, but as a member of the Distributor Take Back scheme has funded the development and upgrade of recycling facilities across the UK.

Please take your old appliance to your nearest collection facility for disposal. For further details, contact your local council or visit: www.recycle-more.co.uk

Guarantee

This kettle is guaranteed for two years in respect of defects found to be due to faulty workmanship or materials. Proof of purchase is required for the validity of the guarantee. This guarantee is no longer valid in the case of accidental damage, alteration, repair by any unauthorised persons or poor maintenance.

This guarantee in no way affects your statutory rights.

Please retain these instructions for future reference.

Thank you.



John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com