


John Lewis

Instruction manual
Spectrum wireless speaker

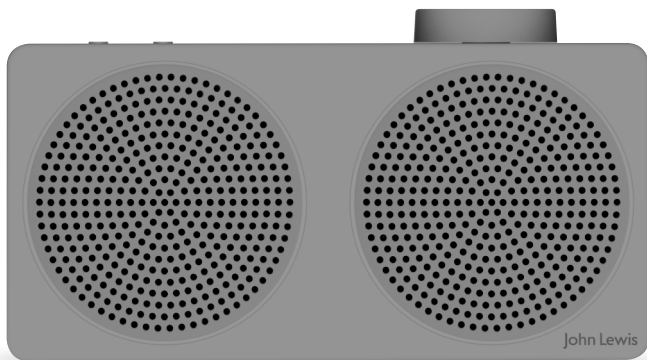

Contents

3	Important safety information
4	Safety information continued
5	Safety information continued
6	Safety information continued
7	Safety information continued
8	Parts list
	Diagram key
9	Quick start guide
	Mode indicator
10	Volume control
	Bluetooth pairing
	Hands-free phone calls
11	Battery indicator and charging
	Aux playback mode
	Power saving
12	Care instructions
13	Troubleshooting
14	Troubleshooting continued
15	Technical specifications
16	Servicing and disposal
	Guarantee

Important safety information

Thank you for purchasing this John Lewis Spectrum wireless speaker. Hereby, John Lewis declares that this radio Spectrum wireless speaker is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://www.johnlewis.com/customer-services/declaration-of-conformity>

Please read the instructions and warnings carefully to ensure a long life for your product and safe usage.

This instruction leaflet must be retained with the product for future reference.

Important safety information - continued

These warnings have been provided in the interest of safety. You **MUST** read them carefully before using the appliance.

If you are unsure of what any of these warnings mean, please contact your nearest John Lewis branch or John Lewis Technical Support on 03301 230106.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they are properly supervised or given instructions concerning the safe use of the item by a person responsible for their wellbeing.

Important safety information - continued

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

- To protect against fire, electric shock and injury, do not immerse cord, plug or base unit in water or other liquids.
- Unplug from the mains when not in use, when removing or attaching accessories and before cleaning any part of the appliance.

Important safety information - continued

- Do not operate any appliance with a damaged cord or plug. Should the item malfunction, or if it is damaged in any manner, please stop using it and return it to the nearest John Lewis store.
- Do not let the power cord overhang the edge of the surface on which it stands, or touch anything hot.
- When unplugging the device, hold the plug itself, not the power cord.
- In the event of a fault, contact your nearest John Lewis store. Do not attempt to repair it yourself.
- Do not use the appliance for any purpose other than its intended use.

- This appliance is for household use only. Do not use it outdoors.
- Please save these instructions for future reference.

WARNING: Polythene bags over the product or within packaging may be dangerous. To avoid the risk of suffocation, please keep away from babies and children.

Parts list

- 1 Spectrum wireless speaker
- 1 USB cable
- 1 USB power adapter
- 1 Instruction manual

Diagram key

- ①

Speaker
- ②

ON/OFF button
- ③

microUSB port
- ④

3.5mm Aux-in
- ⑤

USB power output
- ⑥

Forward button
- ⑦

Play/Pause button
- ⑧

Back button
- ⑨

End call button
- ⑩


Receive call button
- ⑪

Volume dial
- ⑫

Battery indicator
- ⑬

Microphone aperture
- ⑭

Mode indicator

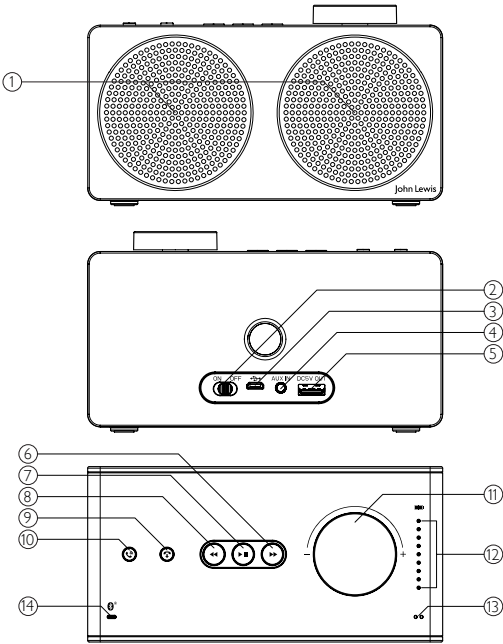

Quick start guide

To get started, switch the ON/OFF button to ON.

For Bluetooth:

- 1 When you first turn on the speaker, it will enter Bluetooth search mode automatically.
- 2 Enable Bluetooth on your audio device, and select “JLPWS02” from the list.
- 3 Open your music app to play songs or audio.

For Aux-in:

- 1 Insert a 3.5mm cable into the Aux-in socket. The speaker will automatically switch to Aux-in mode.
- 2 Connect the other end of the 3.5mm cable to your device.
- 3 Open your music app to play songs or audio.

Note: When the speaker is not in use for a long period, it is recommended that you switch the main button to OFF.

Mode indicator

Mode indicator	Status
Fast flashing blue light	In Bluetooth mode. Ready to connect.
Solid blue light	In Bluetooth mode. Connected.
Solid blue and red light	AUX in mode

Volume control

Rotate the volume dial to increase or decrease the volume. The speaker will beep when it reaches maximum volume.

Bluetooth pairing

In pairing mode, the LED indicator will flash blue to indicate that it is searching for previously paired devices or is available for new connections. Enable Bluetooth on your audio device and select "JLPWS02" from the list. The LED indicator will show as solid blue once it has connected.

Icon	Functions
▶	Play/Pause
▶▶	Forward
◀◀	Backward

Press and hold ▶|| for 3 seconds to disconnect the Bluetooth connection.

Hands-free phone calls

The unit allows you to take hands-free calls. Press the "receive call" button to answer a call, or the "end call" button to decline it.

Battery indicator LED and battery charging

The battery indicator LED shows the battery level. Double-click the power button to view the display. The indicator will turn off automatically after 30 seconds. A warning will sound when the battery is low.

Battery indicator	Charging percentage
●●○○○○○○○○	0% - 25%
●●●●○○○○○○	26% - 50%
●●●●●●○○○○	51% - 75%
●●●●●●●●●●	76% - 100%

When the battery is low, please recharge your speaker.

Charge an external device

This speaker is equipped with a USB 5V/1A output to charge external devices. Charge your mobile phone or another device by connecting via a corresponding USB cable.

Aux playback mode

Insert a 3.5mm cable into the Aux-in socket. The speaker will automatically switch to Aux-in mode.

Power saving

This feature ensures the lowest possible energy use to protect the internal battery. The speaker switches to power-saving mode when it has been idle for more than 15 minutes. Press the volume button once to wake the speaker.

Care instructions

- Use a dry cloth to clean the speaker.
- Do not expose the speaker to extremely high or low temperatures. This may damage the internal circuitry and the rechargeable battery.
- Do not use alcohol, benzine, or thinners to clean the cabinet.
- Do not use or leave the speaker in a car.
- Do not use the speaker in a sauna.

Troubleshooting

If you experience problems with your speaker, try these tips:

- Ensure the speaker is switched on.
- Check the status indicators.
- Ensure that your mobile device supports Bluetooth technology.
- Charge the battery.
- Increase the volume of your speaker, device and music app.
- Move your device closer to the speaker and away from any interference or obstruction.
- Try connecting another device.

If this does not resolve your issue, see the table below to identify common problems and their solutions.

Problem	Solution
No power (battery)	Battery may be in protection mode or discharged. Connect your speaker to a wall charger or computer that is powered on.
Speaker does not connect with mobile device	On your device: <ul style="list-style-type: none">– Disable and then enable the Bluetooth feature.– Delete your speaker from the Bluetooth list on your device. Reconnect.– Connect a different device.– Disconnect speaker pairing list. Reconnect.

Troubleshooting - continued

Problem	Solution
No sound	Switch the speaker off and then on again to check the voice prompt. Use a different music source. Connect a different mobile device. Move the devices within range of the speaker (30ft or 9m).
Speaker is not charging	<ul style="list-style-type: none">- Make sure the connector on the cable is correctly aligned with the connector on the speaker.- Try another charging source.- Check both ends of the USB cable.- If your speaker has been exposed to high or low temperatures, let it return to room temperature before attempting charging.
Microphone is not picking up sound	<ul style="list-style-type: none">- Make sure the microphone opening on the top of the speaker is not blocked.- Try another phone call.- Try another compatible device.

Technical specifications

Model name: Spectrum wireless speaker

Audio output: 2x5W rms
Frequency range: Bluetooth: 2.4GHz band

Power input: DC 5V 1A
Lithium battery: 3.7V 2200mAh x 2

Bluetooth range: 30ft or 9m
USB2.0 output: Max 5V 1A
Bluetooth version: V4.0
Aux-in: 3.5mm connector

Unit dimension: 170mm x 84mm x 84mm


Recommended working temperature:
5oC – 35oC (battery may be depleted quickly at low temperature)

Approximate working time (at half volume):
24 hours (time may vary, depending on the temperature or conditions of use)

Battery charge time: 8 hours

Servicing and disposal

This product should only be repaired or serviced by an authorised service engineer. Only genuine, approved spare parts should be used.

This symbol  indicates that this product should not be treated as normal household waste and should be recycled. John Lewis does not operate in-store take back, but as a member of the Distributor Take Back scheme has funded the development and upgrade of recycling facilities across the UK.

Please take your old appliance to your nearest collection facility. For further details, contact your local council or visit: www.recycle-more.co.uk

Guarantee

This item is guaranteed for two years in respect of defects found to be due to faulty workmanship or materials. Proof of purchase is required for the validity of the guarantee. This guarantee is no longer valid in the case of accidental damage, alteration, repair by any unauthorised persons or poor maintenance. This guarantee in no way affects your statutory rights.

Please retain these instructions for further use.

Thank you.



John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com