

# Operating and installation instructions





## Freezer



To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

# Contents

---

<b>Warning and Safety instructions</b> .....	5
<b>Caring for the environment</b> .....	13
<b>How to save energy</b> .....	14
<b>Guide to the appliance</b> .....	16
Control panel .....	16
Symbols .....	17
<b>Switching on and off</b> .....	19
Before using for the first time .....	19
Cleaning the appliance .....	19
Operating the appliance .....	19
Switching off for longer periods of time .....	20
<b>The correct temperature</b> .....	21
Temperature display .....	21
Setting the temperature .....	22
<b>Using Super freeze</b> .....	23
<b>Temperature and door alarm</b> .....	24
Temperature alarm .....	24
Switching the temperature alarm off early .....	24
Door alarm .....	25
Switching the door alarm off early .....	25
<b>Selecting further settings</b> .....	26
Safety lock  .....	26
Audible tones  .....	27
Display brightness  .....	28
Sabbath mode  .....	29
<b>Freezing and storing food</b> .....	31
Maximum freezing capacity .....	31
Freezing fresh food .....	31
Storing frozen food .....	31
Home freezing .....	32
Using accessories .....	35
<b>Adjusting the interior fittings</b> .....	36
Removing freezer drawers on telescopic runners .....	36
Removing the shelves .....	36

<b>Making ice cubes</b> .....	37
Ice cube maker with integrated ice cube tray .....	37
Switching the ice-cube maker on and off .....	38
Making a large amount of ice cubes .....	39
Changing the size of the ice cubes .....	39
Setting the water volume.....	39
Switching the ice cube maker on/off with the On/Off button.....	40
Switching the ice maker off for a long time.....	41
<b>Automatic defrosting</b> .....	42
<b>Cleaning and care</b> .....	43
Cleaning agents.....	43
Rinsing the ice-cube maker .....	44
Cleaning the ice cube tray.....	45
Before cleaning .....	46
Removing the telescopic runners.....	47
Cleaning the interior and accessories .....	47
Cleaning the door seal .....	48
Cleaning the ventilation gaps .....	48
<b>Problem solving guide</b> .....	49
<b>Noises</b> .....	58
<b>After sales service</b> .....	59
Contact in case of malfunction .....	59
Warranty .....	59
<b>Information for dealers</b> .....	60
Demo mode ■.....	60
<b>Mains water connection</b> .....	62
Information about mains water connection.....	62
Connecting the water supply .....	63
<b>Electrical connection</b> .....	64
<b>Installation</b> .....	65
Side-by-side combinations .....	65
Location.....	65
Ventilation.....	66
Furniture door panel .....	68
Horizontal and vertical gaps.....	68
Weight of the furniture door .....	69

# Contents

---

- Before installing the appliance ..... 69
  - Does your old appliance have a different hinging mechanism? ..... 70
  - Stainless steel front ..... 70
- Building-in dimensions** ..... 71
- Limiting the opening angle of the door** ..... 72
- Changing the door hinging** ..... 73
- Installing the appliance** ..... 77
  - Fitting the furniture door ..... 85

## Warning and Safety instructions

This appliance complies with all statutory safety requirements. Please note that inappropriate use can lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.

### Correct application

- ▶ This refrigeration appliance is intended for use in the home and in similar environments, for example
  - in shops, offices and similar work settings
  - by the guests in hotels, motels, bed & breakfasts and other typical home settings.

This refrigeration appliance is not intended for outdoor use.

- ▶ It must only be used as a domestic appliance to store deep frozen food, freeze fresh food and to make ice.  
Any other usage is not supported by the manufacturer and could be dangerous.

- ▶ This appliance is not suitable for storing and keeping cool medicines, blood plasma, laboratory preparations or other such materials or products. Incorrect use of the appliance for such purposes can cause deterioration of the items stored. The appliance is not suitable for use in areas where there is a risk of explosion.  
Miele cannot be held liable for damage resulting from improper or incorrect use of the appliance.

## Warning and Safety instructions

---

► The appliance can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised whilst using it, or have been shown how to use it in a safe way and recognise and understand the consequences of incorrect operation.

### Safety with children

► Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.

► Children 8 years and older may only use the appliance unsupervised if they have been shown how to use it in a safe way and recognise and understand the consequences of incorrect operation.

► Children must not be allowed to clean or maintain the appliance unsupervised.

► Please supervise children in the vicinity of the appliance and do not let them play with it.

► Danger of suffocation! Whilst playing, children could become entangled in packaging (such as plastic wrapping) or pull it over their head and suffocate. Keep packaging material away from children.

### Technical safety

► The coolant system is tested for leaks. This appliance complies with statutory safety requirements and the appropriate EU guidelines.



► This appliance contains the coolant Isobutane (R600a), a natural gas which is environmentally friendly. Although it is flammable, it does not damage the ozone layer and does not increase the greenhouse effect.

The use of this coolant has, however, led to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the coolant flowing around the system. This is unavoidable, and does not have any adverse effect on the performance of the appliance.

Care must be taken during the transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can damage the eyes.

In the event of any damage:

- avoid naked flames or anything which creates a spark,
- disconnect the appliance from the mains electricity supply,
- ventilate the room where the appliance is located for several minutes, and
- contact the Miele Service Department.

## Warning and Safety instructions

---

- ▶ The more coolant there is in a refrigeration appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every 11 g of coolant at least 1 m<sup>3</sup> of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance.
- ▶ To avoid the risk of damage to the appliance, make sure that the connection data (fuse rating, frequency and voltage) on the data plate corresponds to the household supply. Check that this is the case before connecting the appliance. Consult a qualified electrician if in any doubt.
- ▶ The electrical safety of this appliance can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ Reliable and safe operation of this appliance can only be assured if it has been connected to the mains electricity supply.
- ▶ If the electrical connection cable is faulty it must only be replaced by a Miele authorised service technician to protect the user from danger.
- ▶ Do not connect the appliance to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.
- ▶ If moisture gets into electrical components or into the mains connection cable, it could cause a short circuit. Therefore, do not operate this refrigeration appliance in areas which are exposed to moisture (e.g. in a garage or utility room).
- ▶ This appliance must not be used in a non-stationary location (e.g. on a ship).
- ▶ Do not use a damaged appliance. It could be dangerous. Check the appliance for visible signs of damage.



## Warning and Safety instructions

---

- ▶ For safety reasons, this appliance may only be used after it has been built in.
- ▶ The appliance must be isolated from the electricity supply during installation, maintenance and repair work.
- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user.  
Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ While the appliance is under warranty, repairs should only be undertaken by a Miele authorised service technician. Otherwise the warranty is invalidated.
- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.

### Correct use

- ▶ The appliance is designed for use within a certain climate range (ambient temperatures), and should not be used outside this range. The climate range for your appliance is stated on the data plate inside the appliance. Installing it in a room with too low an ambient temperature, e.g. a garage, will lead to the appliance switching off for longer periods so that it cannot maintain the required temperature.
- ▶ Do not cover or block the air vents as this could impair the efficiency of the appliance, increase the electricity consumption and could cause damage to the components.
- ▶ If storing food which contains a lot of fat or oil in the appliance or the door, make sure that it does not come into contact with plastic components as this could cause stress cracks or break the plastic.
- ▶ Do not store explosive materials in the appliance or any products containing propellants (e.g. spray cans). Electrical components could cause flammable vapours to ignite. Danger of fire and explosion.

## Warning and Safety instructions

---

- ▶ Do not operate any electrical equipment (e.g. an electric ice cream maker) inside the appliance. Danger of sparking and explosion.
- ▶ Do not store cans or bottles containing carbonated drinks or liquids which could freeze in the freezer. The cans or bottles could explode.  
Danger of injury and damage to the appliance.
- ▶ When cooling drinks quickly in the freezer, make sure bottles are not left in for more than one hour; otherwise they could burst, causing injury or damage.
- ▶ Never handle frozen food or the metal parts of the appliance with wet hands. Your hands may freeze to the frozen food or to the metal.  
Danger of frost burn.
- ▶ Do not take ice cubes out with your bare hands and never place ice cubes or ice lollies in your mouth straight from the freezer. The very low temperature of the frozen ice or lollies can cause frost burn to the lips and tongue.
- ▶ Do not refreeze partially or fully defrosted food. Consume defrosted food as soon as possible, as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be re-frozen after it has been cooked.
- ▶ Observe the manufacturer's "use-by" dates and storage instructions given on food to avoid the risk of food poisoning. Storage times will depend on several factors, including the freshness and quality of the food, as well as the temperature at which it is stored.
- ▶ Only use genuine original Miele accessories and spare parts with this appliance. Using accessories or spare parts from other manufacturers will invalidate the warranty, and Miele cannot accept liability.

### Cleaning and care

- ▶ Do not use any oils or grease on the door seals, as these will cause the seals to deteriorate and become porous with time.
- ▶ Do not use a steam cleaning appliance to clean or defrost this appliance.  
Steam could reach electrical components and cause a short circuit.
- ▶ Sharp edged or pointed objects will damage the evaporator, causing irreversible damage to the appliance. Do not use sharp edged or pointed objects to
  - remove frost and ice,
  - separate frozen foods or remove ice trays.
- ▶ Do not place electric heaters or candles in the appliance to defrost it. These can damage the plastic parts.
- ▶ Do not use defrosting sprays or de-icers, as they could contain substances which could damage the plastic parts or which might cause the build-up of gases and pose a danger to health.

### Transporting the appliance

- ▶ Always transport the appliance in an upright position and in its original transport packaging to avoid damage in transit.
- ▶ Danger of injury and damage. The appliance is very heavy and must be transported by two people.

## Warning and Safety instructions

---

### Disposal of your old appliance

► Before disposing of an old appliance, first make the door latch or lock unusable.

This way you will prevent children from accidentally locking themselves in and endangering their lives.

► Splashes of coolant can damage the eyes. Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by

- puncturing the coolant channels in the condenser,
- bending any pipework, or
- scratching the surface coating.

### Symbol on the compressor (depending on model)

This information is only relevant for recycling. In normal operation there is no risk.



► The oil in the compressor can be fatal if swallowed or if it penetrates the airways.

### Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

### Disposal of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer or Miele for advice. You are also responsible (by law, depending on country) for deleting any personal data that may be stored on the appliance being disposed of.

Take care not to damage the pipework at the back of it before or during transportation to an authorised collection depot.

In this way, refrigerant in the pipework and oil in the compressor will be contained, and will not leak into the environment.

Please ensure that your old appliance presents no danger to children while being stored awaiting disposal. See "Warning and Safety instructions" for more information.

# How to save energy


	Normal energy consumption	Increased energy consumption
Installation / Maintenance	In a ventilated room.	In an enclosed, unventilated room.
	Protected from direct sunlight.	In direct sunlight.
	Not near to a heat source (radiator, oven).	Near to a heat source (radiator, oven).
	Where the ideal ambient room temperature is approx. 20 °C.	Where the ambient room temperature is above 25 °C.
	Ventilation gaps uncovered and dusted regularly.	Ventilation gaps covered or dusty.
Temperature setting	Freezer section -18 °C	The lower the temperature in the appliance, the higher the energy consumption.

## How to save energy

	Normal energy consumption	Increased energy consumption
Use	Drawers and shelves arranged as they were when the appliance was delivered.	
	Only open the door when necessary and for as short a time as possible. Store food in an organised way.	Frequent opening of the door for long periods will cause a loss of coldness. The appliance works harder to cool down and the compressor runs for longer periods.
	Take an insulated cool bag when shopping and load food in the appliance as soon as possible. Allow hot food and drinks to cool down before placing them in the appliance.	Hot food or food at room temperature raises the temperature inside the appliance. The appliance works harder to cool down and the compressor runs for longer periods.
	Store food well packaged.	The evaporation or condensation of liquids will cause a loss of coldness.
	Do not over-fill the appliance to allow air to circulate.	Poor air circulation will cause a loss of coldness.

# Guide to the appliance



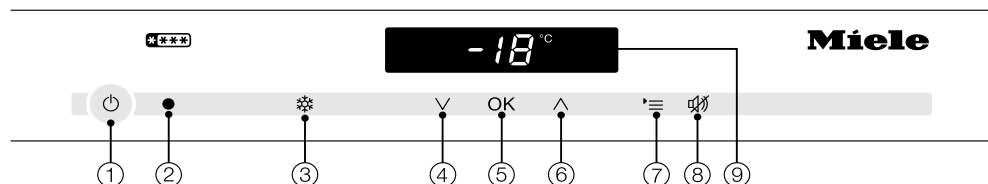


 


## Control panel



- ① On/Off sensor for the whole appliance
- ② Optical interface (for Service technicians only)
- ③ On/Off sensor the Super freeze function
- ④ For setting the temperature (V = colder), Selector sensor in settings mode
- ⑤ OK sensor for confirming a selection
- ⑥ For setting the temperature (^ = warmer), Selector sensor in settings mode
- ⑦ Sensor for accessing or leaving settings mode
- ⑧ For switching off the door alarm
- ⑨ Display with temperature and symbols (symbols only visible in settings mode, in the event of an alarm/message; see table for explanation of symbols)




### Symbols

Symbol	Meaning	Function
	Safety lock	Prevents the appliance being switched off, the temperature being altered, Super freeze being switched on and settings being altered by mistake.
	Audible tones	Choice of sensor tone and door and temperature alarm tone
	Miele@home	Only visible when a communication module or communication stick is fitted and signed on
	Display brightness settings	For adjusting the brightness of the display
	Sabbath mode	For switching Sabbath mode on and off
	Mains connection	Confirms that the appliance is connected to the electricity supply when it is not switched on; flashes in the event of a power cut
	Alarm	Lights up when there is a door alarm; flashes when there is a temperature alarm, power cut or a fault
	Demo mode (only visible when Demo mode is switched on)	For switching off Demo mode

# Guide to the appliance

---

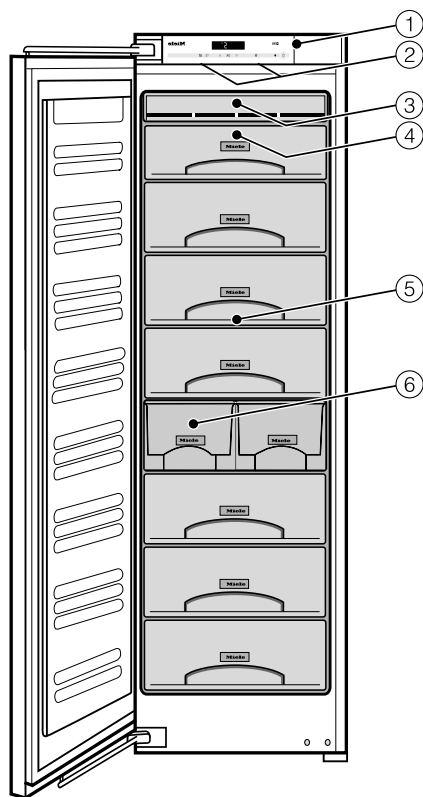

This drawing is for illustration purposes only.

- ① Control panel
- ② Interior lighting
- ③ Frost free unit
- ④ Top freezer drawer, can also be used as a freezing tray
- ⑤ Freezer drawers (number depends on model)
- ⑥ Ice-cube drawer with automatic ice-cube maker

## Before using for the first time

### Packaging material

- Remove all packaging material from the inside of the appliance.

### Removing the protective foil

- Carefully peel the protective foil off.

### Cleaning the appliance

Please refer to the relevant instructions in "Cleaning and care".

- Clean the inside of the appliance and the accessories.
- Clean the ice-cube maker: after selecting the "Rinse ice-cube maker" setting, the ice-cube maker and the water supply pipework will be rinsed automatically with water.


## Operating the appliance

A light touch of the finger on the sensors is all that is required to operate this appliance.

Every touch of a sensor is confirmed with an audible tone. This keypad tone can be switched off (see "Selecting further settings" – "Audible tones").



### Switching the appliance on

To enable the temperature to get sufficiently cold inside the appliance, allow the appliance to run for a few hours before placing food in it.

When the appliance is connected to the electrical supply, the mains connection symbol  will appear in the display after a short while.



- Touch the On/Off control.

The appliance will start cooling. The mains connection symbol  will go out and the temperature display will appear. The temperature display and the alarm symbol  will flash at the same time until the required temperature is reached. If the current temperature inside the appliance is above 0 °C, two bars will flash in the display.

When the appliance door is opened, the interior lighting comes on and the LED lighting becomes brighter until it reaches its maximum brightness.


# Switching on and off

## Switching off




- Touch the On/Off sensor.

If this does not work, the safety lock is still activated.

The temperature display will go out and the mains connection symbol  will appear.

The cooling process will be switched off.

## Switching off for longer periods of time

 If, during a long absence, the appliance is switched off but not cleaned and the door(s) left shut, there is a danger of mould building up inside the appliance. It is essential to clean the appliance.

If the appliance is not going to be used for a longer period of time, e.g. whilst on holiday:

- switch the appliance off,
- disconnect it from the mains,
- empty the ice-cube drawer,
- close the stopcock for the water supply pipework,
- clean the appliance and
- leave the door(s) ajar to air the appliance and avoid odours building up inside the appliance.

It is very important to set the correct temperature for storing food in the appliance. Micro-organisms will cause food which is not stored at the correct temperature to deteriorate rapidly. Temperature influences the growth rate of these micro-organisms. Reducing the temperature reduces their growth rate.

To freeze fresh food and to store frozen food for a long time, a temperature of **-18 °C** is required. At this temperature the growth of micro-organisms is generally halted. As soon as the temperature rises above -10 °C, the micro-organisms become active in the food again so that it cannot be kept as long. For this reason, partially defrosted or fully defrosted food must not be re-frozen. Food may be re-frozen once it has been cooked, as the high temperatures achieved when cooking destroy most micro-organisms.

The temperature in the appliance will rise:


- the more often the door is opened and the longer it is kept open,
- the more food that is stored in it,
- the warmer the food is which is being put into it,
- the higher the ambient temperature surrounding the appliance. The appliance is designed for use within specific ambient temperatures (climate range). Do not use in ambient temperatures for which it is not designed.

## Temperature display

In normal operation the temperature display shows the **average, current temperature in the freezer**.

If the temperature is not within the normal temperature display range, dashes will flash in the display.

Depending on the ambient temperature and the temperature setting, it can take the appliance a few hours to reach the temperature required and for this temperature to then be shown as a constant temperature in the display.

 If the temperature in the freezer remains above -18 °C for a long time, check that the frozen food has not started to defrost. If it has, check that the food is safe to use and if it is, then use it as soon as possible or cook it before freezing it again.

# The correct temperature

---

## Setting the temperature

- Use the two sensors underneath the display to set the temperature.

By touching the sensor



- the temperature will get colder,



- the temperature will get warmer.

The temperature being set will flash in the display.

The following information shows in the display while the sensors are being touched:

- Touching a sensor once: the **last temperature selected** flashes.
- Each subsequent touch of the sensor: adjusts the temperature shown in 1°C steps.
- Leaving a finger on the sensor changes the temperature continuously.

Approximately 5 seconds after the last time a sensor has been touched, the **current** temperature inside the appliance is automatically shown.

**Or**

- Touch the OK sensor to confirm your selection.

If you have adjusted the temperature, **wait for approx. 6 hours if the appliance is not very full and for approx. 24 hours if the appliance is full** before checking the temperature display, as it will take this long for the appliance to give an accurate reading.

- If, after this time, the temperature is still too high or too low, you will need to adjust it again.

## Temperature range

The temperature can be adjusted from -15 °C to -28 °C.

## Super freeze function

Switch on Super freeze before putting fresh food into the freezer.

This helps food to freeze quickly and retain its nutrients, vitamins, flavours and appearance.

### Exceptions:

- when placing food in the freezer that is already frozen.
- when freezing up to 2 kg fresh food daily.

## Switching on Super freeze

The Super freeze function should be switched on **6 hours before placing food for freezing in the freezer**. When freezing the **maximum amount of food** the Super freeze function should be switched on **24 hours beforehand**.



- Touch the Super freeze control so that it is highlighted in yellow.

The appliance will work at full power to lower the temperature in the freezer.

## Switching off Super freeze

The Super freeze function will switch itself off automatically after approx. 65 hours. The quantity of fresh food placed in the freezer will determine the duration before it switches off. The Super freeze ❄ symbol will go out and the appliance will run at normal power again.

To save energy, you can manually switch off the Super freeze function once a **constant** temperature of -18 °C or colder has been reached in the freezer section. Keep an eye on the temperature as it falls.



- Touch the Super freeze control so that it is no longer highlighted in yellow.

The appliance will then continue running at normal power.

# Temperature and door alarm

The appliance has been fitted with a warning system which ensures that the temperature in the freezer cannot rise unnoticed and to avoid energy being wasted if the door is left open.

## Temperature alarm

⚠ If the temperature in the freezer remains above  $-18^{\circ}\text{C}$  for a long time, check that the frozen food has not started to defrost.

If it has, check that the food is safe to use and if it is, then use it as soon as possible or cook it before freezing it again.

If the temperature in the freezer becomes too warm, the alarm symbol ⚠ will flash in the display. An audible alarm will also sound.

The temperature the appliance is set at determines the temperature the appliance recognises as being too warm.

Audible and visual signals will be activated, for example,

- when the appliance is switched on and the temperature in the appliance differs greatly from the set temperature,
- if a lot of room air enters the freezer when food is being loaded, rearranged or taken out,
- when freezing large amounts of food at once,
- when freezing fresh food which is still warm,
- in the event of a power cut,
- if the appliance has a fault.

The alarm will stop and the alarm symbol ⚠ will go out as soon as the temperature has dropped down to the correct level again.

## Switching the temperature alarm off early

If the noise disturbs you, you can switch the alarm off if you wish.




- Touch the sensor for switching off the temperature alarm.

The alarm will stop.


The alarm symbol ⚠ will remain illuminated until the set temperature has been reached.



## Door alarm

The alarm will sound if the door is left open for a long time. The alarm symbol  lights up in the display.

The amount of time until the door alarm is triggered depends on the setting selected and can be either 2 minutes (factory default) or 4 minutes. However, the door alarm can also be turned off (see "Selecting further settings" - "Audible tones").

The alarm will stop and the alarm symbol  will go out as soon as the door is closed.


If the audible tone does not sound in the event of a door alarm, then the audible tone has been switched off in settings mode (see "Selecting further settings" - "Audible tones").

## Switching the door alarm off early

If the noise disturbs you, you can switch the alarm off if you wish.




- Touch the sensor for switching off the door alarm.





The alarm sound will stop.  
The alarm symbol  will continue to be lit up until the door is closed.

## Selecting further settings

Certain settings on the appliance can only be selected in settings mode.

When in settings mode, the door alarm and other fault messages are automatically deactivated although the alarm symbol  appears in the display.

### Available settings

	Activating or deactivating the safety lock
	Switching audible tones on/off
	Altering the display brightness
	Switching Sabbath mode on/off

These settings are described in more detail below.

### Safety lock

The safety lock can be activated to prevent:


- the appliance being switched off by mistake,
- the temperature being changed by mistake,
- the Super freeze function being selected by mistake,
- settings being adjusted by mistake (it is only possible to deactivate the lock).

This prevents the appliance being switched off or settings adjusted without your knowledge, by children, for example.

### Activating or deactivating the safety lock




- Touch the settings sensor.

All symbols available for selection will appear in the display and the  symbol flashes.



- Touch the OK sensor to confirm your selection.

The last selected setting flashes and the  symbol lights up in the display.

## Selecting further settings



- By touching the  $\wedge$  or  $\vee$  sensor, you can now select whether the safety lock is activated or deactivated:  
 $\sqcup$ : the safety lock is deactivated  
 $\intercal$ : the safety lock is activated



- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  $\sqcup$  symbol flashes.



- Touch the settings sensor to leave settings mode.  
Otherwise the appliance exits settings mode automatically after approximately one minute.

The  $\sqcup$  symbol will appear in the display when the lock is activated.

### Audible tones

The appliance has audible tones such as the sensor tone and the door and temperature alarms.

You can switch the sensor tone or the door alarm tone on or off but you cannot deactivate the temperature alarm.

There are four settings to choose from. Option 3 is set the factory, i.e. the sensor tone and the door alarm are switched on.


### Switching audible tones on/off



- Touch the settings sensor.

 
All symbols available for selection will appear in the display and the  $\sqcup$  symbol flashes.



- Touch the sensors for setting the temperature ( $\wedge$  or  $\vee$ ) repeatedly until the  symbol flashes.



- Touch the OK sensor to confirm your selection.

The last selected setting flashes and the  symbol lights up in the display.

## Selecting further settings



- By touching the  $\wedge$  or  $\vee$  sensor you can now select:

$\square$ : sensor tone off; door alarm off

$\text{1}$ : sensor tone off; door alarm on (after 4 minutes)

$\text{2}$ : sensor tone off; door alarm on (after 2 minutes)

$\text{3}$ : sensor tone on; door alarm on (after 2 minutes)



- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  $\text{♪♪}$  symbol flashes.



- Touch the settings sensor to leave settings mode.

Otherwise the appliance exits settings mode automatically after approximately one minute.

## Display brightness $\text{☀}$

The display brightness can be adjusted to suit lighting conditions in the room.

The display brightness can be adjusted in steps from  $\text{1}$  to  $\text{3}$ . The factory default setting is  $\text{3}$  (maximum brightness).

### Altering the display brightness



- Touch the settings sensor.

All symbols available for selection will appear in the display and the  $\text{🔒}$  symbol flashes.



- Touch the sensors for setting the temperature ( $\wedge$  or  $\vee$ ) repeatedly until the  $\text{☀}$  symbol flashes.



- Touch the OK sensor to confirm your selection.

The last selected setting flashes and the  $\text{☀}$  symbol lights up in the display.


## Selecting further settings



- By touching the  $\wedge$  or  $\vee$  sensor you can now alter the brightness of the display:  
1: dimmest setting  
2: medium setting  
3: brightest setting.



- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  symbol flashes.



- Touch the settings sensor to leave settings mode. Otherwise the appliance exits settings mode automatically after approximately one minute.

### Sabbath mode

The appliance has a Sabbath mode to support the observance of religious customs.

The following are switched off:

- the interior lighting when the door is opened,
- all acoustic and visual signals,
- the temperature display,
- the Super freeze function (if previously selected).

The following can be selected:

- the settings button for switching off Sabbath mode
- and the On/Off button.

The Sabbath mode function will switch itself off automatically after approx. 120 h.

Ensure that the door is properly closed, as visual and audible alarms are switched off.



#### **Danger of food contamination!**

Any power failure during Sabbath mode is not shown in the display. After a power failure, the appliance restarts in Sabbath mode. When power is restored, no notification of the power failure will appear in the display.


If there was a power failure during Sabbath mode, check the quality of the food and do not consume partially thawed food.

## Selecting further settings


### Switching on Sabbath mode



- Touch the settings sensor.


All symbols available for selection will appear in the display and the  symbol flashes.



- Touch the sensors for setting the temperatures ( $\wedge$  or  $\vee$ ) repeatedly until the  symbol flashes.



- Touch the OK sensor to confirm your selection.


The last selected setting flashes and the  symbol lights up in the display.




- By touching the  $\wedge$  or  $\vee$  sensor you can now switch on Sabbath mode. To do this, select setting 7



- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  symbol lights up.

As soon as the  symbol goes out in the display after 3 seconds, Sabbath mode is switched on.

- Switch off Sabbath mode after the Sabbath has passed.

### Switching off Sabbath mode



- Touch the settings sensor to leave Sabbath mode.

The temperature will appear in the display and the interior lighting will come on.

## Maximum freezing capacity

To ensure that fresh food placed in the freezer freezes through to the core as quickly as possible, the maximum freezing capacity must not be exceeded. The maximum freezing capacity for freezing within a 24-hour period is given on the data plate: "Freezing capacity ....kg/24 hrs".

The maximum freezing capacity given on the data plate has been calculated according to DIN EN ISO 15502 Standard.

## Freezing fresh food

Fresh food should be frozen as quickly as possible. This way the nutritional value of the food, its vitamin content, appearance and taste are not impaired.

Food which takes a long time to freeze will lose more water from its cells, which then shrink. During the defrosting process, only some of this water is reabsorbed by the cells; the rest collects around the food.

If food is frozen quickly, the cells have less time to lose moisture, so they shrink less. As there is not so much moisture loss, it is easier for the food to reabsorb it during the defrosting process, and very little water collects around the defrosted food.

## Storing frozen food

When buying frozen food to store in your freezer, check

- that the packaging is not damaged,
- the use-by date,
- the temperature at which the frozen food is being stored in the shop. The length of time it can be kept is reduced if it has been stored at a temperature warmer than -18 °C.

- Buy frozen food once you have finished the rest of your shopping, and wrap it in newspaper or use a cool bag or cool box to transport it.
- Store it in the freezer as soon as possible.



Never re-freeze partially or fully defrosted food. Consume defrosted food as soon as possible as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be re-frozen after it has been cooked.

# Freezing and storing food

---

## Home freezing

Only freeze fresh food which is in a good condition.

### Hints on home freezing

- The following types of food **are suitable** for freezing:  
Fresh meat, poultry, game, fish, vegetables, herbs, fresh fruit, dairy products, cakes, leftovers, egg yolks, egg whites and a range of pre-cooked meals.
- The following types of food **are not suitable** for freezing:  
Grapes, lettuce, radishes, soured cream, mayonnaise, eggs in their shells, onions, whole raw apples and pears.
- To retain colour, taste, aroma and vitamin C, vegetables should be blanched before they are frozen. To do so place them portion by portion into boiling water for 2–3 minutes. Remove, and plunge into ice-cold water to cool quickly. Drain and pack ready for freezing.
- Lean meat freezes better than fatty meat, and can be stored for considerably longer.
- Separate chops, steaks, cutlets etc. with a sheet of plastic freezer film. This prevents them from freezing together in a block.
- Do not salt or season raw food or blanched vegetables before freezing. Cooked food should only be lightly salted and seasoned. Some herbs intensify the taste of food when frozen.

- Placing hot foods or drinks in the freezer causes food that is already frozen to partially thaw and increases energy consumption. Allow hot foods and drinks to cool down before placing them in the freezer.

### Packaging food for freezing

- Freeze food in portions.

#### Suitable packing material

- Plastic freezer bags
- Tubular polythene freezer bags
- Aluminum foil
- Freezer containers

#### Unsuitable packing material

- Wrapping paper
- Greaseproof paper
- Cellophane
- Bin bags
- Plastic carrier bags
- Expel as much air as possible from the packaging.
- Close the packaging tightly with
  - Rubber bands
  - Plastic clips
  - String
  - Freezer tape

**Tip:** Freezer bags may also be sealed using home heat sealing kits.

- Make a note of the contents and the date of freezing on the packaging.




## Before placing food in the appliance

- When freezing more than 2 kg of fresh food, switch on the Super freeze function some time before placing the food in the freezer (see "Super freeze").

This helps create a cold reserve in food which is already stored in the freezer.

## Placing food in the freezer section

 The following maximum loading weights must not be exceeded:

- Top freezer drawer = 5 kg
- Freezer drawer = 25 kg
- Shelf = 35 kg

Unfrozen food should not touch frozen food as this will cause frozen food to begin to thaw.

- Make sure that the packaging and containers are dry to prevent them sticking together when frozen.

## - Freezing small amounts of food

Place the food in the lower freezer drawers.

- Place the food flat in the bottom of the freezer drawers so that it freezes through to the core as quickly as possible.

When placing food on the glass plates make sure that you do not block the ventilation slits in the back wall of the appliance. They are important for trouble-free operation of the appliance and normal energy consumption.

## - Freezing the maximum amount (see data plate)

- Remove the freezer drawers
- Place the food flat on the glass plates so that it freezes through to the core as quickly as possible.

### Once frozen:

- Place the frozen food in the freezer drawer and push it back in.

## - Large items

If you wish to freeze large items such as a turkey or game, the glass cold plates between the drawers can be removed.

- Remove the freezer drawers. Carefully lift and slide out the glass cold plates.

# Freezing and storing food

## Storage time for frozen food

The storage life of food is very variable, even at a constant temperature of  $-18^{\circ}\text{C}$ . Decomposition processes also take place in frozen food, albeit at a very reduced speed. For example fat can become rancid from contact with oxygen in the air. This is why lean meat can be stored approx. twice as long as fatty meat.

The storage times quoted are guide values for the storage life of different food groups in the freezer section.

Food group	Storage time (Months)
Ice cream	2 to 6
Bread, baked goods	2 to 6
Cheese	2 to 4
Fish, oily	1 to 2
Fish, lean	1 to 5
Sausage, ham	1 to 3
Game, pork	1 to 12
Poultry, beef	2 to 10
Vegetables, fruit	6 to 18
Herbs	6 to 10

Where the storage time given on the packaging differs, follow the advice on the packaging.

## Defrosting

Frozen food can be defrosted in different ways:

- in a microwave oven,
- in an oven using "Fan heat" or the "Defrost" setting,
- at room temperature,
- in the refrigerator section (the cold given off by the frozen food helps to keep the other food cold),
- in a steam oven.

**Flat pieces** of partially thawed fish can be placed directly into a hot frying pan.

**Meat and poultry** It is particularly important to observe food hygiene rules when defrosting poultry. Do not use the liquid from defrosted poultry. Pour it away and wash the container it was in, the sink and your hands. Danger of salmonella poisoning. Ensure that meat and fish (e.g. mince, chicken, fish fillets) do not come into contact with other foods while defrosting. Catch the liquid and dispose of it carefully.

**Fruit** should be defrosted at room temperature in its packaging, or in a covered bowl.

**Most vegetables** can be cooked while still frozen. Just put straight into boiling water or hot fat. The cooking time is slightly less than that of fresh vegetables due to changes in the cell structure.

⚠ Never re-freeze partially or fully defrosted food. Consume defrosted food as soon as possible as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be re-frozen after it has been cooked.

**Tip:** When placing fresh food in the freezer, use the cool pack to separate the fresh food from the food which is already frozen so that the frozen food does not begin to thaw.

**Tip:** The cool pack can also be used in a cool bag to keep food or drinks cool for a short period of time.


### Cooling drinks quickly

When cooling drinks quickly in the freezer, make sure bottles are **not left in for more than one hour**; otherwise they could burst, causing injury and damage.

### Using accessories

#### Cool pack

The cool pack prevents the temperature in the freezer rising too quickly in the event of a power cut. This can help prolong the storage life.

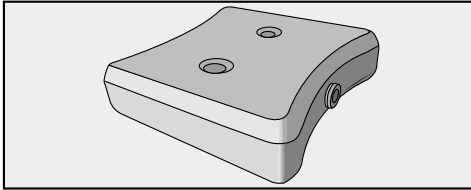

- Place the cool pack in the top freezer drawer.

The cool pack will be at its most effective after it has been in the freezer for approx. 24 hours.

#### – In the event of a power cut

- Place the frozen cool pack directly on top of the frozen food in the front of the top drawer.


## Adjusting the interior fittings

---

### Removing freezer drawers on telescopic runners

Some of the freezer drawers are on telescopic runners and can be removed for filling, emptying or cleaning purposes.

- Pull the drawer out as far as it will go.

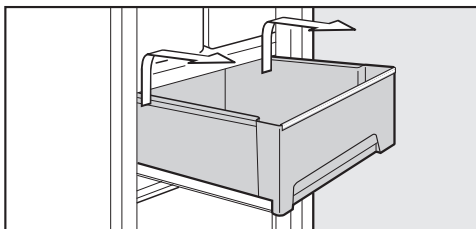

- Holding the sides of the drawer at the back, lift it up and then forwards and out.

Push the runners back in again to avoid damaging them.

Be careful not to wash out the special lubricant in the telescopic runners during cleaning.

Wipe the telescopic runners with a well-wrung out damp cloth to clean them.

- To replace the drawer, push the runners back in completely and then place the drawer on them.
- Push the drawer into the appliance until it clicks into position.

### Removing the shelves.

The shelves can be removed.

- Lift the shelf slightly at the front and then pull it forwards and out.

For the automatic ice-cube maker to operate, it must be connected to a mains water connection (see "Mains water connection").



### Danger to health!


The ice-cube maker and water supply pipework must be rinsed:

- before using for the first time,
- if the ice-cube maker has not been used for a long time,
- regularly when in continuous use (at least once a month), to remove ice residues from the system (to avoid a blockage of the water supply pipework) and
- before switching the ice-cube maker off for a long time. See "Cleaning and maintenance" – "Rinsing the ice-cube maker" for details of how to enable this function.

## Ice cube maker with integrated ice cube tray

Only make normal domestic quantities of ice cubes with the ice maker.

After using the appliance for the first time, it can take up to 24 hours for the first ice cubes to drop out of the ice-cube maker and collect in the drawer. After the ice-cube maker has been turned off and on again, this process lasts max. 6 hours.

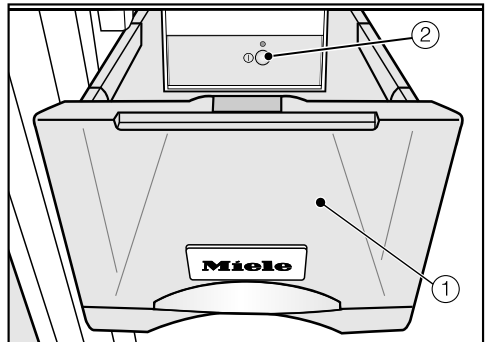


In the ice-cube drawer ① there is an automatic ice-cube maker ②.

When the ice-cube maker is switched on, the indicator light on the ice-cube maker lights up.

Ice cubes can only be made when the ice-cube drawer is completely closed.

## Making ice cubes

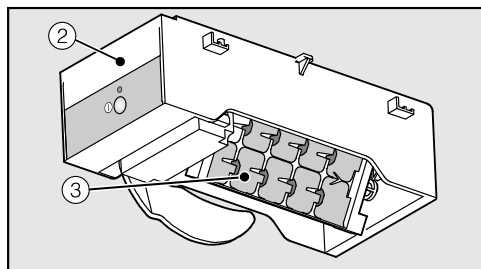

An ice-cube tray ②, in which the ice cubes are produced, is integrated in the ice-cube maker ③.

The ice-cube tray automatically empties into the drawer as soon as ice cubes are produced. Once a certain fill level has been reached, the automatic production of ice cubes stops. The drawer will not fill up to the top edge.

The ice-cube maker can be turned off independently of the freezer if you do not want to make any ice cubes.


If the ice-cube maker is turned off, the ice-cube drawer can be used as an extra drawer for freezing fresh food and storing frozen food.


## Switching the ice-cube maker on and off

Make sure that the ice-cube drawer is empty before switching on the ice-cube maker.



- Touch the settings button.

All symbols available for selection will appear in the display and the  symbol flashes.

- Touch the buttons for setting the temperature ( $\nabla$  or  $\wedge$ ) repeatedly until the ice-cube maker symbol  flashes in the display.
- Touch the OK button to confirm your selection.
- Use the  $\nabla$  and  $\wedge$  buttons to set the ice-cube maker:  
 $\nabla$ : ice-cube maker is switched off  
 $\wedge$ : ice-cube maker is switched on
- Touch the OK button to confirm your selection.

The selected setting is applied.

- Touch the settings button to leave settings mode or
- close the appliance door.

Otherwise, the appliance will switch to normal operation after approximately one minute.

## Making a large amount of ice cubes

The amount of ice cubes produced depends on the temperature in the freezer. The lower the temperature, the more ice cubes are produced within a given time. At a temperature of -18 °C, approx. 1 kg of ice cubes will be produced within 24 hours.

**Tip:** If you require a large amount of ice cubes, replace the full ice cube drawer with the drawer beside it on the right.

The ice maker will begin to produce ice cubes again as soon as this drawer has been placed in position and closed properly.

## Changing the size of the ice cubes


The size of the ice cubes depends on the quantity of water being taken in. You are able to set this quantity according to your requirements. To make larger ice cubes, increase the amount of water being taken in by the ice-cube maker. The amount of water is set to medium (E 3) at the factory.


## Setting the water volume

The setting can only be selected if the ice cube maker is switched on.



- Touch the settings sensor.

All symbols available for selection will appear in the display and the  symbol flashes.

- Touch the sensors for setting the temperature ( $\nabla$  or  $\wedge$ ) repeatedly until the ice cube maker symbol  flashes in the display.
- Touch the OK sensor to confirm your selection.
- By touching the  $\nabla$  and  $\wedge$  sensor you can now alter the water volume:
  - 0: the ice cube maker is switched off
  - 1: the ice cube maker is switched on
  - 2: **set the water volume**
  - 3: select the ice cube tray cleaning position
  - 4: rinse the ice cube maker
- Touch the OK sensor to confirm your selection.

## Making ice cubes

- By touching the  $\nabla$  or  $\wedge$  sensor, you can now set the water volume you require (*E1* to *E8*):

*E1*: low water volume

*E8*: high water volume

- Touch the OK sensor to confirm your selection.


The selected setting is applied.



- Touch the settings sensor to leave settings mode, or
- Close the appliance door.

Otherwise the appliance will switch to normal operation after approximately one minute.

## Switching the ice cube maker on/off with the On/Off button

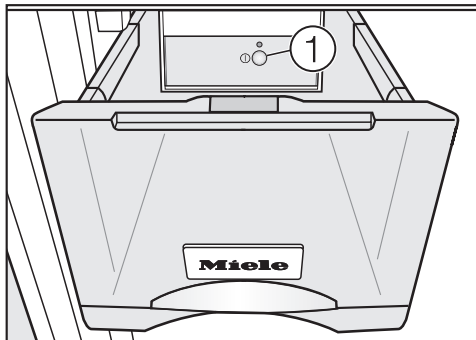- Pull the ice cube drawer out slightly.



- Press the On/Off button ① on the ice cube maker,
  - until the indicator light comes on. The ice cube maker symbol  will appear in the display. The ice cube maker is switched on.
  - until the indicator light goes out. The ice cube maker symbol  will go out in the display. The ice cube maker is switched off.
- Close the ice cube drawer.



### Switching the ice maker off for a long time.




#### Risk of damage!

If the water inlet is blocked while the ice maker is still in use, the water inlet pipe can freeze up.

Turn the ice maker off if the water supply is turned off (e.g. while on holiday).

- Close the stopcock for the water inlet.

If the  LED begins to flash in the display, this means that there is still water remaining in the ice maker.

- Leave the ice maker on for another day so that the remaining ice cubes can be produced.
- Turn the ice maker off as soon as the remaining ice cubes have been produced.
- Take the remaining ice cubes out of the ice cube container and dispose of them.


## Automatic defrosting


---

The appliance is equipped with a "Frost free" system. The freezer defrosts automatically.

The moisture generated in the appliance collects on the condenser and is automatically defrosted and dissipated by the condenser from time to time.

This automatic defrosting system enables the freezer to remain permanently ice-free, however, the food stored in the freezer will not defrost.

 Do not let water get into the electronic unit.

 Steam from a steam cleaning appliance could reach the electrical components and cause a short circuit.

Do not use a steam cleaner!

The data plate located inside the appliance must not be removed. It contains information which is required in the event of a service call.

### Cleaning agents

Cleaning and conditioning agents used inside the appliance must be food safe.

To avoid damaging all the surfaces of your appliance, **do not use:**

- cleaning agents containing soda, ammonia, acids or chlorides
- cleaning agents containing descaling agents
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners
- solvent-based cleaning agents
- stainless steel cleaning agents
- dishwasher cleaner
- oven sprays
- glass cleaning agents
- hard, abrasive sponges and brushes, e.g. pot scourers
- melamine eraser blocks
- sharp metal scrapers

We recommend using a clean sponge, lukewarm water with a little washing-up liquid to clean surfaces of the appliance.


The following pages contain important information on cleaning.

# Cleaning and care

## Rinsing the ice-cube maker

The ice-cube maker and water supply pipework must be rinsed:

- before using for the first time,
- if the ice-cube maker has not been used for a long time,
- regularly when in continuous use (at least once a month), to remove ice residues from the system (to avoid a blockage of the water supply) and
- before switching the ice-cube maker off for a long time.

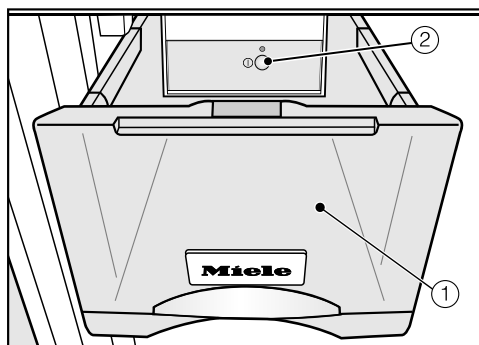

After selecting the "Rinse the ice-cube maker" setting, the ice-cube maker ② and the water supply pipework will be rinsed automatically with water.

The ice-cube tray then rotates into the cleaning position to allow you to dry it by hand.


Water is collected in the ice-cube drawer ①.


Make sure the ice-cube drawer is empty before selecting the "Rinse the ice-cube maker" setting. Otherwise, the water will empty onto the contents of the drawer.

The "Rinse ice-cube maker" setting can only be selected when the ice-cube maker is switched on.



- Touch the settings button.

All symbols available for selection will appear in the display and the  symbol flashes.

- Touch the buttons for setting the temperature (∇ and ▲) repeatedly until the ice-cube maker symbol  flashes in the display.

- Touch the OK button to confirm your selection.

- By touching the ∇ and ▲ button, you can now select the setting you want:

0: the ice-cube maker is switched off


1: the ice-cube maker is switched on

2: set the water volume

3: select the ice-cube tray cleaning position

4: **rinse the ice-cube maker**

- Touch the OK button to confirm your selection.

The selected setting is applied. The symbol in the display for the ice-cube maker  and the indicator light on the ice-cube maker will flash while the ice-cube maker is being rinsed.

You will hear the ice-cube tray turn so that it is at an angle.

- Wait until the ice-cube tray has completed this rotation before continuing.

The ice-cube maker will then switch off.

- Carefully remove, the ice-cube drawer, which will be full of water. Empty and clean it.

The ice-cube tray **cannot be removed** and must be cleaned in situ.


- Dry the ice-cube tray ② with a soft cloth.

When the ice-cube maker is switched back on again, the ice-cube tray will rotate back into the original position.

## Cleaning the ice cube tray

- ⚠ Clean the ice cube tray,
- before switching off the ice cube maker for a long time.
  - regularly, to remove ice and water residues.

If you have previously selected the setting "Rinse the ice cube maker" (see "Rinsing the ice cube maker"), the ice cube tray will already be in the cleaning position.

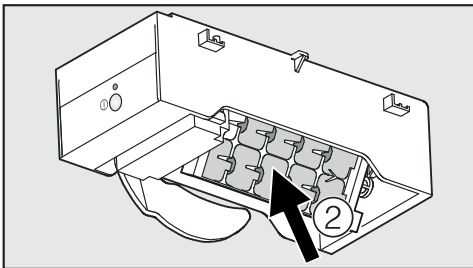

The ice cube tray ② **cannot be re-moved** and must be cleaned in situ. To clean the tray you need to move it into the cleaning position.


## Selecting the cleaning position


The setting can only be selected if the ice cube maker is switched on.

- Empty the ice cube drawer.




- Touch the settings sensor.

All symbols available for selection will appear in the display and the  symbol flashes.

- Touch the sensors for setting the temperature (∇ and ∧) repeatedly until the ice cube maker symbol  flashes in the display.
- Touch the OK sensor to confirm your selection.
- By touching the ∇ and ∧ sensors, you can now select the setting you want:
  - 0: the ice cube maker is switched off
  - 1: the ice cube maker is switched on
  - 2: set the water volume
  - 3: **select the ice cube tray cleaning position**
  - 4: rinse the ice cube maker
- Touch the OK sensor to confirm your selection.

The selected setting will be applied and you will hear the ice cube tray rotate into an angled position.


- Wait until the ice cube tray has completed this rotation before continuing.

The ice cube maker will then switch off. The ice cube maker symbol  will go out.

## Cleaning and care

- Remove and clean the ice cube drawer.

The ice cube tray cannot be removed and must be cleaned in situ.

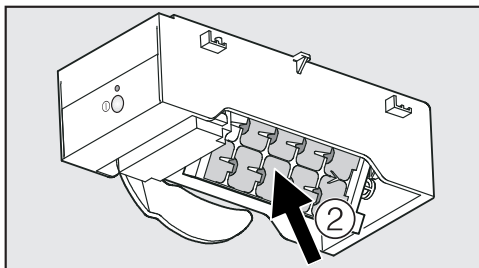

- Clean the ice cube tray ②.

When the ice cube maker is switched back on again, the ice cube tray will rotate back into the original position.

### Before cleaning

- Switch the appliance off.


The display goes out and the cooling function is switched off.

If this does not work, the safety lock is activated (see "Selecting further settings" – "Activating and deactivating the safety lock").

- Switch off at the wall and withdraw the plug from the socket, or disconnect the mains fuse.
- Take any food out of the appliance and store it in a cool place.
- Remove the shelves:  
Lift them up at the front slightly and then pull them forwards and out.


The telescopic runners on the shelves are **not** dishwasher safe.

## Removing the telescopic runners

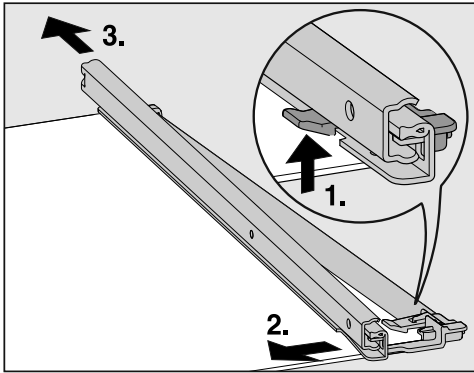

- To remove the telescopic runners:

1. Push the catch upwards.
2. Push the telescopic runner to the side.
3. Then pull the telescopic runner off to the rear.

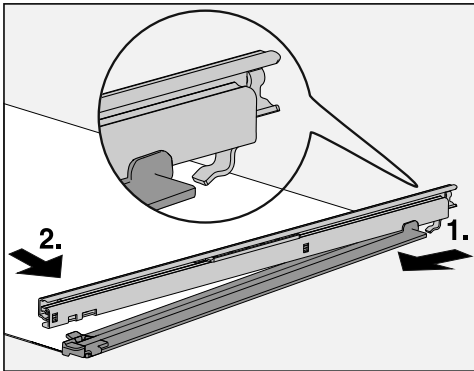

- After cleaning, reattach the telescopic runners to the shelf.

1. Do so by hooking the telescopic runner on at the rear.
2. Then clip the catches into position at the front.

## Cleaning the interior and accessories

Clean the appliance at least once a month.

Remove soiling immediately to prevent it from drying on.

- Clean the **interior** with a clean sponge, lukewarm water and a little washing-up liquid.
- After cleaning, wipe with clean water and dry with a soft cloth.

The following parts **cannot be cleaned in a dishwasher**:

- the freezer drawers
- the trim
- the shelves
- the telescopic runners on the shelves
- the cool packs.

- These accessories should all be hand washed.
- Wipe the telescopic runners with a well-wrung out damp cloth to clean them.

Be careful not to wash out the special lubricant in the telescopic runners during cleaning.

- Leave the door open to air the appliance for a short while and to prevent odours building up.

# Cleaning and care

---

## Cleaning the door seal

Do not use any grease or oil on the door seal as these will cause the seal to deteriorate and become porous over time.

- The door seal should be cleaned regularly with clean water, and then wiped dry with a soft cloth.

## Cleaning the ventilation gaps

A build-up of dust will increase the energy consumption of the appliance.

- The ventilation gaps should be cleaned on a regular basis with a brush or vacuum cleaner (e.g. use the dusting brush for Miele vacuum cleaners)

## After cleaning

- Slide all shelves back into the appliance.
- Close the appliance door.
- Reconnect to the mains and switch the appliance back on.
- Switch on the Super freeze function so that the freezer can cool down quickly.
- Once the temperature in the freezer has reached the required temperature, place the food back in the freezer drawers and put them back in the freezer.
- When the temperature in the freezer is a constant -18°C or colder press the Super freeze button to switch the Super freeze function off.





## Problem solving guide

Many malfunctions and faults that can occur in daily operation can be easily remedied. Time and money will be saved because a service call will not be needed.

The following guide may help you to find the reason for a malfunction or a fault, and to correct it.

To prevent unnecessary loss of temperature it is advisable not to open the door while waiting for the appliance to be serviced.

Problem	Cause and remedy
<b>The appliance is not getting cold, the interior lighting does not come on when the door is opened, and the display is not lit up.</b>	The appliance is not switched on and the mains connection symbol  is lit up in the display. ■ Switch the appliance on.
	The plug is not inserted in the socket correctly. ■ Insert the plug correctly into the socket. The mains connection symbol  appears in the display when the appliance is switched off.
	Check whether the mains fuse has tripped. There could be a fault with the appliance, the household electrical wiring or another electrical appliance. ■ Contact a qualified electrician or Miele.
<b>The compressor runs continuously.</b>	This is not a fault. To save energy, the compressor runs at a lower speed, but for longer, when less cooling is required.

## Problem solving guide







Problem	Cause and remedy
<b>The compressor is switching on more frequently and for longer periods.</b>	<p>The ventilation gaps in the housing unit have been covered or become too dusty.</p> <ul style="list-style-type: none"> <li>■ Do not block the ventilation gaps.</li> <li>■ Dust the ventilation gaps regularly.</li> </ul>
	<p>The door has been opened too frequently, or a large amount of fresh food has been placed inside and/or frozen at the same time.</p> <ul style="list-style-type: none"> <li>■ Only open the door when necessary and for as short a time as possible.</li> </ul> <p>The required temperature will re-establish itself after a while.</p>
	<p>The door is not properly closed. A thick layer of ice may have formed in the freezer.</p> <ul style="list-style-type: none"> <li>■ Close the door.</li> </ul> <p>The required temperature will re-establish itself after a while.</p> <p>If a thick layer of ice has formed, it will reduce efficiency and increase the energy consumption.</p> <ul style="list-style-type: none"> <li>■ Defrost the appliance and clean it.</li> </ul>
	<p>The ambient temperature is too high. The higher the room temperature, the longer the compressor will run for.</p> <ul style="list-style-type: none"> <li>■ See "Installation - Location".</li> </ul>
	<p>The appliance was not properly installed in the niche.</p> <ul style="list-style-type: none"> <li>■ See "Installation - Building in the appliance".</li> </ul>
<b>The compressor is switching on more frequently and for longer periods of time. The temperature in the appliance is too low.</b>	<p>The temperature setting is too low.</p> <ul style="list-style-type: none"> <li>■ Adjust the temperature.</li> </ul>
	<p>A large amount of food is being frozen at once.</p> <ul style="list-style-type: none"> <li>■ See "Freezing and storing food".</li> </ul>
	<p>The Super freeze function is still switched on.</p> <ul style="list-style-type: none"> <li>■ To save energy, you can switch the Super freeze function off yourself before this time.</li> </ul>

## Problem solving guide





Problem	Cause and remedy
<b>The compressor comes on less and less often and for shorter periods of time.</b>	<p>Not a fault. The temperature setting is too high.</p> <ul style="list-style-type: none"> <li>■ Adjust the temperature.</li> <li>■ Check the temperature again after 24 hours.</li> </ul>
	<p>The food begins to defrost.  The room temperature is too low for this appliance.  If the room temperature is too low, the compressor will run less frequently. This may cause the freezer to become too warm.</p> <ul style="list-style-type: none"> <li>■ See the information in "Installation – "Location".</li> <li>■ Increase the temperature of the room.</li> </ul>
<b>An LED indicator light is flashing at the back of the appliance at the bottom near the compressor (depending on model).</b>	<p>This is not a fault. The electronic unit for the compressor is equipped with an operation and fault diagnosis LED indicator light which flashes every 15 seconds (depending on model).</p>

# Problem solving guide

## Display warnings

Message	Cause and remedy
The  symbol lights up in the display. You cannot switch the appliance off.	The <b>safety lock</b> has been activated. ■ Completely deactivate the safety lock (see "Selecting further settings – Activating and deactivating the safety lock").
"F0 to F9" appears in the display.	There is a fault. ■ Call the Miele Service Department.
"FE*" appears in the display.	There is a fault. ■ Call the Miele Service Department.
The alarm symbol  lights up in the display and an alarm sounds.	The door alarm has been activated. ■ Close the appliance door. The alarm symbol  will go out and the alarm will stop.
The alarm symbol  flashes in the display.	The temperature in the freezer has risen higher or fallen lower than the temperature which has been set. This could be due to, e.g.: <ul style="list-style-type: none"><li>– the appliance door being opened too often, or being left open.</li><li>– a large amount of fresh food being put in at once for freezing without switching on the Super freeze function.</li><li>– a lengthy interruption of the power supply.</li></ul> ■ Remedy the alarm. The alarm symbol  will disappear and the audible tone will stop. Depending on the temperature, check whether the food has defrosted or started to defrost. If this is the case, cook the food before freezing again.
When the ice cube maker is switched on, the  symbol flashes in the display and the indicator light on the ice cube maker flashes.	The water supply is turned off. ■ Turn on the water supply.

## Problem solving guide

Message	Cause and remedy
The ice maker  and alarm  symbols are flashing in the display. The indicator light on the ice cube maker is also flashing.	<p>The is a fault with the ice cube maker.</p> <ul style="list-style-type: none"> <li>■ Call the Miele Service Department.</li> </ul>
<p>The power failure symbol , appears in the display and the alarm tone sounds.</p> <p>The temperature display will show the warmest temperature recorded in the freezer during a power failure or an interruption to the power supply.</p>	<p>Indication of an <b>power failure</b>: the temperature in the appliance over the last few days or hours has risen too high because of a power failure or interruption to the power supply.</p> <p>The appliance will go back to the last temperature setting when the power is back on.</p> <ul style="list-style-type: none"> <li>■ Press the Alarm off button.</li> </ul> <p>The warmest temperature displayed will disappear. The display will then revert to showing the current temperature in the freezer section.</p> <ul style="list-style-type: none"> <li>■ Depending on the temperature displayed, you should check whether food in the freezer has started to thaw or has defrosted. If it has, it should be used as soon as possible. Defrosted food may only be re-frozen after it has been cooked.</li> </ul>
The  symbol lights up in the display, the appliance does not get cold, although the controls and the interior lighting are working.	<p>Demo mode is switched on. This allows the appliance to be presented in the showroom without the cooling system being switched on. Do not activate this setting for domestic use.</p> <ul style="list-style-type: none"> <li>■ Switch off Demo mode (see "Information for dealers - Demo mode").</li> </ul>

# Problem solving guide

## Problems with the ice cube maker



Problem	Cause and remedy
<b>The ice cube maker will not switch on.</b>	<p>The appliance is not connected to the power supply or is not switched on.</p> <ul style="list-style-type: none"><li>■ Reconnect to the mains and switch the appliance back on.</li></ul>
<b>The ice-cube maker is not producing any ice cubes.</b>	<p>The appliance and/or the ice-cube maker is not turned on.</p> <ul style="list-style-type: none"><li>■ Switch on the appliance and the ice-cube maker.</li></ul>
	<p>The water supply is not open or has not been vented.</p> <ul style="list-style-type: none"><li>■ Open the water supply.</li><li>■ Check whether the water supply has been vented.</li></ul>
	<p>The drawer of the ice-cube maker is not closed properly.</p> <ul style="list-style-type: none"><li>■ Push the drawer all the way in.</li></ul>
	<p>The appliance door has been opened too frequently, causing the compressor to turn on more often and the ice-cube maker has iced up.</p> <ul style="list-style-type: none"><li>■ Only open the door when necessary and for as short a time as possible.</li></ul>
	<p>The temperature in the freezer section is too high.</p> <ul style="list-style-type: none"><li>■ Select a lower temperature.</li></ul>
	<p>The water pressure is too low.</p> <ul style="list-style-type: none"><li>■ Check whether the water pressure is between 1.5 and 6 bar.</li></ul>
	<p><b>Remember that it can take up to 24 hours to produce the first ice cubes.</b></p>
<b>The ice cube maker is only producing small ice cubes.</b>	<p>The size of the ice cubes produced depends on the volume of the water intake which you can set according to your requirements</p> <ul style="list-style-type: none"><li>■ Lengthen the water intake time for the ice cube maker.</li></ul>

## Problem solving guide

Problem	Cause and remedy
<b>The ice cubes taste or smell odd.</b>	The ice cube maker is in continuous use and should be cleaned regularly. <ul style="list-style-type: none"><li>■ Rinse the ice cube maker and water supply pipe-work regularly (see "Cleaning and care - Rinsing the ice cube maker").</li></ul>
	The ice cube maker has been used very infrequently. Ice cubes that are stored for a long period can absorb the taste and smell of other items. <ul style="list-style-type: none"><li>■ Empty the ice cube drawer if you are not going to use the ice cube maker for a long period of time.</li><li>■ Rinse the ice cube maker and water supply pipe-work regularly (see "Cleaning and care - Rinsing the ice cube maker").</li></ul>
	Unwrapped food is being stored in the freezer. Ice can absorb the taste and smell of unwrapped food. <ul style="list-style-type: none"><li>■ Only store food which has been wrapped in the freezer section.</li></ul>
	The ice cube drawer is dirty. <ul style="list-style-type: none"><li>■ Clean the ice cube drawer.</li></ul>

## Problem solving guide

### The interior lighting is not working.

Problem	Cause and remedy
The interior lighting is not working.	The appliance has not been switched on. ■ Switch the appliance on.
	To avoid overheating, the lighting switches itself off automatically after approx. 15 minutes if the door is left open. If this is not the case, then there is a fault.
	 Danger of electric shock. There are live electrical components under the lighting cover. The LED lighting may only be repaired or replaced by a Miele authorised service technician.
	 Danger of injury from LED lighting. Light intensity corresponds to laser beam class 1/1M. The lighting covers must not be removed or damaged, or be removed due to damage. This could cause injury to your eyes. Do not look into the LED lighting (laser beam class 1/1M) with optical instruments (e.g. magnifying glass or similar).
	■ Call the Miele Service Department.



### Other problems

Problem	Cause and remedy
<b>The door to the freezer will not open because it has been opened and closed too many times in succession.</b>	This is not a fault. The suction caused by opening and closing the door is preventing the door from opening. Wait approx. 1 minute and then try again. It should now open without force.
<b>Food has frozen together.</b>	The food packaging was not dry when placed in the freezer. ■ Use a blunt instrument, e.g. a spoon handle or plastic scraper, to prise it apart carefully.
<b>There is no audible alarm although the door has been open for a long time.</b>	Not a fault. The alarm tone has been switched off in settings mode (see "Selecting further settings - Audible tones 🎵").
<b>The external walls of the appliance feel warm.</b>	This is not a fault. The warmth created by the evaporator is used to prevent condensation.

# Noises

Normal noises	What causes them
<b>Brrrrr ...</b>	A humming noise is made by the motor (compressor). This noise can get louder for brief periods when the motor switches on.
<b>Blubb, blubb ...</b>	A gurgling noise can be heard when coolant is circulating through the pipes.
<b>Click ...</b>	Clicking sounds are made when the thermostat switches the motor on and off.
<b>Sssrrrrr ...</b>	You can sometimes just hear the sound of the fan inside the appliance.
<b>Crack ...</b>	A cracking sound can be heard when materials expand inside the appliance.
Remember that the noise of the compressor and the coolant circulating in the system is unavoidable.	

Noises	Cause and remedy
<b>Rattling, vibrating</b>	The appliance is uneven. Realign the appliance using a spirit level. Do so by raising or lowering the screw feet underneath the appliance or place something underneath it.
	The appliance is touching another appliance or piece of furniture. Move it away.
	Drawers or shelves are unstable or sticking. Check all removable items and refit them correctly.
	Bottles or containers are touching each other. Separate them.
	The transport cable clips are hanging loose at the back of the appliance. Remove them.

### Contact in case of malfunction

In the event of any faults which you cannot remedy yourself, please contact your Miele Dealer or Miele Service.

Contact information for Miele Service can be found at the end of this document.

Please note that telephone calls may be monitored and recorded for training purposes and that a call-out charge will be applied to service visits where the problem could have been resolved as described in this booklet.

Please quote the model and serial number of your appliance when contacting Miele. This information can be found on the data plate.

The data plate can be found inside the appliance.

### Warranty

The appliance warranty is valid for 2 years from date of purchase. In the UK, you must activate your cover by calling 0330 160 6640 or registering online at [www.miele.co.uk](http://www.miele.co.uk).

For more information on country-specific warranty terms and conditions, please contact Miele Customer Service.

## Information for dealers

---


### Demo mode

The appliance can be demonstrated in the showroom or at exhibitions in "Demo mode". In this mode the control panel and interior lighting are active but the compressor remains switched off, so that the appliance does not cool down.

#### Switching on demo mode



- Switch the appliance off using the On/Off sensor.  
If this does not work, the safety lock is still activated.

The temperature display will go out and the mains connection symbol  will appear.





- Place your finger on the V sensor, and leave it there.



- At the same time, briefly touch the On/Off sensor (without letting go of the V sensor).



- Leave your finger on the V sensor until the  symbol appears in the display.
- Then release the V sensor.


Demo mode is switched on and the  symbol appears in the display.

### Switching off Demo mode


The  symbol is lit up in the display.



- Touch the settings sensor.


All symbols available for selection will appear in the display and the  symbol flashes.




- Touch the sensors for setting the temperature (V or ^) repeatedly until the  symbol flashes.



- Touch the OK sensor to confirm your selection.


7 flashes in the display (means: Demo mode is switched on) and the  symbol lights up.



- Touch the V or ^ sensor until  appears (means: Demo mode is switched off).




- Touch the OK sensor to confirm your selection.

The selected setting is applied, the  symbol flashes.



- Touch the settings sensor to leave settings mode.  
Otherwise the appliance exits settings mode automatically after approximately one minute.

Demo mode is switched off, the  symbol goes out.

# Mains water connection

## Information about mains water connection

The appliance may only be connected to the mains water supply by suitably qualified persons.

Disconnect the appliance from the power supply before connecting it to the mains water supply.

Turn off the water supply before connecting the water supply line for the ice-cube maker.

The water quality must conform to the requirements for drinking water in the country in which the appliance is being installed (e.g. 98/83/EU).

The appliance must only be connected to the mains drinking water supply.

This appliance meets the requirements of IEC 61770 and EN 61770.

Connection to the household water supply must comply with the applicable regulations in the country in which the appliance is being installed.

All units and systems used to supply water to the appliance must also comply with the applicable regulations in the respective country.


**The appliance is only suitable for connection to a cold water line, which**

- is connected directly to the mains water supply to guarantee circulation of water in the cold water line.

Avoid connection to a water supply in which the water might stagnate. This can affect the taste of water and ice cubes.

- withstands the operating pressure.
- complies with hygiene regulations.

The water pressure must be between 1,5 and 6 bar.

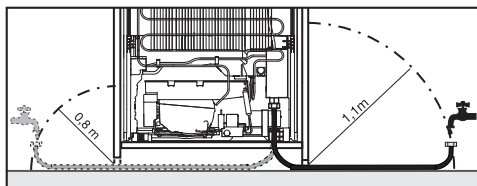

The stainless-steel hose supplied is 1,5 m long and must not be lengthened.

A faulty stainless-steel hose must only be replaced by a genuine original Miele replacement hose (available from Miele Service or dealers). Ensure that the water hose is suitable for drinking water.

A stopcock must be provided between the stainless-steel hose and the household water supply to ensure that the water supply can be cut off if necessary.

Make sure that the stopcock is still accessible after the appliance has been installed.

# Mains water connection


## Connecting the water supply

Before establishing the mains water connection, ensure that the appliance is disconnected from the power supply.

A stopcock with  $\frac{3}{4}$ " thread must be incorporated when connecting to the water supply.


Before using the appliance for the first time, the water supply pipework should be purged of air by a qualified and competent person.

- The stainless-steel hose should be filled with as much water as possible immediately before connecting to the solenoid valve.
- Mop up any spillages with a cloth.

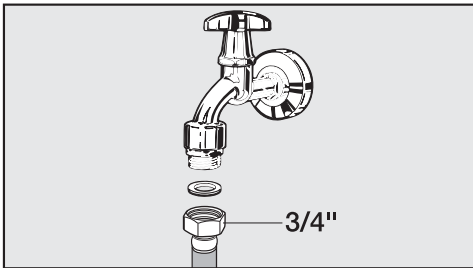

- Connect the straight end of the stainless-steel hose to the stopcock.

Ensure that it is screwed into position correctly.

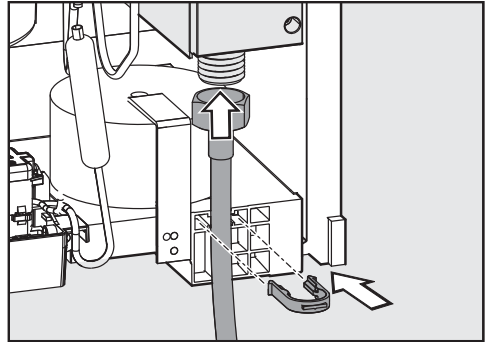

- The stainless-steel hose should be attached to the solenoid valve at the bottom of the appliance at the back.
- Secure the stainless-steel hose to the appliance housing with the retaining clip.

Ensure that the connections are tight and leak-proof.

- Slowly open the water supply stopcock and check the whole water system for leaks.
- The appliance can now be connected to the power supply (see "Electrical connection").
- Push the appliance into its final position.

When doing so, make sure that the stainless-steel hose is not kinked or damaged.

After a maximum of 24 hours, the first ice cubes will drop out of the ice-cube maker and collect in the drawer.

## Electrical connection

---

The appliance is supplied with a power cable and moulded plug ready for connection to an AC 230 V 50 Hz supply.

The fuse rating must be at least 10 A (13 A in the UK).

This appliance must be connected to a suitable switched socket which is easily accessible. The electrical connection must comply with current local and national safety regulations (BS 7671 in the UK).

The accessibility of the plug must always be ensured in order to be able to quickly separate the appliance from the mains.

If the mains socket is not accessible after the appliance has been built in, a separator for each terminal must be present. There must be an all-pole contact gap of at least 3 mm in the switch (including switch, fuses and relays according to EN 60335).

The plug and mains connection cable must not come into contact with the back of the appliance as vibrations can cause damage to these components. This, in turn, could result in a short circuit.

Do not plug in other appliances behind this appliance.

Do not connect the appliance to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Do not connect the appliance to an inverter such as those used with an autonomous energy source e.g. **solar power**. When switched on, peak loads in the system can cause the safety switch-off mechanism to be triggered. This can damage the electronic unit. The appliance must not be used with so-called **energy-saving devices** either. These reduce the amount of energy supplied to the appliance, causing it to overheat.

If the mains cable needs to be replaced this must be done by a suitably qualified person.



This appliance must be built in, otherwise it could tip up.

Keep the appliance door(s) shut until the appliance has been built in and secured in its housing in accordance with these operating and installation instructions.



**Fire risk and danger of damage!**  
This appliance must not be installed underneath a hob.

## Side-by-side combinations

As a general rule, refrigerators and freezers should not be installed vertically or horizontally next to other such appliances so as to avoid a build-up of condensation between them and the damage this can cause.

The FNS 37492 iE can be installed "side-by-side" because it is equipped with built-in heating units in the side panels.

When installed next to other refrigeration appliances please note that each appliance must be built into a separate housing unit.

Please contact your dealer for specific information about which combinations will work with your appliance.

## Location

This appliance should be installed in a dry, well-ventilated room.

When deciding where to install your refrigeration appliance please bear in mind that it will use more energy if installed near to a heater, a cooker or other appliance that gives off heat. Direct sunlight should also be avoided. The higher the room temperature, the longer the compressor runs and the higher the energy consumption is.

When installing the appliance, please note:

- The socket must be easily accessible in an emergency, not concealed behind the appliance.
- The plug and cable must not touch the rear of the appliance as they could be damaged by vibrations from the appliance.
- Do not plug in other appliances behind this appliance.



**In environments with high humidity** condensation can build up on the external appliance panels.

This can lead to corrosion of the panels.

For prevention, it is advisable to install the appliance with sufficient ventilation in a dry and/or air conditioned room.

Make sure that the appliance door closes properly, the ventilation gaps are not covered and the appliance is installed in accordance with these installation instructions.

# Installation

## Climate range

The appliance is designed for use within a certain climate range (ambient temperature) and should not be used outside this range.


Operating in a room which is too cold will cause the compressor to switch off for too long, causing the temperature inside the appliance to rise with the risk of food deteriorating and going off.

The climate range is stated on the data plate inside the appliance.

Climate range	Ambient room temperature
SN	+10 to +32 °C
N	+16 to +32 °C
ST	+16 to +38 °C
T	+16 to +43 °C

A freezer from the SN climate range can operate without any difficulties in rooms with a cooler ambient temperature (down to +5 °C).

## Ventilation




If the ventilation gaps given are not observed, the compressor will run more frequently and for longer periods.

This will result in increased energy consumption and a higher operating temperature for the compressor. This may, in turn, cause damage to the compressor.

It is essential to observe the ventilation gaps given.

Air at the back of the appliance gets warm. The appliance housing unit must therefore be constructed to allow sufficient space for ventilation (see "Building-in dimensions").

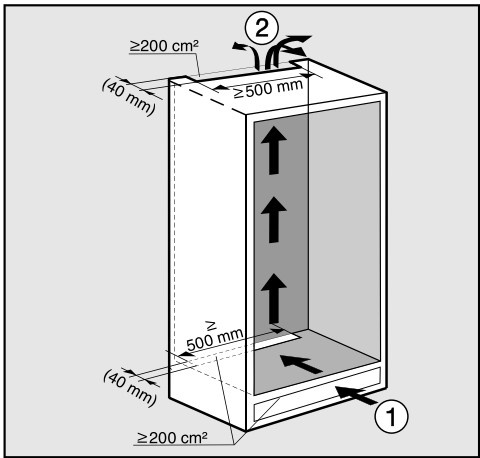

- Air intake ① occurs via the plinth at the bottom of the appliance and the air escapes at the top ② at the back of the housing unit.
- A ventilation gap of at least 40 mm depth must be allowed for behind the appliance for air to circulate.

- The ventilation cross-sections in the plinth, housing unit and above the appliance must each provide an unobstructed airflow of at least  $200 \text{ cm}^2$  to ensure that air can circulate without hindrance.


If ventilation grilles are to be inserted into the ventilation gaps, the ventilation gaps must be larger than  $200 \text{ cm}^2$ . The unobstructed airflow of  $200 \text{ cm}^2$  is calculated by adding up the total area of ventilation openings in the grilles.

- Important! The appliance uses less energy, the larger the ventilation gaps.

The air inlet and outlet must not be covered or blocked in any way. They must also be regularly cleaned of dust.

## Top ventilation gap

The ventilation gap at the top of the appliance can be constructed in different ways:

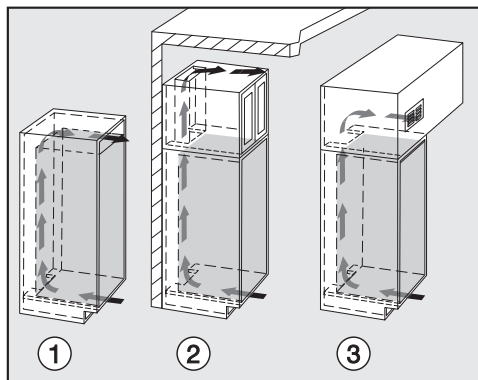

- ① directly above the appliance with a ventilation grille (free airflow of at least  $200 \text{ cm}^2$ )
- ② between the kitchen furniture and the ceiling
- ③ in a suspended ceiling

# Installation

## Furniture door panel

### Horizontal and vertical gaps

Depending on the style of kitchen furniture the thickness and edge radius of the furniture door and the gap that runs around the door, vertically and horizontally, are specified.

It is essential to pay attention to the following!

#### – Horizontal gap


The gap between the appliance furniture door and the housing unit door above or below it must be at least 3 mm.

#### – Vertical gap

If the gap between the appliance furniture door and the adjoining housing unit door or wall on the hinged side is too small, the appliance door could collide with the adjoining housing unit door or wall when opened. It may be necessary to adjust the size of this gap to suit the thickness and edge radius of the appliance furniture door.


This must be taken into consideration when planning your kitchen and when replacing an old appliance with a new one to ensure the installation conditions required are met.

Appliance furniture door thickness <b>A</b> [mm]	Gap <b>X</b> [mm] for different edge radii <b>B</b>			
	R0	R1.2	R2	R3
≥16 - 19	Min. 3			
20	5	4	4	3.5
21	5.5	5	4.5	4
22	6.5	6	5.5	5

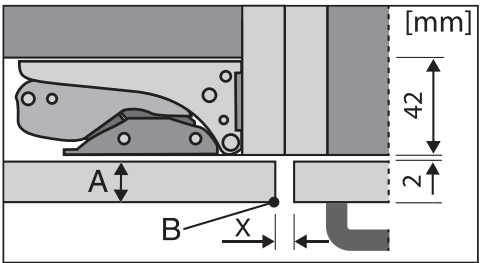

Adjoining kitchen furniture front

A = Furniture front thickness  
B = Edge radius  
X = Gap

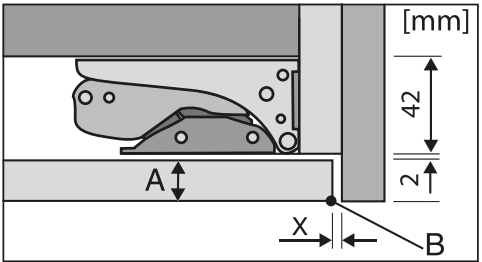

Adjoining side wall

A = Furniture front thickness  
B = Edge radius  
X = Gap

**Tip:** Fit a spacer between the housing unit carcase and the side wall. This way you will get a sufficiently wide gap.

## Weight of the furniture door

Fitting a door front which is heavier than the maximum permitted could damage the hinges. This can cause subsequent functional problems.


Before fitting a furniture door, ensure that the weight of the door does not exceed the maximum permitted:

Appliance	Maximum weight of furniture door in kg
<b>FNS 37492 iE</b>	26

When fitting large or divided furniture doors, an extra fitting kit or set of fixing brackets should be used. These are available to order from Miele Service or dealers.


## Before installing the appliance

- Take the accessory pack which includes installation parts and other accessories out of the appliance and remove the packaging strap holding the door in place.
- **Do not remove** the following from the back of the appliance:

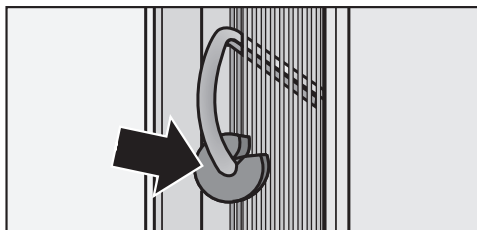

- The spacers (depending on model) These ensure the gap required between the back of the appliance and the wall is maintained.
- The bags (depending on model) located inside the metal grille (heat exchanger). These are important for the correct functioning of the appliance. Their contents are non-toxic and are not dangerous.
- Remove the cable clip from the back of the appliance.

# Installation

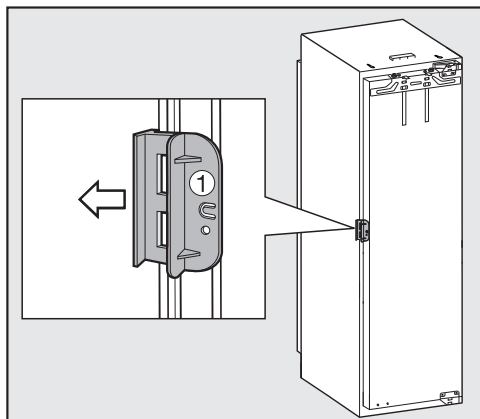

- Open the appliance door and remove the red safety catch ① (depending on model).

## Does your old appliance have a different hinging mechanism?


If your old appliance had a different type of hinging, the furniture door can still be used. Remove the old hinges from the housing unit. They are no longer required because the furniture door is now fitted to the appliance door. All the necessary parts are supplied or can be ordered from Miele.

## Stainless steel front

(depending on model)

If your old appliance had different hinging and you cannot, or do not wish to use your old door, you can use a stainless steel front instead.

Contact Miele for information on suitable stainless steel fronts.

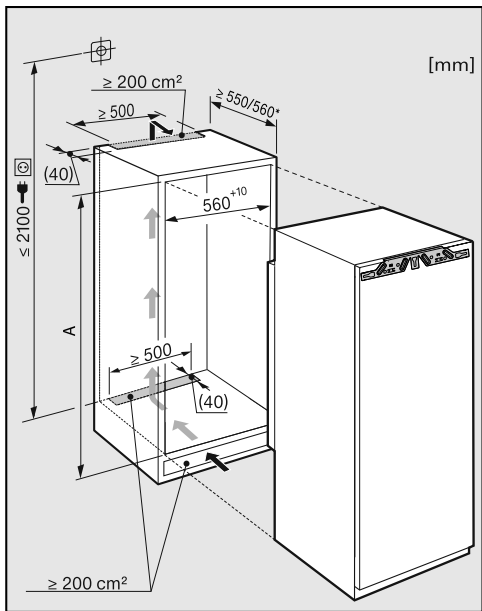

\* The declared energy consumption was calculated in a 560 mm deep niche. The appliance is fully functional in a 550 mm niche but the energy consumption will be slightly higher.

Before installation, ensure the the housing unit dimensions are the correct size. The specified ventilation cross-sections must be adhered to in order to ensure the correct functioning of the appliance.

	Niche height [mm] A
FNS 37492 iE	1772 – 1788

## Limiting the opening angle of the door


---

The door hinges are set ex works to enable the door to be opened wide.

However if the opening angle of the door needs to be limited for any reason, the hinge can be adjusted to accommodate this.

If the appliance door hits an adjacent wall when opened, for example, the opening angle can be limited to approx. 90°.

The locking pins for limiting the door opening must be fitted before the appliance is installed.

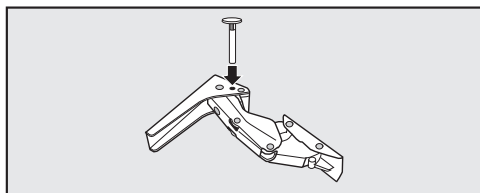

- Place the locking pins supplied for limiting the door opening into the hinges from above.

The door opening angle is now limited to approx. 90°.




## Changing the door hinging


Two people are needed for changing the door hinging.

The appliance is supplied right-hand hinged. If left-hand hinging is required, the hinges must be changed.


**To change the door hinging, you will need the following tools:**

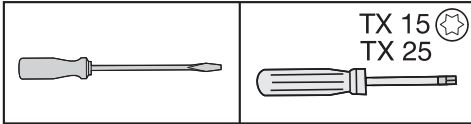

- Open the appliance door.

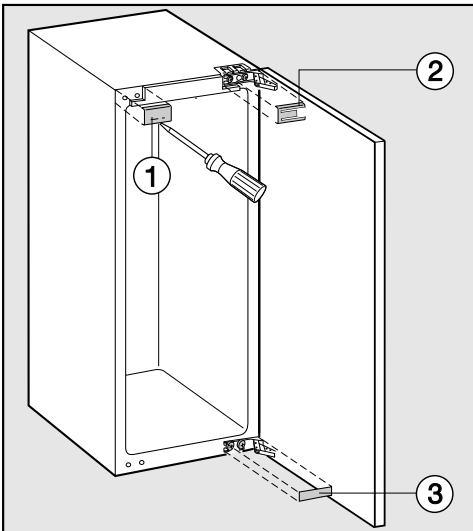


- Lift off covers ①, ② and ③.

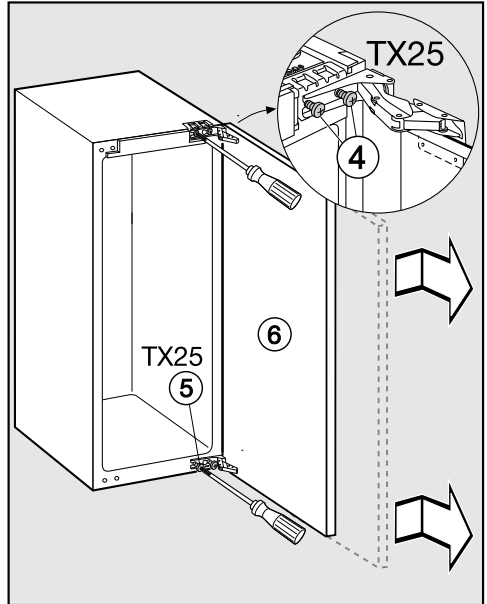


- Slightly loosen screws ④ and ⑤ in the hinges.
- Push door ⑥ outwards, take it off its hinges and place it to one side.

## Changing the door hinging

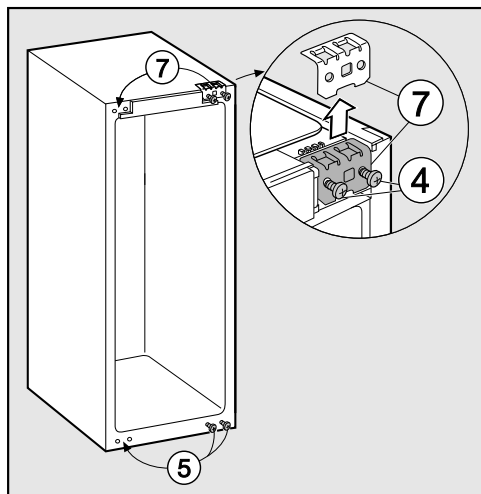

- Undo screws ④ completely.
- Fit bracket ⑦ on the opposite side and loosely fit screws ④.
- Remove screws ⑤ completely and loosely screw them in on the opposite side.

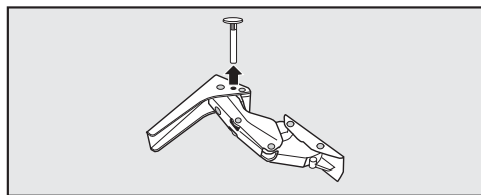


- If you have put locking pins into the hinges to stop the door opening too far, remove the locking pins from the top of the hinges.

### To remove the soft-close mechanism

Warning. The soft-close mechanism snaps shut when dismantled.


Danger of injury.

- Place the door with the outer side downwards on a stable surface.

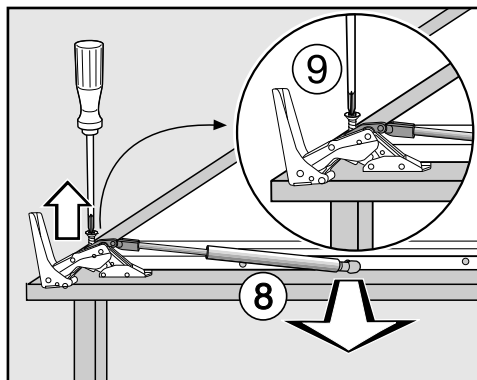

- Remove the soft-close mechanism ⑧ from the ball joint.
- Unscrew holder ⑨ and remove the soft-close mechanism ⑧.


## Changing the door hinging

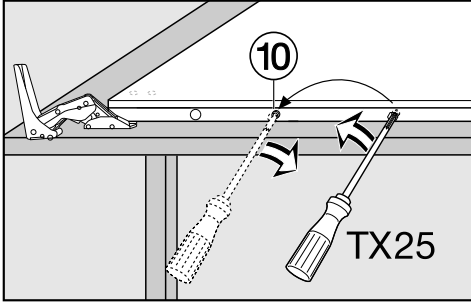

- Undo ball joint ⑩ using a screwdriver and reposition and secure it as shown.
- Now turn the appliance door over so that the outer side is now facing upwards (the hinges remain open).

Danger of injury.


**Do not** close the hinges.

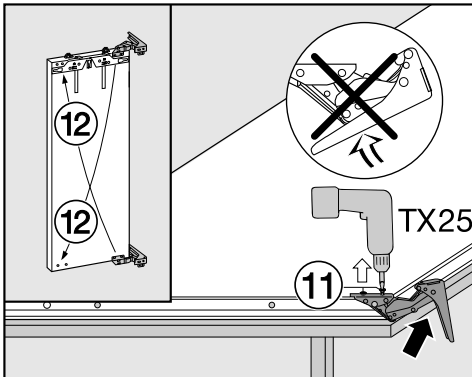

- Remove screws ⑪ completely.
- Replace the hinges in their diagonally opposite corners ⑫.


### To secure the soft-close mechanism

- Turn the appliance door over again so that the outer side is now facing downwards.

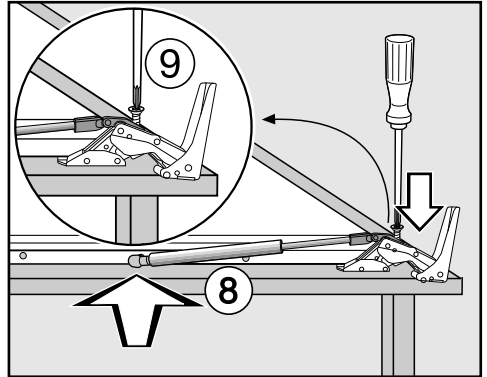


- Screw holder ⑨ onto the hinge and tighten securely.
- Open out soft-close mechanism ⑧ and hook it into the ball joint.

## Changing the door hinging

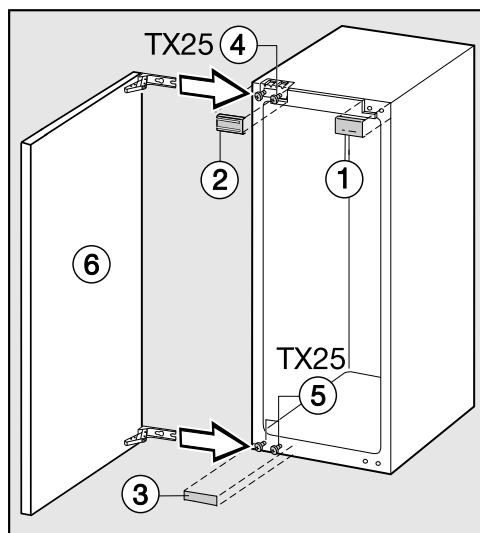

- Hang appliance door ⑥ onto pre-fitted screws ④ and ⑤, and tighten screws ④ and ⑤ securely.
- Replace covers ①, ② and ③.

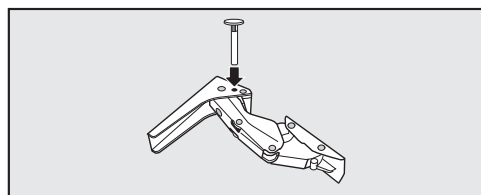


- Refit the locking pins into the top of the hinges to prevent the door opening too far.

## Installing the appliance


Two people are required for installing the appliance.

- Install the appliance in a stable, solid housing unit, positioned on an even and level floor.
- Secure the housing unit against tipping.

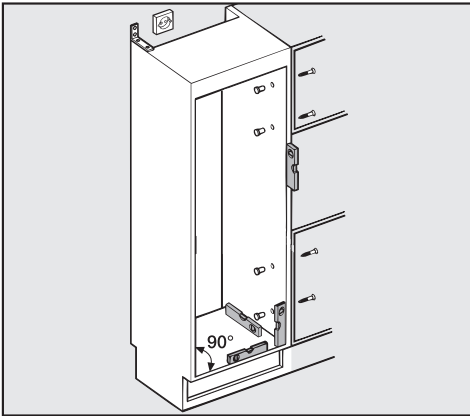

- Use a spirit level to align the housing unit. The corners of the housing unit must be at a 90 ° angle to each other, otherwise the furniture door will not align correctly with all 4 corners of the housing unit.
- The required ventilation cross-sections must be ensured (see "Installation - Ventilation" and "Building-in dimensions").

To install the appliance, you will need the following tools:

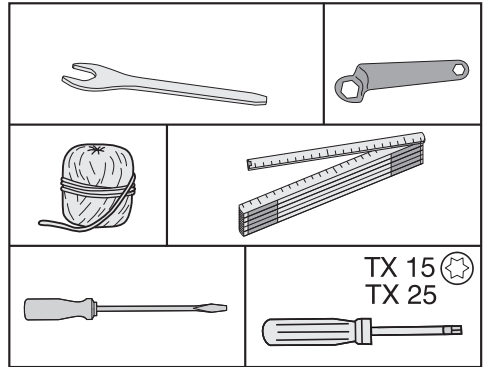











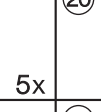
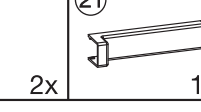
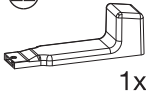



# Installing the appliance

## Parts required for installation

All installation parts are number coded. This coding is also used in the installation instructions.

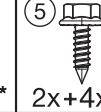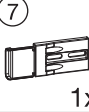
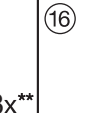

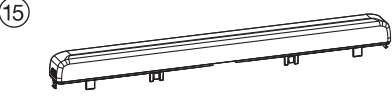
### – for installing the appliance in its housing unit:

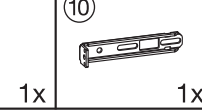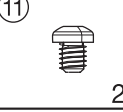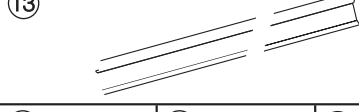 1x	 1x	 1x
 2x+4x**	 2x+4x**	 1x
 2x	 1x	 1x
 2x	 1x	
 5x	 2x	 1x
 1x	 2x	

\* These parts are only supplied with appliances with a niche height of 140 cm or more.

\*\* Qty depends on niche height; max. qty applies to appliances requiring niche height of 140 cm or more (also contains additional installation parts for fitting large or divided furniture doors).

### – for fitting the furniture door:


 10x+8x**	 2x+4x**	 1x
 1x		

\*\* Qty depends on niche height. Also contains additional installation parts for fitting large or divided furniture doors.


All fitting instructions given are for a **right hand hinged** appliance. If you have converted the appliance to left hand hinging you will need to adapt these instructions accordingly.

## Preparing the appliance

- Position the appliance in front of the housing unit.

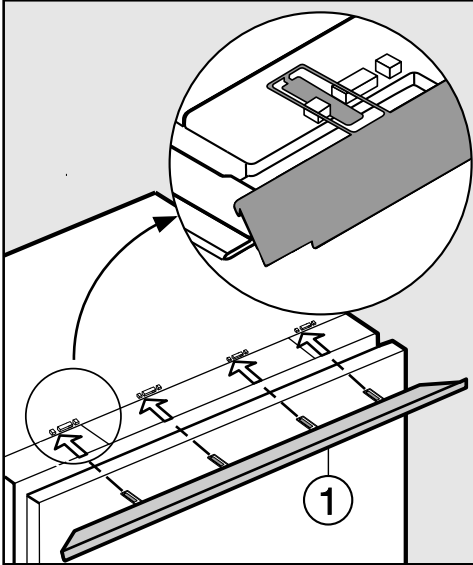

- Slide the cover strip ① into the holders as shown.

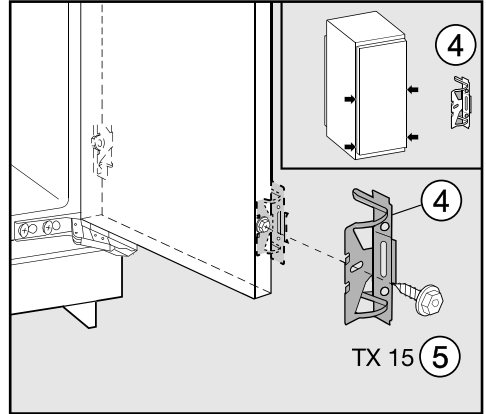


- Screw fixing bracket ④ into the pre-drilled holes in the appliance door using hex screw ⑤.
- Secure a second pair of fixing brackets ④ in the handle area of the door. Use the pre-drilled holes in the appliance door.
- Push the appliance into the building-in niche: When pushing the appliance into its niche make sure that the mains cable does not get trapped.

**Tip:** To help you push it into position, tie a piece of string around the plug to "increase" the length of the connection cable.


Then pull the cable by the end of the string through the housing unit. It will then be easier to connect once the appliance is in the unit.

# Installing the appliance

With 16 mm thick unit walls:

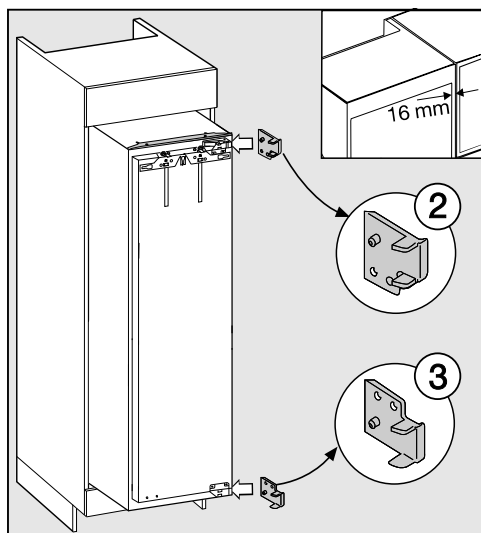

- Clip spacers ② and ③ on the right-hand side of the hinges.
- Open the appliance door.

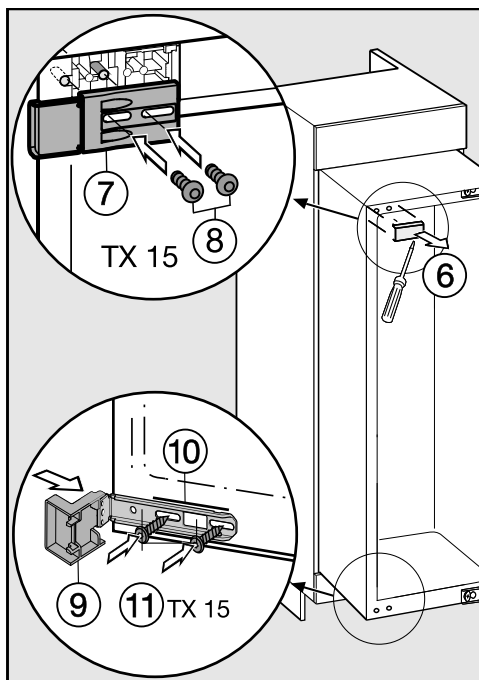


- Remove cover ⑥.
- Secure the securing plate ⑦ using screws ⑧ loosely into the top left-hand side of the appliance. Do not tighten the screws so that you can adjust the position of this part.
- Fit stopper ⑨ onto fixing bracket ⑩.
- Screw fixing bracket ⑩ with screws ⑪ loosely into the bottom of the appliance. Do not tighten the screws so that you can adjust the position of this part.



### Installing the appliance


If the appliance is pushed too far into the niche, the doors may not close properly once the furniture door has been fitted. This can cause ice to build up, condensate to accumulate and lead to faults in the appliance. These can all lead to increased energy consumption.

Push the appliance into the building-in niche making sure a gap of **42 mm** is maintained all round between the appliance carcass and the front of the housing unit side walls.

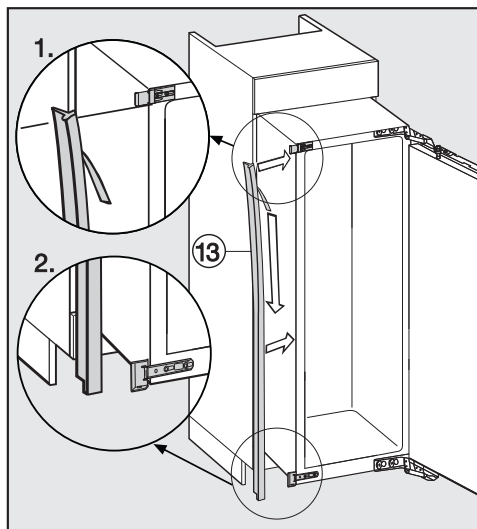

- Carefully remove the protective foil from sealing strip ⑬.
  - Fix sealing strip ⑬ flush with the front of the appliance on the door opening side.
1. Position the sealing strip flush with the lower edge of the top fixing.
  2. Stick it down along its entire length.

# Installing the appliance

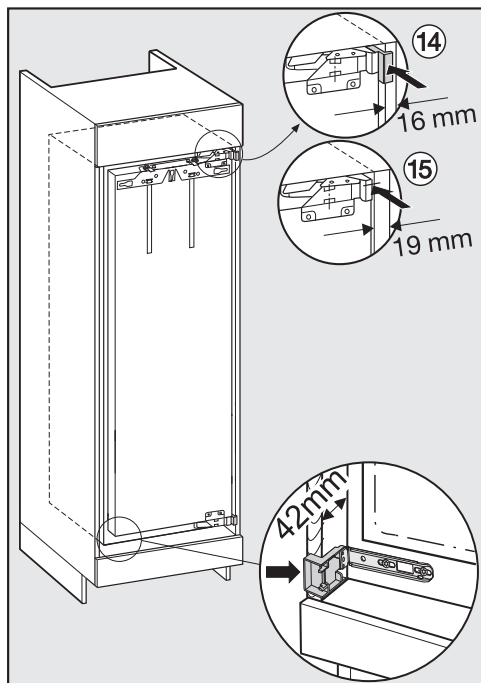

- Push the appliance into the niche until all fixing brackets at the top and bottom are in line with the front edge of the housing unit side wall.

This will create a gap all round of **42 mm** to the front edges of the housing unit side walls.


- **⑭ With 16 mm thick walls:**  
The spacers should touch the front edge of the housing unit side walls at the top and bottom.
- **⑮ With 19 mm thick walls:**  
The front edges of the top and bottom hinges should be flush with the front edge of the housing side wall.

## On furniture with door fittings (e.g. stubs, seals etc.):

the dimension of these must be taken into account when making sure there is a gap all round of **42 mm**.


- Pull the appliance forwards by the appropriate dimension.
- Check again, to make sure there is a gap of **42 mm** to the front edges of the door fittings.

**Tip:** If possible, remove door fittings and push the appliance into the niche until all fixing brackets at the top and bottom are in line with the front edge of the housing unit side wall.

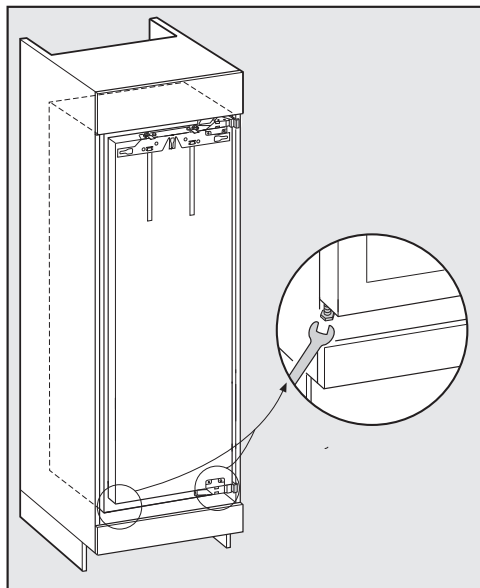


- Align the appliance on both sides by altering the adjustable feet using the spanner supplied.

## Securing the appliance in the niche

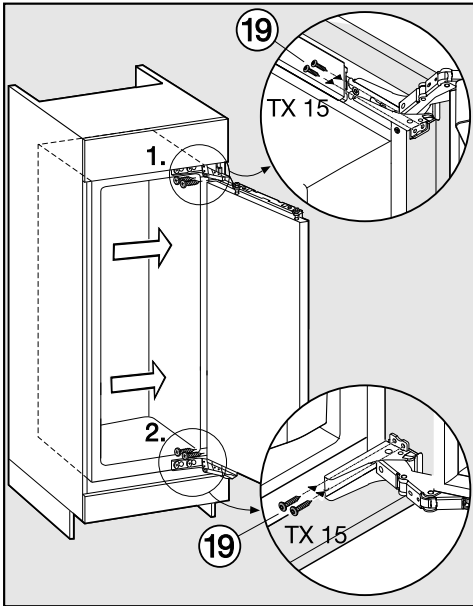


- Press the appliance against the side of the housing unit on the hinge side.
- Screw chipboard screws (19) through the hinge plates at the top and bottom to secure the appliance to the housing unit.

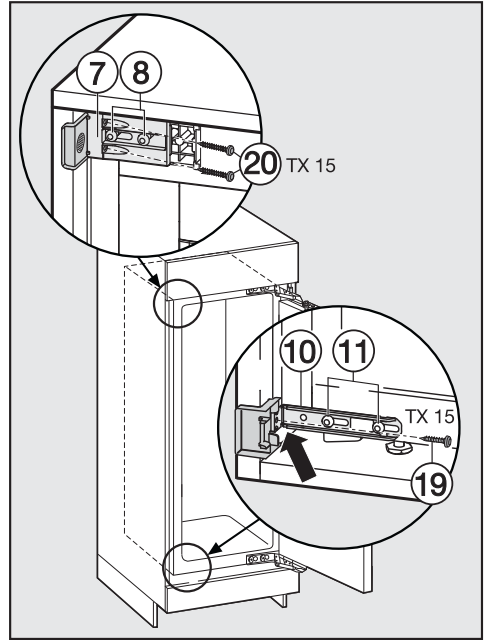

- Push the loose bracket against the furniture wall.
- Secure fixing bracket (10) to the housing unit side wall with screw (19). Drill holes in the housing unit side walls if necessary.
- Secure fixing bracket (7) to the housing unit side walls using screws (20). Drill holes in the housing unit side walls if necessary.  
**Important:** Push the protruding bracket using your thumb towards the housing unit wall whilst tightening the screws. The appliance must not pull back into the unit.
- Re-tighten screws (8) and (11).


## Installing the appliance

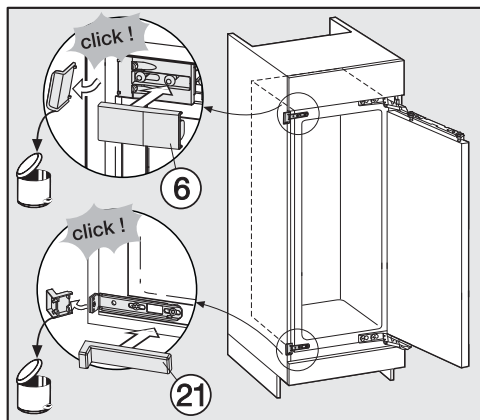

- Snap off any protruding ends from the fixing bracket. They are no longer required.
- Replace covers ⑥ and ②① on the fixing brackets.

### Only for an appliance with a niche height greater than 140 cm

For additional stability of the appliance in the unit, push the rods supplied underneath the appliance between it and the floor of the housing unit:

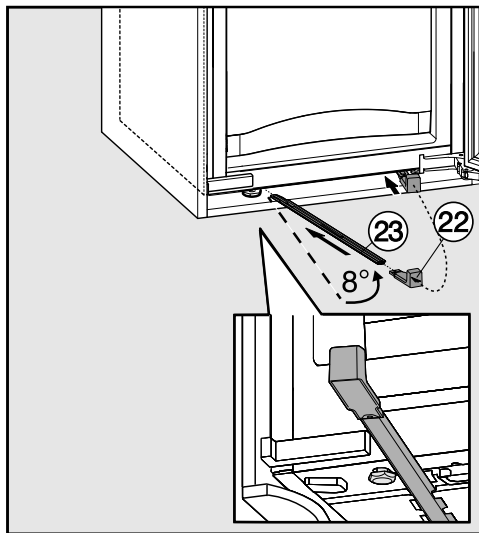


- Then secure handle ②② to one of the rods ②③.
- Use the handle to push the rod into the guide as far as it will go. Remove the handle and fit it to the other rod and push this into its guide as far as it will go.  
**Important.** Keep the handle somewhere safe in case you ever need to fit the appliance into a new housing unit.
- Close the appliance door.

## Fitting the furniture door


If fitted in a run of units make sure that the top edge of the furniture door is at the same height as neighbouring unit doors.

The furniture door must be fitted correctly and not under tension.


The next section gives instructions on how to fit a furniture door that is at least 16–19 mm thick.

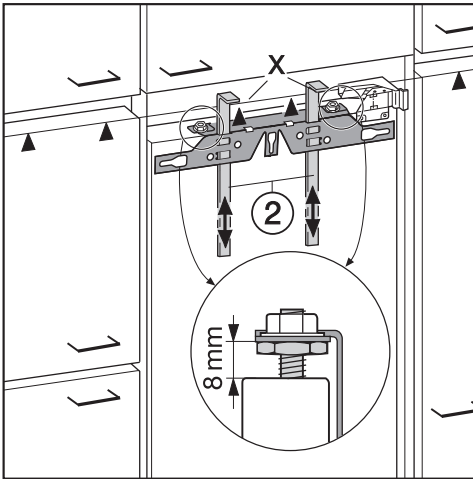

- A gap of 8 mm is set ex-works between the appliance door and the fixing bracket. Double check this gap and reset it if necessary.
- Push fitting aids ② up to the height of the furniture door: the lower edge X of the fitting aids must be at the same height as the upper edge of the furniture door being fitted (see ▲ on the diagram).

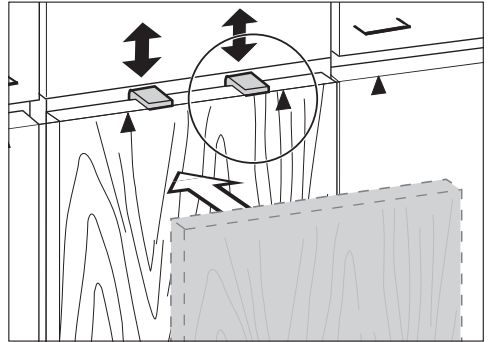


**Tip:** Push fitting aids ② together with the furniture front up to the height of the adjoining unit furniture doors.

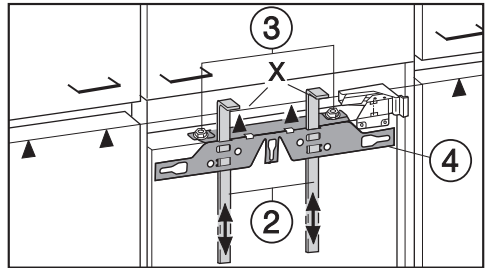


- Undo nuts ③ and take fixing bracket ④ off together with fitting aids ②.

## Installing the appliance

- Place the furniture door with the outer side downwards on a stable surface.

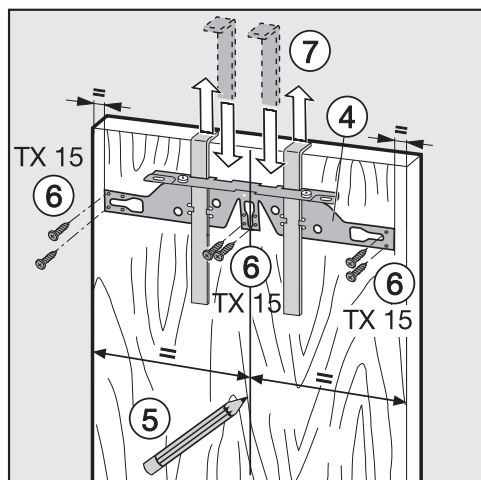


- Using a pencil, lightly mark a line down the centre of the inside of the furniture door (5).
- Hang fixing bracket (4) with the fitting aids onto the **inside** of the furniture door. Align the fixing bracket centrally.
- Attach the fixing bracket securely using at least 6 short chipboard screws (6). (On cassette doors only use 4 screws on the edges). Drill holes in the furniture door if necessary.
- Pull the fitting aids upwards to remove them (7).  
Turn them around and fit them into the middle slots on the fixing bracket for safe keeping.

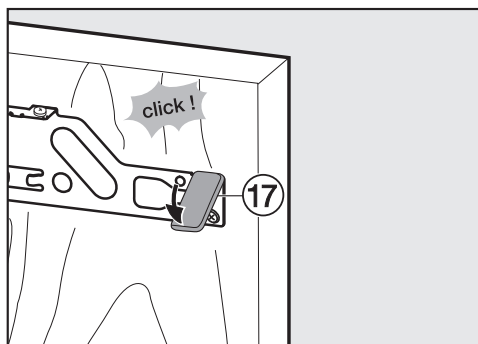


- Fit side cover (17) to the fixing bracket on the opposite side of the hinge.
- Turn the furniture door over and attach the handle (if required).

- Open the appliance door.

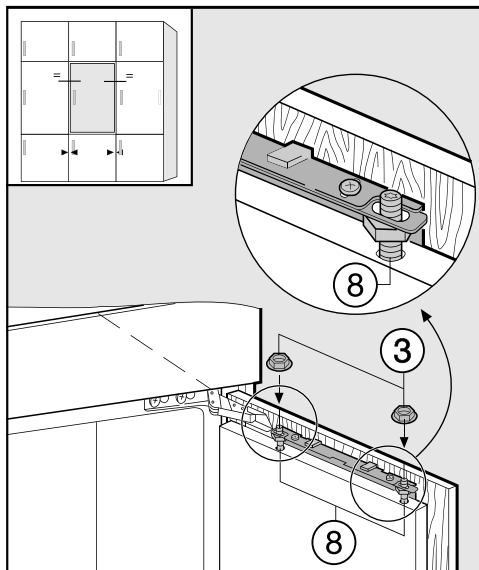

- Hang the furniture door onto adjusting bolts (8).
- Loosely attach nuts (3) on the adjusting bolts.
- Close the door and check the distance between the door and neighbouring furniture doors. The gaps should be even.

## Aligning the door

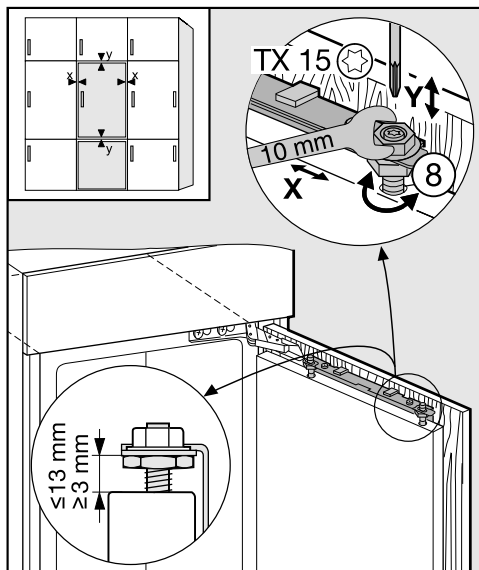

### - Side adjustments (X)


- Slide the furniture door.

### - Height adjustment (Y)


- Use a screwdriver to adjust bolts (8).

A gap of 8 mm is set ex-works between the appliance door and the fixing bracket. This must only be adjusted within its permitted range.

# Installing the appliance

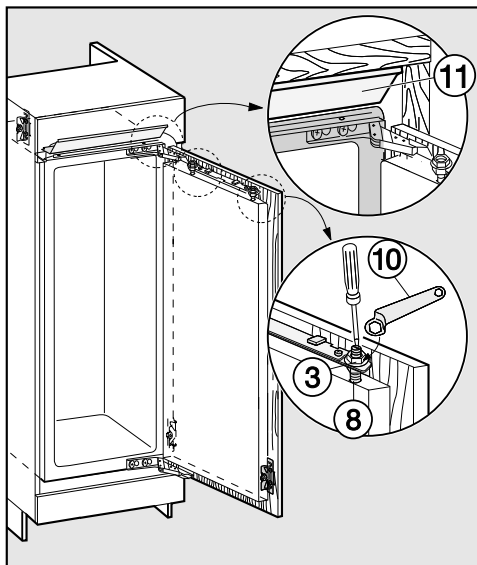

- Whilst counterholding adjusting bolts (8) with a screwdriver, tighten nuts (3) on the appliance door with ring spanner (10).
- Cover strip (11) must be completely hidden in the niche, and must not protrude.

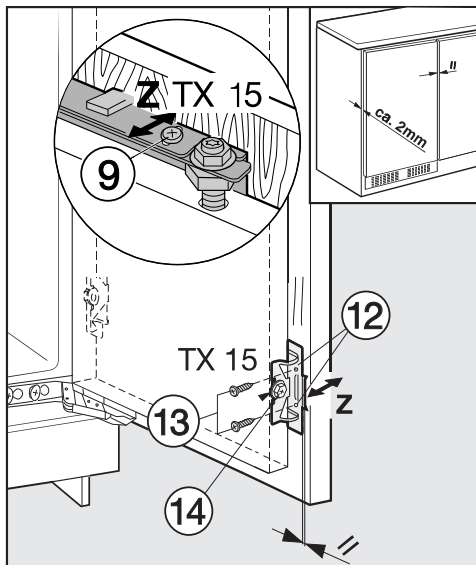

- Drill holes (12) in the furniture door and fit screws (13). Make sure the two metal edges are aligned (Symbol //).
- Close the appliance door and the furniture door.


## - Depth adjustment (Z)

- Loosen screws (9) at the top of the appliance door, and screw (14) on the fixing bracket at the bottom. By moving the furniture door, create a gap of 2 mm between the furniture door and the housing unit.




## Installing the appliance

- Tighten all screws again.

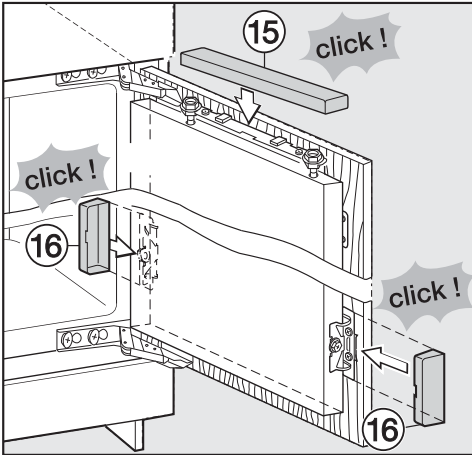

- Replace top cover ⑮, and click it into place.

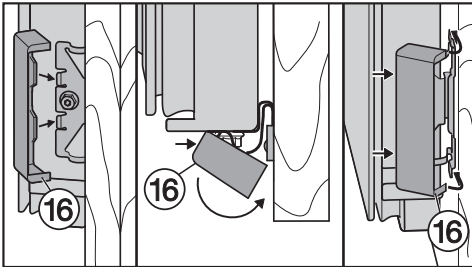

- Replace side covers ⑯, making sure you hear them click into place.

### To make sure the appliance is correctly fitted:

- The door must close properly.
- The door must not touch the housing unit.
- The seal at the top edge of the handle side must fit properly.
- To double check place a torch in the appliance and close the door. Turn the lights out in the room. If you can see any light shining out from the sides double check the installation.



## United Kingdom

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Customer Contact Centre Tel: 0330 160 6600  
E-mail: [mielecare@miele.co.uk](mailto:mielecare@miele.co.uk)  
Internet: [www.miele.co.uk](http://www.miele.co.uk)

## Australia

Miele Australia Pty. Ltd.  
ACN 005 635 398  
ABN 96 005 635 398  
1 Gilbert Park Drive  
Knoxfield, VIC 3180  
Tel: 1300 464 353  
Internet: [www.miele.com.au](http://www.miele.com.au)

## China

Miele (Shanghai) Trading Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District  
200040 Shanghai, PRC  
Tel: +86 21 6157 3500  
Fax: +86 21 6157 3511  
E-mail: [info@miele.cn](mailto:info@miele.cn)  
Internet: [www.miele.cn](http://www.miele.cn)

## Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay, Hong Kong  
Tel: (852) 2610 1025  
Fax: (852) 3579 1404  
Email:  
[customerservices@miele.com.hk](mailto:customerservices@miele.com.hk)  
Website: [www.miele.hk](http://www.miele.hk)

## India

Miele India Pvt. Ltd.  
Ground Floor  
Copia Corporate Suites  
Plot No. 9, Jasola  
New Delhi - 110025  
Tel: 011-46 900 000  
Fax: 011-46 900 001  
E-mail: [customercare@miele.in](mailto:customercare@miele.in)  
Internet: [www.miele.in](http://www.miele.in)

**Manufacturer:** Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Germany

# Miele

## Ireland

Miele Ireland Ltd.  
2024 Bianconi Avenue  
Citywest Business Campus  
Dublin 24  
Tel: (01) 461 07 10  
Fax: (01) 461 07 97  
E-Mail: [info@miele.ie](mailto:info@miele.ie)  
Internet: [www.miele.ie](http://www.miele.ie)

## Malaysia

Miele Sdn Bhd  
Suite 12-2, Level 12  
Menara Sapura Kencana  
Petroleum  
Solaris Dutamas No. 1  
Jalan Dutamas 1  
50480 Kuala Lumpur, Malaysia  
Phone: +603-6209-0288  
Fax: +603-6205-3768

## New Zealand

Miele New Zealand Limited  
IRD 98 463 631  
Level 2, 10 College Hill  
Freemans Bay, Auckland 1011  
New Zealand  
Tel: 0800 464 353  
Internet: [www.miele.co.nz](http://www.miele.co.nz)

## Singapore

Miele Pte. Ltd.  
163 Penang Road  
# 04 - 03 Winsland House II  
Singapore 238463  
Tel: +65 6735 1191  
Fax: +65 6735 1161  
E-Mail: [info@miele.com.sg](mailto:info@miele.com.sg)  
Internet: [www.miele.sg](http://www.miele.sg)

## South Africa

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: (011) 875 9000  
Fax: (011) 875 9035  
E-mail: [info@miele.co.za](mailto:info@miele.co.za)  
Internet: [www.miele.co.za](http://www.miele.co.za)

## Taiwan

K.E. & Kingstone Co., Ltd.  
6th Fl., No. 120, Sec. 2  
Jianguo N. Rd.  
Taipei, Taiwan  
TEL: +886 2 2502-7256  
FAX: +886 2 2502-3077  
E-mail: [kenk@kenk.com.tw](mailto:kenk@kenk.com.tw)  
Website:  
[www.kenk.com.tw/ke/miele](http://www.kenk.com.tw/ke/miele)

## Thailand

BHIRAJ TOWER at EmQuartier  
43rd Floor Unit 4301-4303  
689 Sukhumvit Road  
North Klongton Sub-District  
Vadhana District  
Bangkok 10110, Thailand

## United Arab Emirates

Miele Appliances Ltd.  
Gold & Diamond Park  
Office No. 6-217  
Sheikh Zayed Road  
P.O. Box 11 47 82 - Dubai  
Tel. +971 4 3044 999  
Fax. +971 4 3418 852  
800-MIELE (64353)  
E-Mail: [info@miele.ae](mailto:info@miele.ae)  
Website: [www.miele.ae](http://www.miele.ae)

FNS 37492 iE



en-GB

M.-Nr. 10 850 290 / 00