

**Warnings!**

Not suitable for children under 3 years.  
Small parts - Choking hazard.  
Adult supervision is required at all times.

The unassembled product contains small parts and sharp edges that are not suitable for children to access. Care should be taken in unpacking and assembly.

Fittings may loosen with use over time. Regularly check and tighten loose fittings to prevent children from removing them and to preserve the strength of the product. Do not over-tighten them.

Remove all packaging / tags before giving to a child.

Please retain this information leaflet for future reference.

John Lewis Plc  
171 Victoria Street  
London SW1E 5NN  
[johnlewis.com](http://johnlewis.com)



Wooden country kitchen

Thank you for purchasing this toy.  
Please read the instructions and warnings  
carefully before use.

#### Assembly instructions

Adult assembly of this product is required.

Screwdriver required for assembly.

4 x 32mm  
Screw A



x 1

4 x 27mm  
Screw B



x 33

4 x 22mm  
Screw C




x 8

4 x 10mm  
Screw D



x 12

#### Parts list

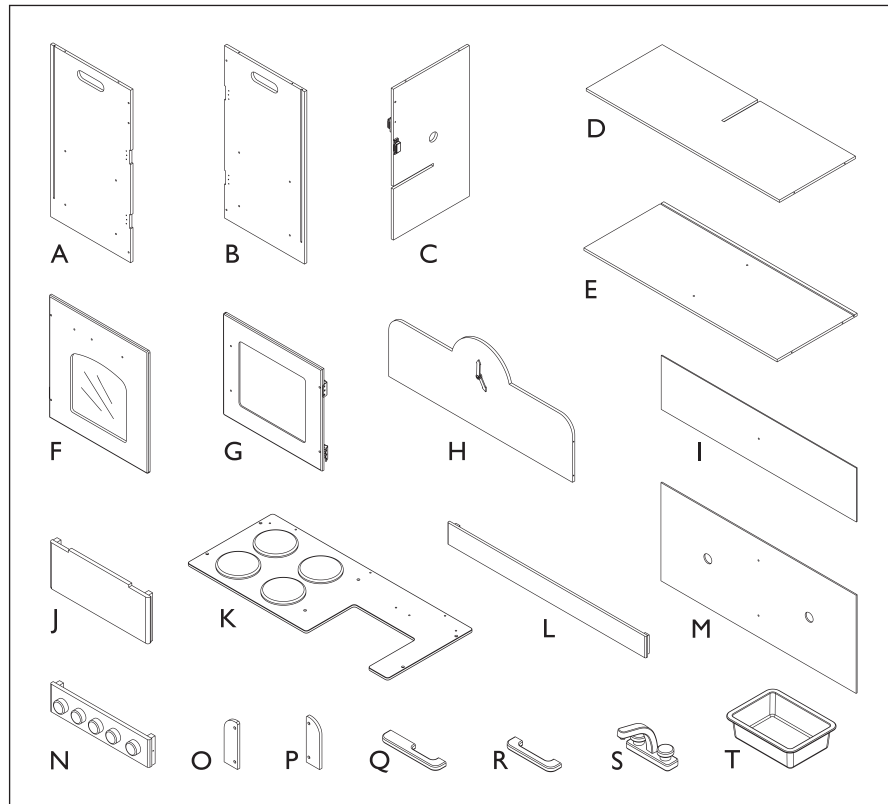

#### Assembly

