

JOHN
LEWIS
& PARTNERS

1.7L KETTLE INSTRUCTION MANUAL



Contents	3	Important safety information
	6	Your 1.7L kettle – diagram
	7	Before first use
	7	Using your electric kettle
	8	Boil-dry protection
	8	Cleaning and maintenance
	9	Descaling the kettle
	9	Technical specifications
	10	Servicing and disposal
	10	Guarantee

Important safety information

Thank you for purchasing this John Lewis & Partners kettle.

Please read the instructions and warnings carefully to ensure a long life for your product and safe usage. This instruction leaflet must be retained with the product for future reference. These warnings have been provided in the interest of safety. You **MUST** read them carefully before using the appliance.

If you are unsure of the meaning of any of these warnings, please contact your nearest John Lewis & Partners shop or John Lewis & Partners Technical Support on 03301 230106.

Close supervision is necessary when your appliance is being used near children or infirm people. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they are properly supervised or given instructions concerning the safe use of the item by a person responsible for their wellbeing.

Children must not play with the appliance. Cleaning and maintenance should not be carried out by children.

- Do not immerse the cord, plug, or any part of the appliance in water or other liquids.
- Unplug from the mains when not in use, when removing or attaching accessories and before cleaning any part of the appliance.
- Do not operate any appliance with a damaged cord or plug. Should the item malfunction, or if it is damaged in any manner, please stop using it and return it to your nearest John Lewis branch. Do not attempt to repair it yourself. Do not modify the appliance's plug.
- Do not let the power cord overhang the edge of the surface on which it stands, or touch anything hot.
- When unplugging the device, hold the plug itself, not the power cord.
- Do not use the appliance for any purpose other than its intended use.
- This appliance is for indoor use only. Do not use it outdoors.
- Do not use accessories or attachments that are not recommended by the manufacturer.
- Stand the kettle on a cool, stable surface.
- Do not operate the kettle while it is empty to avoid damaging the heating elements.
- Take care not to overfill the kettle. Ensure the lid is closed.
- This product is intended for household and light commercial use.



CAUTION: Steam can scald skin. Take care to avoid the spout when the water is boiling, or after it has boiled.




WARNING: Do not remove the lid while the water is boiling.



WARNING: Polythene bags over the product or within packaging may be dangerous. To avoid the risk of suffocation, please keep away from pets, babies and children.

Your kettle – diagram

- 1 Kettle lid
- 2 Spout
- 3 Body
- 4 Handle
- 5 Water level gauge
- 6 Switch (with indicator)
- 7 Power base

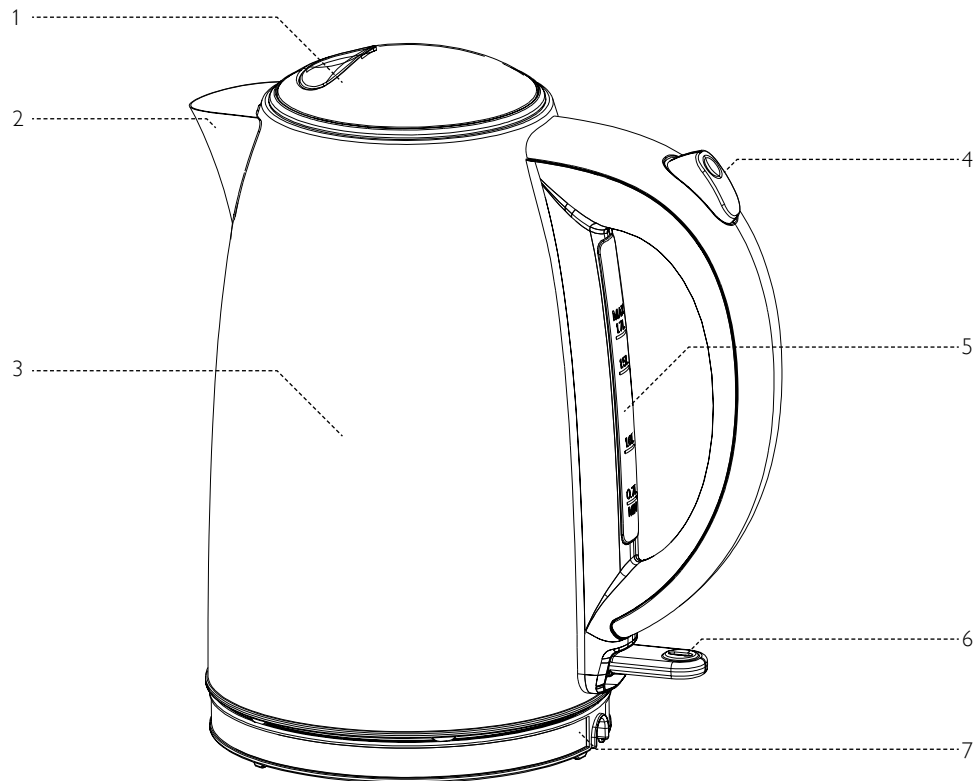

Before first use

Before using your kettle for the first time, make sure it is thoroughly clean. Fill the kettle to the maximum level, boil the water and pour it away. Do this twice. Wipe down its outer surfaces with a damp cloth. Note: The kettle's maximum capacity is 1.7L.

Using your electric kettle

1. Place your kettle on a flat surface.
2. Take your kettle from its base. Open the lid by pressing the release button, then fill the kettle to the desired level and close the lid. The water should be between the minimum and the maximum fill levels. If there is too little water, the kettle will switch off before boiling.



Note: Do not fill beyond the maximum level as water may spurt from the spout while boiling.

3. Place the kettle back on the power base and close the lid.
4. Plug the kettle in and switch it on. The kettle will start to boil. It will switch off automatically once the water has boiled. If you want to use it again, you will need to wait 30 seconds. To stop the water from boiling at any point, simply switch off the kettle or lift it from its base.



Note: Ensure that the switch is not obstructed and the lid is firmly closed. The kettle will keep boiling if the switch cannot release, or if the lid is open.



Note: Avoid spillage on the electrical elements'

5. Lift the kettle from the power base and pour the water.



WARNING! Hot water and steam can scald skin. Do not open the lid when the kettle has just boiled or while the water inside is still very hot. Pour the water carefully.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base.



Note: Unplug the kettle when not in use.



Note: The outer surface is subject to residual heat after use

Boil-dry protection

Should you accidentally switch on the kettle without water, the boil-dry protector will automatically switch the kettle off. If this occurs, allow the kettle to cool before filling it with cold water and re-boiling.

Cleaning and maintenance

1. Always unplug the kettle and let it cool down before cleaning.
2. Never immerse the kettle, power cord or power base in water.
3. Wipe its surface with a damp cloth. Do not use abrasive cleaners or solvents.
4. Clean the filter regularly. Detach the filter from the inside of the kettle by pressing down on the release tabs. Do not forget to replace the filter after cleaning.



NOTE: Filter is dishwasher safe.



CAUTION: Do not use specialist steel or other abrasive cleaners on the outside of the kettle or you may damage its surface.

5. You may wind the power cord around the bottom of the kettle for storage but ensure that the kettle has cooled down and is empty.

Descaling the kettle

You should regularly descale your kettle to ensure that it works properly. You can use a commercially available descaler and follow the instructions on the packet. Alternatively, you can use white vinegar as follows:

1. Pour three cups of white vinegar into the kettle. Add enough water so that the mixture completely covers the bottom of the kettle. Leave the solution in the kettle overnight.
2. The following morning, pour away the mixture. Fill the kettle with clean water to the maximum fill level, boil and then discard the water. Repeat several times until the smell of vinegar has completely gone. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

Technical specifications

Model: JLK093

Power supply: AC 220-240V 50-60Hz
Output 2520-3000W

Volume: 1.7L

Servicing and disposal

This product should only be repaired or serviced by an authorised service engineer. Only genuine, approved spare parts should be used.



This symbol indicates that this product should not be treated as normal household waste and should be recycled. John Lewis & Partners does not operate in-store take back, but as a member of the Distributor Take Back scheme has funded the development and upgrade of recycling facilities across the UK.

Please take your old appliance to your nearest collection facility. For further details, contact your local council or visit: www.recycle-more.co.uk

Guarantee

This item is guaranteed for two years in respect of defects found to be due to faulty workmanship or materials. Proof of purchase is required for the validity of the guarantee. This guarantee is no longer valid in the case of accidental damage, alteration, repair by any unauthorised persons or poor maintenance. This guarantee in no way affects your statutory rights.

Please retain these instructions for future use.



John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com