

JOHN  
LEWIS  
& PARTNERS

# COFFEE GRINDER INSTRUCTION MANUAL



## Contents

- 3 Important safety information
- 6 Your coffee grinder - diagram
- 7 Before first use
- 7 Using your coffee grinder
- 8 Grinding tips
- 9 Cleaning and maintenance
- 9 Technical specifications
- 10 Servicing and disposal
- 10 Guarantee

## Important safety information

Thank you for purchasing this coffee grinder.

Please read the instructions and warnings carefully to ensure a long life for your product and safe usage. This instruction leaflet must be retained with the product for future reference. These warnings have been provided in the interest of safety. You **MUST** read them carefully before using the appliance.

If you are unsure of the meaning of any of these warnings, please contact your nearest John Lewis & Partners branch or John Lewis & Partners Technical Support on 03301 230106.

Close supervision is necessary when your appliance is being used near children or infirm people. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless

they are properly supervised or given instructions concerning the safe use of the item by a person responsible for their wellbeing. Children must not play with the appliance. Cleaning and maintenance should not be carried out by children.

- Unplug from the mains when not in use, when removing or attaching accessories and before cleaning any part of the appliance.
- Do not operate any appliance with a damaged cord or plug. Should the item malfunction, or if it is damaged in any manner, please stop using it and return it to your nearest John Lewis branch. Do not attempt to repair it yourself. Do not modify the appliance's plug.
- Do not let the power cord overhang the edge of the surface on which it stands, or touch anything hot.
- When unplugging the device, hold the plug itself, not the power cord.


- Do not use the appliance for any purpose other than its intended use.
- This appliance is for indoor use only. Do not use it outdoors.
- Do not use accessories or attachments that are not recommended by the manufacturer.
- Ensure that fingers are kept well away from moving parts.
- Do not remove the cover until the blade has completely stopped. Do not attempt to operate the appliance without the cover being in place.
- Check the grinding bowl for foreign objects before use.



**WARNING:** Polythene bags over the product or within packaging may be dangerous. To avoid the risk of suffocation, please keep away from pets, babies and children.

## Your coffee grinder - diagram

- ① Power switch
- ② Transparent cover
- ③ Grinding bowl (with blade)
- ④ Motorised base

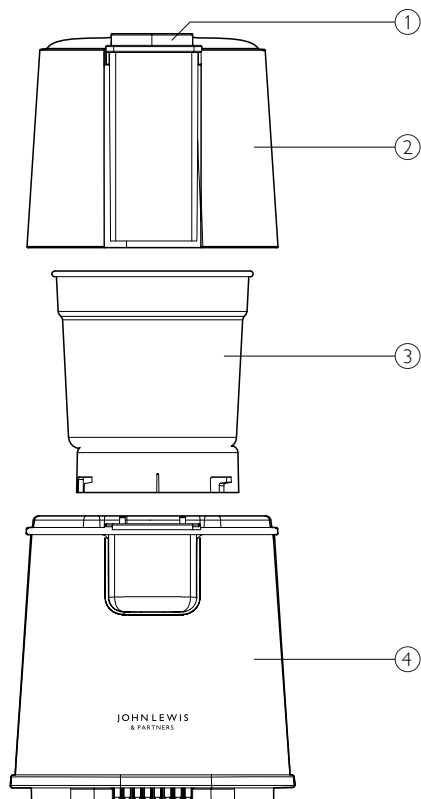

## Before first use

Carefully unpack your coffee grinder. To remove any dust that may have accumulated, wipe the grinding bowl and blades with a damp cloth. Use extreme care as the blades are sharp. The transparent cover can be immersed in water for cleaning but it is not dishwasher safe. Dry thoroughly.

**⚠ CAUTION:** To protect against fire, electric shock and injury, do not immerse the motorised base in liquid, fill it with liquid or place it in the dishwasher.

## Using your coffee grinder

- 1 Place the coffee grinder on a flat surface.
- 2 To assemble the grinding bowl, fit the bowl into the motorised base, then turn the bowl clockwise until a click is heard. When disassembling, turn the bowl anti-clockwise to detach it.
- 3 Pour up to 60g of coffee beans into the grinding bowl. Do not fill above the max fill line.
- 4 Replace the transparent cover and plug the grinder into the power socket.
- 5 Press and hold the power switch and the appliance will start operating. Once the power switch is released, the appliance will stop.

**⚠ NOTE:** Do not operate this appliance continuously for more than 30 seconds. Allow the appliance to cool down for 3 minutes between cycles.

- 6 Check the consistency of coffee grounds through the transparent cover.

**⚠ IMPORTANT:** Do not remove the cover until the blades have come to a complete stop.

- 7 Once the desired consistency has been obtained, release the power switch and unplug the power cord.
- 8 Remove the transparent cover, disassemble the grinding bowl and pour out the ground coffee.

## Grinding tips

- The coarse grind is generally used for percolators and coffee urns. The medium grind is used for drip coffee-makers and steam espresso machines. A fine grind is used for espresso machines with an electric pump.
- Vary the grinding times to suit your taste and the type of beans you are using.
- For the freshest, most flavoursome coffee, grind only enough for the pot you are making. Coffee beans will keep for up to two months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale. Be sure to clean the grinding chamber, blades and cover after each use.
- This grinder can only grind dry, brittle foods. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or oily spices including cinnamon, cloves or nutmeg. Do not grind peanuts or grains such as wheat, rice, barley, or dried corn. Attempting to grind any of these foods may damage the unit. Never use it to chop ice cubes.
- Freshly ground peppercorns have a strong aroma and taste that may affect the flavour of coffee beans ground afterwards. You may want to purchase a separate grinder if you plan to grind peppercorns.

## Cleaning and maintenance

### CAUTION:

- 1 Be sure to unplug this appliance before cleaning. Do not immerse the cord, plug or motorised base in liquid. After each use, always make sure the plug is removed from the wall socket.
- 2 Wash the cover with water and mild detergent. It is not dishwasher-safe. Rinse thoroughly and dry. Do not fill the grinding bowl with water.
- 3 Wipe the grinding bowl and blades with a cloth. Extreme care should be exercised as the blades are sharp.

## Technical specifications

Rated input: 220-240V ~ 50-60Hz

Rated power: 180-220W

Capacity: 60g

Class: II

## Servicing and disposal

This product should only be repaired or serviced by an authorised service engineer. Only genuine, approved spare parts should be used.



This symbol indicates that this product should not be treated as normal household waste and should be recycled. John Lewis does not operate in-store take back, but as a member of the Distributor Take Back scheme has funded the development and upgrade of recycling facilities across the UK.

Please take your old appliance to your nearest collection facility. For further details, contact your local council or visit: [www.recycle-more.co.uk](http://www.recycle-more.co.uk)

## Guarantee

This item is guaranteed for two years in respect of defects found to be due to faulty workmanship or materials. Proof of purchase is required for the validity of the guarantee. This guarantee is no longer valid in the case of accidental damage, alteration, repair by any unauthorised persons or poor maintenance. This guarantee in no way affects your statutory rights.

Please retain these instructions for future use.



**John Lewis Partnership**  
171 Victoria Street  
London SW1E 5NN  
[johnlewis.com](http://johnlewis.com)