

Recommended bulb

1 x 9-11 Watt ES energy efficient LED

or

1 x 28 Watt ES eco halogen

Bulb not included

Specification

Max power: 28W


Voltage: 220~240V, 50/60Hz

IP20

Weight 2.7Kg



Please retain these instructions for future reference.

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis does not operate in store take back, but as members of the Distributer Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

We have taken great care to ensure that this product reaches you in perfect condition. However, should any parts be damaged or missing please e-mail lightingparts@JLPspares.co.uk

Trouble shooting:

Why is the light not working when switched on?

Check your power supply is switched on

Turn off light and check that the bulb is inserted correctly

Check the bulb is still in working order.

John Lewis partnership

171 Victoria Street

London SW1E 5NN

Johnlewis.com

Made in China

Issue 01 05/20

 
John Lewis

User manual

House Stockholm

Rise & Fall

Ceiling pendant

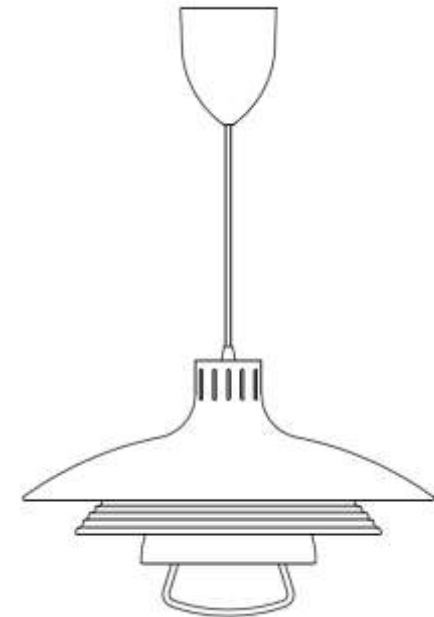

Thank you for purchasing this House Stockholm rise & fall ceiling pendant. Please read the instructions carefully before use to ensure safe and satisfactory operations of this product.

Warnings!

For your safety, this product must be installed in accordance with local Building Regulations.

If in any doubt, or where required by the law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available online or phone your Local Authority.

To prevent electric shock, switch off the mains supply before installing or maintaining this product. Ensure other persons cannot restore the electricity supply without your knowledge.

Always use the correct bulb type with the correct wattage as indicated in the specification table. This product is Class I = \equiv and should be fitted to a lighting Supply (with earth) protected by a 5 amp fuse or equivalent circuit breaker.

When changing the bulb, always switch off at the mains and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.

Caution! The bulb and surrounding parts can become hot during use.








For indoor use only.

Care instructions

We recommend cleaning with a soft dry cloth. Do not use abrasive materials as these will damage the finish.


Replace bulbs from John Lewis or established brand of the same type and compatibility.

Parts list

	Parts List	Qty		Parts List	Qty
A		1	E		3
B		1	F		3
C		1	G		3
D		3			


Assembly

 Never install your appliance on a wet, freshly painted or plastered surface. Ensure the house electricity supply is switched off at the fuse box. If removing an existing fitting, note down all wiring connections. Check the fixings will not touch any existing wiring before drilling and attaching the light to the ceiling.

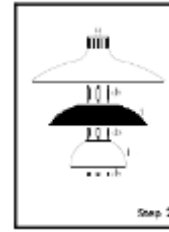


Step 1

 Fit the 3 longest spacing studs (D) to the inside of the upper shade (A) and screw into place until tight. Pass the holes in the centre shade (B) over the spacing studs and attach the 3 x spacing studs (E) to secure in place. Next, pass the holes in the lower shade (C) over the spacing studs and fit the 3 x finial nuts (F) to secure in place. Ensure all assembled parts are tight.

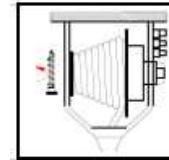

Step 2

 Expose the inner assembly by unscrewing the ceiling cup. Using the top plate as a template, mark and then drill the fixing holes in the ceiling (ensure the screws are firmly fixed into a solid or other suitable mounting and not just the plasterboard.). Take care not to damage wiring. Attach the assembly to the mounting surface using suitable fixings. Make sure no wires are trapped in the process.

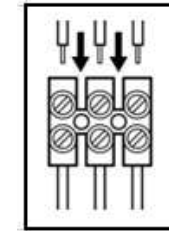


Step 3

Ensuring that the power has been isolated, connect the electrical supply wires to the connector blocks corresponding terminals. Make the electrical connections as follows:

- Connect the supply live (normally brown or red) to fitting live (embossed "L") on the terminal block housing.
- Connect the supply neutral (normally blue or black) to fitting neutral (embossed "N") on the terminal block housing.
- Connect the supply earth (normally green/yellow or unsheathed) to earth (embossed " \equiv ") on terminal block housing.

 NOTE: Ensure electrical connections are tight and no loose strands of wire are left out of the connector block.

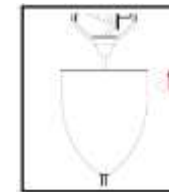

Step 4

Push the ceiling cup over the rise and fall assembly and rotate to screw onto the top plate until secure. Take care not to overtighten as this may cause damage to the fitting. Ensure all components are straight and aligned during the assembly process.

Fit the bulb, type and wattage as indicated on the fitting (bulb not supplied). The wattage indicated must not be exceeded. Once installation is complete, the house electricity may be restored at the fuse box.

Height Adjustment: This fitting can be adjusted once installed, simply pull down gently and release when fitting is at desired height. To raise, simply lift the pendant gently and the cable will retract. If the fitting does not stay in place or retract correctly, the tension can be adjusted by rotating the black knob on the side of the assembly inside the ceiling cup.