

Tumble Dryer

JLTDH25

User Manual

John Lewis

Contents

Safety information	3	Unusual smell	17
Children and vulnerable people safety	3	Noises	17
General Safety	4	Daily use	19
Safety instructions	6	Start a programme without delay start	19
Installation	6	Starting the programme with delay start	19
Electrical connection	6	Change a programme	19
Use	6	At the end of the programme	19
Internal lighting	6	Stand-by function	20
Care and cleaning	7	Hints and tips	21
Compressor	7	Preparing the laundry	21
Service	7	Care and cleaning	22
Disposal	7	Cleaning the filter	22
Product Description	8	Emptying the water container	23
Control Panel	9	Cleaning the Heat Exchanger	23
Display	9	Cleaning the humidity sensor	24
Programme table	11	Cleaning the drum	25
Options	13	Cleaning the control panel and housing	25
Less creasing	13	Cleaning the airflow slots	25
Dryness Level	13	Troubleshooting	26
Time Dry	13	If the drying results are not satisfactory	27
Time Dry on Wool programme	13	Technical data	28
Refresh	13	Consumption data	29
End Alert	13	Quick guide	30
Reverse Plus	13	Daily use	30
Extra quiet	13	Cleaning the filter	31
Options table	14	Programme table	31
Settings	15	Product Information sheet in reference to E.U. regulation 1369/2017	33
Child lock function	15	Repairs - after sales service	35
Adjustment of the remaining moisture	15		
Water container indicator	16		
Before first use	17		

Safety information

Before beginning the installation and use of this appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.



- Read the supplied instructions.

Children and vulnerable people safety



Warning!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.

- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use an appropriate stacking kit.
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- CAUTION: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 9 kg (refer to the "Programme chart" chapter).
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.

- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

Safety instructions

Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when it is being moved.
- The rear surface of the appliance must be put against a wall.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

Electrical connection



Warning! Risk of fire and electric shock.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.

- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.

Use



Warning! Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.

Internal lighting



Warning! Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The LED lamp is dedicated to drum lighting. This lamp cannot be reused for other lighting purposes.
- To replace the internal lighting, contact the Authorised Service Centre.

Care and cleaning



Warning! Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Be careful when you clean the appliance to prevent damage to the cooling system.

Compressor



Warning! Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with a special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.


Disposal



Warning! Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

Product Description

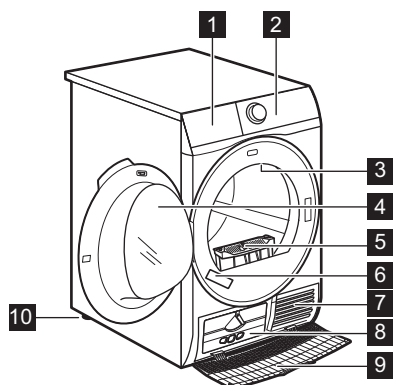


1. Water container
2. Control panel
3. Internal light
4. Appliance door
5. Filter
6. Rating plate
7. Airflow slots
8. Heat Exchanger lid
9. Heat Exchanger cover
10. Adjustable feet



For ease of loading laundry or ease of installation the door is reversible. (see separate leaflet).

Control Panel

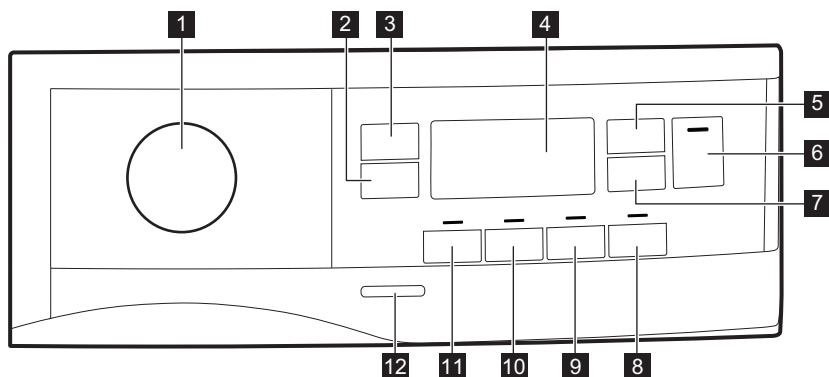


1. Programme knob and ● RESET switch
2. Less creasing touch button
3. Dryness Level touch button
4. Display
5. Time Dry touch button
6. Start/Pause touch button
7. Delay Start touch button
8. Refresh touch button
9. End Alert touch button
10. Reverse Plus touch button
11. Extra quiet touch button







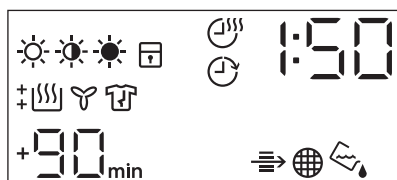

 
 

12. On/Off button



































Press the touch buttons with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate the control panel. Make sure that the control panel is always clean and dry.

Display




Symbol on the display	Symbol description
	laundry dryness option: iron dry, cupboard dry, extra dry
	time drying option on
	delay start option on
	indicator: <i>check Heat Exchanger</i>
	indicator: <i>clean filter</i>
	indicator: <i>drain the water container</i>
	child lock on
	wrong selection or knob is in the ● "Reset" position
	indicator: <i>drying phase</i>
	indicator: <i>cooling phase</i>
	indicator: <i>anti-crease phase</i>
1 : 50	programme duration
+30 _{min.} , +60 _{min.} , +90 _{min.} , +2h	extension of default anti-crease phase: +30min, +60min, +90min, +2h)
: 10 - 2 : 00	time drying selection (10min-2h)
1h - 20h	delay start selection (1h-20h)

Programme table

Programme	Load ¹⁾	Properties / Fabric type	
 ²⁾ Cottons eco	9 kg	Cycle to be used to dry cotton with "cotton cupboard" dryness level, with maximum energy saving.	/  
Cottons	9 kg	Cycle defined to dry all types of cotton ready to store (cupboard dry).	/  
Synthetics	3,5 kg	Synthetic and mixed fabrics.	/   
Mix	6 kg	Mix of garments made of cotton, cotton-synthetic blend and synthetic fabric.	/   
Delicates	4 kg	Delicate fabrics such as viscose, rayon, acrylic, and their blends.	/   
Sport light	2 kg	Sportswear, thin and light fabrics, microfiber, polyester.	/   
Duvet	3 kg	Single or double duvets and pillows (with feather, down or synthetic fillings).	/   
Bed linen	4,5 kg	Up to three bed linen sets, one of which can be double size.	/   
Outdoor	2 kg	Outdoor clothing, technical, sports fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation. Suitable for drying in tumble dryer.	/   
Denim	4 kg	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams).	/   
Silk	1 kg	Gentle drying of hand-washable silks.	/   

Programme	Load ¹⁾	Properties / Fabric type
Wool	1 kg	Woollen fabrics. Gentle drying for hand-washable woollens. Remove items immediately when the programme is completed.

1) The maximum weight refers to dry items.

2) The  Cottons Cupboard Dry ECO programme is the "Standard cotton programme" according to Commission Regulation EU No. 392/2012. It is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.




Options

Less creasing

Extends the anti-crease phase by 30,60, 90 or 2 hours at the end of the drying cycle. This function reduces creases. The laundry can be removed during the anti-crease phase.

Dryness Level

This function helps to increase dryness of the laundry. There are 3 options:

-  Extra Dry
-  Cupboard Dry
-  Iron Dry

Time Dry

You can set the programme duration, from a minimum of 10 minutes to a maximum of 2 hours. The required duration is related to the quantity of laundry in the appliance.



We recommend that you set a short duration for small quantities of laundry or for only one item.

Time Dry on Wool programme

Option suitable for Wool programme to adjust final dryness level.

Refresh

To refresh clothes that were in storage. Maximum load cannot exceed 1 kg.

End Alert

The buzzer sounds at the:

- cycle end
- start and end of the anti-crease phase
- cycle interruption

The buzzer function is by default always on. You can use this function to activate or deactivate the sound.



You can activate the End Alert option with all programmes.





Reverse Plus

Increase drum reversing frequency to reduce items twisting and entanglement. To increase uniformity of drying result and help reduce creases. Recommended for large or long items (e.g. sheets, trousers, long dresses)"

Extra quiet


The appliance operates with low noise without effect on the drying quality. The appliance operates slowly with longer cycle time.

Options table

Programmes ¹⁾	Dryness Level			Less creasing	Extra quiet	Reverse Plus	Refresh	Time Dry
								
 Cottons eco		■		■				
Cottons	■	■	■	■	■	■	■	■
Synthetics	■	■	■	■	■	■	■	■
Mix	■	■		■		■	■	■
Delicates		■		■				
Sport light		■						
Duvet		■						
Bed linen	■	■	■	■		■		
Outdoor		■						
Denim	■	■		■		■		
Silk		■		■				
Wool								■ 2)

1) Together with the programme you can set 1 or more options. To activate or deactivate them, press the related touch button.
2) See chapter OPTIONS: Time Drying on Wool programme

Settings

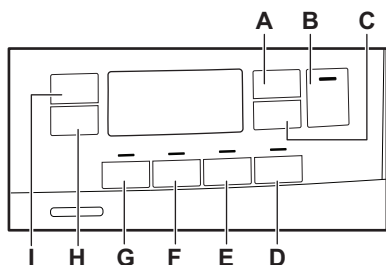

- A. Time Dry touch button
- B. Start/Pause touch button
- C. Delay Start touch button
- D. Refresh touch button
- E. End Alert touch button
- F. Reverse Plus touch button
- G. Extra quiet touch button
- H. Less creasing touch button
- I. Dryness Level touch button

Child lock function

This option prevents children playing with the appliance while a programme is operating. The touch buttons are locked.

Only the on/off button is unlocked.

Activating the child lock option:

1. Press the on/off button to activate the appliance.
2. Press and hold touch button (**D**) for a few seconds.

The child lock indicator comes on.



It is possible to deactivate the child lock option while a programme operates. Press and hold the same touch buttons until the child lock indicator goes off. The Child Lock function isn't available for 8 s after switching on the appliance.

Adjustment of the remaining moisture



Every time you enter in the "Adjustment of remaining laundry moisture" mode, previously set degree of remaining moisture will change into next value (e.g

previously set - **2** - will change into - **1** -).

To change the default degree of remaining moisture:

1. Press the on/off button to activate the appliance.
2. Use the programme knob to set any programme.
3. Wait approximately 8 seconds.
4. Press and hold buttons (**G**) and (**F**) at the same time.

One of these indicators comes on:

- - **0** - maximum dryness
 - - **1** - more dry laundry
 - - **2** - standard dry laundry
5. Press and hold buttons (**G**) and (**F**) again until the indicator of the correct level comes on.



If the display returns to the normal mode (the time of the selected programme from step 2. will be displayed), while setting the degree of remaining moisture, press and hold buttons **(G)** and **(F)** once again to enter to the "Adjustment of remaining laundry moisture" mode (previously set degree of remaining moisture will change into next value).

- To accept the selected degree of remaining moisture, wait 5 s and the display returns to the normal mode.

Dryness level	Display symbol
- 0 - maximum dryness	+ []
- 1 - more dry laundry	+ []
- 2 - standard dry laundry	[]

- Press and hold touch buttons **(H)** and **(I)** at the same time.

The display shows one of these 2 configurations:

- The display shows "Off". After 5 s the display returns to normal mode.
- The display shows "On". After 5 s the display returns to normal mode.

Water container indicator

By default, the water container indicator is on. It comes on when the programme is completed or when it is necessary to empty the water container.



If a draining kit is installed (additional accessory), the appliance automatically drains the water from the water container. In this case we recommend that you deactivate the indicator of the water container.

Deactivating the water container indicator:

- Press the on/off button to activate the appliance.
- Wait approximately 8 seconds.

Before first use



Rear drum locks are removed automatically when dryer is activated for the first time. Possible to hear some noise.

To unlock the rear drum locks:

1. Switch on the appliance.
2. Set any programme.
3. Press the Start/Pause button.

Drum starts to rotate. Rear drum locks are automatically deactivated.

Before you use the appliance to dry items:

- Clean the tumble dryer drum with a moist cloth.
- Start a 1 hour programme with moist laundry.



At the beginning of the drying cycle (first 3-5 min) there could be a slightly higher sound level. This is due to the compressor starting up. This is normal for compressor powered appliances such as refrigerators and freezers.

Unusual smell

The appliance is tightly packed.

After product unpacking you can feel an unusual smell. This is normal for brand new products.

Appliance is built of several different types of material which all together can generate unusual smell.


Over usage time, after few drying cycles unusual smell gradually disappears.

Noises




Different noises may be heard at different times during the drying cycle. They are perfectly normal operating sounds.


Working compressor.

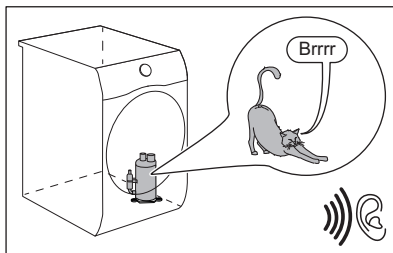


Rotating drum.

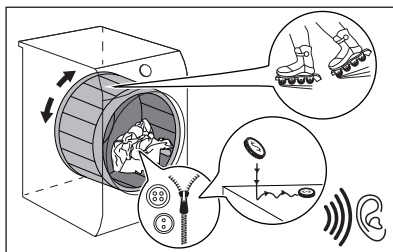

Working fans.

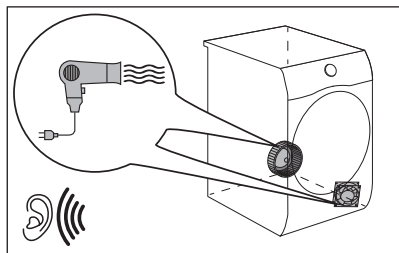


Working pump and transferring condensation to the tank.

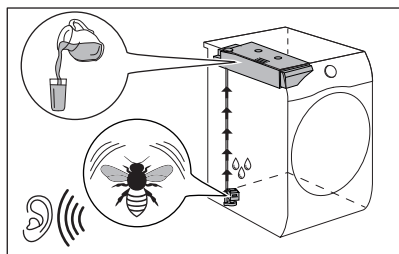

Daily use

Start a programme without delay start

1. Prepare the laundry and load the appliance.

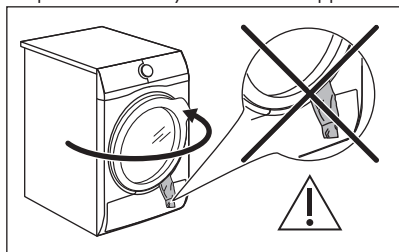

Caution! Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Press the on/off button to activate the appliance.
3. Set the correct programme and options for the type of load.

The display shows the programme duration.



Real drying time will depend on type of the load (quantity and composition), the room temperature and the humidity of your laundry after spin drying phase.

4. Press the Start/Pause touch button. The programme starts.

Starting the programme with delay start

1. Set the correct programme and options for the type of load.

2. Press the delay start button again and again until the display shows the delay time you want to set.



You can delay the start of a programme from a minimum of 1 hour to a maximum of 20 hours.

3. Press the Start/Pause touch button. The display shows the countdown of the delay start. When the countdown is completed, the programme starts.

Change a programme

 


1. Press the on/off button to deactivate appliance
2. Press the on/off button to activate the appliance.
3. Set the programme.

Alternatively:

1. Rotate the selector knob to the ● "Reset" position.
2. Wait for 1 second. The display shows — — —.
3. Set the programme.

At the end of the programme

When the programme is completed:

- An intermittent acoustic signal operates.
- The display shows 0 : 0 0
- The indicator  is on.
- The indicators  Filter and  Tank may come on.
- The Start/Pause indicator is on.







The appliance continues to operate with the anti-crease phase for approximately 30 minutes

or more if Less creasing option was set (see chapter *Option - Less creasing*).

The anti-crease phase reduces creasing.

You can remove the laundry before the anti-crease phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed.

When the anti-crease phase is completed:

- The display still shows  :  
 - The indicator  is off.
 - The indicators  Filter and  Tank remain on.
 - Start/Pause indicator goes off.
1. Press the on/off button to deactivate the appliance.
 2. Open the appliance door.
 3. Remove the laundry.
 4. Close the appliance door.

Possible causes of unsatisfactory drying results:

- Inadequate default dryness level settings. See chapter *Adjustment of default dryness level*
- Room temperature is too low or too high. Optimal room temperature is between 19°-24°C.



Always clean the filter and empty the water container when a programme is completed.

Stand-by function

To reduce energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme.



The time is reduced to 30 seconds if the selector knob is pointing to ● "Reset" position.

Hints and tips

Preparing the laundry



Very often the clothes after washing cycle are kneaded and tangled altogether. Drying kneaded and tangled clothes is inefficient. To assure proper air flow and even drying it is recommended to shake and load one by one the clothes to the tumble dryer.

To assure proper drying process:

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.

- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.
- Shake the large clothes, fabrics before placing in the tumble dryer. It is to avoid moist places inside the fabric after the drying cycle.

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

Care and cleaning

Cleaning the filter




Caution! Avoid the use of water to clean the filter. Instead throw away lint in the dustbin (avoid dispersion of plastic fiber in water ambient).




To achieve the best drying performances clean the filter regularly , clogged filter lead to longer cycles and energy consumption increase. Use your hand to clean the filter , and if necessary , a vacuum cleaner .


1.

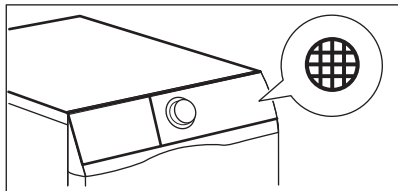


2.

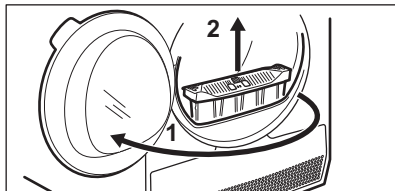


3.

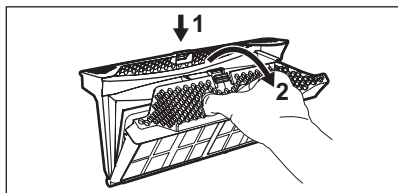


4.

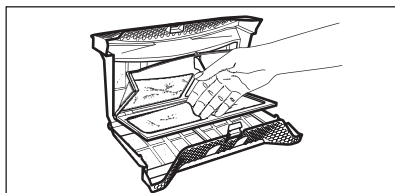

5. 1)

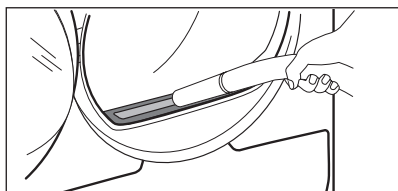


6.

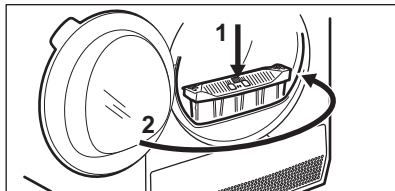


1) If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner.

Emptying the water container


1.

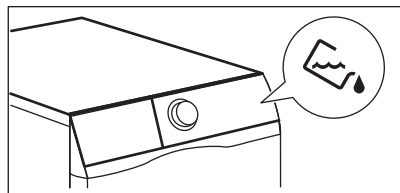


2.

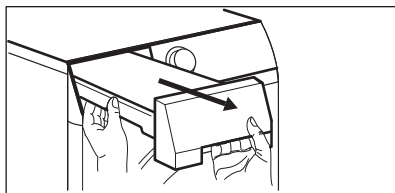

3.

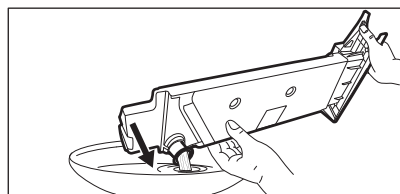


4.

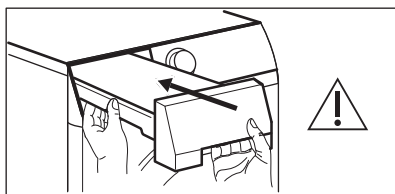


You can use the water from the water container as an alternative to distilled water (e.g. for steam ironing). Before you use the water, remove dirt residues with a filter.

Cleaning the Heat Exchanger


1.

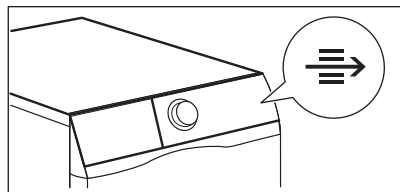


2.

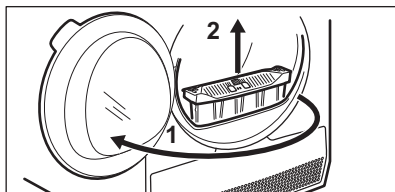


3.

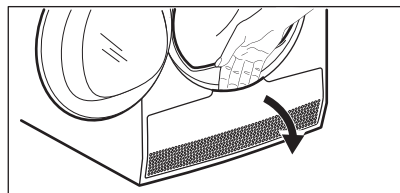


4.

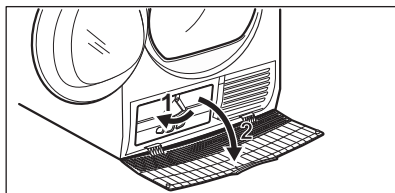


5.

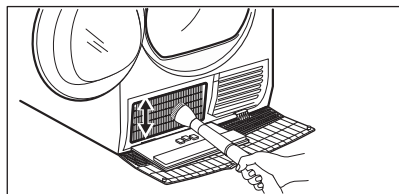


7.

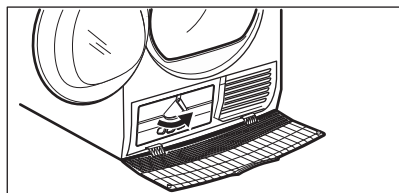


9.

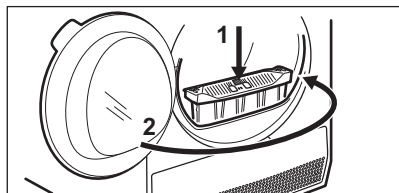

6.

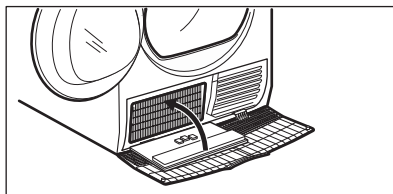

8.

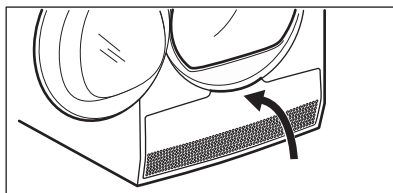

Caution! Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.

Cleaning the humidity sensor



Caution! Risk of humidity sensor damage. Do not use abrasive materials or steel wool to clean the sensor.

To assure best drying results the appliance is equipped with metal humidity sensor. It is placed on the inner side of the door area.


Over usage time the surface of the sensor may get dirty what deteriorates the drying performance.

We recommend to clean the sensor at least 3 or 4 times or if you observe the drop of drying performance.

To clean you can use harder side of dish-washing sponge and bit of vinegar or dish soap.

To clean the sensor:

1. Open the loading door.
2. Clean the surfaces of the humidity sensor wiping off the metal surface several times.

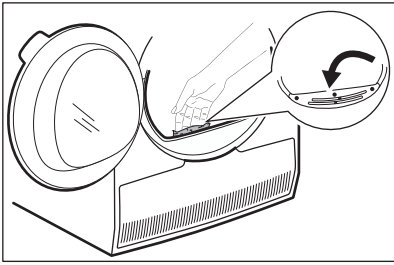

Cleaning the drum



Warning! Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.



Caution! Do not use abrasive materials or steel wool to clean the drum.

Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



Caution! Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

Troubleshooting

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket.
	Check fuse in fuse box (domestic installation).
The programme does not start.	Press Start/Pause.
	Make sure that the appliance door is closed.
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry is not caught between the appliance door and the rubber seal.
The appliance stops during operation.	Make sure that the water container is empty. Press Start/Pause to start the programme again.
	Load is too small, increase the load or use the Time Drying programme.
The cycle time is too long or unsatisfactory drying result. ¹⁾	Make sure that the weight of the laundry is suitable for the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Ensure that the room temperature is higher than +5°C and lower than +35°C. Optimal room temperature is 19°C to 24°C.
	Set the Time Drying or the Extra Dry programme. ²⁾
The display shows — — —.	If you want to set a new programme, deactivate and activate the appliance.
	Make sure that the options are suitable for the programme.

Problem	Possible solution
The display shows Error code (e.g. E51).	Deactivate and activate the appliance. Start a new programme. If the problem occurs again, contact the Service centre.

1) After maximum 5 hours, the programme ends automatically.

2) It can happen that some area remains humid when drying big items (e.g. bed sheets).

If the drying results are not satisfactory

- The set programme was incorrect.
- The filter is clogged.
- The Heat Exchanger is clogged.
- There was too much laundry in the appliance.
- The drum is dirty.
- Incorrect setting of the conductivity sensor
(See chapter "*Settings - Adjustment of the remaining laundry moisture degree* " for better setting).
- The airflow slots are clogged.
- Room temperature is too low or too high
(optimal room temperature 19°C to 24°C)

Technical data

Height x Width x Depth	850 x 600 x 600 mm (maximal 665 mm)
Max. depth with the appliance door open	1100 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	9 kg
Voltage	230-240 V
Frequency	50 Hz
Sound power level	65 dB
Necessary fuse	5 A
Total power	900 W
Energy efficiency class	A++
Energy consumption on the standard cotton programme with the full load. ¹⁾	2,21 kWh
Energy consumption on the standard cotton programme with the partial load. ²⁾	1,16 kWh
Annual energy consumption ³⁾	258,70 kWh
Left-on mode power absorption ⁴⁾	0,13 W
Off mode power absorption ⁴⁾	0,13 W
Type of use	Household
Allowed ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	IPX4

This product contains fluorinated greenhouse gases, hermetically sealed	
Gas designation	R134a
Weight	0,26 kg
Global-warming potential (GWP)	1430

1) With reference to EN 61121. 9 kg of cotton centrifuged at 1000 rpm.

2) With reference to EN 61121. 4,5 kg of cotton centrifuged at 1000 rpm.

3) Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No. 392/2012).

4) With reference to EN 61121.

The information given in the chart above is compliant with the EU Commission regulation 392/2012 implementing directive 2009/125/EC.

Consumption data


Programme	Spun at / residual humidity	Drying time ¹⁾	Energy consumption ²⁾
Cottons Eco 9 kg			
Cupboard Dry	1400 rpm / 50%	160 min.	1,88 kWh
	1000 rpm / 60%	185 min.	2,21 kWh
Cottons 9 kg			
Iron Dry	1400 rpm / 50%	107 min.	1,27 kWh
	1000 rpm / 60%	129 min.	1,57 kWh
Cottons Eco 4,5 kg			
Cupboard Dry	1400 rpm / 50%	88 min.	0,97 kWh
	1000 rpm / 60%	103 min.	1,16 kWh
Synthetics 3,5 kg			
Cupboard Dry	1200 rpm / 40%	56 min.	0,56 kWh
	800 rpm / 50%	69 min.	0,78 kWh

1) For partial loads, the cycle time is shorter and appliance uses less energy.

2) Improper ambient temperature and/or poorly centrifuged laundry can prolong cycle time and increase the energy consumption.


Quick guide


Daily use

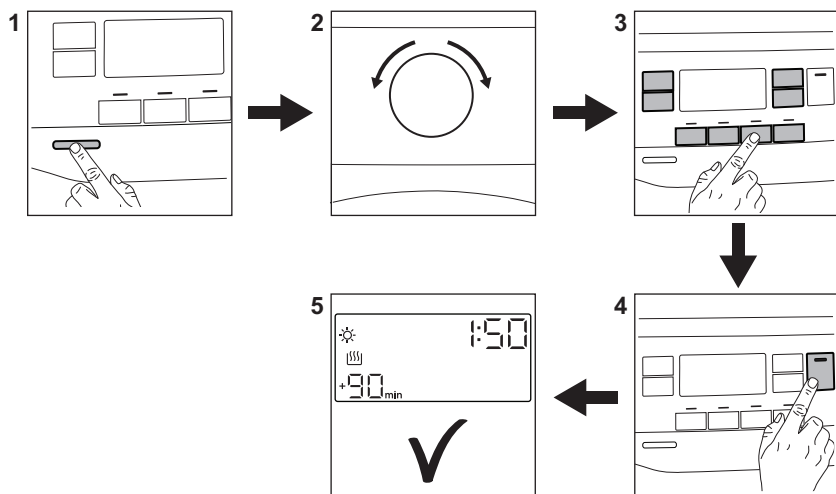





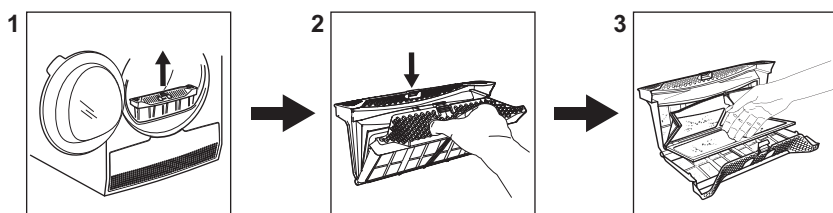


















1. Push the On/Off button to turn on the appliance.
2. Use the programme dial to set the programme.
3. Together with the programme you can set 1 or more special options. To activate or deactivate an option touch the relevant button.
4. To start the programme , Touch the **Start/ Pause** button.
5. The appliance starts.




Cleaning the filter



At the end of each cycle the filter symbol  appears on the display and you must clean the filter.

Programme table

Programme	Load ¹⁾	Properties / Fabric mark	
 Cottons eco	9 kg	Cotton fabrics - Cupboard dry	/  
Cottons	9 kg	Cotton fabrics. Programme for daily usage.	/  
Synthetics	3,5 kg	Synthetic and mixed fabrics.	/   
Delicates	4 kg	Delicate fabrics such as viscose, rayon, acrylic, and their blends.	/   
Sport light	2 kg	Sportswear, thin and light fabrics, microfiber, polyester.	/   
Duvet	3 kg	Single or double duvets and pillows (with feather, down or synthetic fillings).	/   
Silk	1 kg	Gentle drying of hand-washable silks.	/   
Wool	1 kg	Woollen fabrics. Gentle drying for hand-washable woollens. Remove items immediately when the programme is completed.	
Outdoor	2 kg	Outdoor clothing, technical, sports fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation. Suitable for drying in tumble dryer.	/   

Programme	Load ¹⁾	Properties / Fabric mark	
Denim	4 kg	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams).	/ 
Bed linen	4,5 kg	Up to three bed linen sets, one of which can be double size.	/ 
Mix	6 kg	Mix of garments made of cotton, cotton-synthetic blend and synthetic fabric.	/ 

1) The maximum weight refers to dry items.

Product Information sheet in reference to E.U. regulation 1369/2017

Product Information Sheet	
Trade Mark	John Lewis
Model	JLTDH25 PNC916098823
Rated capacity in kg	9
Air vented or condenser tumble dryer	Condenser
Energy efficiency class	A++
Energy consumption in kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.	258,70
Automatic tumble drier or non-automatic tumble drier	Automatic
Energy consumption of the standard cotton programme at full load in kWh	2,21
Energy consumption of the standard cotton programme at partial load in kWh	1,16
Power consumption of the off-mode in W	0,13
Power consumption in left-on mode in W	0,13
Duration of the left on mode in minutes	10
The 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, this programme is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for cotton.	
Weighted programme time of the 'standard cotton programme at full and partial load' in minutes	138
Programme time of the 'standard cotton programme at full load' in minutes	185
Programme time of the 'standard cotton programme at partial load' in minutes	103
Condensation efficiency class on a scale from G (least efficient) to A (most efficient)	B

Average condensation efficiency of the standard cotton programme at full load as a percentage	81
Average condensation efficiency of the standard cotton programme at partial load as a percentage	81
Weighted condensation efficiency for the 'standard cotton programme at full and partial load'	81
Sound power level in dB	65
Built in appliance Y/N	No

The information given in the chart above is compliant with the EU Commission regulation 392/2012 implementing directive 2009/125/EC.

Repairs - after sales service

Your John Lewis appliance comes with a three year guarantee. Your original receipt acts as your guarantee. Please make sure you retain it. The guarantee does not cover you against faults caused by accidental damage or misuse. For further details visit johnlewis.com/customer-services. If it is not working correctly refer to the "Troubleshooting" chapter in this user manual. If a fault occurs which you can not resolve through following the advice and information contained within this instruction manual, the next step is to contact John Lewis technical support on:

0330 1230106

They will give you details for your local service engineer. Before calling out an engineer, please ensure you have read the details under the heading "Troubleshooting".

When you contact your local service engineer you will need to give the following details:

- 1. Your name, address and post code
- 2. Your telephone number
- 3. Clear and concise details of fault
- 4. The purchase date as found on your receipt
- 5. The model and serial number of the appliance.
So that you always have these numbers at hand, we recommend you to make a note of them here:
 - Mod.....
 - P.N.C.....
 - S.N.....

IMPORTANT: If you call out an engineer to a fault listed under the heading "Troubleshooting", or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Spare parts

Always insist on genuine spare parts.

An authorised service engineer should service this product, and only genuine spare parts should be used. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Please contact John Lewis technical support on 0330 1230106 for assistance.

Shopping is easy with John Lewis Shops

- John Lewis, Aberdeen 01224 625 000
- John Lewis, Basingstoke 01256 406200
- John Lewis, Bluewater 01322 624 123
- John Lewis, Brent Cross 020 8202 6535
- John Lewis, Birmingham 0345 604 9049
- John Lewis, Cambridge 01223 361 292
- John Lewis, Cardiff 02920 536 000
- John Lewis, Cheadle 0161 491 4914
- John Lewis, Chelmsford 0124 545 8400
- John Lewis, Cribbs Causeway 0117 959 1100
- John Lewis, Edinburgh 0131 556 9121
- John Lewis, Exeter 01392 284150
- John Lewis, Glasgow 0141 353 6677
- John Lewis, High Wycombe 01494 462 666
- John Lewis, Kingston 020 8547 3000
- John Lewis, Leicester 0116 242 5777
- John Lewis, Leeds 0113 3946299
- John Lewis, Liverpool 0151 709 7070
- John Lewis, Milton Keynes 01908 679 171
- John Lewis, Newcastle upon Tyne 0191 232 5000
- John Lewis, Norwich 01603 660 021
- John Lewis, Nottingham 0115 941 8282
- John Lewis, Oxford Street 020 7629 7711
- John Lewis, Peterborough 01733 344 644
- John Lewis, Reading 0118 957 5955
- John Lewis, Sheffield 0114 276 8511
- Peter Jones, Sloane Square 020 7730 3434
- John Lewis, Solihull 0121 704 1121


John Lewis, Southampton 02380 216 400
Knight & Lee, Southsea 02392 827 511
John Lewis, Stratford 020 8532 3500
John Lewis, The Trafford Centre 0161 491 4040
John Lewis, Watford 01923 244 266
John Lewis, Welwyn 01707 323 456

John Lewis at home

John Lewis, Ashford 01233 811 010
John Lewis, Chester 01244 393 880

John Lewis, Chichester 01243 813 030
John Lewis, Croydon 020 8662 4730
John Lewis, Horsham 01403 214 740
John Lewis, Ipswich 01473 275 850
John Lewis, Newbury 01635 263 980
John Lewis, Poole 01202 756 020
John Lewis, Swindon 01793 733 180
John Lewis, Tamworth 01827 300 580
John Lewis, Tunbridge Wells 01892 506 830
John Lewis, York 01904 557 950

Environmental concerns

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances

marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.



136965670-A-022020 (Subject to change without notice.)