Caring for your product	Indoor use only Dimmable Replace bulbs from John Lewis or established brand of the same type and compatibility Recommended the fitting should be cleaned with a soft dry cloth.	
Aftercare and Troubleshooting	Why is the light not working when switched on? Check your power supply is switched on Turn off light and check that the bulb is inserted correctly Check the bulb is still in working order.	
	If you experience any unresolvable technical issues with the product, contact your nearest John Lewis & Partners shop or John Lewis & Partners Technical Support on 03301 230106.	
Specification	Recommended bulb: ES GLS bulb Rated power: 40W Max. Bulb not included Voltage: 220 –240V, 50Hz IP rating: 20 Weight: 0.73kg	
5 year guarantee	At John Lewis & Partners we test every light to high quality standards so we are able to offer you a 5 year guarantee.	
Recycling	This symbol indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis & Partners do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.	
John Lewis Partnership 171 Victoria Street London SW1E 5NN johnlewis.com Made in China	Please retain these instructions for future reference	



GLASS PENDANT CEILING LIGHT USER GUIDE





Introduction

Thank you for purchasing this Glass Pendant Ceiling light. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

Warnings

↑ This product is Class I and must be earthed.

This fitting should be fitted in accordance with IEE Regulations and the Building Regulations. If in any doubt, or where required by law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available online or from your Local Authority. To prevent electric shock, switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electricity supply without your knowledge.

If you are in any doubt, please consult a qualified electrician. If replacing an existing fitting, make a note of the connections. Always use the correct type and power bulb. Never exceed the power stated. When changing a bulb, always switch off at the mains and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.


The flexible cable on this luminaire, if damaged, shall only be replaced by the manufacturer or his service agent or a similar qualified person.

It is the installer's responsibility to ensure that the fixings and plugs used are suitable for the surface you are fixing your product on

Caution! The bulb and surrounding parts can become hot during use


Parts list	_	Description	Image	Ouantity
	A	RAW PLUG	- Barring - Barring	x 2
	₿	FIXING SCREW	(Junuun-	x 2
	0	FIXING BRACKET	- 0	X 1
	0	CONNECTOR BLOCK	Sage	X 1
	•	GRUB SCREW	<u> </u>	X 2
	•	CEILING PLATE/CABLE SET		X 1
	•	GLASS SHADE		X 1
	•	SHADE RING	_	X1

Product assembly

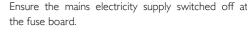





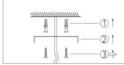


Step 1

Ensure that the bracket (supplied) is fixed to a wooden joist, or use a suitable fixing to the ceiling which will support the weight of the fitting.


2



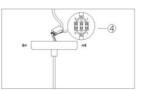

Step 2


Connect cables to terminals as shown below.

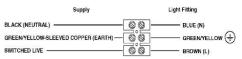

Check all wires are tight in the terminal block and no loose strands are left out.

Cover with insulating tape (not included).



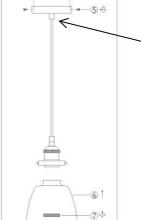

Step 3

Push up ceiling cup and secure with grub screws provided.

To adjust the height of the fitting, loosen the plastic grub screw on the ceiling plate, and then adjust the cable to the required length and then re-tighten the orith screw

Step 4

Attach shade onto the lampholder and then secure with shade ring.

Step 5

Attach the correct type and wattage bulb to the lamp holder (bulb not included).

The maximum power indicated must not be exceeded.

Switch on the electricity supply at the fuse board.

02 01