


# Scandi Solution Dresser INSTRUCTION MANUAL

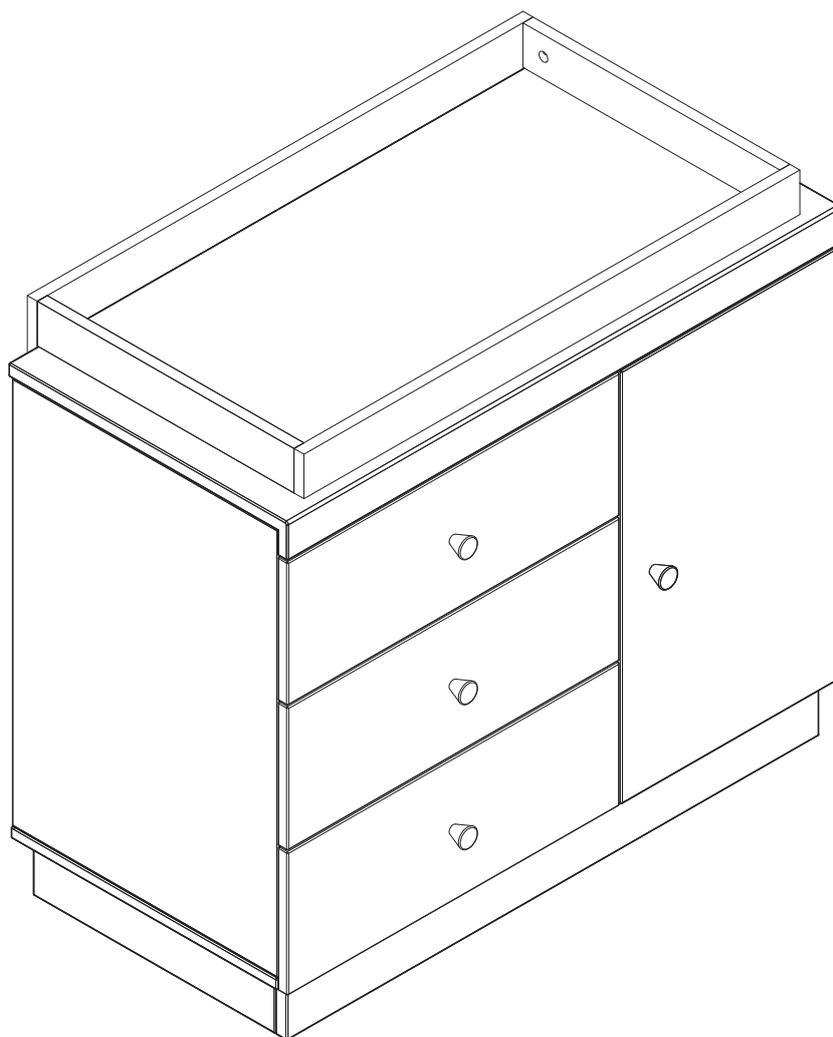

**IMPORTANT:  
PLEASE READ THE INSTRUCTIONS CAREFULLY  
AND KEEP FOR FUTURE REFERENCE**

**H:92 W:99.8 D:54.9cm**


---

## Introduction

**Thank you for purchasing this scandi solution dresser. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.**

---

## Tools required

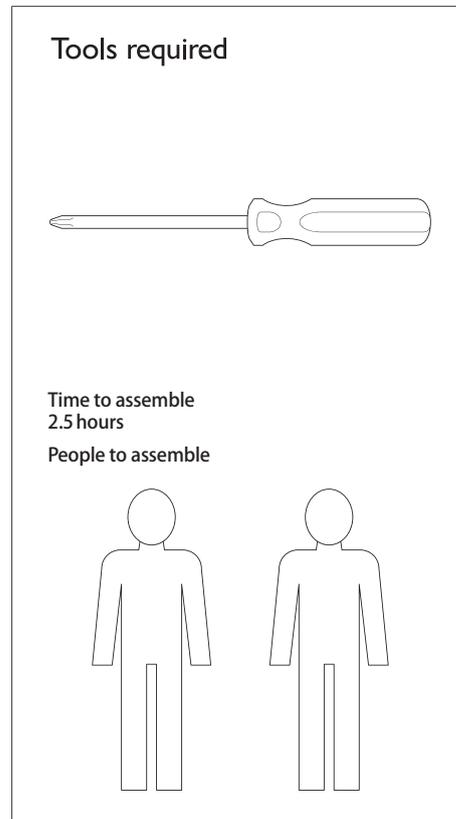

---

## Important safety information

**⚠ Warning:** In order to prevent overturning, this product must be used with the wall attachment device provided.

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent topple over, please observe the following:

1. Use the wall attachment device provided
2. Never allow children to climb or hang on drawers, doors or shelves.
3. Place heaviest items in the lower drawers or shelves.
4. Never open more than one drawer at a time.

**An attachment device is provided with your product; however, you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.**

**Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.**

## Warnings







- ⚠ The product should only be used on firm, level ground.
- ⚠ **Keep small parts out of reach of children.**
- ⚠ **Ensure the product is fully assembled as illustrated before use.**
- ⚠ **Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g. strings, necklaces, ribbons, dummies, etc) which could pose a risk of strangulation.**
- ⚠ **Ensure that the wall strap is used to securely attach the dresser to the wall to prevent tipping.**
- ⚠ **Any additional or replacement parts must only be obtained from John Lewis & Partners.**

### Do's


- ✓ Check the pack and make sure you have all the parts listed.
- ✓ Check all screws or bolts are tightened and inspect regularly.
- ✓ Make sure the legs remain in contact with the ground at all times.

### Don'ts

- ✗ Do not over tighten screws or bolts.
- ✗ Do not stand on the product.
- ✗ Do not use power tools to construct as over tightening and panel failure may occur.

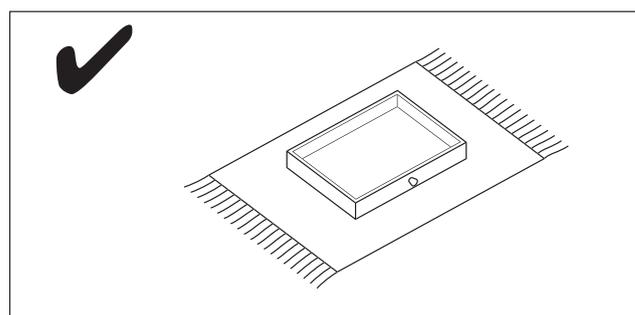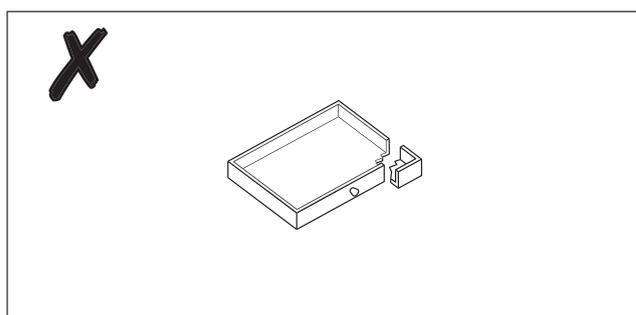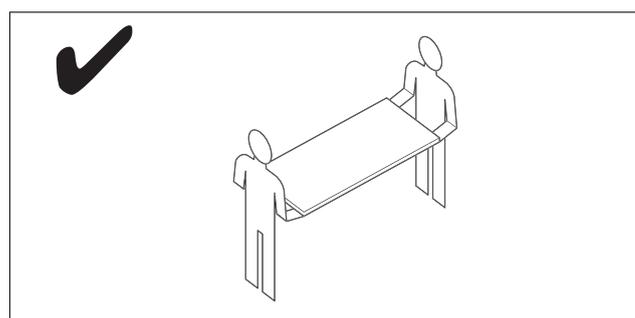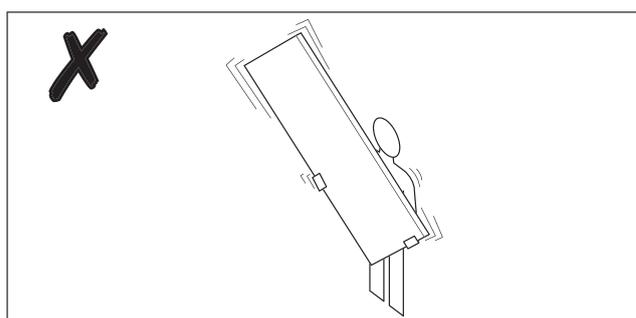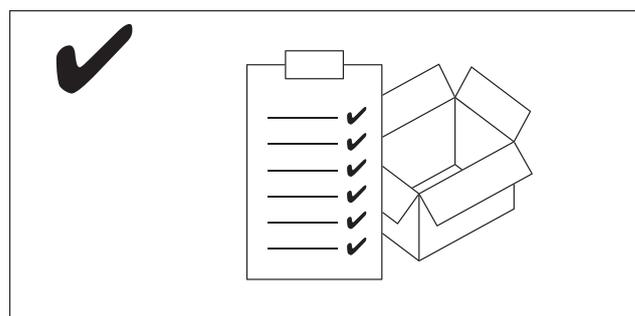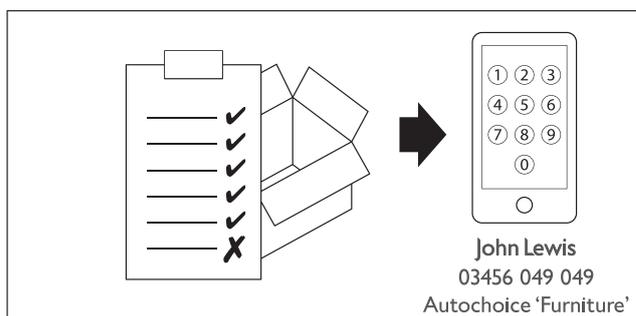

## Parts list

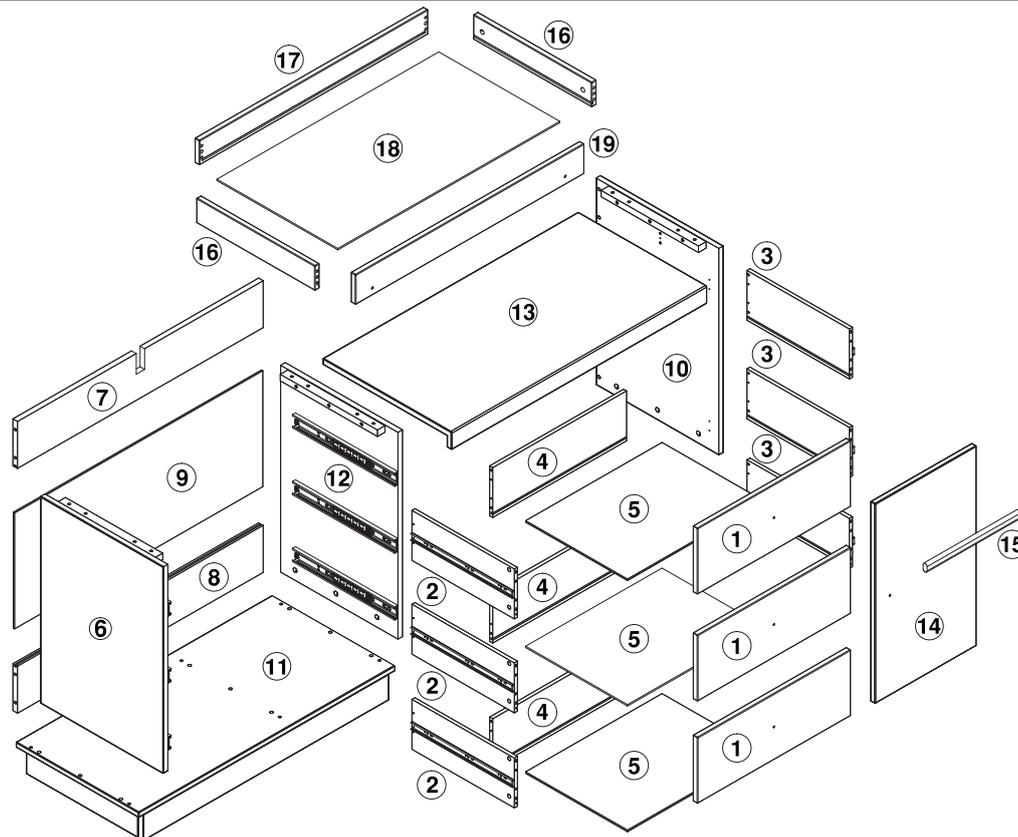

Ref	Descriptions	Dimensions(cm)	Qty
①	Front of drawer	H59.9 W22.5 D1.8	3
②	L side of drawer	H 40 W16.8 D1.2	3
③	R side of drawer	H 40 W16.8 D1.2	3
④	Back of drawer	H 52.3 W16.8 D1.2	3
⑤	Base of drawer	H 53.3 W39.8 D0.5	3
⑥	Side panel / L	H 70.5 W48 D4.8	1
⑦	Back upper rail	H 96 W16 D1.8	1
⑧	Back lower rail	H 96 W16 D1.8	1
⑨	Back panel	H 97 W39.4 D0.5	1
⑩	Side panel / R	H 70.5 W48 D4.8	1
⑪	Base panel	H 99.8 W48 D11	1
⑫	Middle panel	H 70.5 W45.8 D 4.8	1
⑬	Top panel	H 99.8 W50.3 D6	1
⑭	Door	H 68.1 W39.6 D1.8	1
⑮	Hanging rail	H 361 W30 D15	1
⑯	Changing table side panel	H 46.3 W8.4 D1.8	2
⑰	Changing table front panel	H 89.4 W8.4 D1.8	1
⑱	Changing table base panel	H 86.8 W47.3 D0.5	1
⑲	Changing table back panel	H 89.4 W10.2 D1.8	1

Internal dimensions


Stock number:32431901

 
 
 
 
Cabinet overall size: H:83.6 W:99.8 D:54.9cm

Drawer size: H:59.9W:44.6 D:22.5cm






Changing table size:H:89.4 W:49.9 D:8.4cm

**Fixtures and fittings  
supplied**


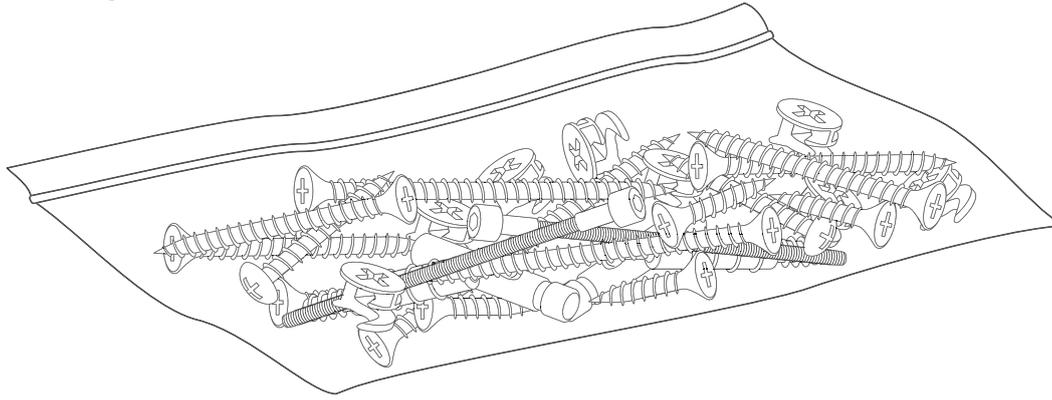


Ref	Descriptions	Dimensions	Qty	(not actual size)
<b>A</b>	Allen key M4	65*25mm	1	
<b>B</b>	Cam rods	Φ7*27.5mm	12	
<b>C</b>	Screw	Φ4*30mm	12	
<b>D</b>	Cam heels	Φ12*10.5mm	12	
<b>E</b>	Connecting bolts	Φ4*30mm	4	
<b>F</b>	Wooden handle	34*34*28mm	4	
<b>G</b>	Cam rods	Φ7*42mm	21	
<b>H</b>	Cam heels	Φ15*13.5mm	21	
<b>I</b>	Connecting bolts	Φ6*40mm	6	
<b>J</b>	Screw	Φ3.5*16mm	14	
<b>K</b>	Hinge		2	
<b>L</b>	Clothes holder	50*20*22mm	2	
<b>M</b>	Connecting bolts	Φ5*30mm	2	
<b>N</b>	Connecting bolt	Φ6*13mm	1	
<b>O</b>	Metal 'L' Bracket and screws to attach to product	120*55*20mm	1	

Product assembly

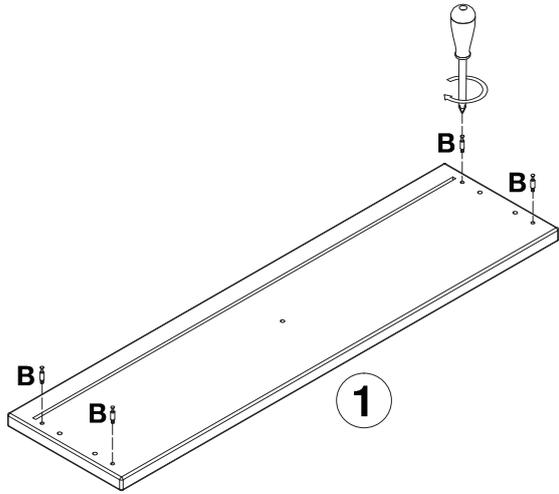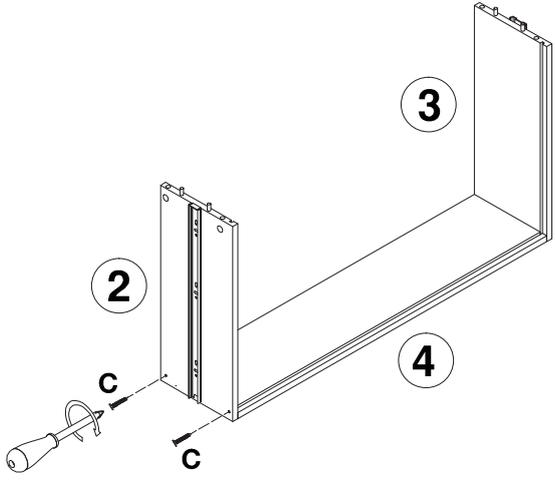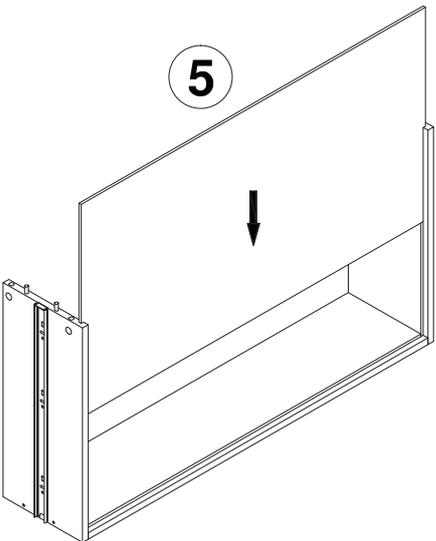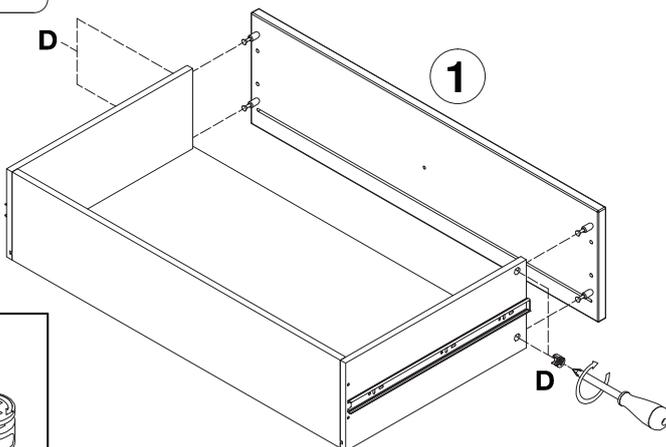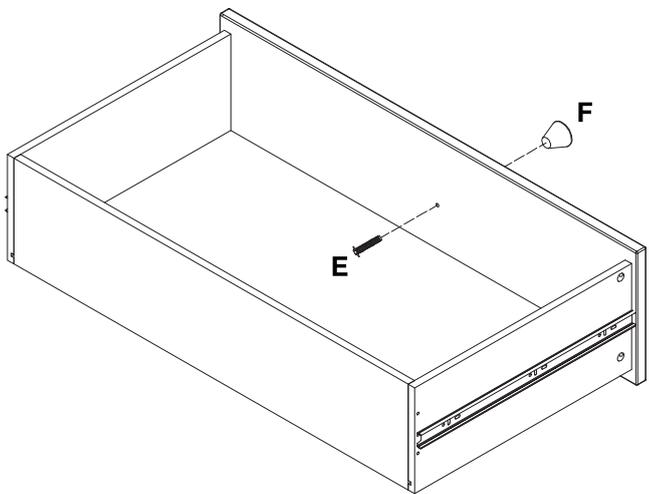
<p><b>1</b></p>  <p><b>B x 12</b></p>	<p><b>2</b></p>  <p><b>C x 12</b></p>
<p><b>3</b></p>  <p><b>5</b></p>	<p><b>4</b></p>  <p><b>D x 12</b></p>
<p><b>5</b></p>  <p><b>E x 3</b>   <b>F x 3</b></p> <p> <b>Assemble the other two drawers in the same way.</b></p>	

Product assembly

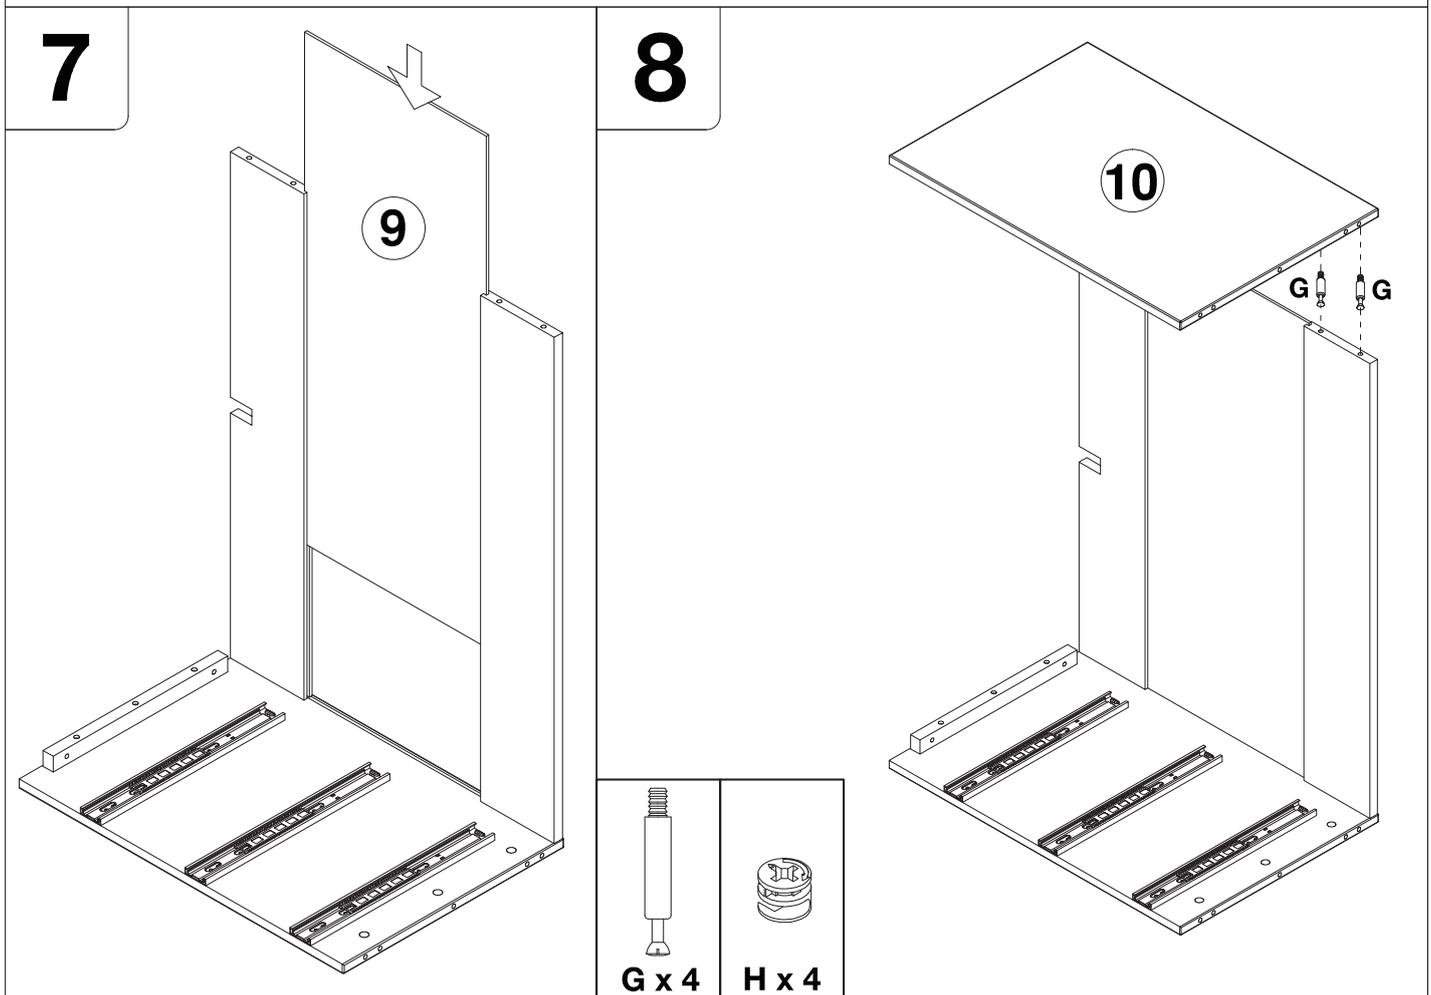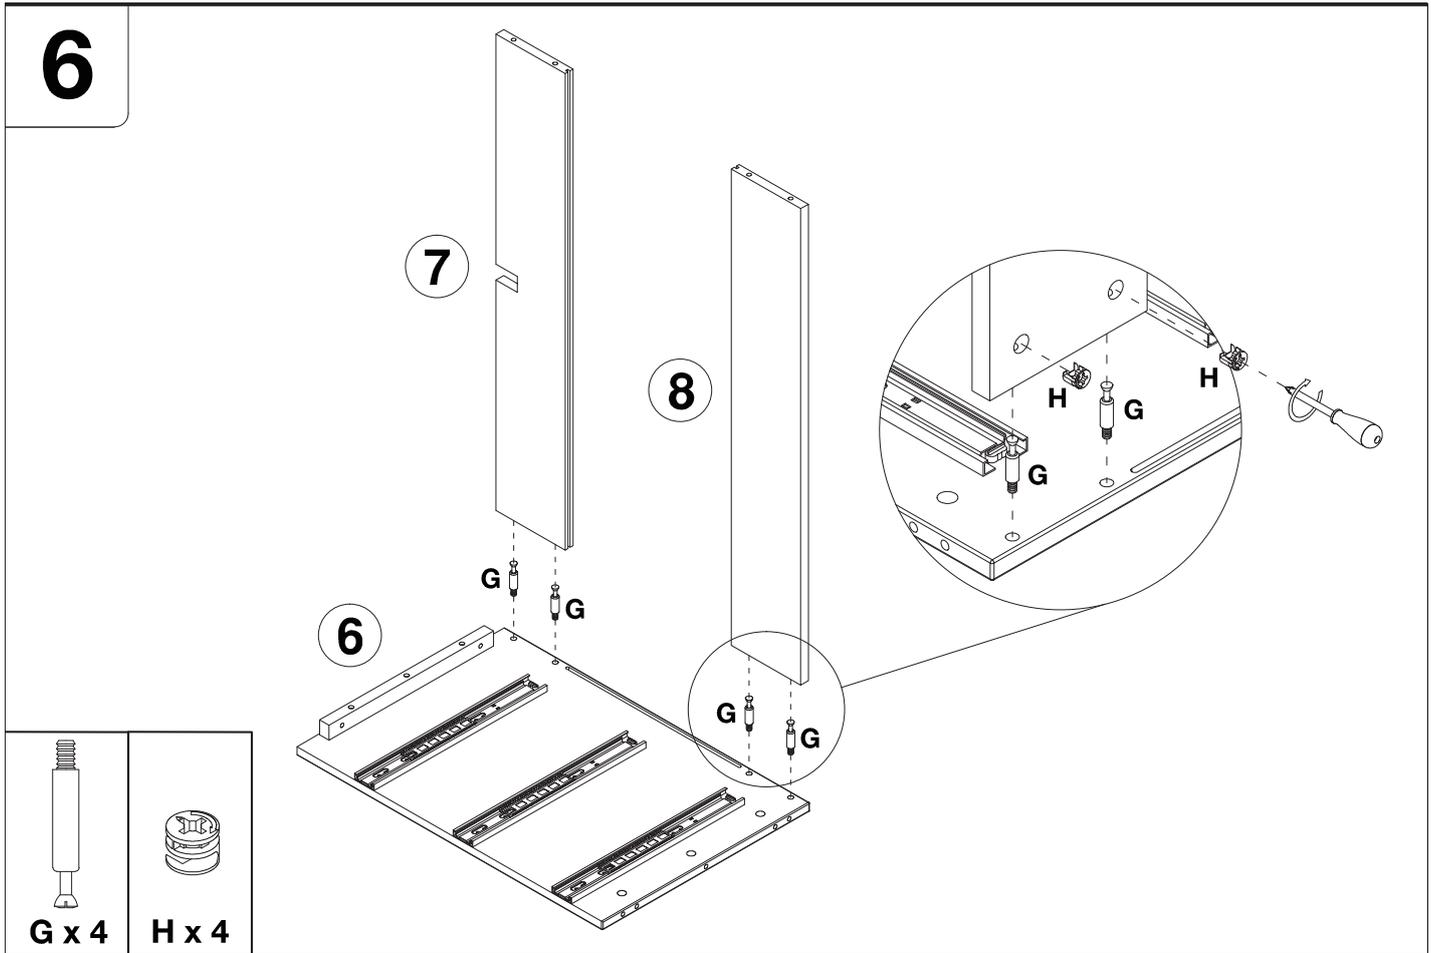


Product assembly

9

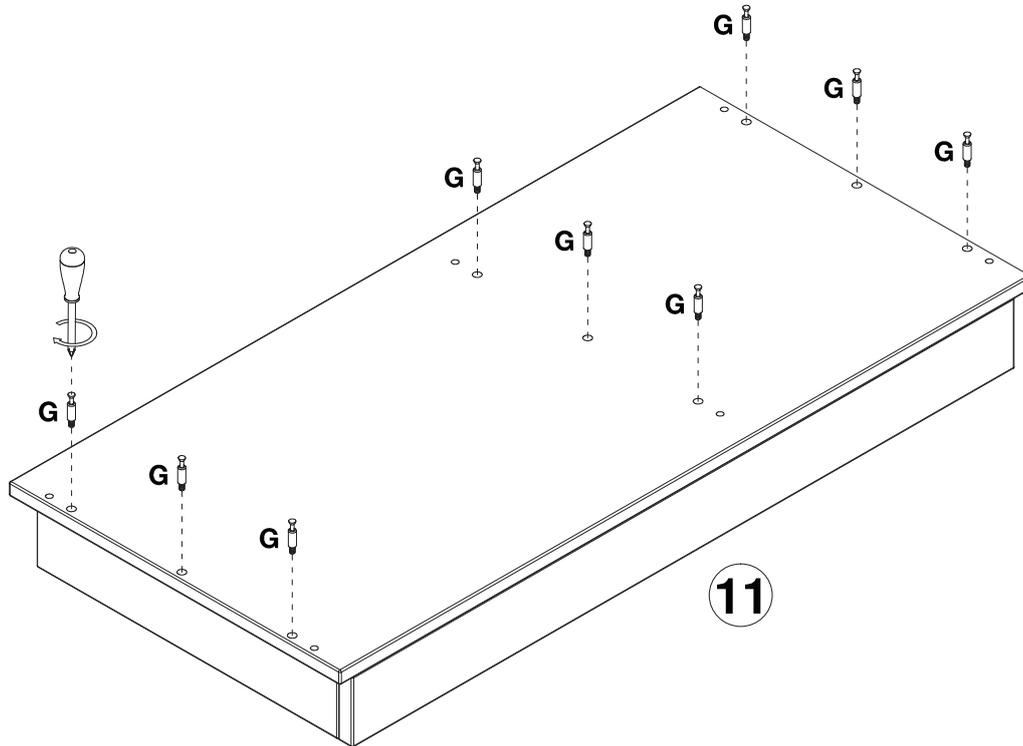

G x 9


10

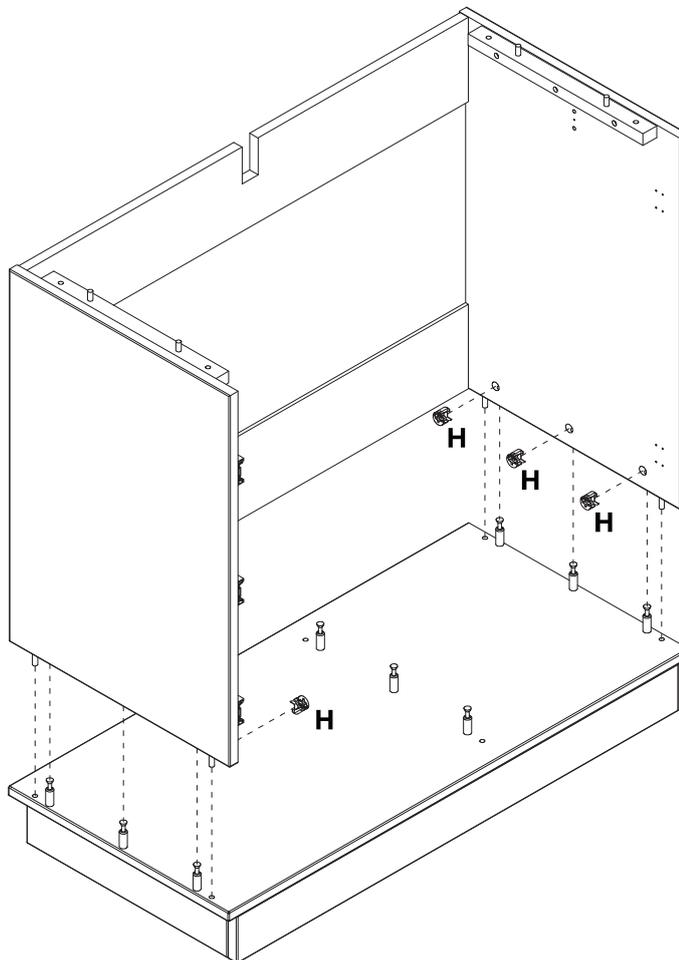

H x 6


Product assembly

11

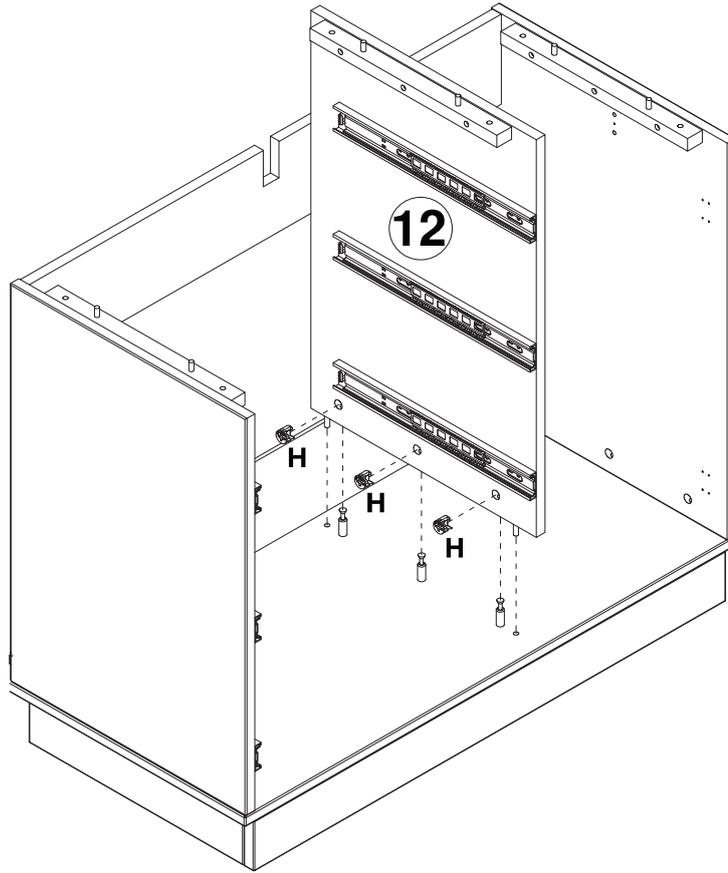

H x 3



12

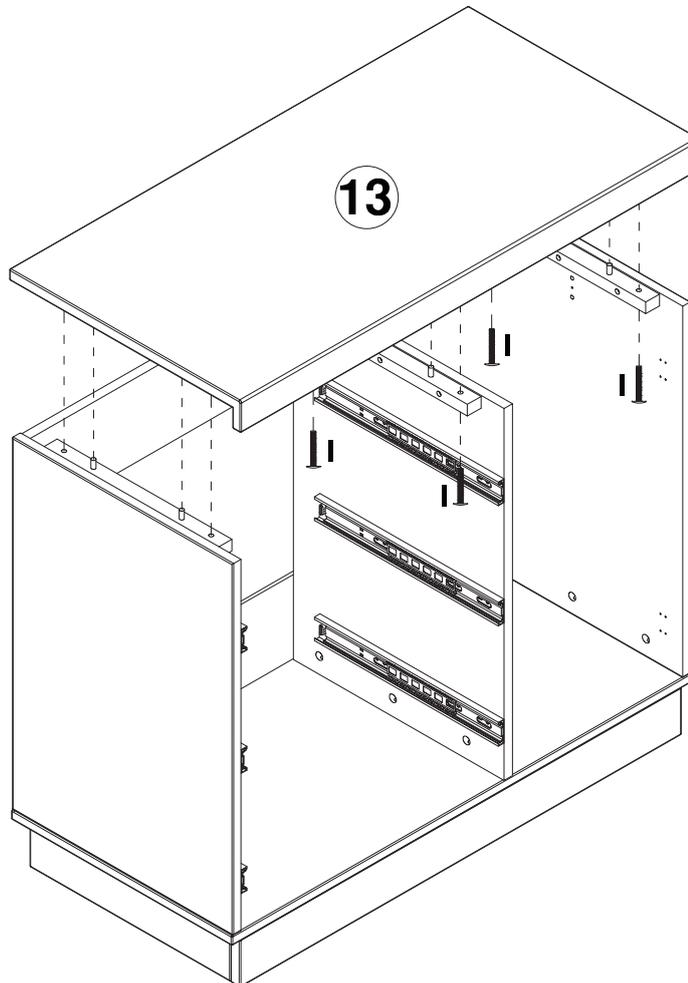

I x 6

Product assembly


13

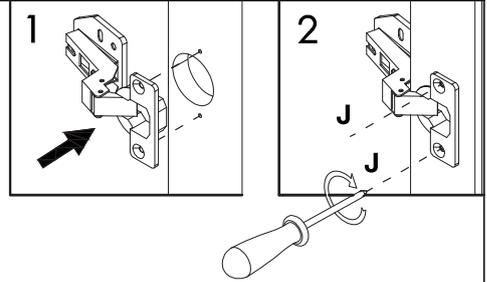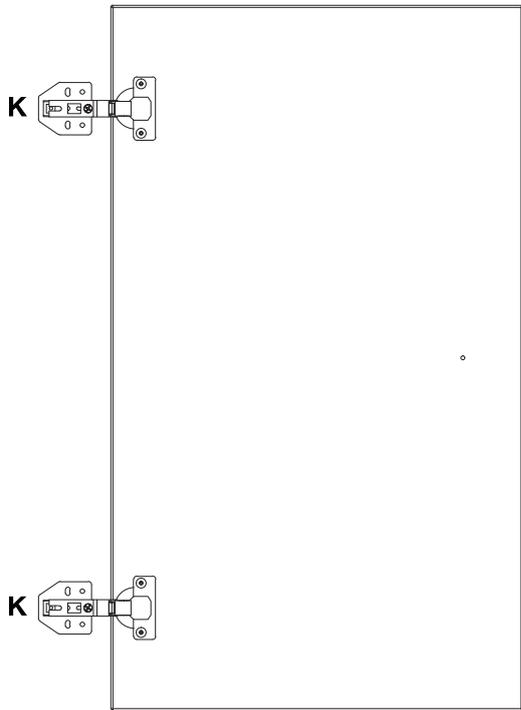

14







 J x 4



K x 2

14

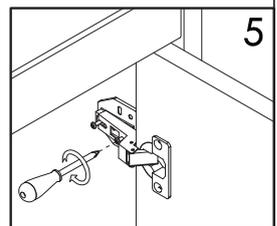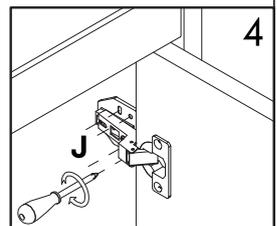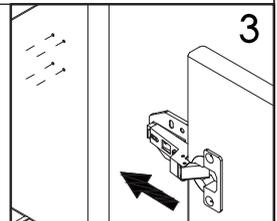
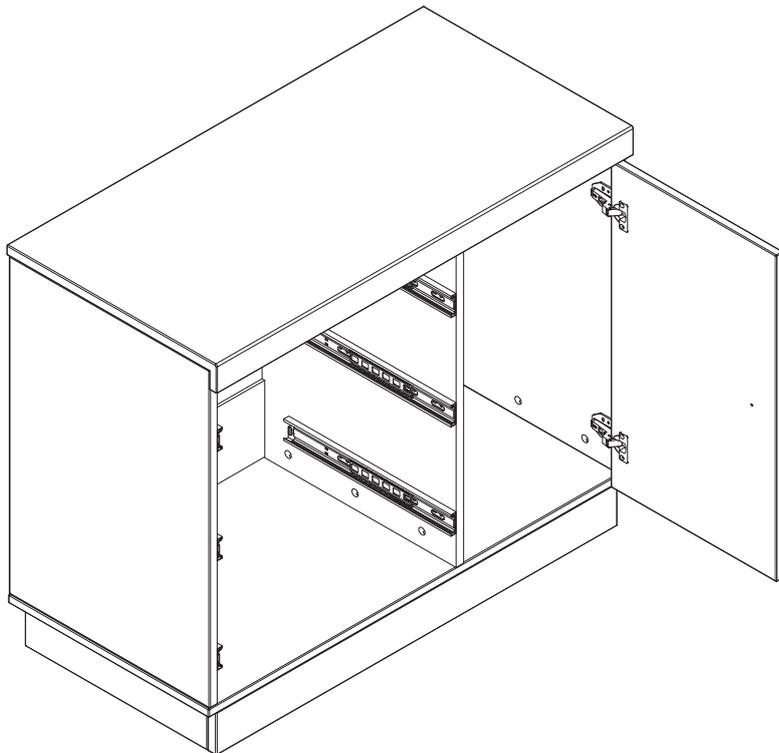


J x 8

Product assembly



**15**

⚠ Tighten all the connecting bolts.

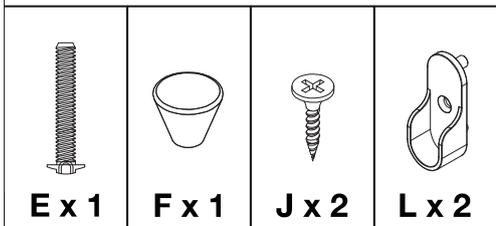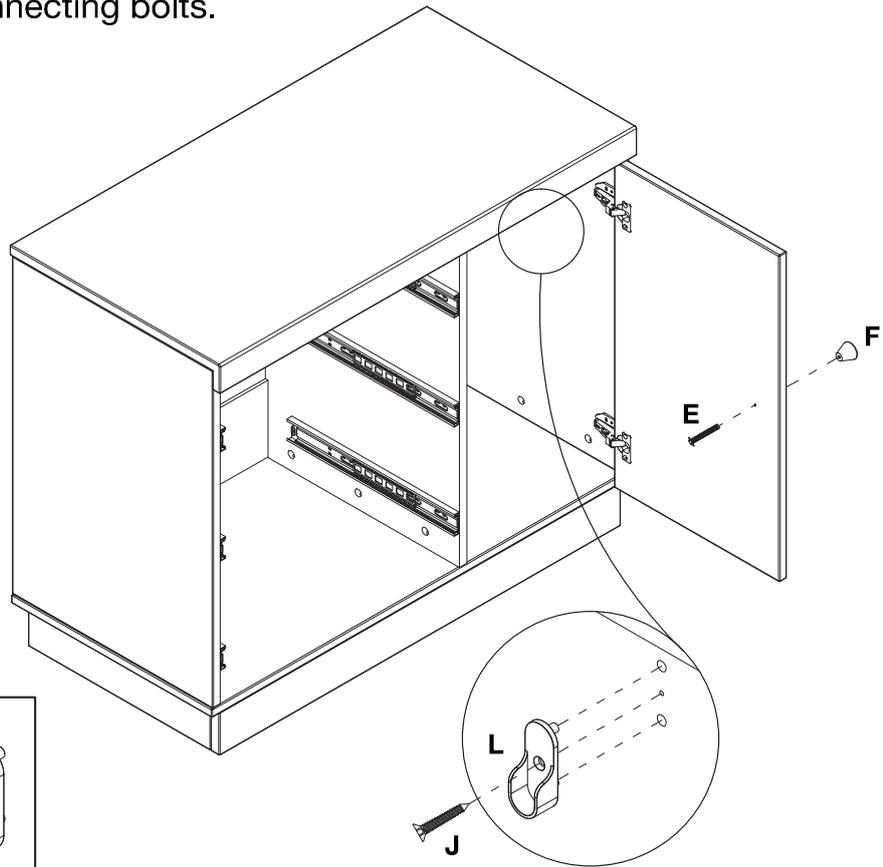

**16**

⚠ Please refer to page 15 for guidance on fixing to the wall.

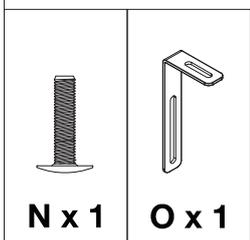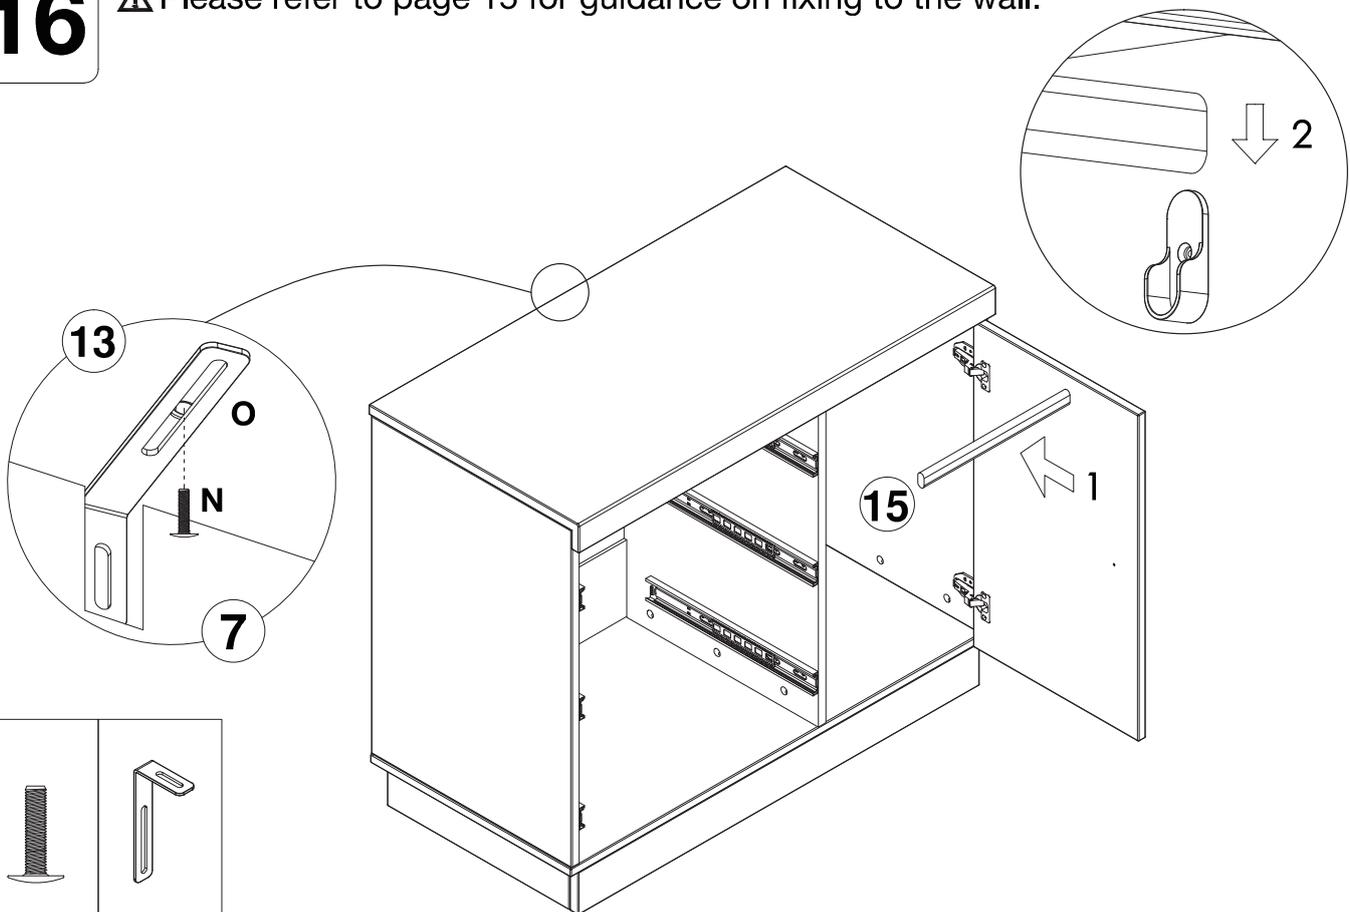


## Product assembly


# 17

**Attention:** Please insert both slide rails into the rail slots and push the drawer in accordingly.

- Note:**
1. This step requires 2 people.
  2. Make sure the runner arms are fully extended before inserting the drawer.
  3. Both sides of runners need to be inserted at the same time (one person per side).
  4. Once both sides of drawer runners are aligned, push the drawer until fully closed.
  5. Continue the same process with other drawers.
  6. After installing each drawer, lightly push them in and pull them out a few times. Avoid large force to prevent damage.

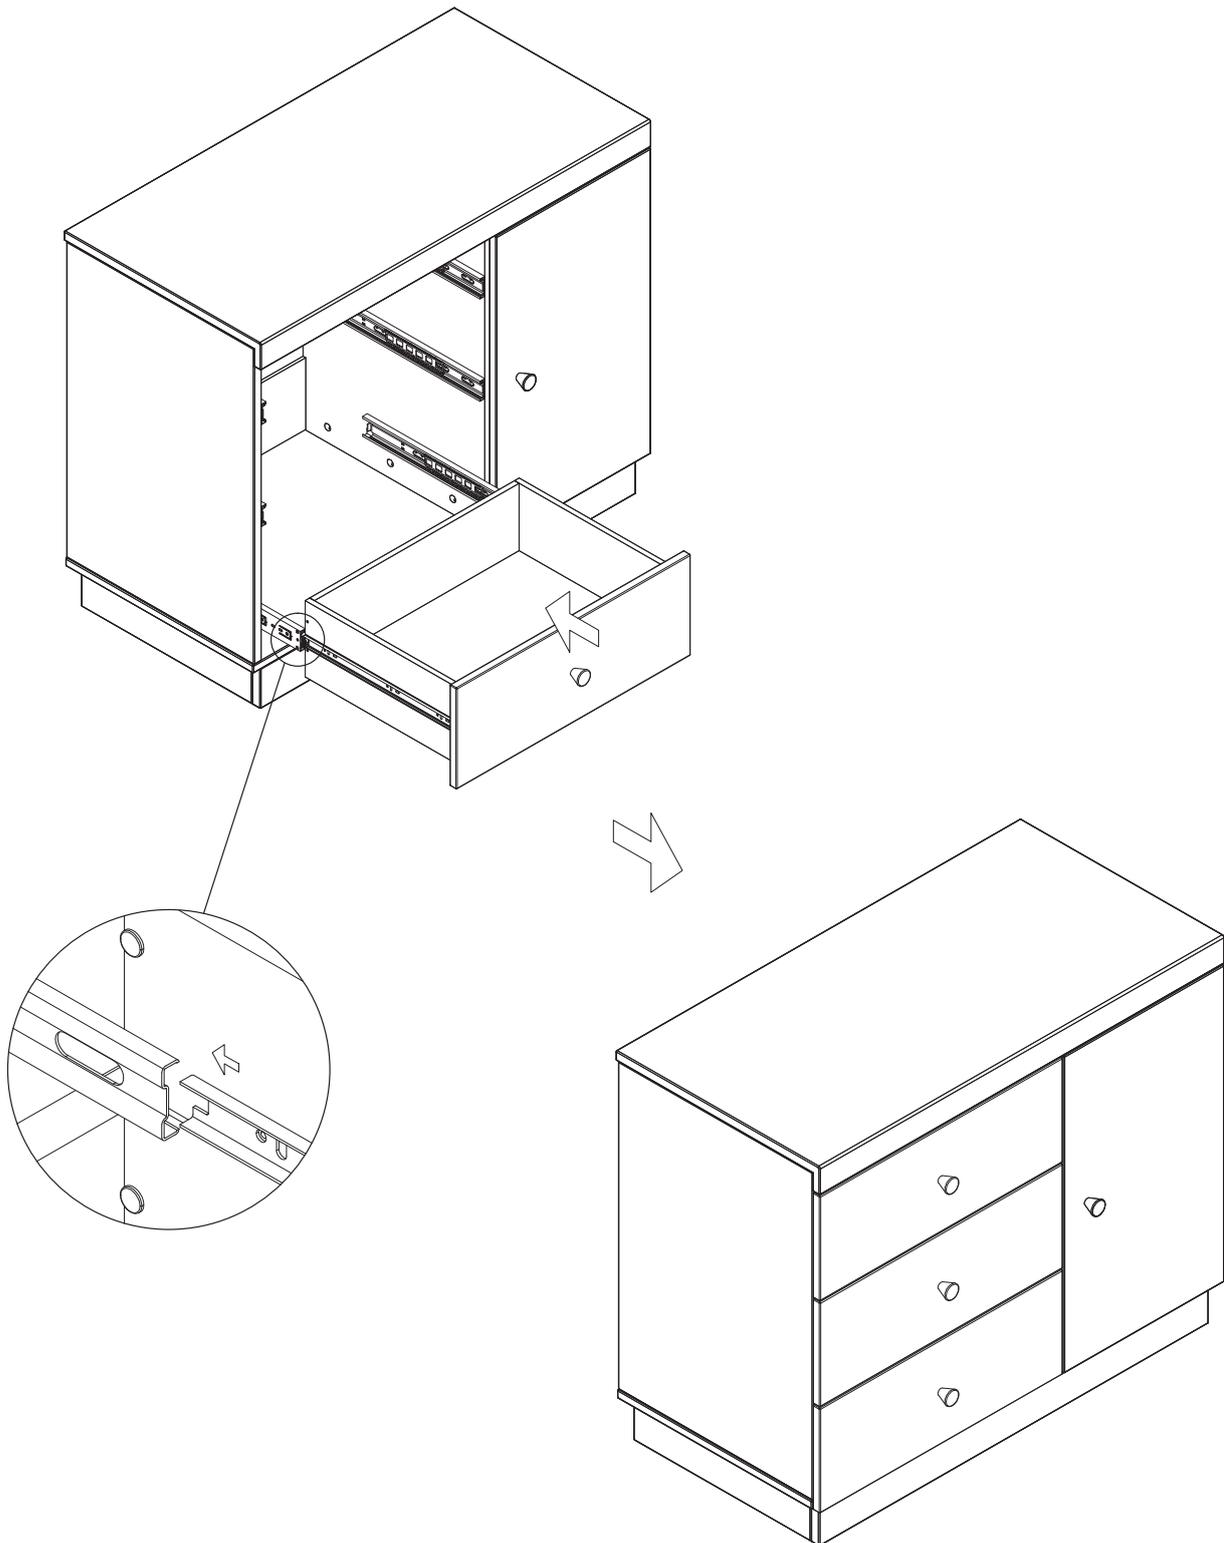


# 18

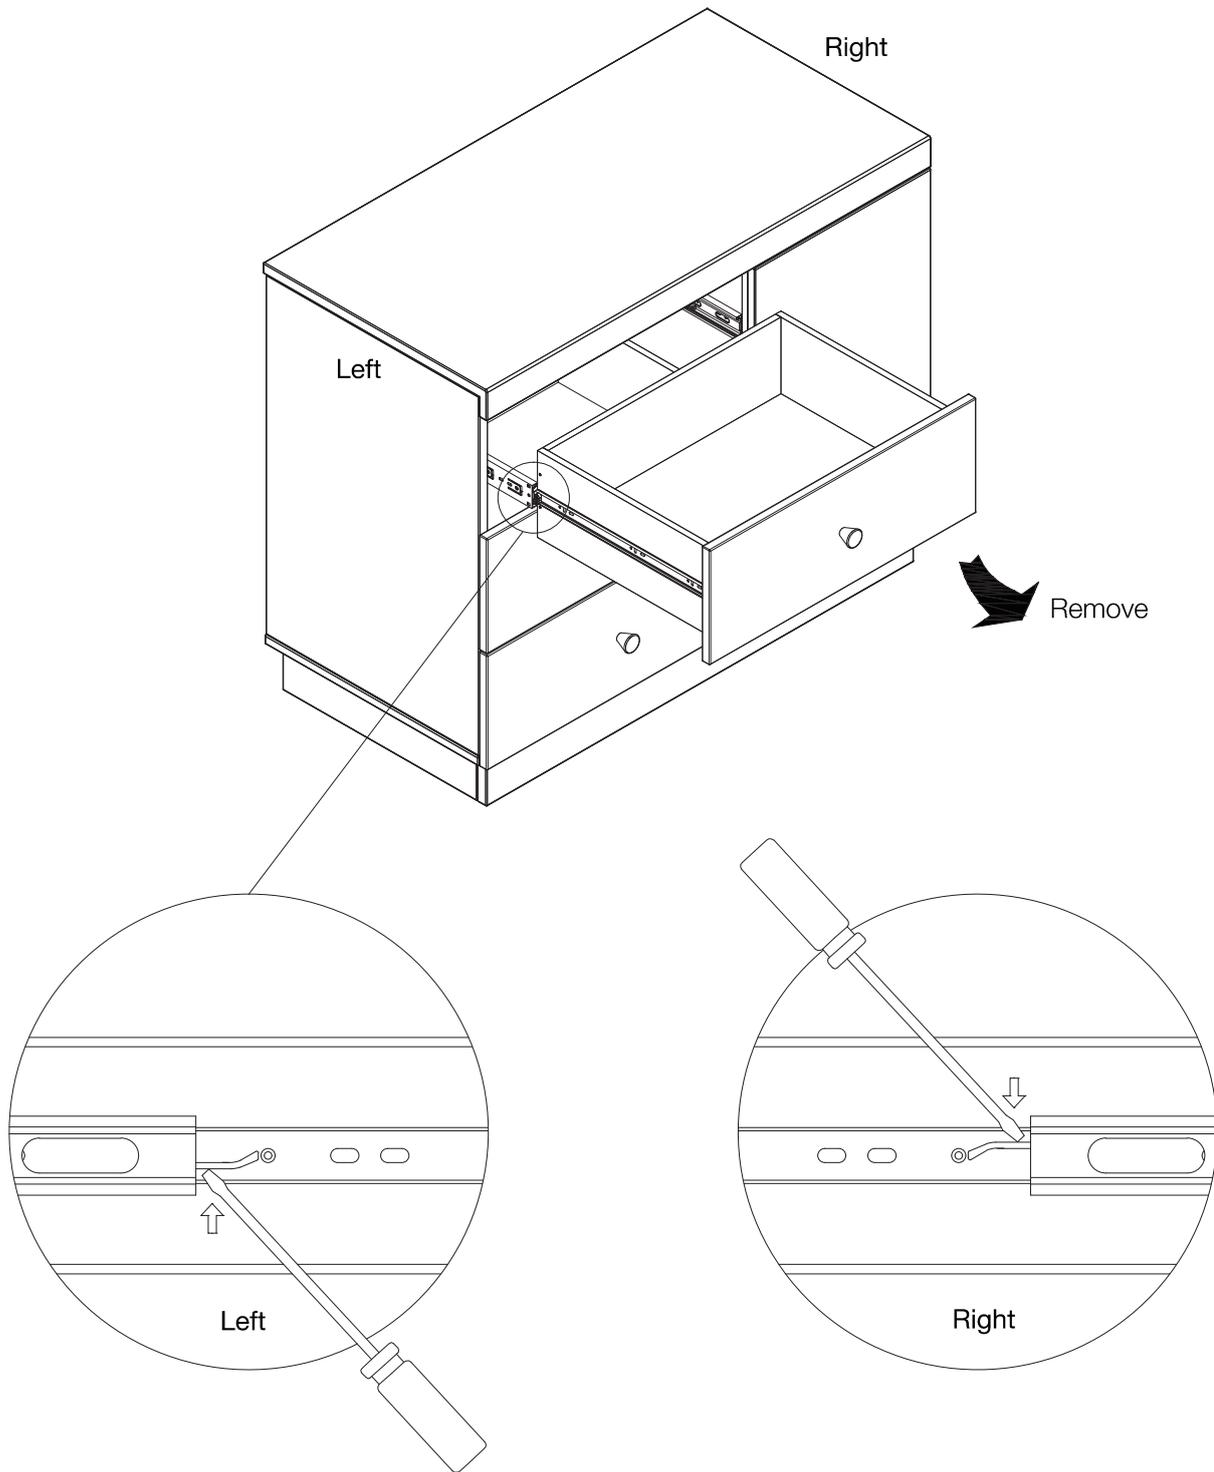

- Note:**
1. Insert a small screwdriver inside the Right Hand Side drawer runner. Push down the tip of the drawer locking mechanism.
  2. Insert a small screwdriver inside the Left Hand Side drawer runner. Lift up the tip of the drawer locking mechanism.
  3. Once both drawer runners have been unlocked, pull out the drawer carefully.

Product assembly

19

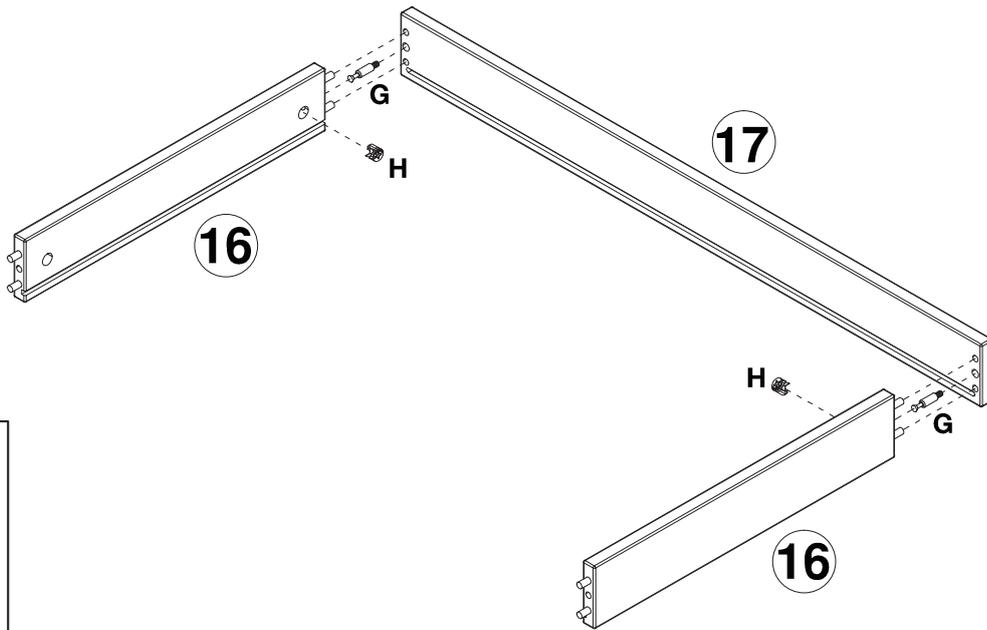


G x 2




H x 2

20

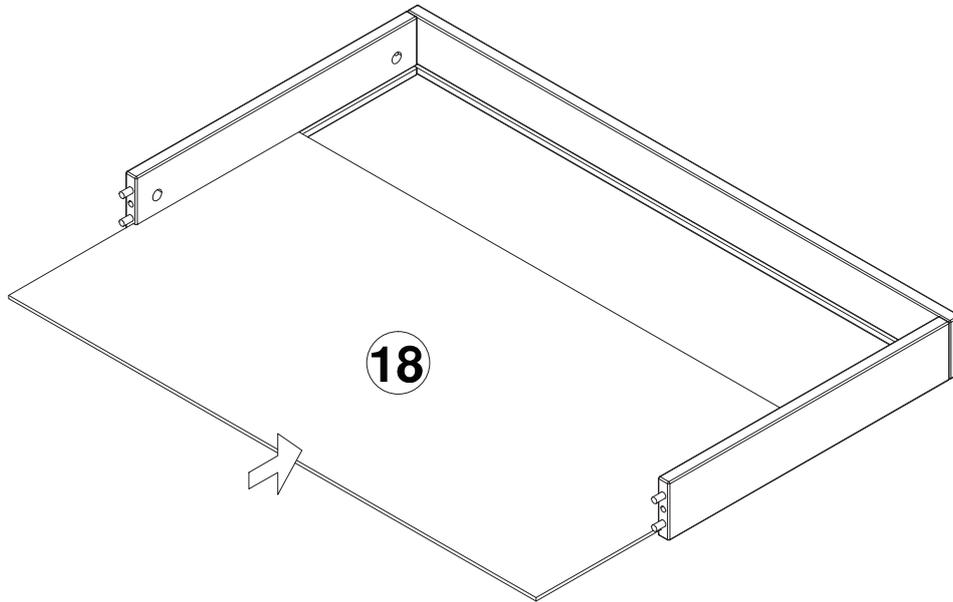

21

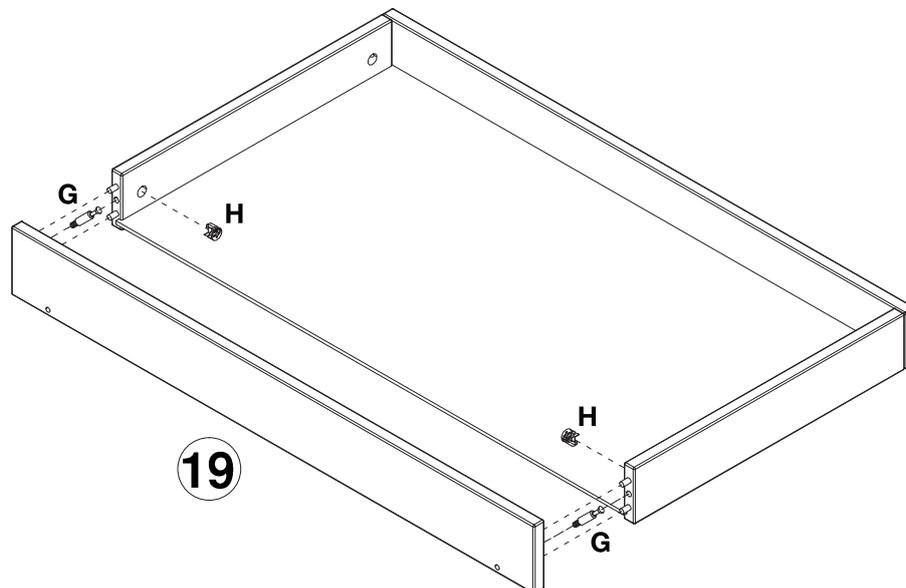


G x 2



H x 2

## Product assembly

# 22

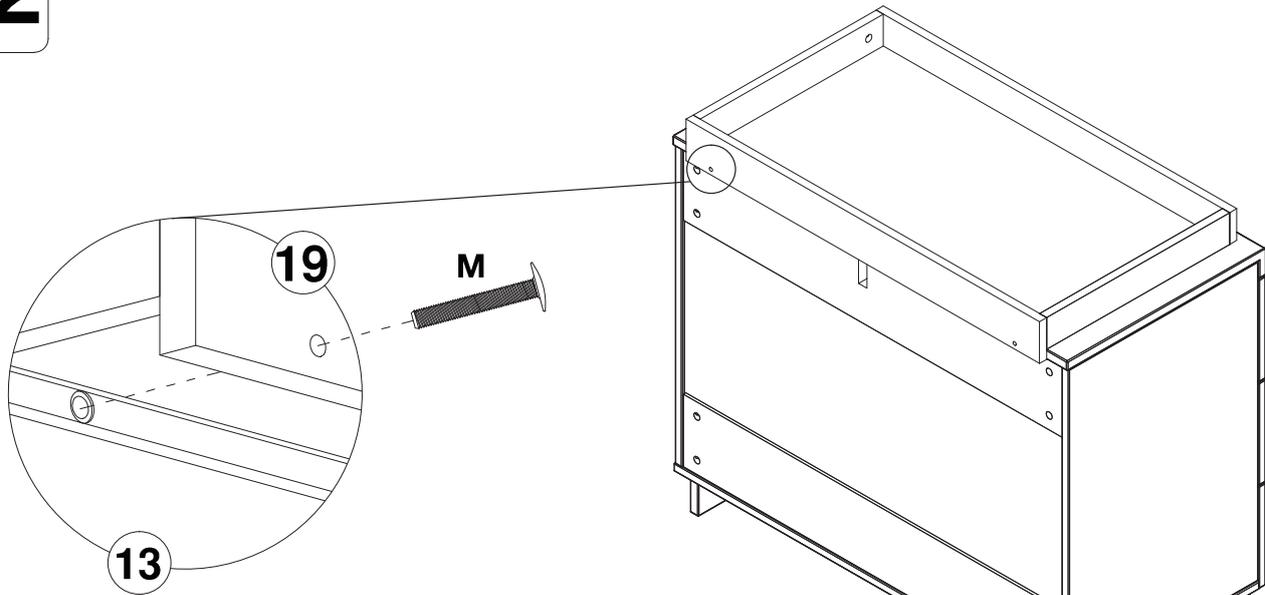


M x 2

⚠ Tighten all the connecting bolts.

# 23

**WARNING :** The recommended mattress size should be 460 mm wide x 850 mm long and no more than 25 mm thick.

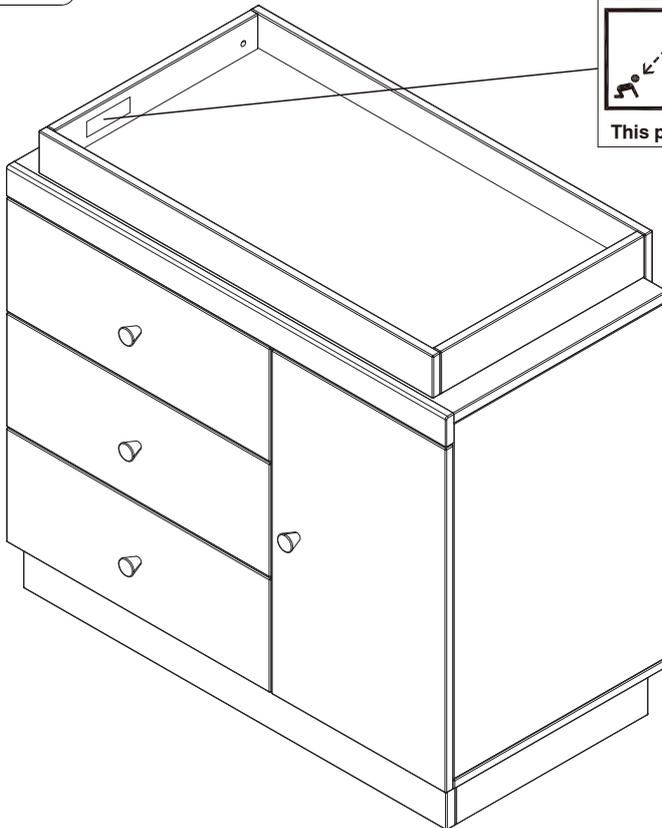

**FALL HAZARD:**

To prevent death or serious injury, always keep child within arm's reach.

**WARNING: DO NOT LEAVE THE CHILD UNATTENDED.**

John Lewis Partnership

171 Victoria Street London SW1E 5NN

[www.johnlewis.com](http://www.johnlewis.com)

This is certified to comply with EN 12221-1/-2:2008+A1:2013

Made in China

**This product is intended for children under 12 months, and lighter than 11kg.**

## Wall mounting and fixings







### ⚠ Warning

In order to prevent overturning this product must be used with the wall attachment device provided.

Wall fixing screws are not included, since different wall materials require different types of screws/ fixings. Please ensure you use the correct screws/ fixings for your type of walls and seek professional advice if you are not sure.

**Installation shall be carried out exactly according to the instructions provided - otherwise a safety risk can occur if incorrectly installed. Failure of the product due to incorrect fixings is the responsibility of the installer.**

**Important: When drilling into the walls always check that there are no hidden wires or pipes etc.**

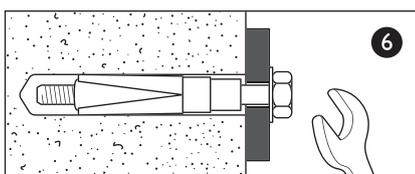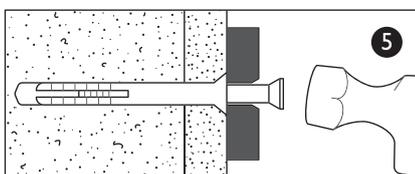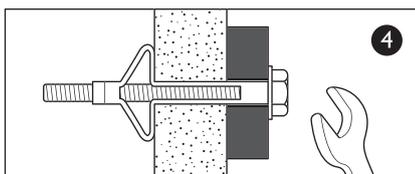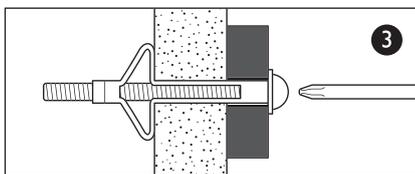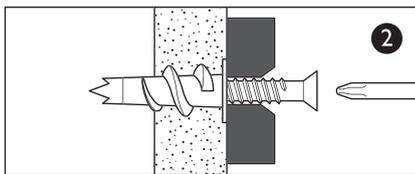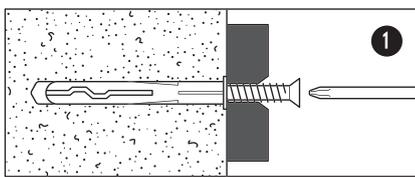

### Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

#### 1. General Purpose wall plug

(Generally aerated blocks should not be used to support heavy) loads, use a specialist fitting in this case. For light loads, general - (purpose wall plugs can be used.)

#### 2. Plasterboard wall plug

(For use when attaching light loads on to plasterboard partitions.)

#### 3. Cavity Fixing wall plug

(For use with plasterboard partitions or hollow wooden doors.)

#### 4. Cavity Fixing- Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, (wall cabinets and coat racks.)

#### 5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

#### 6. Shield Anchor wall plug - Heavy loads

(For use with heavier loads such as 1V and Hi-Fi speakers and satellite dishes etc.)

### ⚠ Care and maintenance

**Safety:** Periodically check all fittings and wall fixings to ensure (they have not come loose and retighten as necessary.)

---

## Care and maintenance

### Wood furniture

Wood displays different grain patterns depending on which way they are cut — for example, the ‘medullary ray’ which can appear on oak furniture is a mark of good quality timber — these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Wood veneers also allow a distinctive pattern to be created on some surfaces, such as tabletops and drawer fronts by the way slivers are arranged.

All timber and veneer surfaces will change colour and mellow over time.

New furniture will initially vary in shade from items that have been previously purchased.

### How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.

Waxed furniture will need to be given a coat of beeswax a couple of times a year to help maintain it’s lustre. Spray polishes are best avoided as they contain silicones which may spoil the furniture’s surface when building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters. Wipe up spills immediately and ensure that a mat or pad is placed under paper if you are writing.

Our furniture will endure most temperatures in the home, but it is best to avoid (placing furniture next to heat sources such as radiators or fires. Be particularly) careful with solid wood as the lack of humidity caused by home heating can cause damage such as warping.

### Safety instructions

(Never drag furniture when moving it, always lift it. Periodically check all fixings)

to ensure none have come loose and retighten when necessary. Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Your feedback is very important to us and we would love to hear your comments on your new furniture. Please visit our website to leave a review. Thank you.

---

## Safety notes

### WARNING:

- \* Do not leave the child unattended.
- \* This product is not intended to be used as a table. Use of the product without instruction may result in death or serious injury to your child from falling.
- \* Follow all instructions on attaching and using the changer.
- \* When lockable castors/wheels are fitted, they shall be locked when the changing unit is in use.
- \* All assembly fittings shall always be correctly tightened and checked regularly.
- \* Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the changing unit.
- \* Recommended pad size is shown on carton marking.
- \* This changer is intended for children under 12 months, and lighter than 11kg.
- \* Any additional or replacement parts shall only be obtained from the manufacturer or distributor.
- \* Not to use the changing unit when any part is broken, torn or missing.
- \* Assembly to be carried out by a competent adult only.
- \* During assembly children should be kept away from the product due to possible risk of injury.
- \* Do not use this item if any components are missing or damaged.
- \* This dresser is suitable for children in 3 – 12 years.