

DAB digital/FM radio

Instruction manual



John Lewis

DAB digital/FM radio

Thank you for purchasing this DAB digital/FM radio. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Contents

Important safety information . . .	3	Using your FM radio	15
Your DAB digital/FM radio	4	Tuning to an FM station	15
Instructions for use	5	Storing an FM station preset	15
Check the package contents	5	Tune to an FM preset station	16
Where to put your radio	5	Storing your 'Favourite' FM	
Setting up	5	station	16
Time and date	7	Tune to your 'Favourite' FM	
DAB/FM mode	7	station	16
Adjusting the volume	7	FM display information	17
Switch on/off	7	System settings	18
Headphone socket	7	Sleep timer	18
5 Step guide to getting started	8	Set the date and time	18
Using your DAB radio	9	Display backlight	19
Changing DAB stations	9	Display language	19
Scanning for DAB stations	10	Software version	20
Manual tune	10	Factory reset	20
Prune DAB stations	11	Simple solutions	21
Storing a DAB station preset	11	Helpdesk	22
Tune to a DAB preset		Technical information	23
station	11	General information	24
Storing your 'Favourite' DAB		UK guarantee	24
station	12		
Tune to your 'Favourite' DAB			
station	12		
DAB display information	12		
Dynamic Range Control	13		


Important safety information

It is most important this instruction leaflet be retained with the product for future reference. These warnings have been provided in the interest of safety. You **MUST** read them carefully before using the appliance. If you are unsure of the meanings of these warnings contact the John Lewis branch from which you purchased the product.


- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not expose to liquids, high or low temperatures, moisture or dusty environments as this could affect the product.
- To protect against fire, electric shock and injury to persons **DO NOT IMMERSE CORD, plug or unit in water or other liquids.**
- Unplug from the mains when not in use, before putting on or taking off parts and before cleaning.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions or has been damaged in any manner. Return the product to the nearest John Lewis store.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- In the event of a fault, return the appliance to your nearest John Lewis store. No repair should be attempted by the consumer, as this will void your warranty.
- Do not use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- Do not use the product for anything other than intended use and only use the power supply that is included with the product.
- Do not use your DAB digital/ FM radio near emergency/ intensive care medical equipment; if you a pacemaker fitted or during an electrical storm.
- For household use only.
- Do not use outdoors.
- **WARNING!** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children.

Your DAB digital/FM radio

Top view:

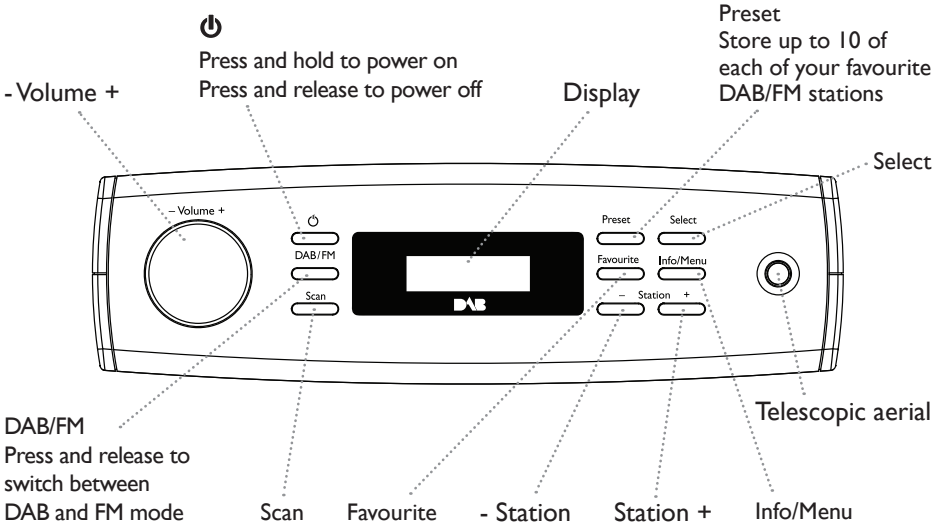

Back view:

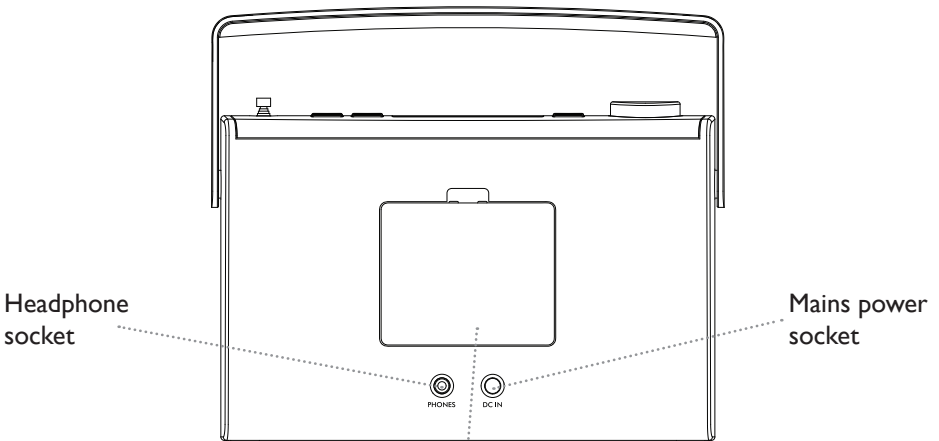

Battery compartment.
(Requires 4 x AA non-rechargeable batteries. Not supplied)

Instructions for use

Check the package contents

The package contains:

- 1 DAB digital/FM radio
- 1 mains adaptor
- 1 instruction manual

Where to put your radio

It is important that you consider carefully in advance where your radio will be situated and make sure that it is:

- * on a flat and stable surface
- Note:** Never place your radio on antique or polished surfaces.
- * within 1.4 metres of a power socket
- * where you can fully extend the telescopic aerial
- * away from bright sunlight or heat sources, such as a radiator
- * not in a humid or very damp place such as a bathroom

Setting up

1. Connect the mains power lead into the socket on the back of the radio.

2. Fully extend the radio aerial in a vertical position to obtain the maximum signal strength.

3. Plug the power adaptor into the mains power wall socket and switch on. 'Welcome to Digital Radio' will be displayed.

4. Press and hold the '⏻' button on the top of the radio to switch on. Your radio will begin an automatic scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

Note: The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place. It is possible to scan manually for stations. Please see page 10.

5. Inserting the batteries (optional). Before installing the batteries (not included) please ensure that the radio is unplugged from the mains power supply.

On the back of the radio, push in the tab to remove the battery compartment. Insert 4 x AA batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around. Replace the battery cover, making sure it 'clicks' shut.

If used continuously on battery power, your radio has an approximate battery life of more than 5 hours when using good quality batteries.

Note: For battery operation, please switch off the mains power adaptor and remove the mains power plug from the back of the radio.

- Only use the recommended batteries or those of the same equivalent type.
- Do not mix old and new batteries or batteries of different types.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.

- Remove the batteries from the radio if they will not be used for an extended period of time.
- Do not attempt to recharge non-rechargeable batteries.
- Dispose of old batteries carefully.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- Batteries must not be exposed to excessive heat such as sunshine or fire.
- **CAUTION:** Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

DAB/FM mode

1. Press and release the 'DAB/FM' button on the top of the radio each time you wish to switch between DAB and FM radio.

Adjusting the volume

1. Use the left hand rotary control to adjust the volume. Turn clockwise to increase the volume and anti-clockwise to decrease the volume.

Switch on/off

1. Press and hold the '⏻' button on the top of the radio to switch on.

2. Press and release the '⏻' button to switch off. The radio will go into standby mode and the time and date will be displayed.

Headphone socket

1. You can connect headphones (not included) to your radio. The headphone socket can be found on the back of the radio and when you have headphones connected the radio speakers are switched off and all sound is via the headphones.

Note: Headphones will need a 3.5mm stereo plug.

5 Step guide to getting started

Switch on/off

- 1.** Press and hold the '⏻' button on the top of the radio to switch on.
- 2.** Press and release the '⏻' button to switch off. The radio will go into standby mode and the time and date will be displayed.

DAB

- 1.** Press and release the 'DAB/FM' button until you are in DAB mode.
- 2.** Press and release the 'Scan' button to scan for DAB stations.
- 3.** Press and release the 'Station +' and '- Station' buttons on the radio to move through the station list.
- 4.** Press and release the 'Select' button on the top of the radio when the station you would like to listen to is displayed. Alternatively, wait a few seconds and your radio will automatically tune to the displayed station.
- 5.** Adjust the volume using the left hand rotary control.

FM

- 1.** Press and release the 'DAB/FM' button until you are in FM mode.
- 2.** Press and release the 'Scan' button to scan for FM stations, your radio will stop at the next available station.
- 3.** Press and release the 'Station +' and '- Station' buttons to fine tune each frequency, if required.
- 4.** The RDS information for each station will be displayed, if available.
- 5.** Adjust the volume using the left hand rotary control.

Using your DAB radio

What is DAB Digital Radio?

DAB means Digital Audio Broadcasting. The difference between a DAB radio and a conventional AM/FM radio is that broadcasts are transmitted digitally resulting in a high quality audio sound*, without any hiss, fading or crackles.

Your DAB radio will automatically scan and find all the available stations for you. Each station name, is shown on the display; all you need to do is scroll through the station names and select the one that you would like to listen to, so it's very easy and quick to use.

For more information about DAB services and to find a list of stations available in your area visit www.digitalradionow.com.

* Please note that the sound quality is dependent on a strong signal strength. Signal strength can vary from area to area. To check the signal strength in your area visit www.digitalradionow.com

Telescopic aerial

Please make sure that the aerial on the top of the radio is fully extended and adjusted when you scan for DAB stations and listen to DAB radio. This will ensure that the maximum signal strength is available as well as the best possible sound quality.

DAB mode

Press and release the 'DAB/FM' button on the top of your radio until 'DAB' is displayed.

If you were listening to a DAB station when you switched the radio off then this station will be automatically selected when you switch the radio back on.

Changing DAB stations

- 1.** If you are not already in DAB mode, press and release the 'DAB/FM' button on the top of your radio until 'DAB' is displayed.
- 2.** Press and release the 'Station +' and '- Station' buttons on the radio to move through the station list.

3. Press and release the 'Select' button on the top of the radio when the station you would like to listen to is displayed. Alternatively, wait a few seconds and your radio will automatically tune to the displayed station.

Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a scan every now and then to make sure that you have the most up to date station listing stored within the memory of your radio.

If you have moved your radio to another location, e.g. if you go on holiday, then it's also a good idea to carry out a scan.

1. If you are not already in DAB mode, press and release the 'DAB/FM' button on the top of your radio to go to DAB mode.

2. Press and release the 'Scan' button on the top of your radio to carry out a scan. 'Scanning', will be displayed and a progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

Note: See 'Changing DAB stations' on page 9 for how to change DAB stations after a scan.

Manual tune

Using the manual tune feature you can select a specific digital radio channel frequency and then manually adjust the aerial, or the location of the radio, to get the strongest possible signal for that channel in your location.

1. Press and hold the 'Info/Menu' button on the top of the radio until '<Full scan>' is displayed.

2. Use the 'Station +' and '- Station' buttons to scroll to <Manual tune>. Press and release the 'Select' button.

3. Use the 'Station +' and '- Station' buttons to scroll through the digital radio frequencies. Stop when the frequency you would like to listen to is displayed. Press and release the 'Select' button. An empty will appear on the second line of the display to indicate the minimum signal strength for acceptable listening. After a few seconds, the row of solid rectangles will indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.

Note: You may need to adjust the aerial or move your radio to get the strongest possible signal.

4. Press and hold the 'Info/Menu' button and then release to step back through the menu to the station display.

Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

- 1.** Press and hold the 'Info/Menu' button on the top of the radio until '<Full scan>' is displayed.
- 2.** Use the 'Station +' and '- Station' buttons to scroll to <Prune>. Press and release the 'Select' button.
- 3.** 'Prune <No> Yes' is displayed. Use the 'Station +' and '- Station' buttons to scroll to 'Yes'. Press and release the 'Select' button to confirm and prune the station list. Stations with a '?' prefix will now no longer be displayed.
- 4.** Press and hold the 'Info/Menu' button to return to the station display.

Storing a DAB station preset

Your radio can store up to 9 DAB stations in its preset memories for instant access to your favourite stations.

Note: When you store DAB radio station presets, these do not overwrite your FM station presets.

- 1.** Tune your radio to the station that you wish to preset (see changing DAB stations on page 9).
- 2.** Press and hold the 'Preset' button on the top of your radio. 'Preset Store 1 (Empty)' is displayed if no previous station has been stored.
- 3.** Use the 'Station +' and '- Station' buttons to move to the preset location that you would like to store the radio station to (1-9).
- 4.** Press and release the 'Select' button. The display will confirm 'Preset X stored', where 'X' is the number of the preset (1-9).

Note: If there is already an existing DAB station stored under a preset, it will be over written when you store the new station.

Tune to a DAB preset station

In DAB mode:

- 1.** Press and release the 'Preset' button on the top of the radio. 'Preset Recall 1' is displayed and the name or frequency of the station stored there, or Preset Recall X (Empty) if no previous station has been stored.

2. Use the 'Station +' and '- Station' buttons to move to the preset location that you would like.

3. Press and release the 'Select' button. The radio will tune to that station and begin to play.

Note: If no DAB station has been stored under the preset, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

Storing your 'Favourite' DAB station

Your radio can store 1 DAB station under the 'Favourite' button for quick one touch access.

1. Tune your radio to the station that you wish to store (see changing DAB stations on page 9).

2. Press and hold the 'Favourite' button on the top of your radio. 'Preset 10 stored' is displayed.

Tune to your 'Favourite' DAB station

In DAB mode:

1. Press and release the 'Favourite' button on the top of your radio. The radio will tune to your stored station and begin to play.

Note: If no DAB station has been stored under the 'Favourite' button, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

DAB display information

When listening to a DAB station you can change the information that will appear on the second line of the display by pressing the 'Info/Menu' button multiple times to select your preferred display information. There are several different types of information that are sent by the broadcaster.

Dynamic Label Segment (DLS)

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

Signal strength

The information provided gives details of the signal strength you are receiving. An empty □ will appear on the second line of the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.

Program Type (PTY)

Such as 'Rock', 'Pop', 'Talk' or 'News'

Multiplex name

Displays the broadcasting area and collection of radio stations on this frequency e.g. BBC National DAB, Digital 1 Network.

Channel and Frequency

e.g.: 12B 225.64 MHz

Signal error

This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.

Signal information

The data rate at which the signal is being transmitted.

Time and date

Supplied by the broadcaster.

1. Repeatedly press and release the 'Info/Menu' button on the top of the radio to cycle through the different information options.

Dynamic Range Control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

DRC Off - no compression. This is the default setting.

DRC Low - medium compression.

DRC High - maximum compression.

1. Press and hold the 'Info/Menu' button on the top of the radio until <Full scan> is displayed.

2. Use 'Station +' and '- Station' buttons to scroll to <DRC>. Press and release the 'Select' button. The current DRC setting will have an '*' next to it.

3. Use the 'Station +' and '- Station' buttons to scroll through the options and press and release the 'Select' button to confirm.

4. Press and hold the 'Info/Menu' button to return to the station display.

Using your FM radio

FM mode

Press and release the 'DAB/FM' button on the top of your radio until 'FM' is displayed.

When your radio is in FM mode it can receive Radio Data System or 'RDS' information if this is being transmitted by the broadcaster. RDS information will often include the station name, detail about the programme and the current time. If you were listening to an FM station when you switched the radio off then this station will be automatically selected when you switch the radio back on.

Telescopic aerial

Please make sure that the aerial on the top of the radio is fully extended and adjusted before you attempt to tune to an FM station. This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

Tuning to an FM station

1. Press and release the 'Scan' button on the top of your radio to scan up the frequency band. Press and hold the 'Scan' button to scan down the frequency band. Your radio will search for the next available station and then stop on that station.

2. Use the 'Station +' and '- Station' buttons to fine tune each frequency.

The RDS information for each station will be displayed, if available.

Note: If reception is still poor adjust the position of the aerial or try moving the radio to another location.

Storing an FM station preset

Your radio can store up to 9 FM stations in its preset memories for instant access to your favourite stations.

Note: When you store FM radio station presets, these do not overwrite your DAB station presets.

1. Tune your radio to the station that you wish to preset (see Tuning to an FM station on this page).

2. Press and hold the 'Preset' button on the top of your radio. 'Preset Store 1 (Empty)' is displayed if no previous station has been stored.

3. Use the 'Station +' and '- Station' buttons to move to the preset location that you would like to store the radio station to (1-9).

4. Press and release the 'Select' button. The display will confirm 'Preset X stored', where 'X' is the number of the preset (1-9).

Note: If there is already an existing FM station stored under a preset, it will be over written when you store the new station.

Tune to an FM preset station

In FM mode:

1. Press and release the 'Preset' button on the top of the radio. 'Preset Recall 1' is displayed and the name or frequency of the station stored there, or Preset Recall X (Empty) if no previous station has been stored.

2. Use the 'Station +' and '- Station' buttons to move to the preset location that you would like.

3. Press the 'Select' button. The radio will tune to that station and begin to play.

Note: If no FM station has been stored under the preset, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

Storing your 'Favourite' FM station

Your radio can store 1 FM station under the 'Favourite' button for quick one touch access.

1. Tune your radio to the station that you wish to store (see Tuning to an FM station on page 15).

2. Press and hold the 'Favourite' button on the top of your radio. 'Preset 10 stored' is displayed.

Tune to your 'Favourite' FM station

In FM mode:

1. Press and release the 'Favourite' button on the top of your radio. The radio will tune to your stored station and begin to play.

Note: If no FM station has been stored under the 'Favourite' button, 'Preset Empty' will be displayed and the radio will revert to the previously selected radio station.

FM display information

When listening to an FM station you can change the information that will appear on the second line of the display by pressing the 'Info/Menu' button multiple times to select your preferred display information. There are several different types of information that are sent by the broadcaster.

Radiotext (RT)

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

Program Type (PTY)

Such as 'Rock', 'Pop', 'Talk' or 'News'

Station name

Such as BBC R4

Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

1. When 'Stereo' or 'Mono' is displayed, press and release the 'Select' button and toggle between each mode.

Time and date

Supplied by the broadcaster.

1. Repeatedly press and release the 'Info/Menu' button on the top of the radio to cycle through the different information options.

System settings

Your radio must be switched on (not in Standby mode) when you change the system settings.

Sleep timer

You can set your radio to turn off automatically using the sleep timer. You can choose from 15, 30, 45, 60 and 90 minutes or Off.

1. Press and hold the 'Info/Menu' button on the top of the radio.

2. Use 'Station +' and '- Station' buttons to scroll to <System>. Press and release the 'Select' button.

3. '<Sleep>' is displayed. Press and release the 'Select' button again.

4. Use the 'Station +' or '- Station' buttons to display the sleep time you would like. Press and release 'Select' to confirm.

An 'S' will appear in the top left of the display, together with the number of minutes until your radio will automatically switch off.

Note: To cancel the sleep time, follow the steps above and in step 4., use the 'Station +' or '- Station' buttons to display 'Sleep off'. Press and release 'Select' to confirm.

Manually set the date and time

1. Press and hold the 'Info/Menu' button on the top of your radio.

2. Use the 'Station +' and '- Station' buttons to scroll to <System>. Press and release the 'Select' button.

3. Use the 'Station +' and '- Station' buttons to scroll to <Time>. Press and release the 'Select' button.

4. <Set Time/Date> is displayed. Press and release the 'Select' button again.

5. 'Set Time' is displayed and the hour digits will flash. Use the 'Station +' and '- Station' buttons to display the correct hour in 24 hour clock. Press and release the 'Select' button.

6. The minutes will flash. Use the 'Station +' and '- Station' buttons to display the correct minutes. Press and release the 'Select' button.

7. 'Set date' is displayed and the 'Day' will flash. Use the 'Station +' and '- Station' buttons to display the day. Press and release the 'Select' button.

8. The 'Month' will flash. Use the 'Station +' and '- Station' buttons to display the month. Press and release the 'Select' button.

9. The 'Year' will flash. Use the 'Station +' and '- Station' buttons to display the year. Press and release the 'Select' button. 'Time Saved' is displayed and then returns to <Set Time/Date>.

10. You can now use the 'Station +' and '- Station' buttons to scroll through the other options available. Press the 'Select' button to select and confirm as required. You can change the settings for:

- 12/24 hour clock display
- date format, DD-MM-YYYY or MM-DD-YYYY
- to auto update the time from the DAB signal, FM signal, DAB or FM signal or no update.

11. Press and hold the 'Info/Menu' button to return to the station display.

Display backlight

You can adjust the brightness of the display backlight for both the 'Standby' and 'Normal' modes of your radio.

1. Press and hold the 'Info/Menu' button on the top of your radio.

2. Use the 'Station +' and '- Station' buttons to scroll to <System>. Press and release the 'Select' button.

3. You can now use the 'Station +' or '- Station' buttons, together with the 'Select' button to choose to change the backlight brightness setting for the 'Standby' or 'Normal' modes of your radio.

Note: An '*' will be displayed next to the current setting.

4. When you have scrolled through the available options, please press and release 'Select' to confirm.

Display language

You can change the display language of your radio, there are 5 options available; English, French, German, Norwegian and Dutch.

1. Press and hold the 'Info/Menu' button on the top of your radio.

2. Use the 'Station +' and '- Station' buttons to scroll to <System>. Press and release the 'Select' button.

3. Use the 'Station +' and '- Station' buttons to scroll to '<Language>'. Press and release the 'Select' button.

4. Use the 'Station +' and '- Station' buttons to scroll to the display language you would like. Press and release the 'Select' button.

Note: As soon as you select a different display language, all of the display information will be in this new language.

5. Press and hold the 'Info/Menu' button to return to the station display.

Software version

If you call the helpdesk you may be asked for the software version of your radio.

1. Press and hold the 'Info/Menu' button on the top of your radio.

2. Use the 'Station +' and '- Station' buttons to scroll to <System>. Press and release the 'Select' button.

3. Use the 'Station +' and '- Station' buttons to scroll to <SW version>. Press and release the 'Select' button.

4. The software version will be displayed and you may wish to make a note of it here:

.....

5. Press and hold the 'Info/Menu' button to return to the station display.

Factory reset

You can reset your radio and restore all of the original factory settings.

Note: If you reset your radio all of your DAB and FM station presets will be deleted.

1. Press and hold the 'Info/Menu' button on the top of your radio.

2. Use the 'Station +' and '- Station' buttons to scroll to <System>. Press and release the 'Select' button.

3. Use the 'Station +' and '- Station' buttons to scroll to <Factory Reset>. Press and release the 'Select' button.

4. 'Factory Reset? <No> Yes' will be displayed. Use the 'Station +' and '- Station' buttons to scroll to '<Yes>'. Press and release the 'Select' button to confirm.

5. 'Restarting..' is displayed. After a few seconds the display will change to 'Welcome to Digital Radio' and will then go to Standby.

6. Press and hold the 'Ⓟ' button on the top of the radio and your radio will switch on and scan for DAB stations. Remember to extend the telescopic aerial.

Simple solutions

If you are experiencing problems with your radio, there are some quick and easy checks that you can do, which may help to solve the problem.

Radio reception is poor

- Please check that the aerial is FULLY extended for the maximum signal strength and improved reception.
- Try moving your radio to an alternative location to see if the reception improves. Please remember to scan for DAB stations again once you have moved your radio. See page 10.
- Check that you do not have other electrical equipment too close to your radio, causing interference.
- If you have batteries fitted, they may be exhausted and need to be replaced. Please use only good quality non-rechargeable AA size batteries.
- Visit www.digitalradionow.com for information about DAB reception in your area.

No sound

- Adjust the volume using the left hand rotary control.

- You may have headphones connected. Either use the headphones to listen to your radio or unplug the headphones.
- If you have batteries fitted, they may be exhausted and need to be replaced. Please use only good quality non-rechargeable AA size batteries.
- Check that the mains power lead is connected at the back of the radio and the mains power wall socket is switched on.
- You may need to re-scan if the station you last listened to is no longer available. See page 10.

The function buttons do not respond

- Check that you are using the function buttons for the mode that you are in.
- If you have batteries fitted, they may be exhausted and need to be replaced. Please use only good quality non-rechargeable AA size batteries.
- Check that the power lead is plugged into the back of the radio and that the mains adaptor is plugged in and switched on. Press and hold the '⏻' button on the top of the radio.

- Turn off the radio and unplug the mains power. Leave for one minute and then reconnect your radio.
- Try a factory reset. See page 20.

If you are experiencing any difficulty after making the above checks please call the helpdesk for further assistance.

Helpdesk

The helpdesk is open from 8.30am to 5.00pm, Monday to Friday (excluding Bank Holidays) and can be contacted on 0845 833 1673 (local rate call charge applies).

Technical information

Technical specification

Power adaptor:

Output DC 6V/1A

Input AC 100-240V/50-60Hz

Batteries:

Four AA non-rechargeable
batteries or equivalent (not
supplied).

DAB frequency range:

Band III, 174 MHz - 240 MHz

FM frequency range:

87.5 MHz to 108 MHz

Headphone socket:

Stereo socket 3.5mm diameter

General information


UK guarantee

For 2 years in respect of defects found to be due to faulty workmanship or material. Proof of purchase is required for validity of the guarantee. This guarantee is no longer valid if the damage has been caused by fall, alteration or repair by any unauthorised persons.

This guarantee in no way affects your statutory rights.


Service

- This product should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used.

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. John Lewis do not operate instore take back, but as members of the Distributor Take Back scheme have funded the development and upgrade of recycling facilities across the UK. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health.

Keep out of the reach of children and seek medical help if swallowed.

This symbol  indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing.

John Lewis Partnership
171 Victoria Street
London
SW1E 5NN
www.johnlewis.com



Retain this information for future reference

Aug 13/Issue: 1