 


# rachel dresser

## Instruction manual

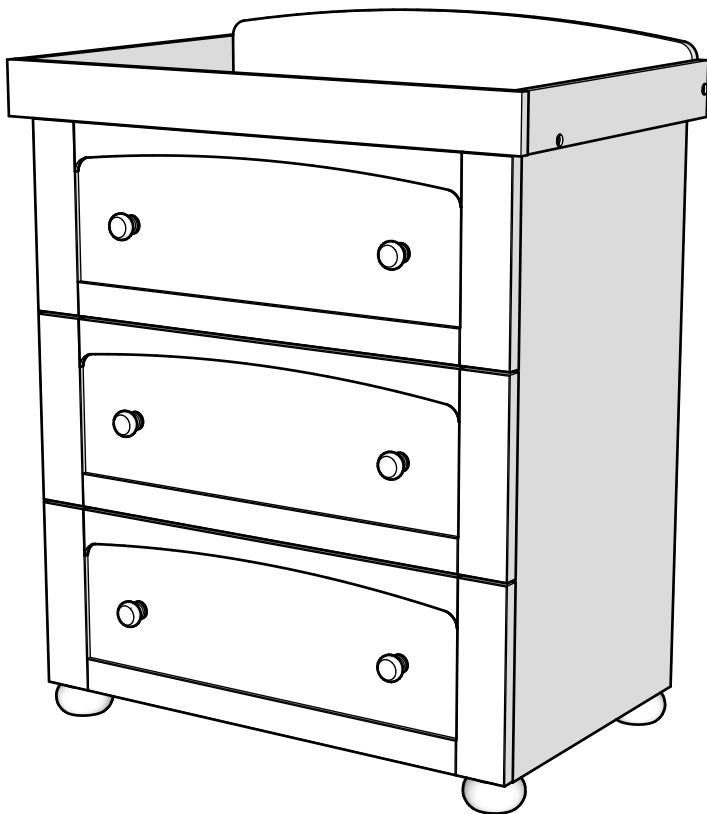

John Lewis

**Important**  
**retain for future reference**  
**please read carefully**

## Important

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact your nearest John Lewis department store.

Lay out the parts on a soft level surface and compare to the part/fixing checklist on pages 2 and 3. Do not discard any packaging until you are sure that you have all the parts.

Keep children clear during assembly as pack contains small parts which may present a choking hazard.











Recommended changing mat: 750 x 465 mm.

This product complies with BSEN 12221:2008 +A1:2013.
















You will need the following tools to complete assembly:

Flat-headed screwdriver and Cross point screwdriver.


### Hardware

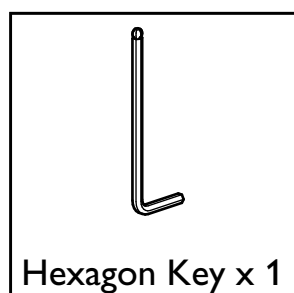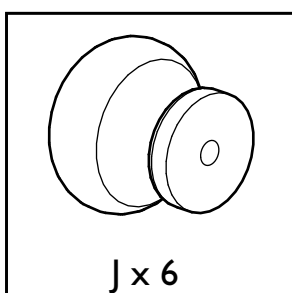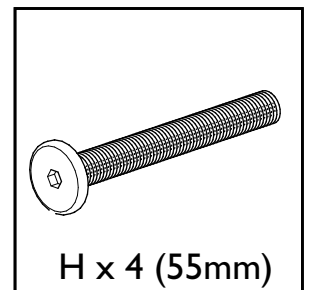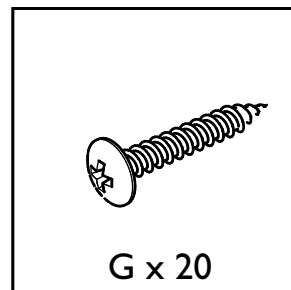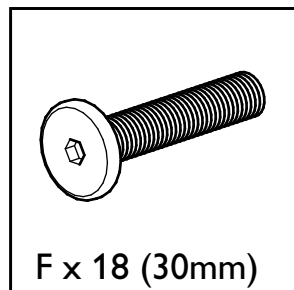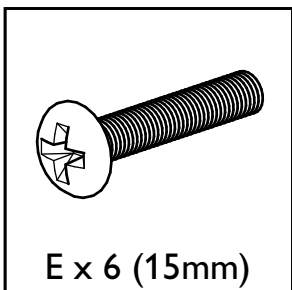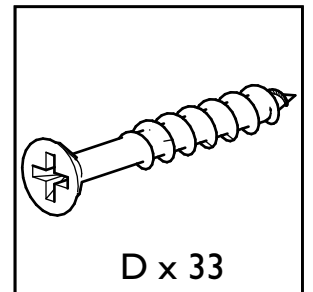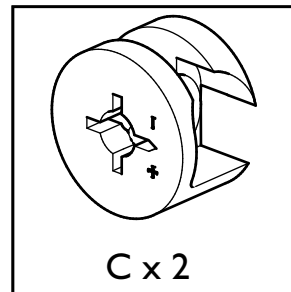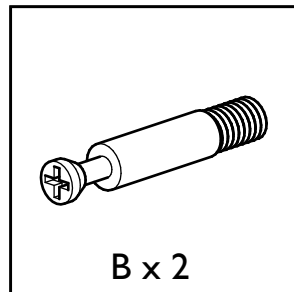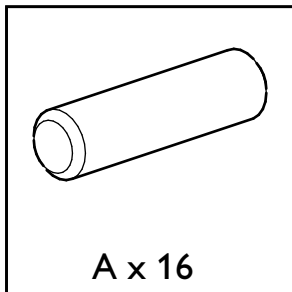


Wooden Parts

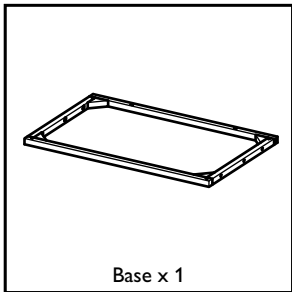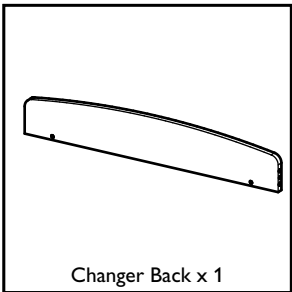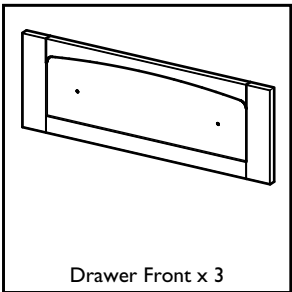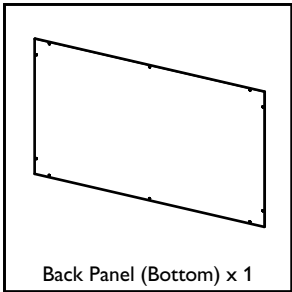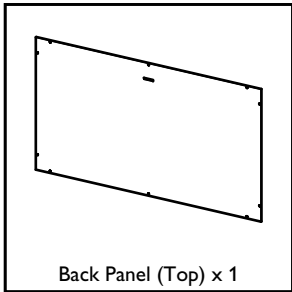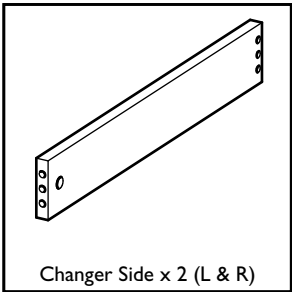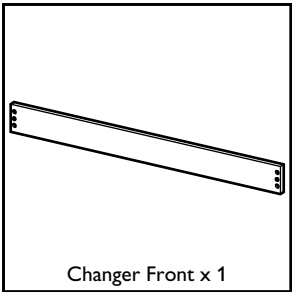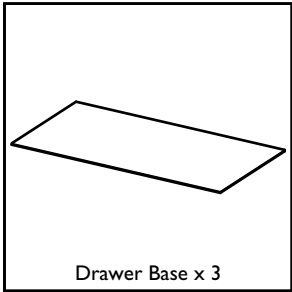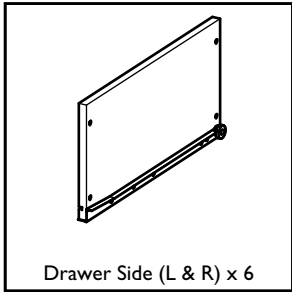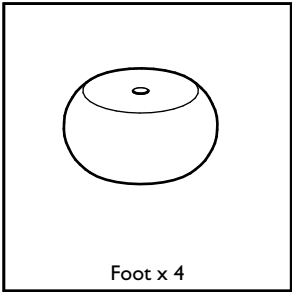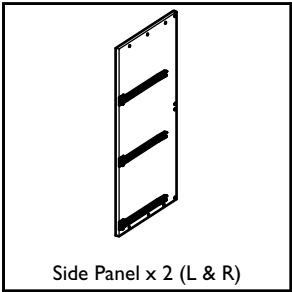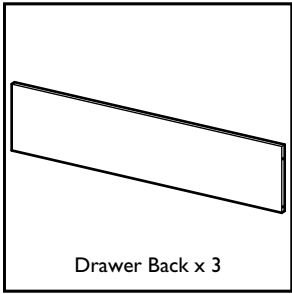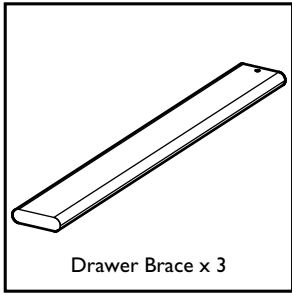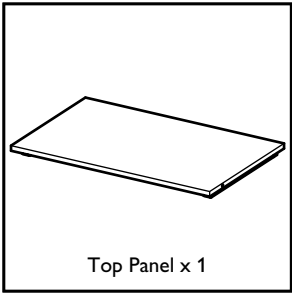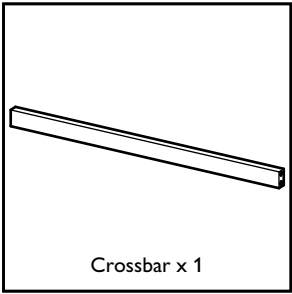


## Assembly 1

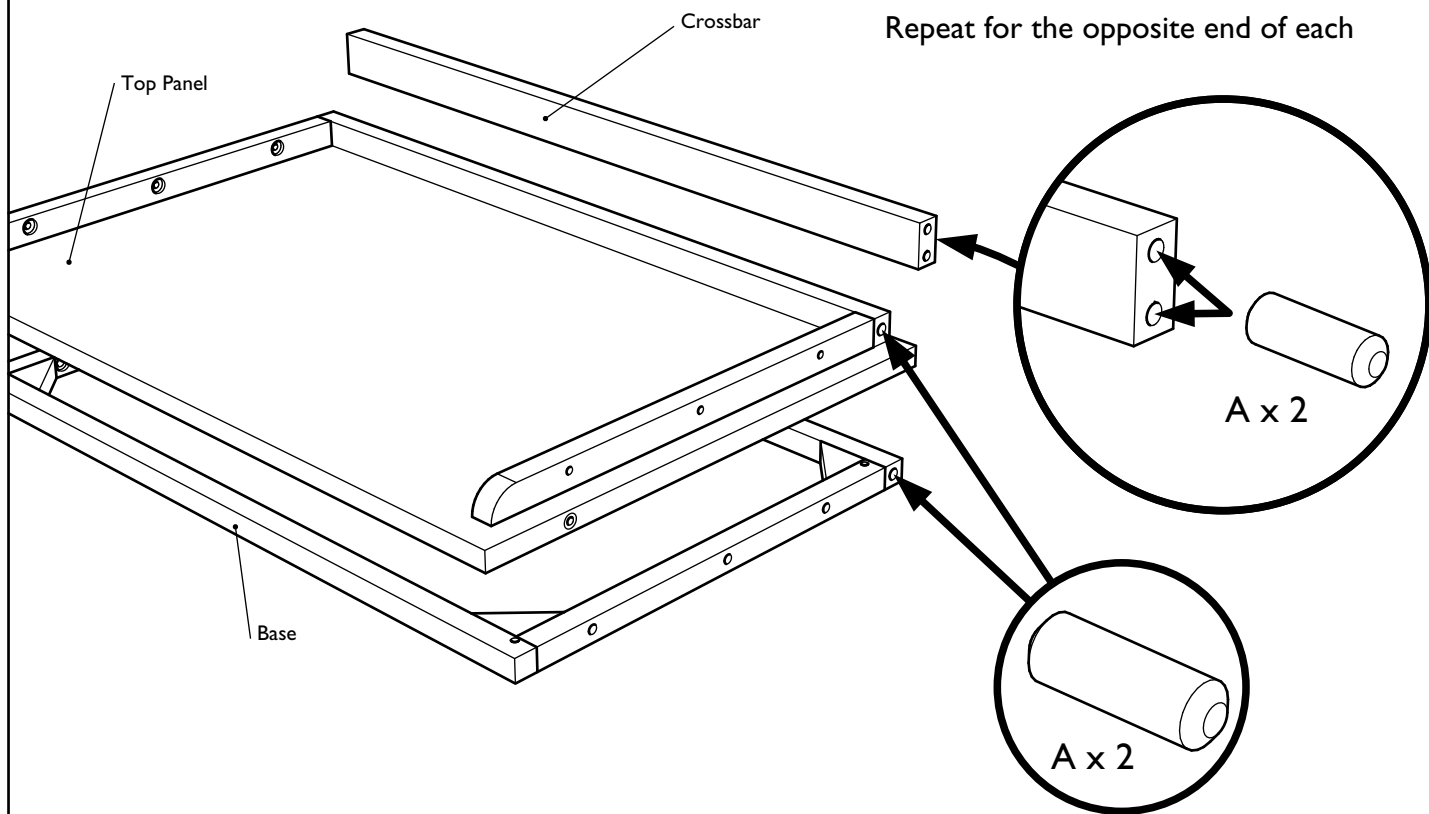


## Assembly 2

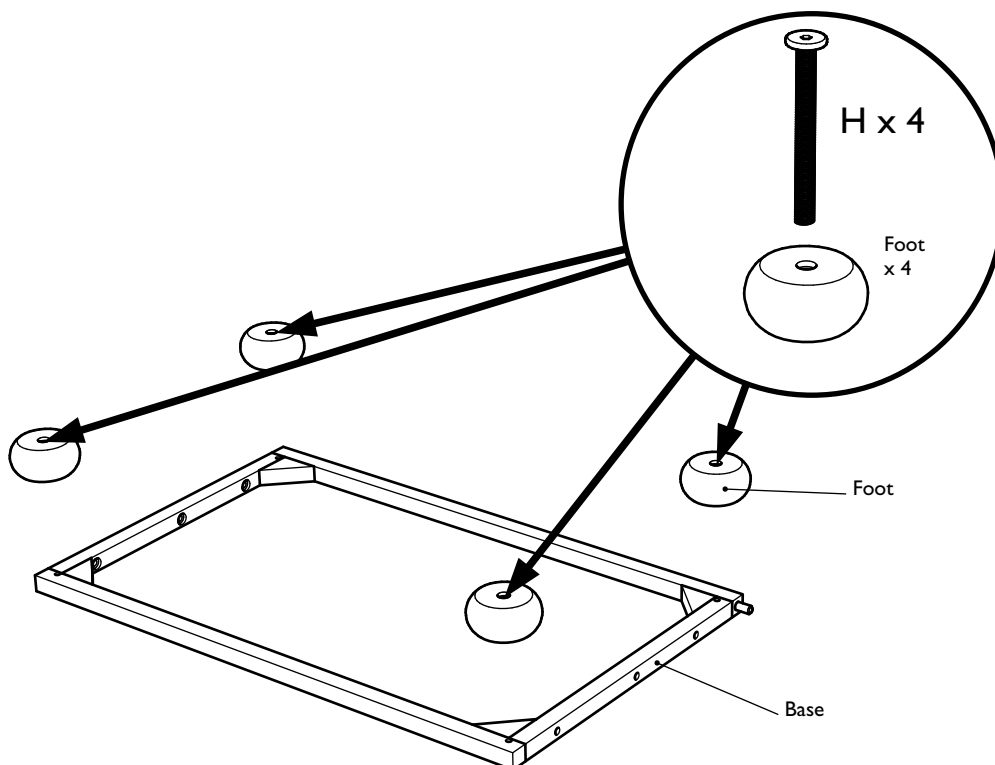


### Assembly 3

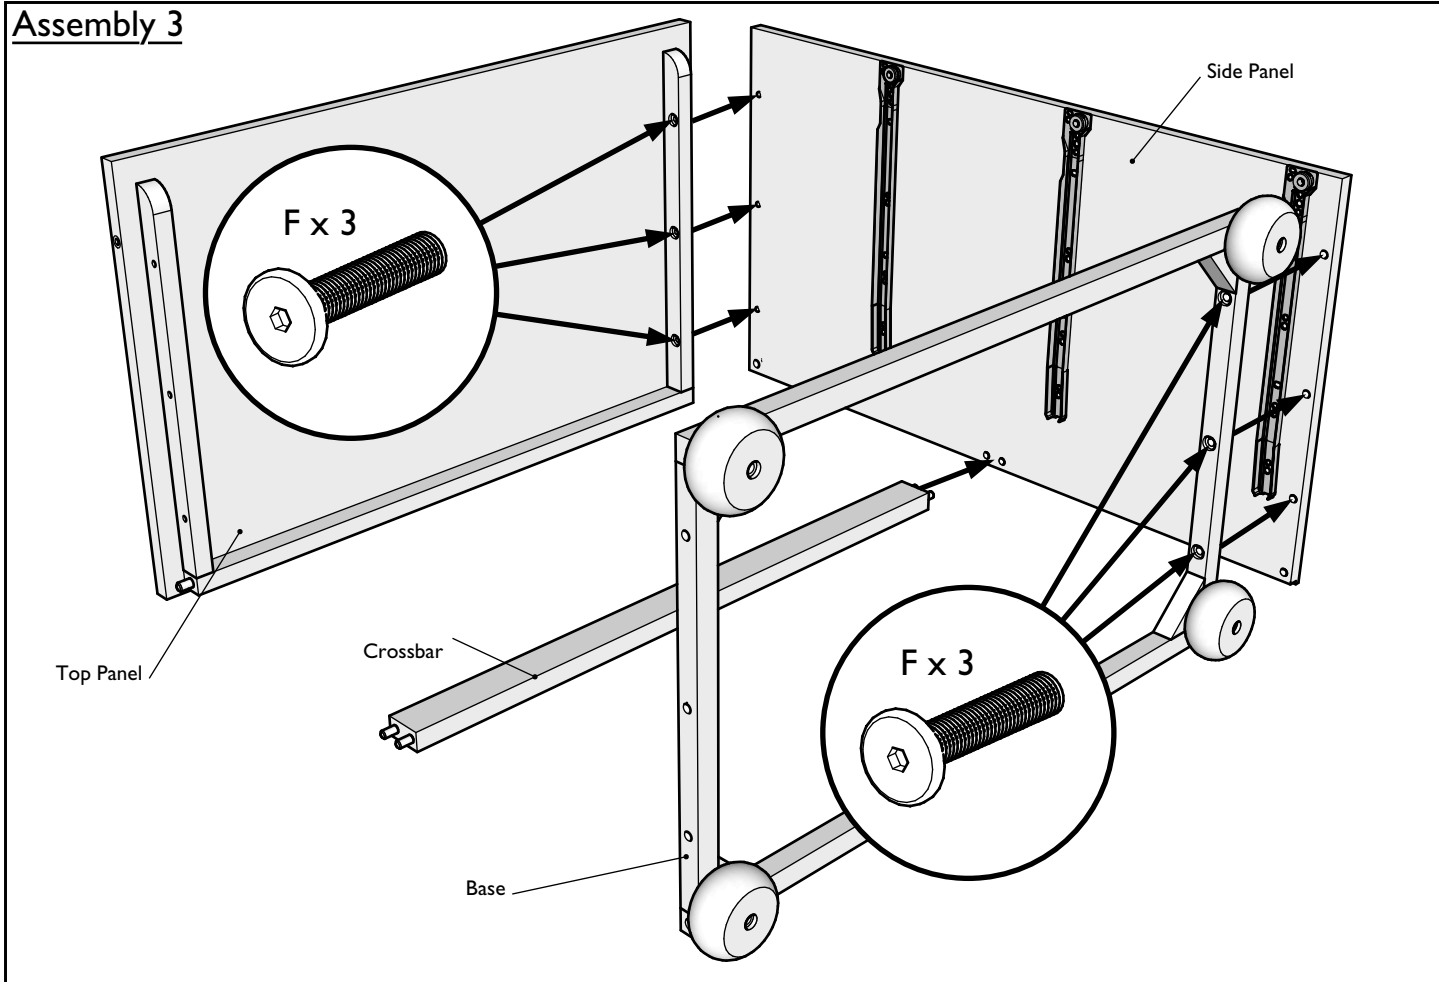


### Assembly 4

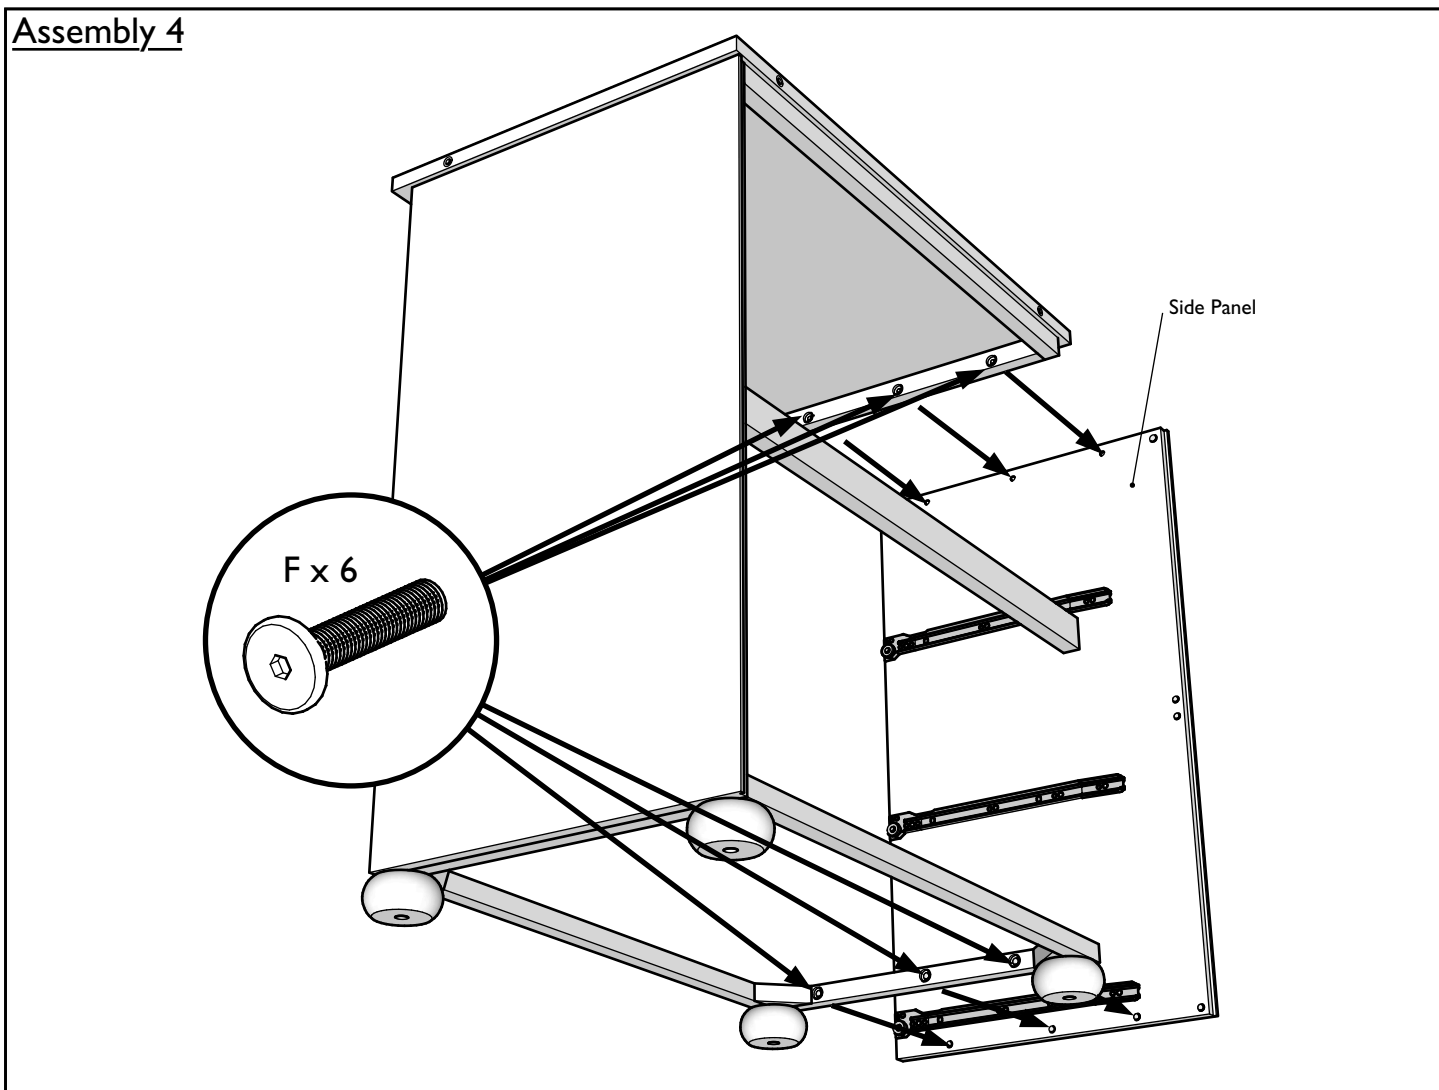


## Assembly 5

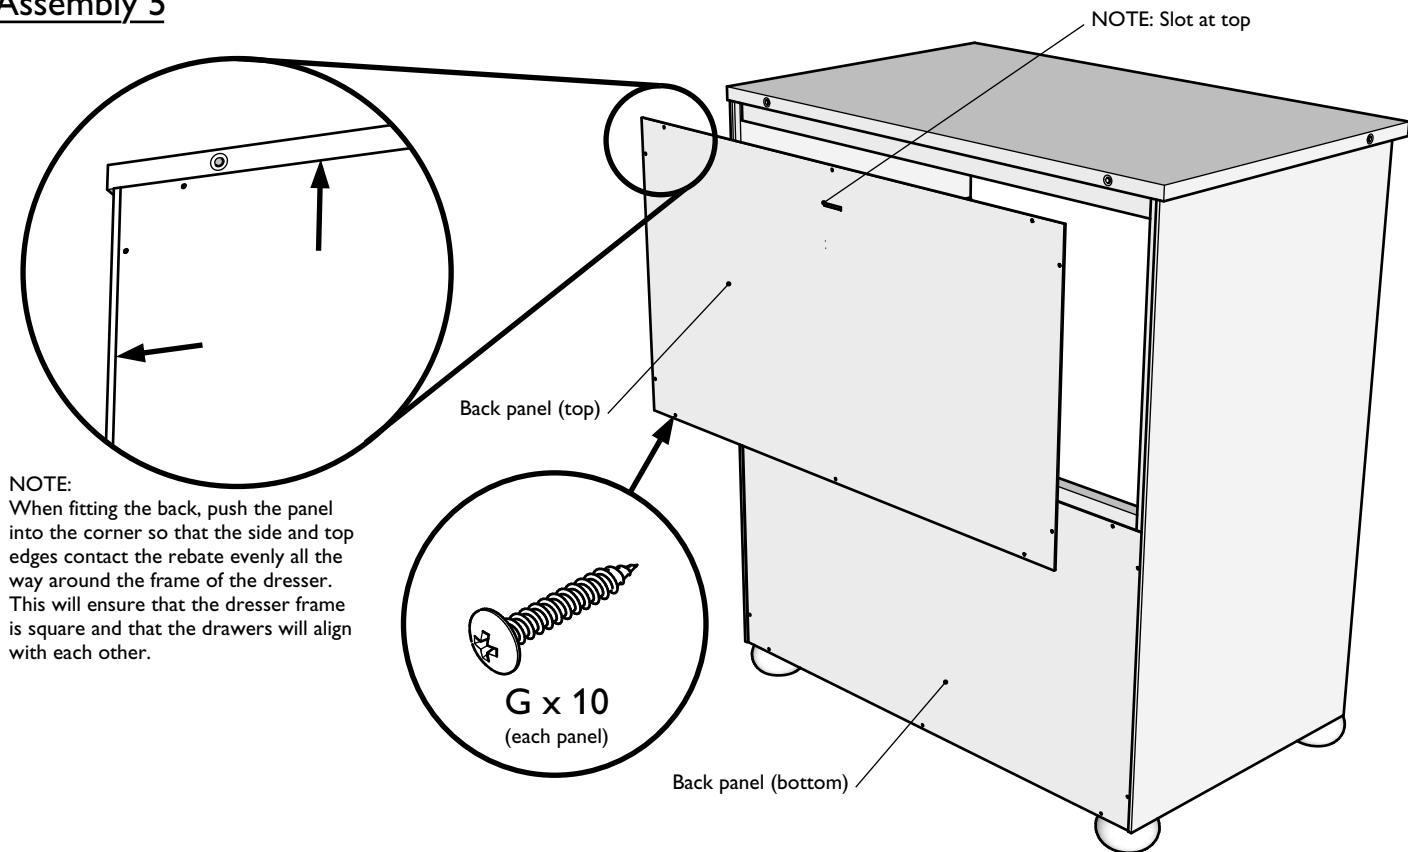


## Assembly 6

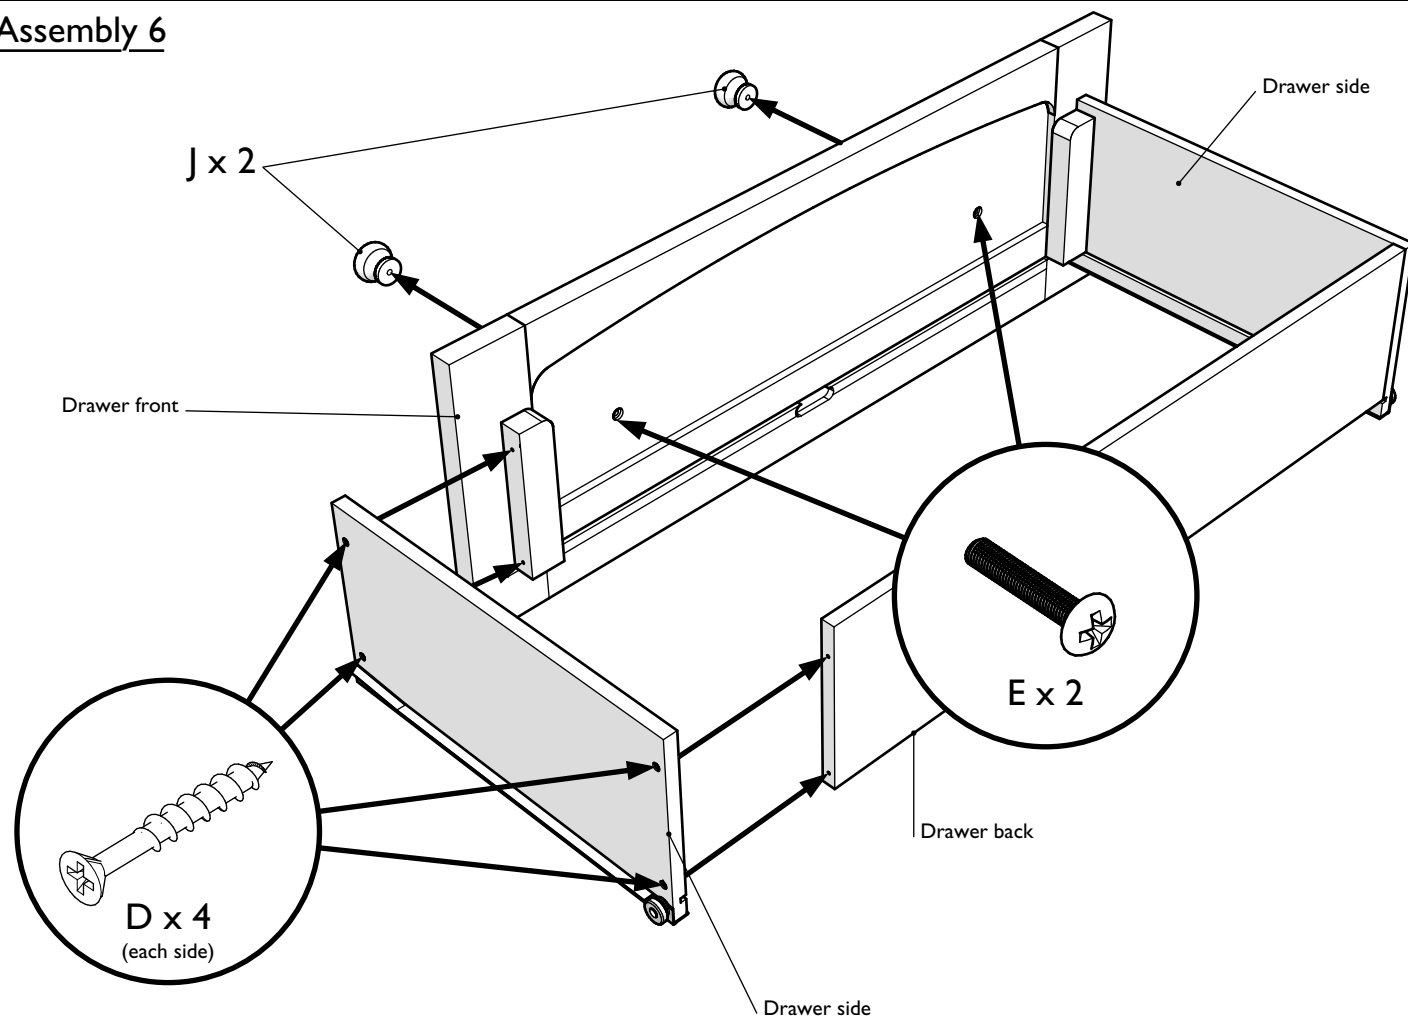


## Assembly 7

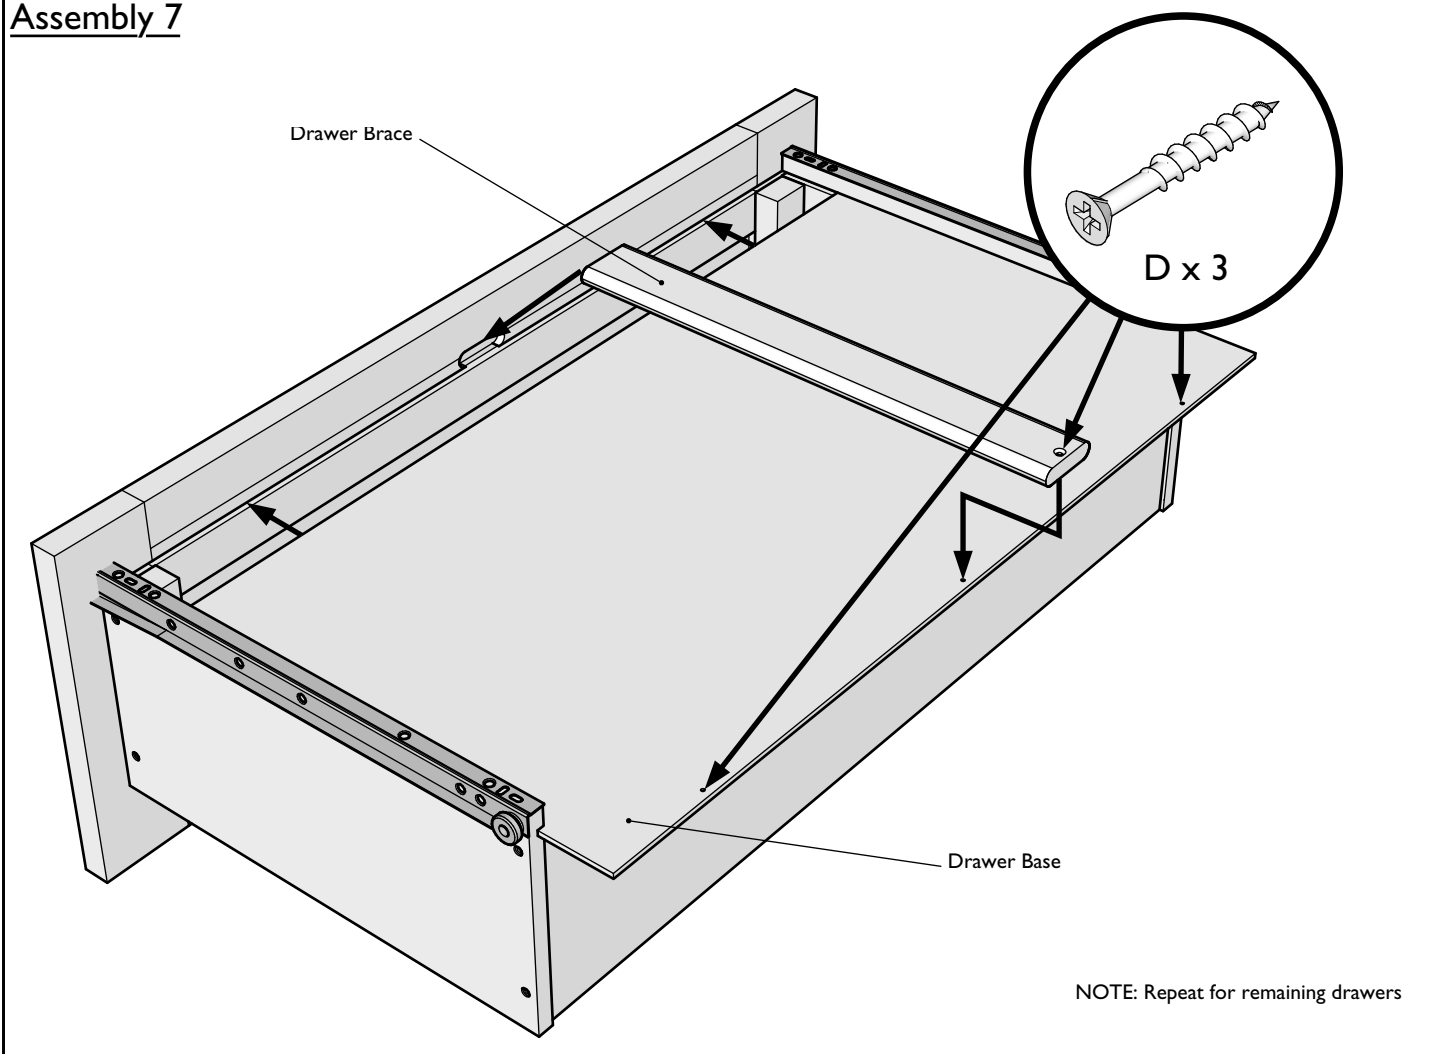

## Assembly 8

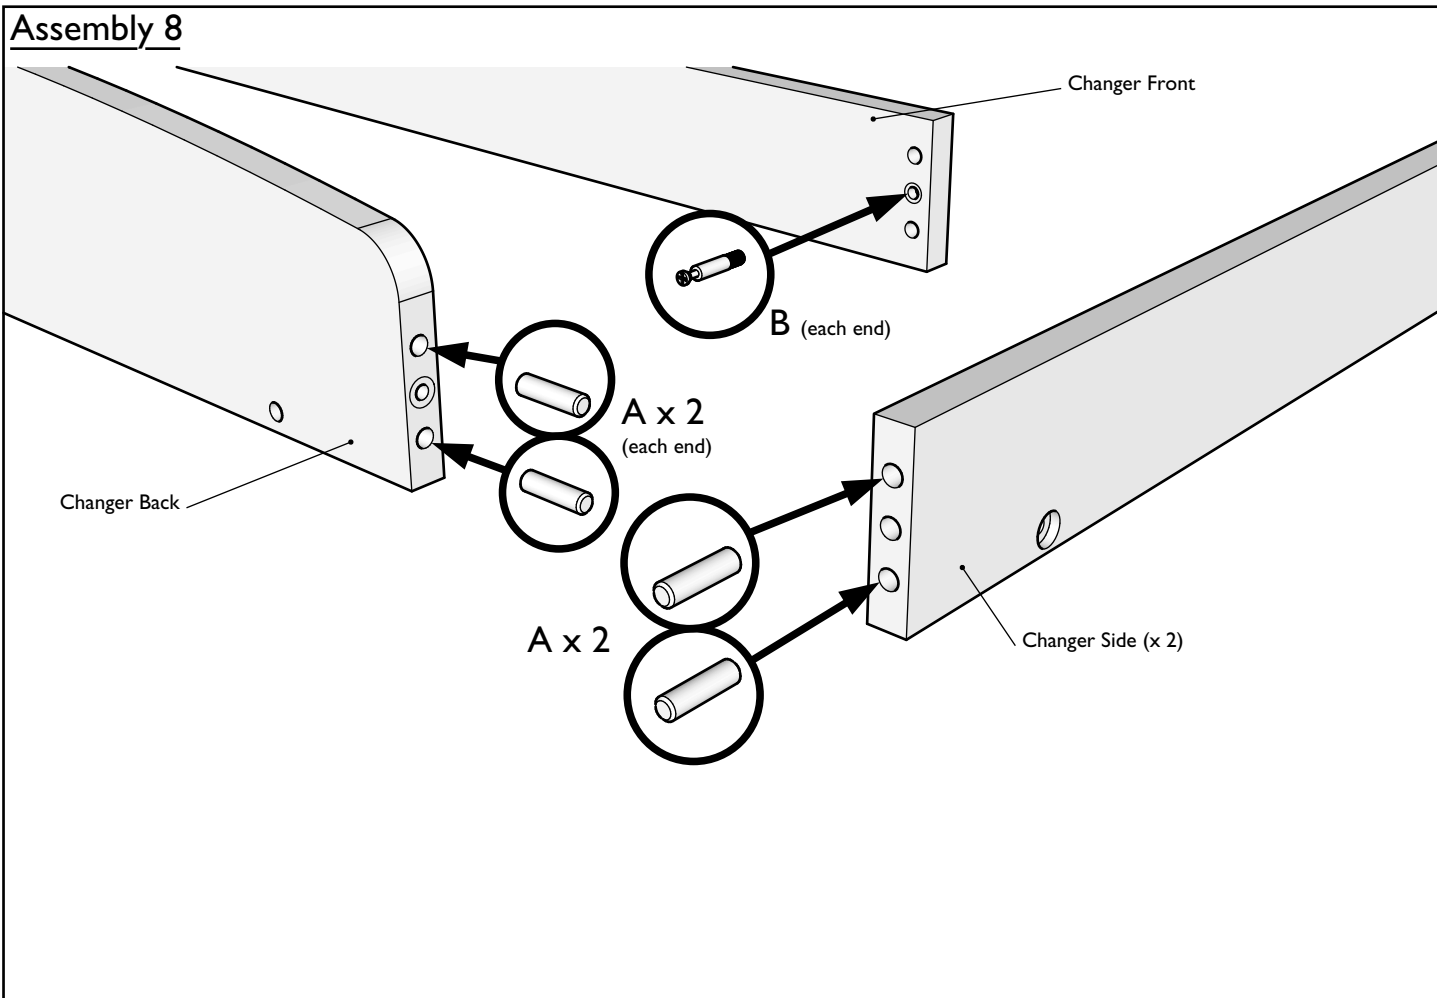


## Assembly 9

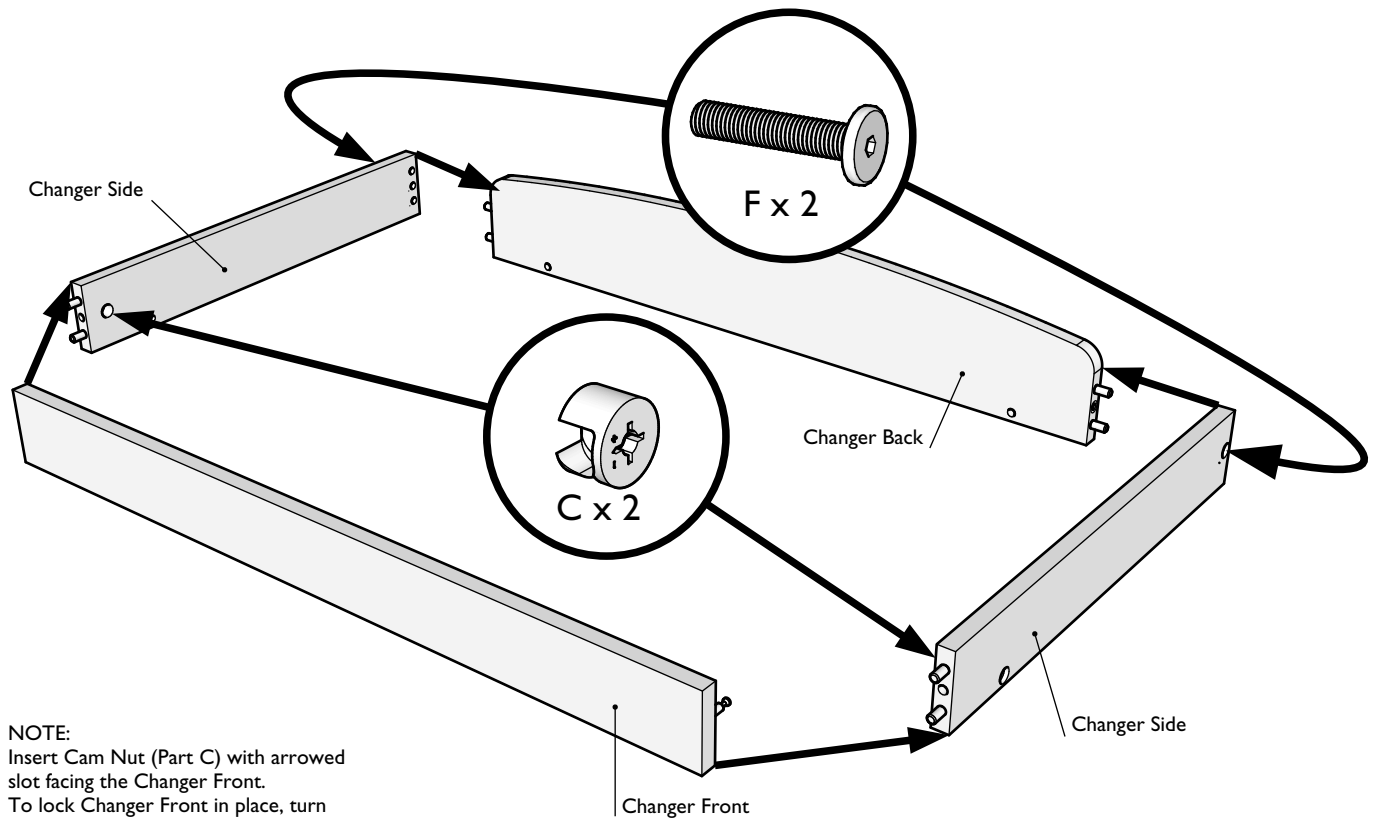

NOTE:  
Insert Cam Nut (Part C) with arrowed slot facing the Changer Front.  
To lock Changer Front in place, turn Cam nuts (part C) 1/2 turn clockwise with a large flat-bladed screwdriver after assembly.

NOTE: To allow easier fitting to the Dresser, do not fully tighten bolts until the end of "Assembly 10"

## Assembly 10

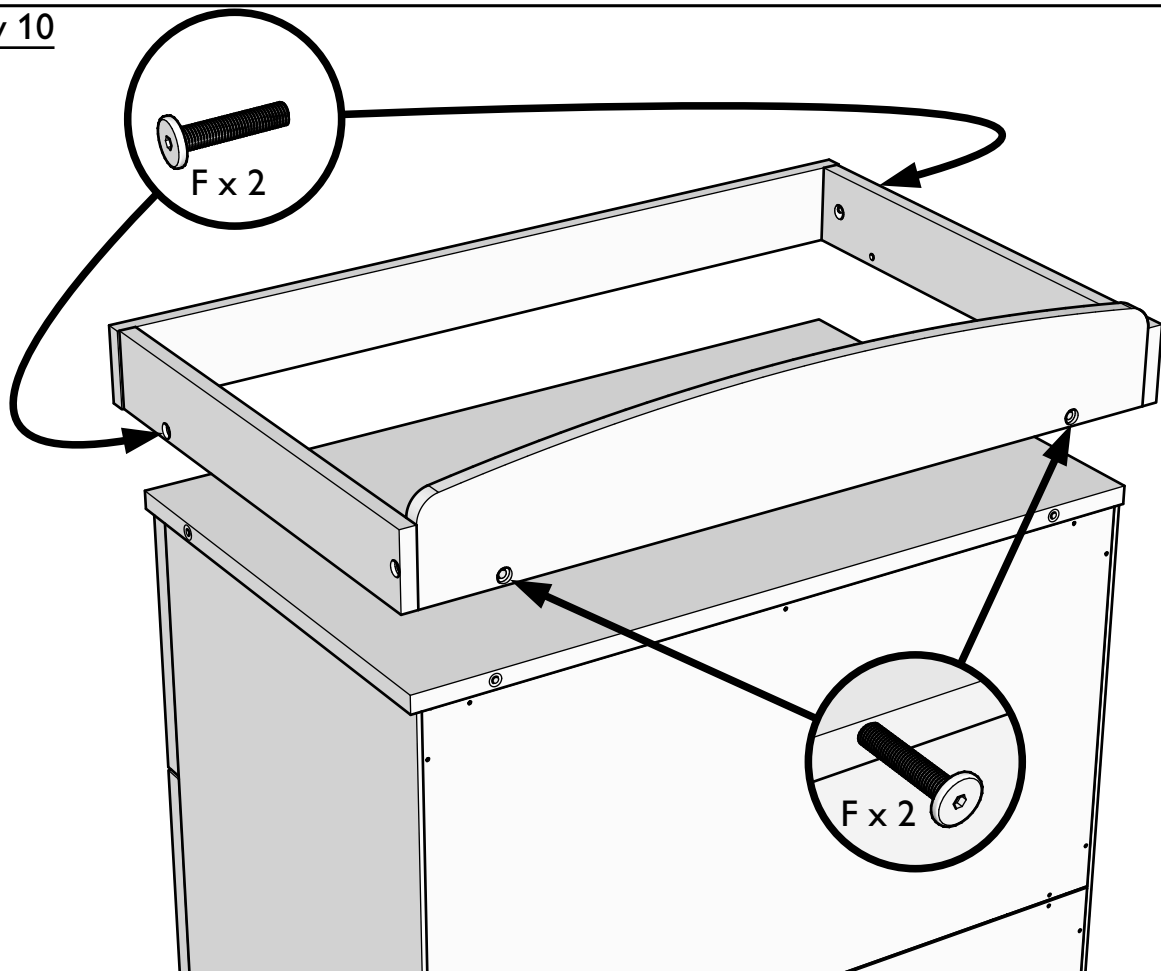



## Assembly 11

 
The dresser is supplied with a fixing kit which will secure it and help to guard against accidental tipping.

**WARNING :** Installation only to be carried out by a competent person.


Check the suitability of the wall before fitting.




Washer x 2



Screw (15mm)

 

Screw (25mm)

 

Plastic wall plug

(For brick or masonry wall use only)



Fabric strap

1. Place dresser against the wall where it is to be fitted. Mark the wall 25mm (1") down from the top surface of the changer.


2. Using the 25mm screw, washer and the appropriate wall fixing attach the fabric strap to the marked position.

3. Remove the top drawer and thread the free end of the strap through the slot in the back panel.


4. From the inside of the dresser, attach the fabric strap to the dresser frame using the 15mm screw and the washer.

Refit the top drawer.


Before use, ensure that the strap is securely fixed to both the wall and the dresser.

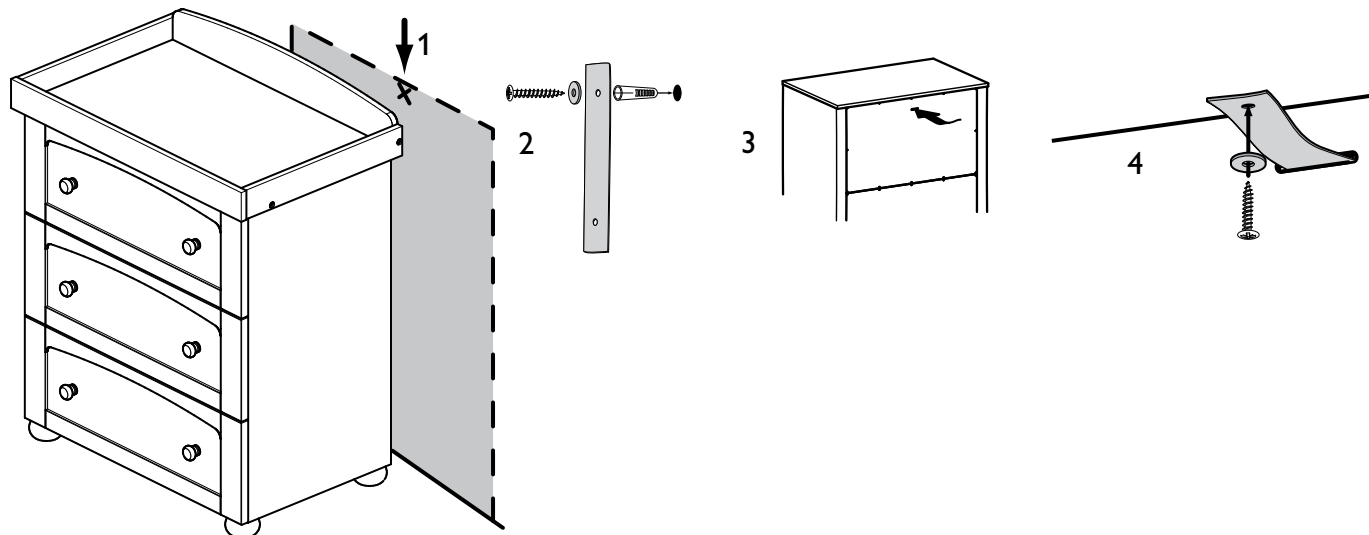


The type of wall fixing you will require depends on the construction of the wall. See below for details. If in doubt, seek professional advice.

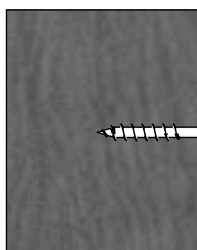

**Wood:** If fixing to wood make sure that it isn't chipboard as screws can easily pull away the core structure.

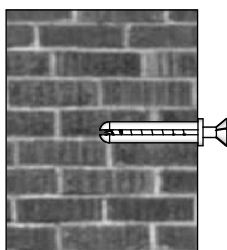

 **Brick or masonry:** Use the wall plug, provided you are sure that your wall is sound.



**Cavity wall:** Special toggle wall plugs needed. Seek expert advice.

## **Care and maintenance**

Your furniture may be cleaned by wiping with a damp cloth and drying with a soft clean cloth.

Do not use abrasives, bleach, alcohol or ammonia-based household polishes.

Take care when handling or moving the furniture. Careless handling may cause damage.

Regularly check that all fixings are tightened and that there are no broken or damaged parts.

## **Safety notes**

**Warning: Do not leave your child unattended.**

Keep children clear during assembly as pack contains small parts which may present a choking hazard.

All assembly fixings should always be tightened properly. Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g. strings, necklaces, ribbons, dummies, etc) which could pose a risk of strangulation.

The changing area is suitable for use up to 12 months old or 11kg in weight.

Be aware of the risks of open fires and other such sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the dresser.

Do not use the changing unit if any of the parts are broken, torn or missing.

Any additional or replacement parts can only be obtained from the manufacturer or the distributor.

This changing unit complies with BSEN 12221:2008 +A1:2013.

John Lewis Partnership  
171 Victoria Street  
London  
SW1E 5NN