


John Lewis

KEBE Dane
Stock number: 11501
11502

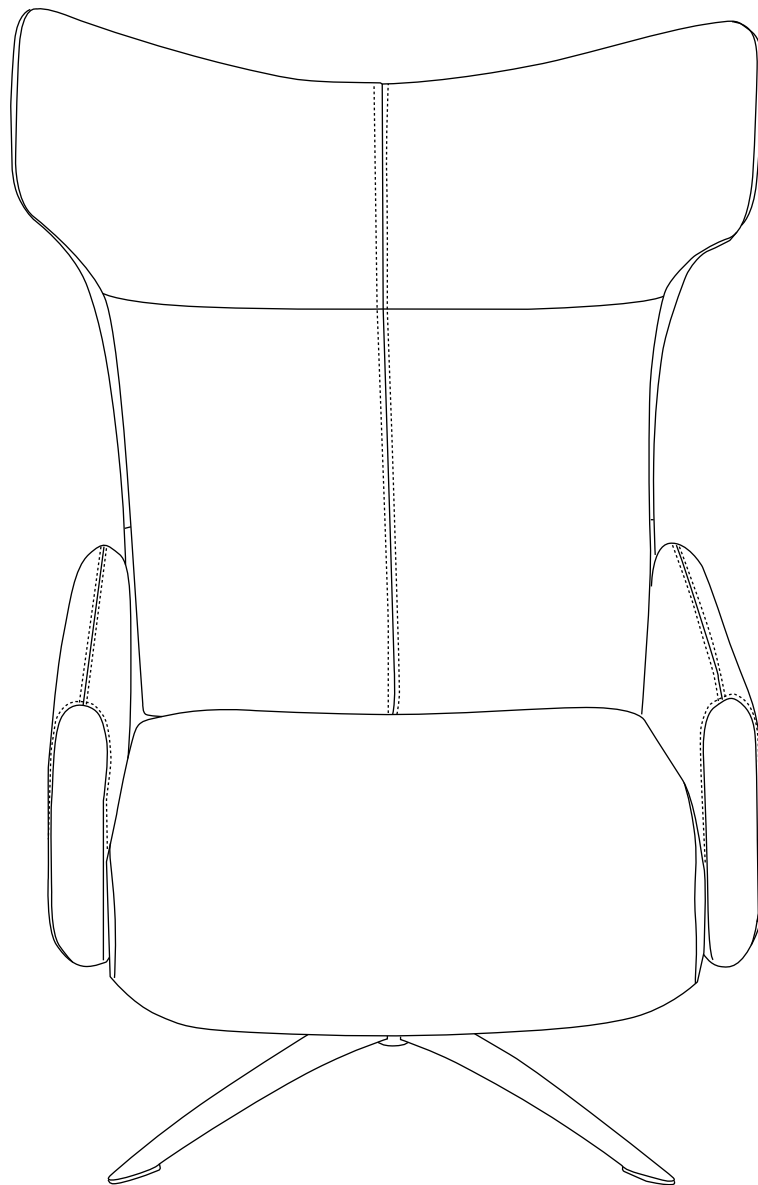

H114 W78 D83

Thank you for purchasing the **KEBE Dane chair**. Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

At John Lewis, we are committed to making great products possible.

From our in-house Design Team, to our Buyers, we work together to bring great design to life.

Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell.

We are all committed to designing and developing products to the highest industry standards.

We hope you are happy with your product and welcome any feedback or comments you may have.

The John Lewis Team

Important safety information

Warnings







- ⚠ The product should only be used on firm, level ground.
- ⚠ Keep small parts out of reach of children.
- ⚠ Ensure the product is fully assembled as illustrated before use.

Do's


- ✓ Check the pack and make sure you have all the parts listed.
- ✓ Check all screws or bolts are tightened and inspect regularly.
- ✓ Make sure the legs remain in contact with the ground at all times.

Don'ts

- ✗ Do not over tighten screws or bolts.
- ✗ Do not stand on the product.
- ✗ Do not use power tools to construct as overtightening and panel failure may occur.

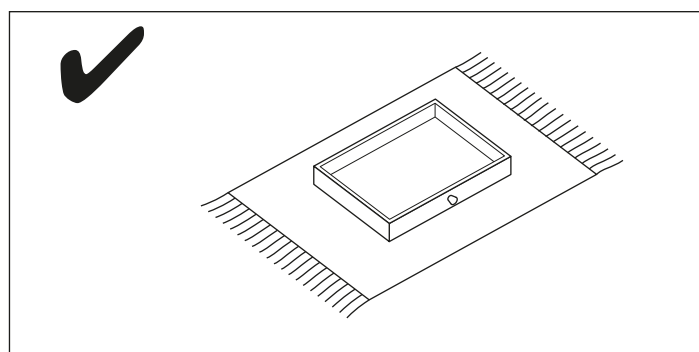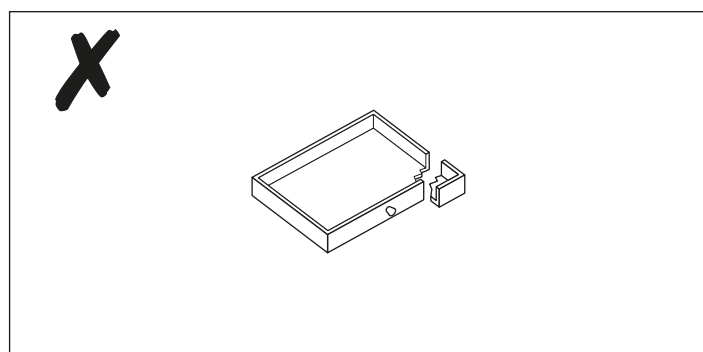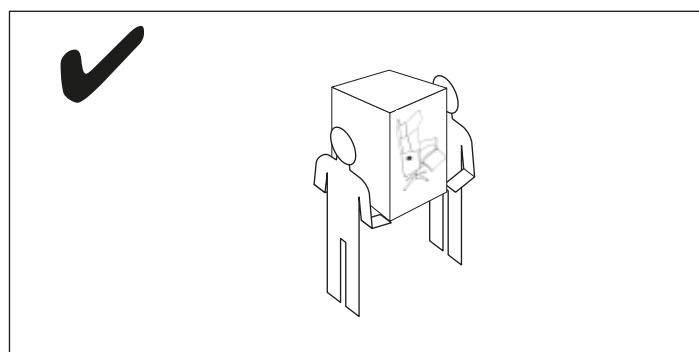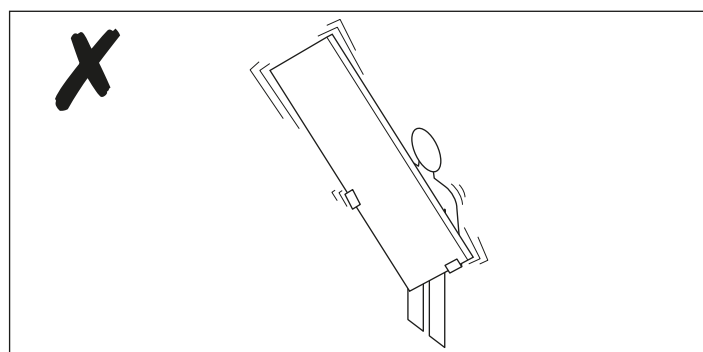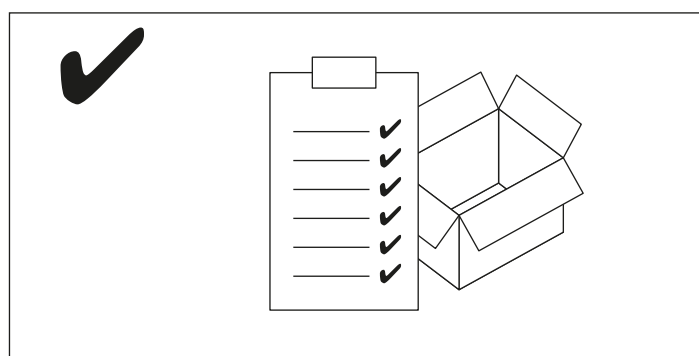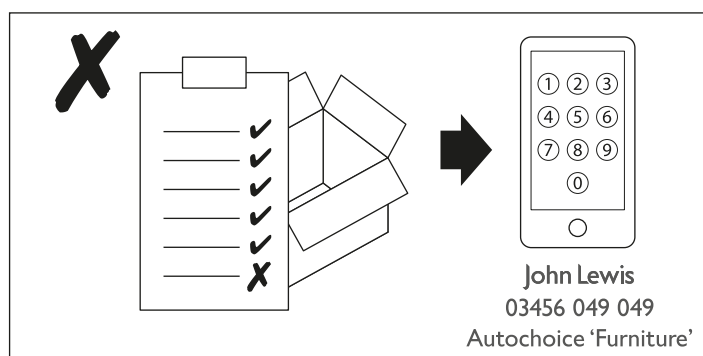

Your KEBE Dane chair

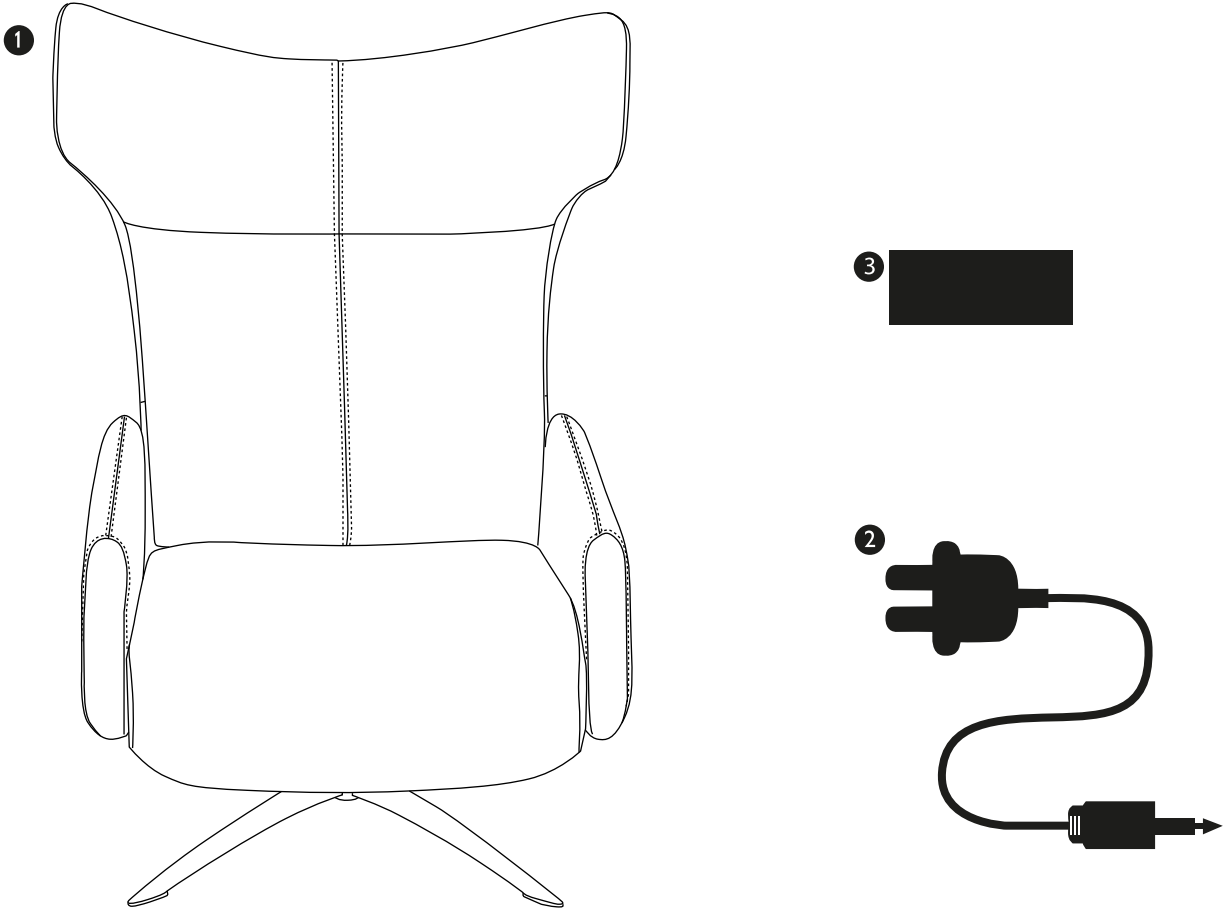



Ref	Description	Dimensions	Qty
1	Eletric chair	H114 W78 D83	1
2	Cable	3m	1
3	Trafo		1

Internal dimensions
Stock number: 203
Size: H114 W78 D83

Product assembly

KEBE Dane
11501
11502


Step 1

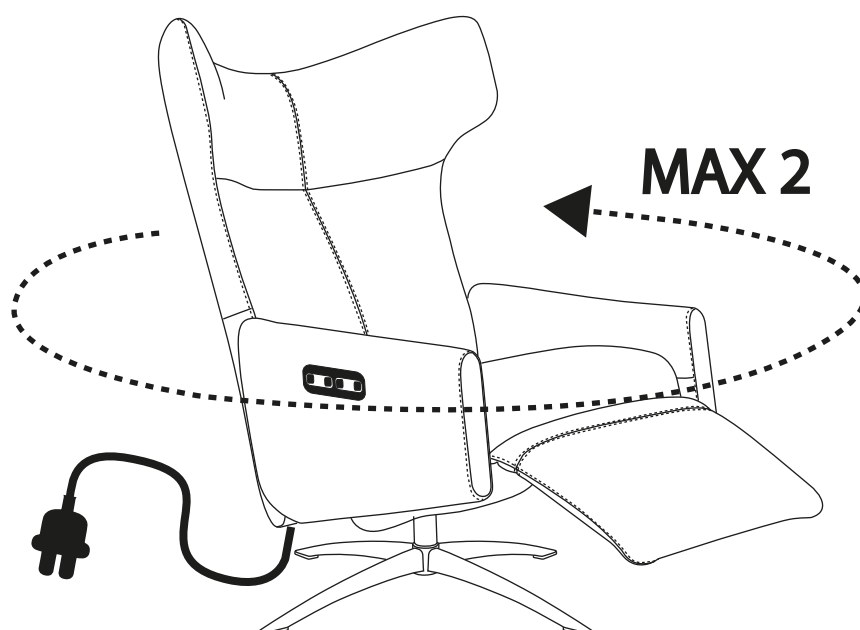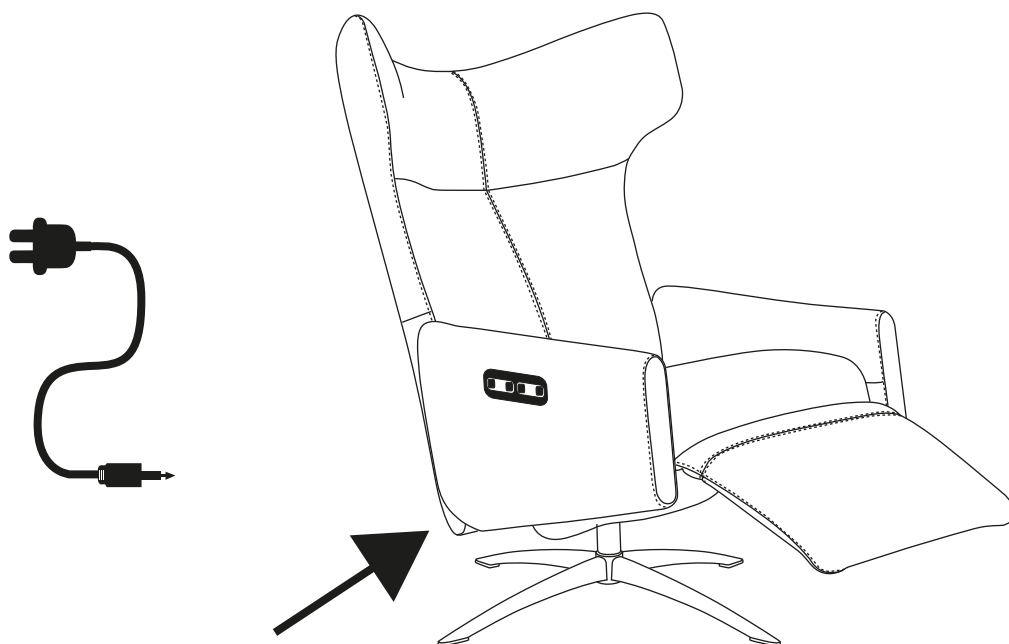

Step 2 Final assembly



Changing Backrest position and footrest position.

The button to changing position you can find on the right side on the chair arm

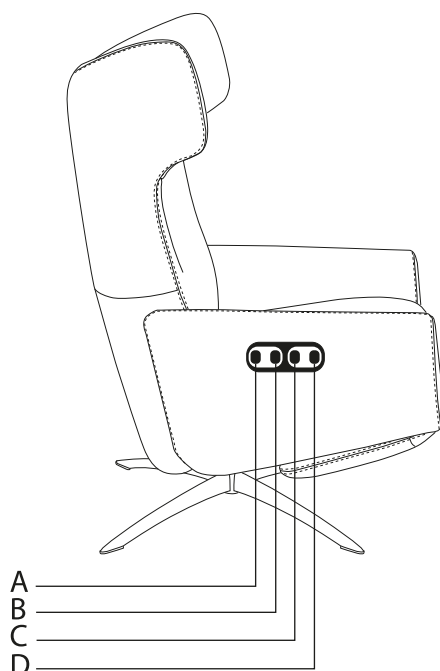

If you want to change backrest position use button closer backrest (A,B).

If you want to change footrest position use button closer footrest (C,D).

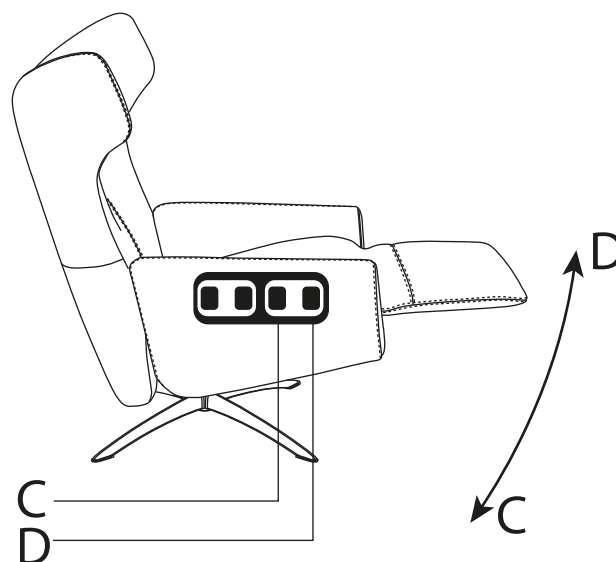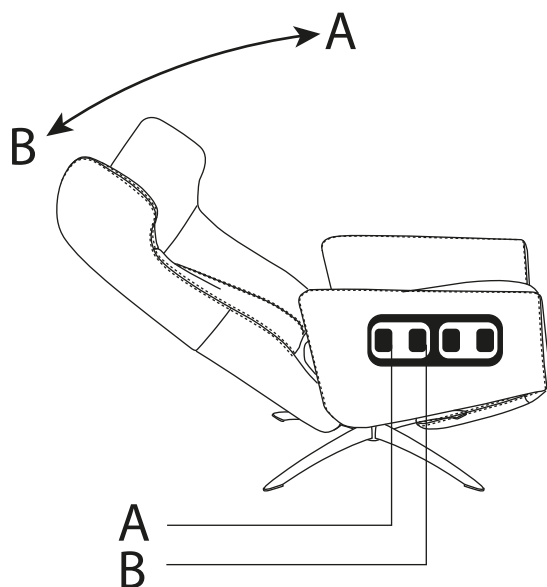

You can use one button to backrest and one button to footrest in this same time.






Product assembly

KEBE Dane

11501

11502

Replacement of the battery

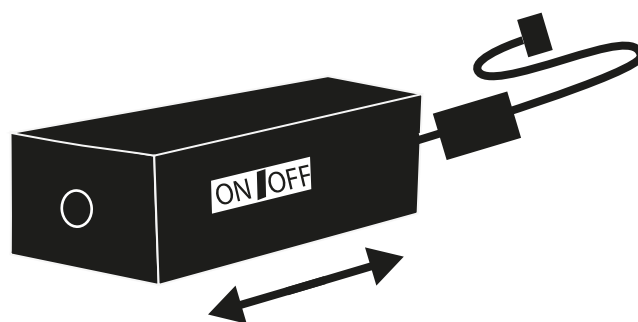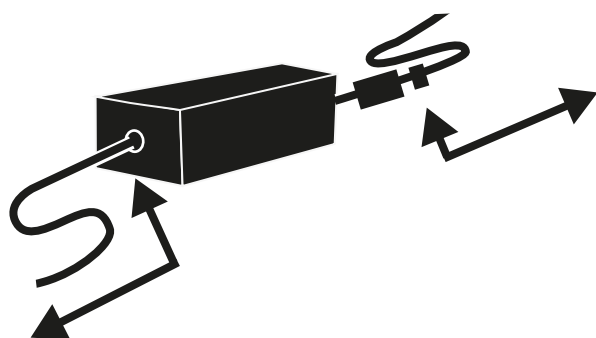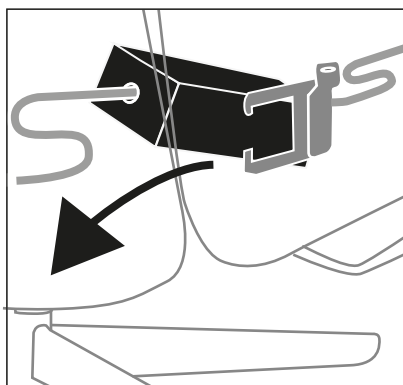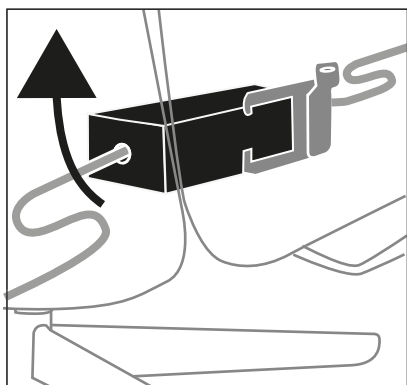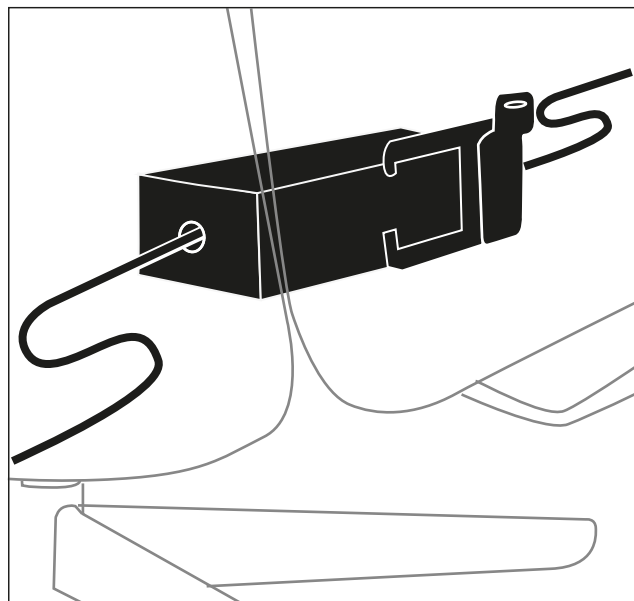


Product assembly

KEBE Dane

11501

11502

Replacement of the battery

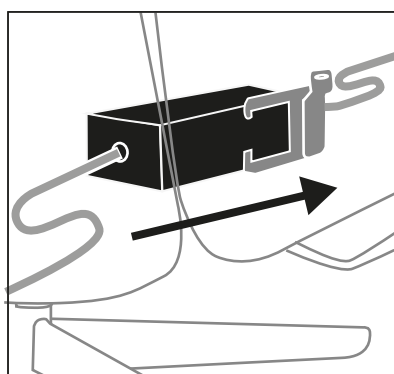


Product assembly

KEBE Dane

11501

11502

Working without battery and charging battery

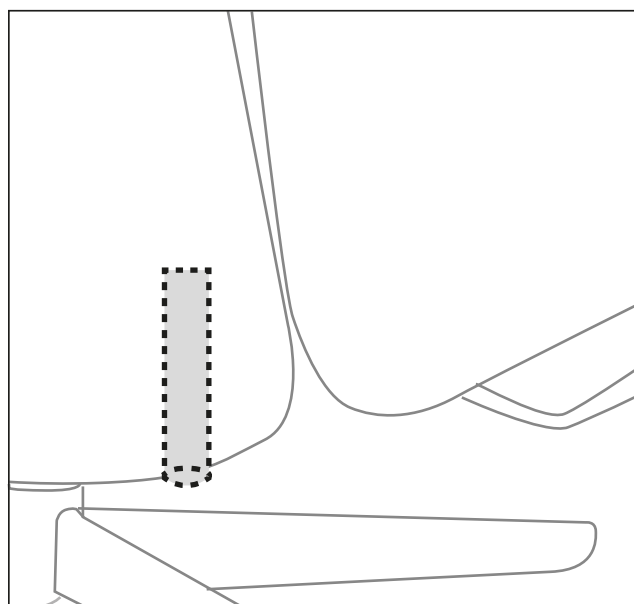

Care and Maintenance

Metal and leather

Protect leather from spillage, sunlight and heat. A slightly damp cloth is the best cleaning agent for both material.

Do not use any abrasive cleaner or harsh detergent as this can damage the surface.

Care for the leather with leather conditioner. We recommend applying leather conditioner before using the furniture for the first time.

Avoid spilling or dropping crumbs of food with a high fat content on the surface as this can permanently mark the leather.

Safety Instructions.

IMPORTANT, READ CAREFULLY, RETAIN FOR FUTURE REFERENCE

General warnings:

Never drag furniture when moving it, always lift it.

Periodically check all fixing to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

"BS 8474:2013"

WARNING. This is an electrical item and should be treated with caution.

WARNING. When lithium battery (2200mAh Li-ion Battery Pack) of the chair is fully charged the chair can be easily in motion when button A,B,C,D is pressed.

WARNING. Always ensure that there is nothing to obstruct the free movement of the chair, for example children or pets, or solid objects, e.g. a wall.

WARNING. This chair is not suitable for use by children. Any children in the vicinity must be supervised at all times.

WARNING. Take care when adjusting position to avoid trapping or pinching of body parts.

WARNING. Do not sit on footrest.

WARNING. Only the occupant or a responsible person should operate the chair.

WARNING. The manufacturer's recommended maximum load for safe operation of the chair, is 110 kg.

WARNING. Exercise care when lowering into the chair as shock loads can severely damage the chair and the mechanism.

The chair is ready for use once the chair has been fully installed in the correct position, and the user has read and understood the operating instructions when the chair is not in use it should be returned to the seated position.

Specific warnings for heavy items:


It is recommended that before moving heavy objects to a new location they are completely dis-assembled to avoid personal injury or damage to the furniture.

Please be careful to retain all fittings when doing this.

Chair specific warnings:

Never tilt the chair.

Ensure the chair is always placed firmly on the ground.

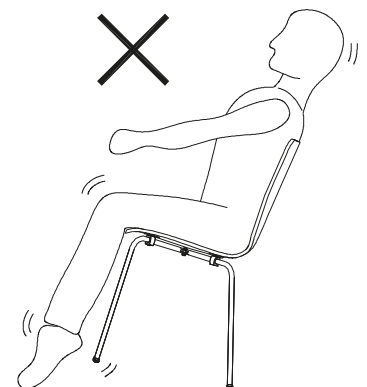

Care guide

Care and maintenance

Wood furniture

Wood displays different grain patterns depending on which way they are cut – for example, the ‘medullary ray’ which can appear on oak furniture is a mark of good quality timber – these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Wood veneers also allow a distinctive pattern to be created on some surfaces, such as tabletops and drawer fronts by the way slivers are arranged.

All timber and veneer surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.

Waxed furniture will need to be given a coat of beeswax a couple of times a year to help maintain its lustre.

Spray polishes are best avoided as they contain silicones which may spoil the furniture’s surface when building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters. Wipe up spills immediately and ensure that a mat or pad is placed under paper if you are writing.

Our furniture will endure most temperatures in the home, but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by home heating can cause damage such as warping.

Safety instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and retighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Retain these instructions for future reference.