


---

# ABACUS Wide cupboard

Stock Number 22305

---

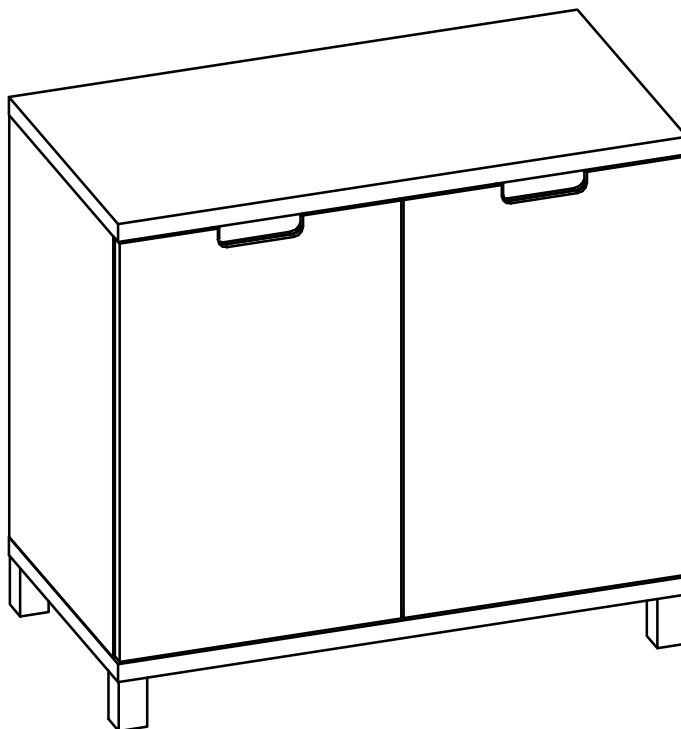

---

## Step By Step Assembly Instructions

---

### PRE-ASSEMBLY PREPARATION


Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact your nearest stockist.

This product takes approximately **45 MINUTES** to assemble with **2 People**.





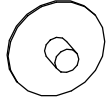
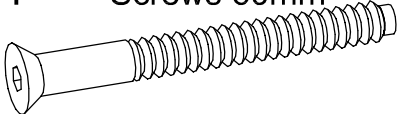
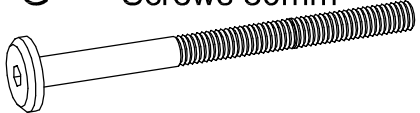
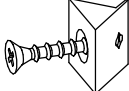
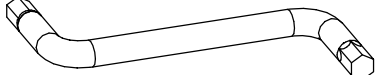


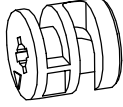

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.

You will require a crosshead screwdriver.

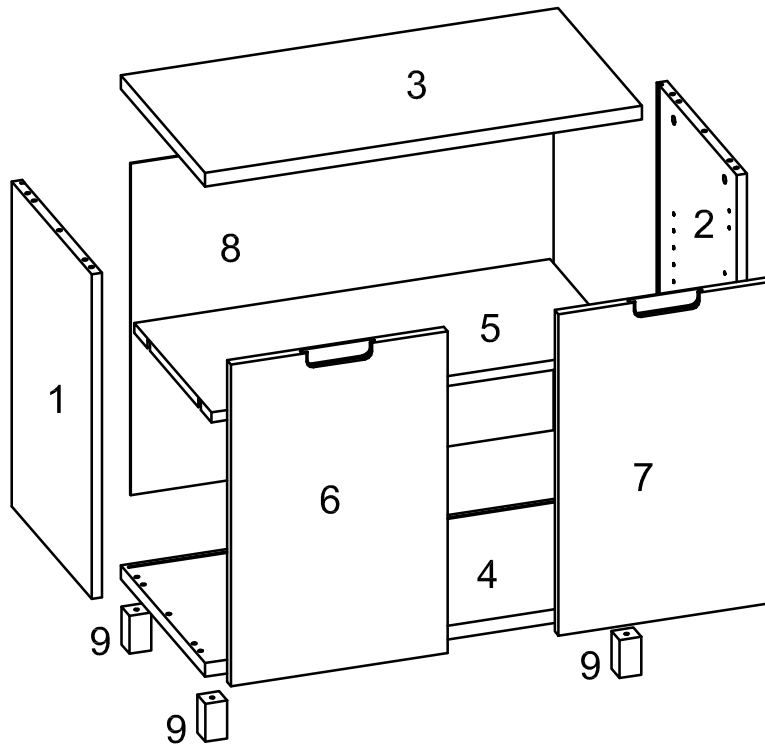

### Panel and Fittings Identification

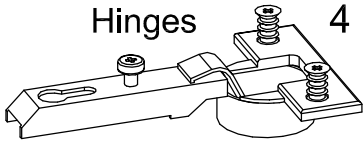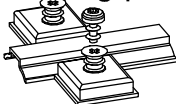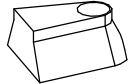Item	Description	Qty.	Item	Description	Qty.	Item	Description	Qty.
1	LEFT side panel	1	2	RIGHT side panel	1	3	Top	1
4	Base	1	5	Shelf	1	6	LEFT door	1
7	RIGHT door	1	8	Back panel	1	9	Legs	4
A	Hinges 	4	B	Mounting plates 	4	C	Shelf support 	4
D	Screws 17mm 	4	E	Cover caps 	4	F	Screws 60mm 	4
G	Screws 80mm 	4	H	Plastic back holders 	4	I	Allen key 	1
J	Plastic buffers 	1	K	Dowels 	12	L	Camlocks 	4
M	Connecting bolts 	4						

## Step ①


Fittings



M x 4

Take the top (3) and lay it on flat and clean surface with the predrilled holes uppermost.

Screw the four connecting bolts (M) into the top (3). Tighten using the crosshead screwdriver.

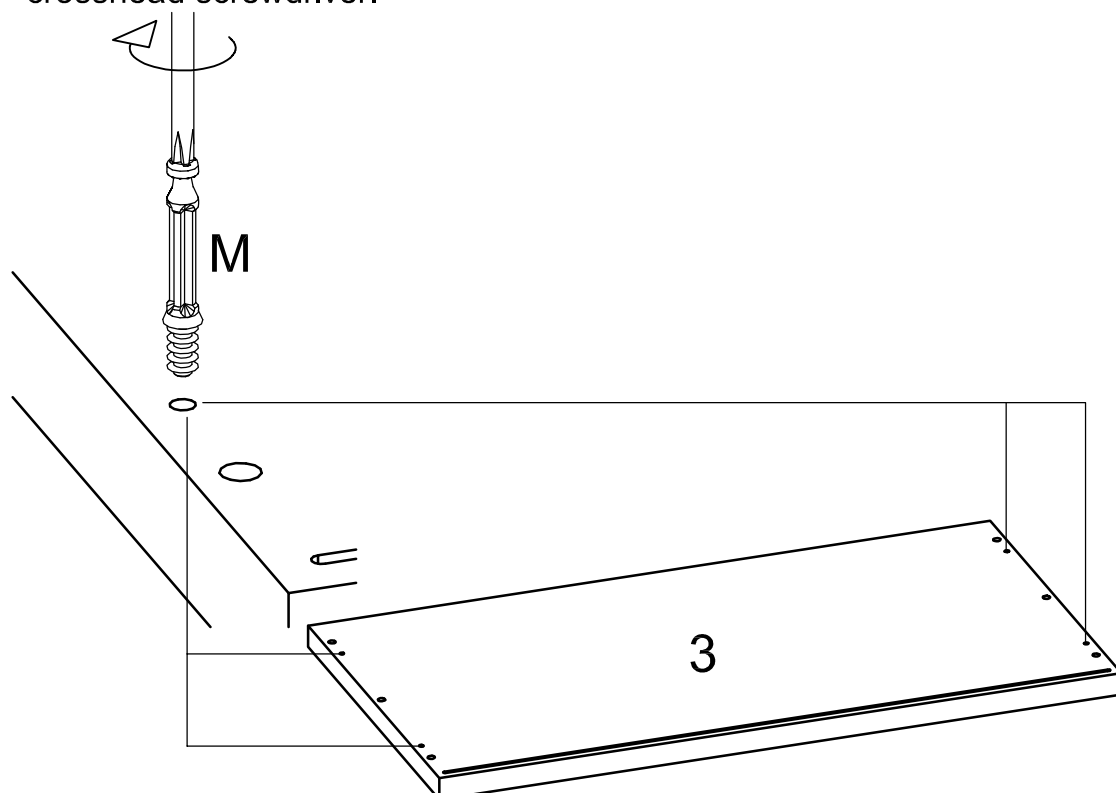

## Step ②


Fittings



K x 12

Take the left (1) and right side (2).

Insert the twelve dowels (K) into the holes provided.

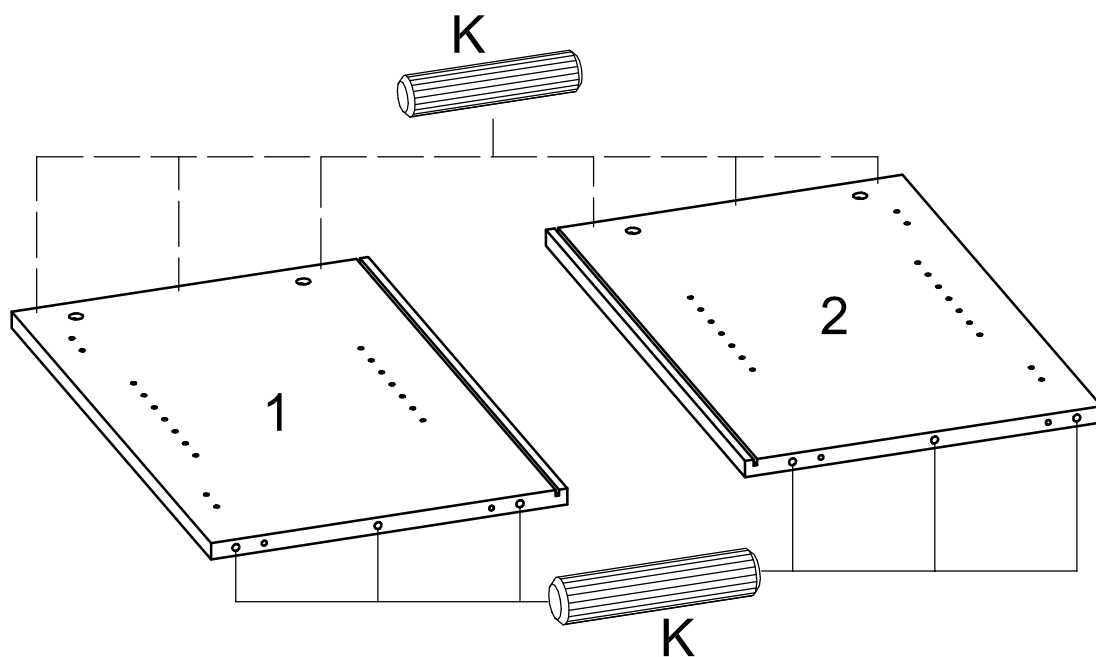


## Step ③

Fittings




L x 4

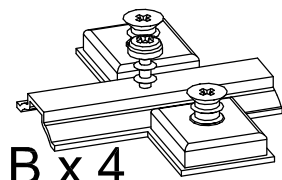

B x 4


Insert the four camlocks (L) into the holes provide on the left (1) and right side (2).

Screw the four mounting plates (B) into the predrilled holes in the left (1) and right sides (2). Tighten using the crosshead screwdriver.

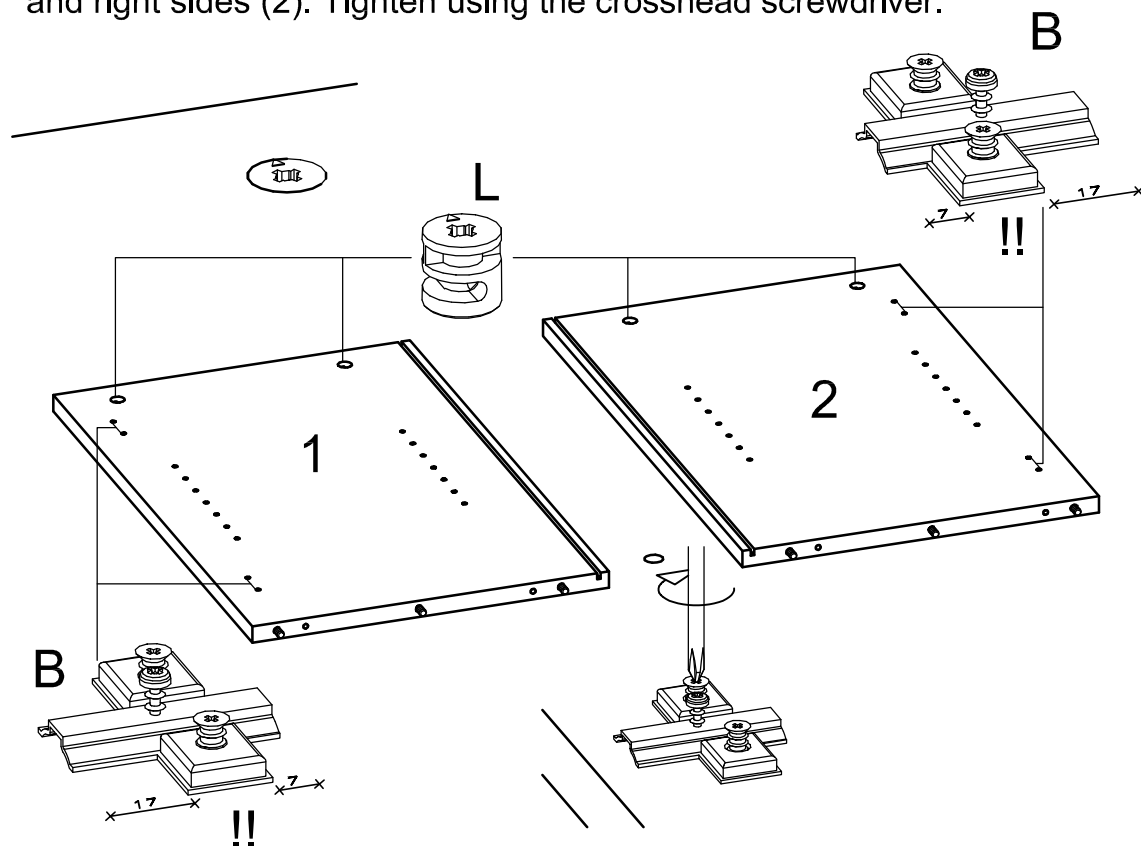


## Step ④

Locate the left side (1) onto the top (3) as shown in the picture. Tighten the two camlocks (L) using the crosshead screwdriver.

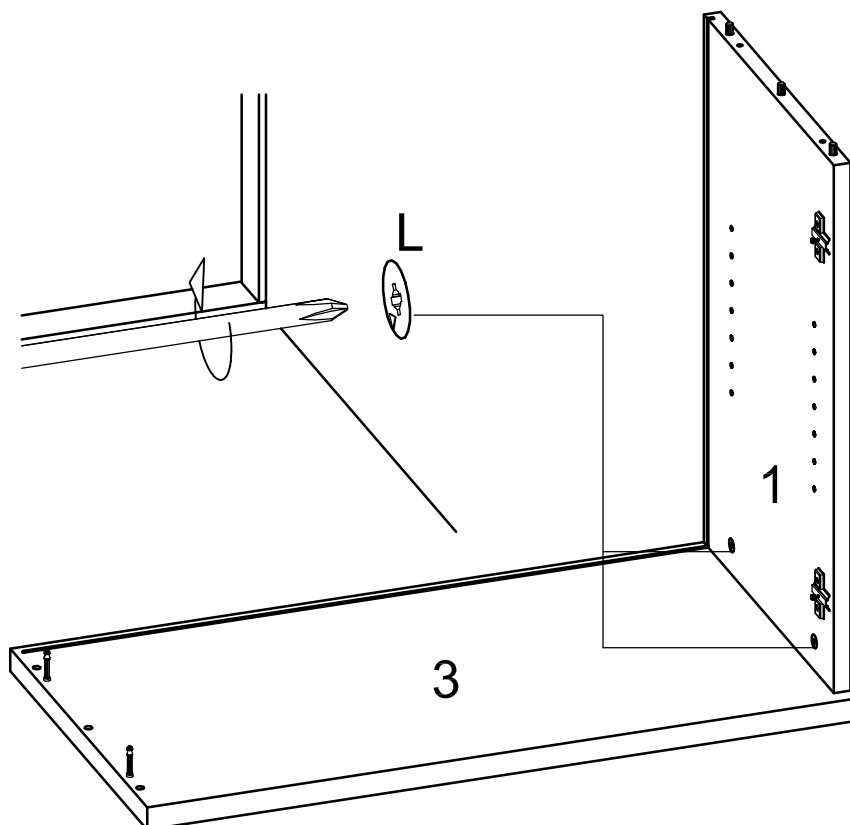


## Step ⑤

Locate the right side (2) onto the top (3) as shown in the picture.  
Tighten the two camlocks (L) using the crosshead screwdriver.

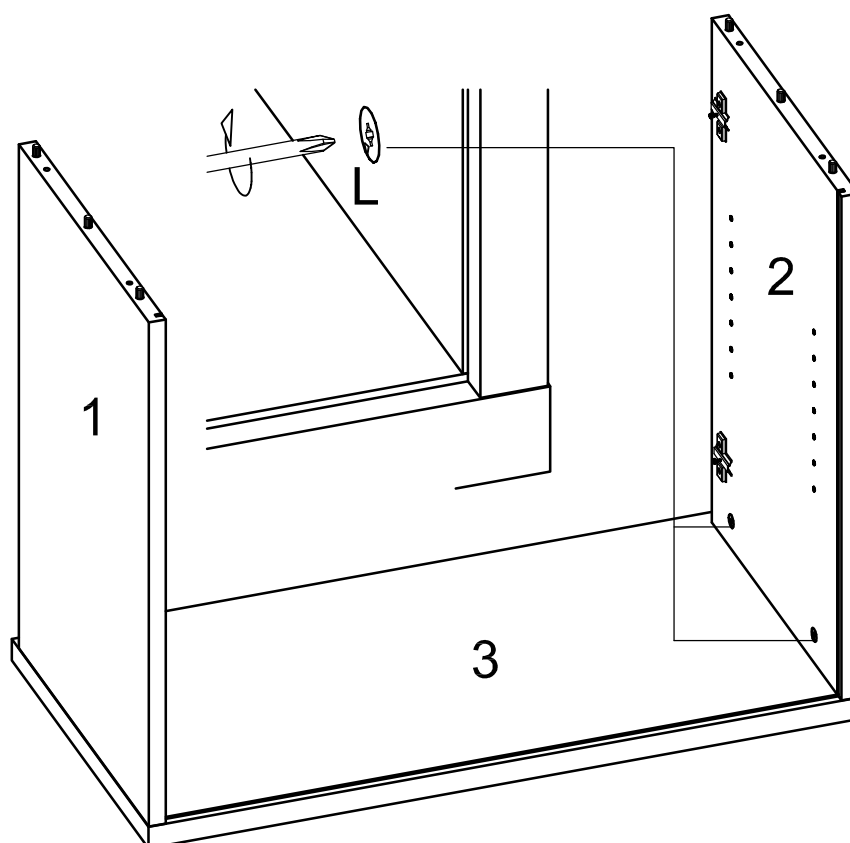

## Step ⑥


Place the back panel (8) into the grooves.

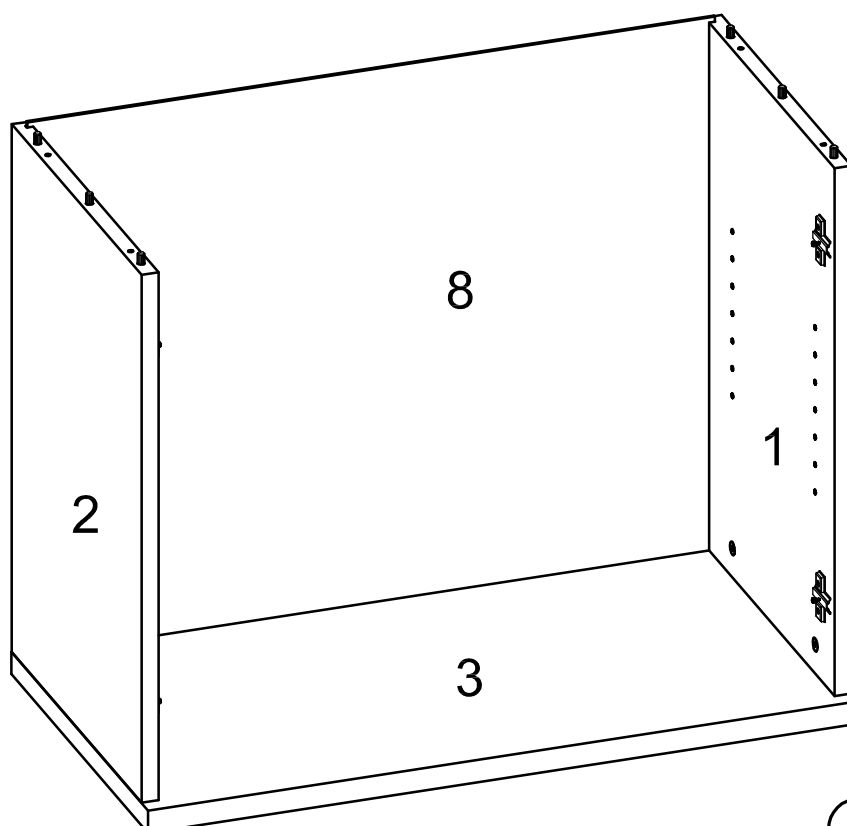

## Step 7

Locate the base (4) onto the sides (1,2) as shown in the picture. Tighten the four screws (F) using the allen key (I).


Fittings

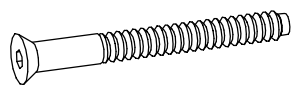

F x 4




I x 1

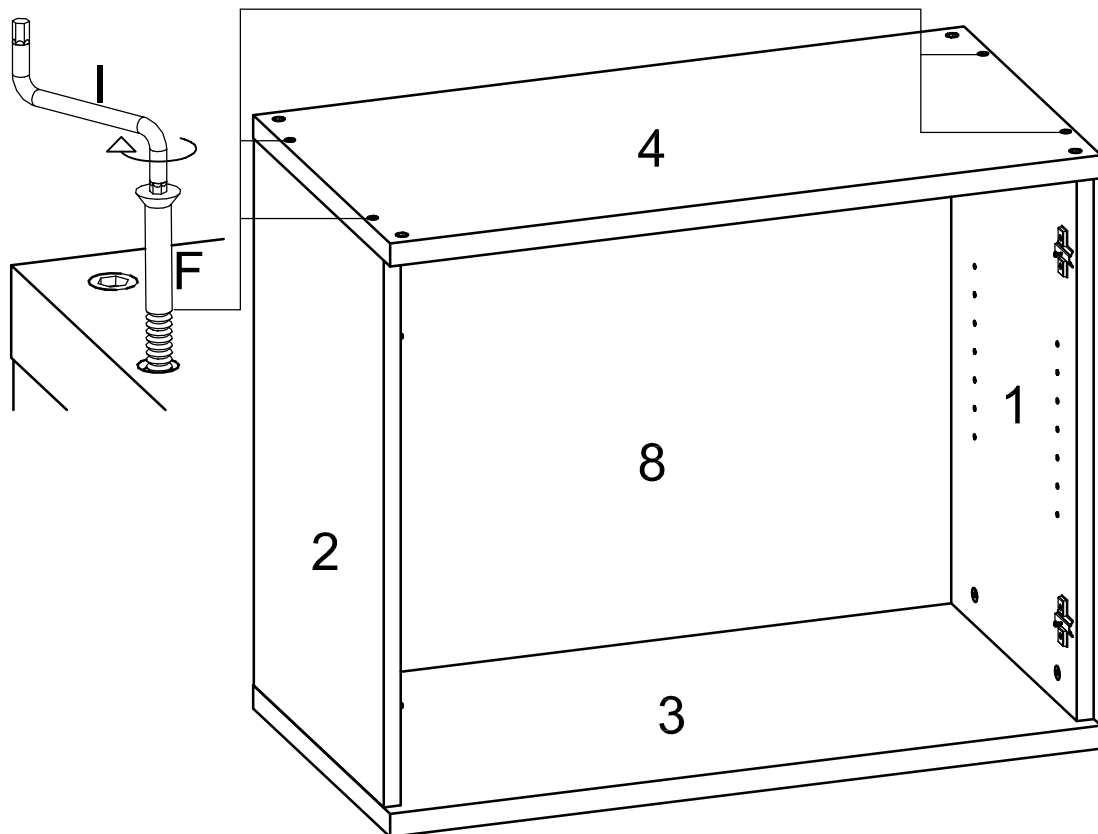

## Step 8

Attach the four legs (9) using one screw (G) per leg. Tighten the screw (G) using the allen key (I).


Fittings

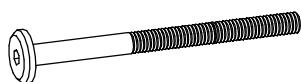

G x 4




I x 1

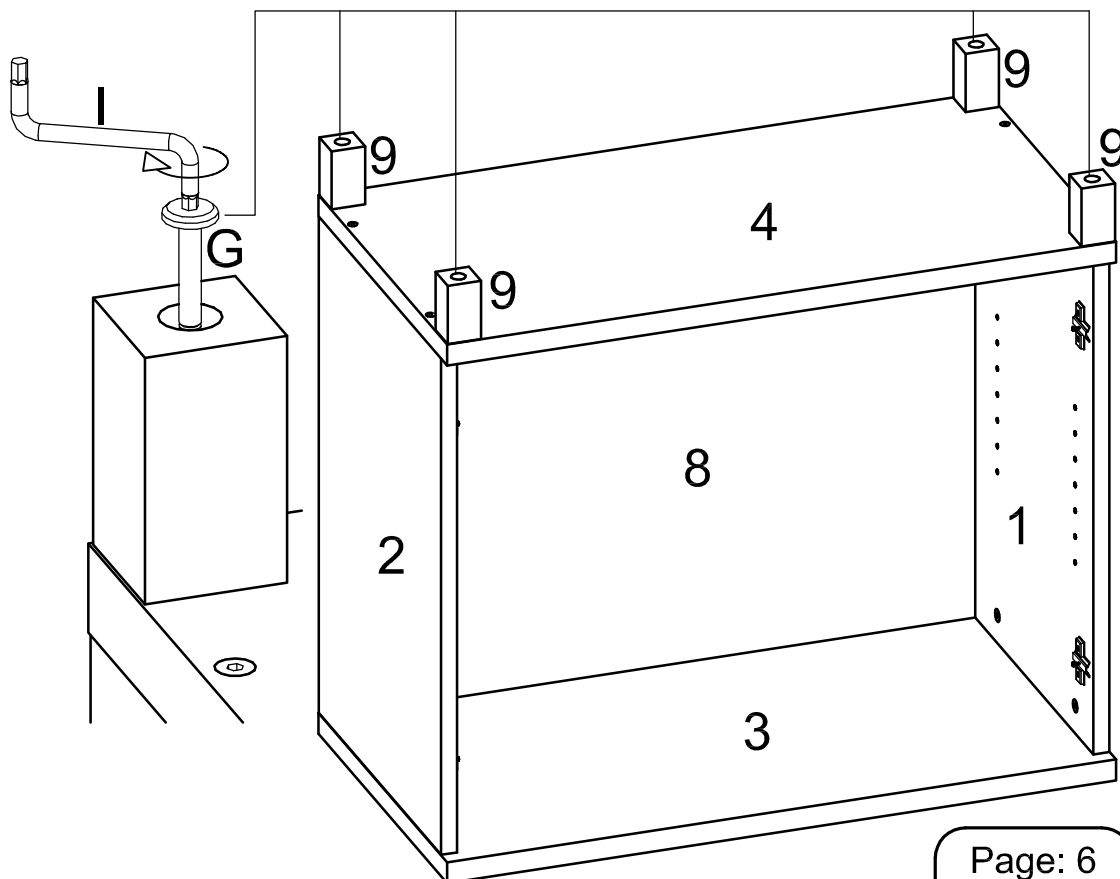

## Step 9

Turn the carcass of the wide cupboard onto its legs. Do not pivot or pull, otherwise the legs might crack. Always lift the unit from the base when moving it, do not drag along the ground, as this may damage the legs. It is recommended that two people should move the unit, never move it alone.

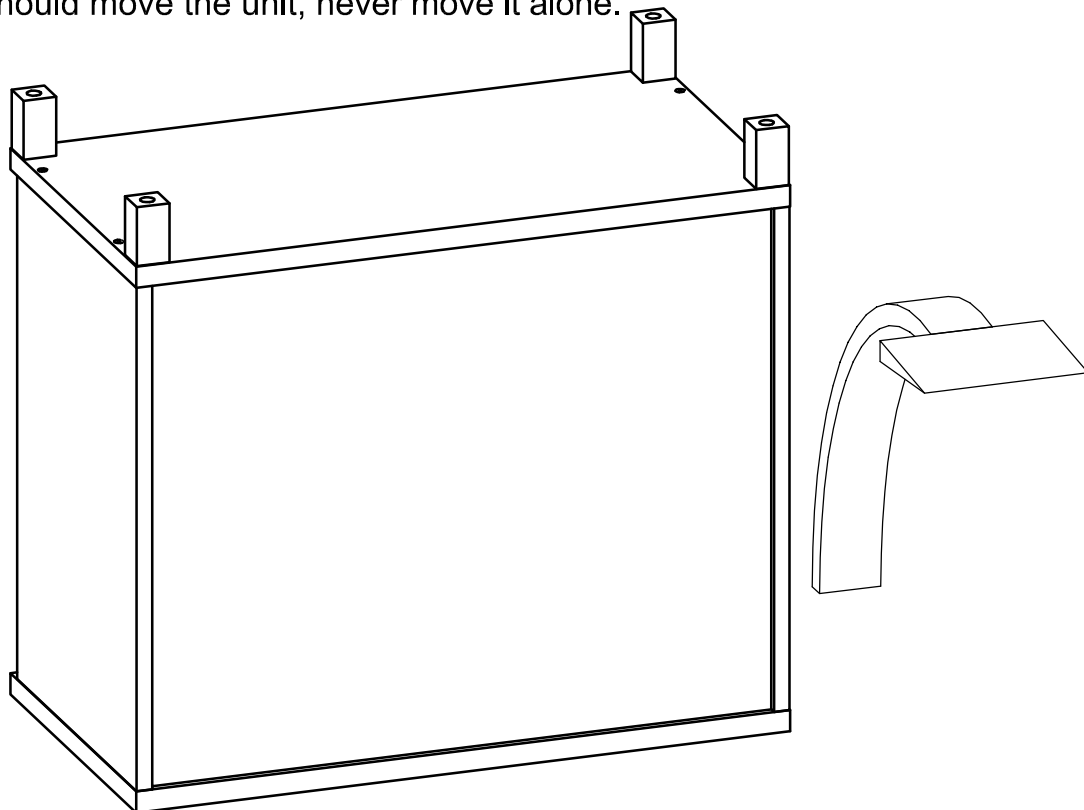


## Step 10

Screw the four shelf supports (C) to the side panels (1, 2) using screws (D). Be sure the supports are aligned when fitted.


Fittings



C x 4

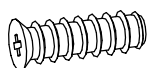


D x 4

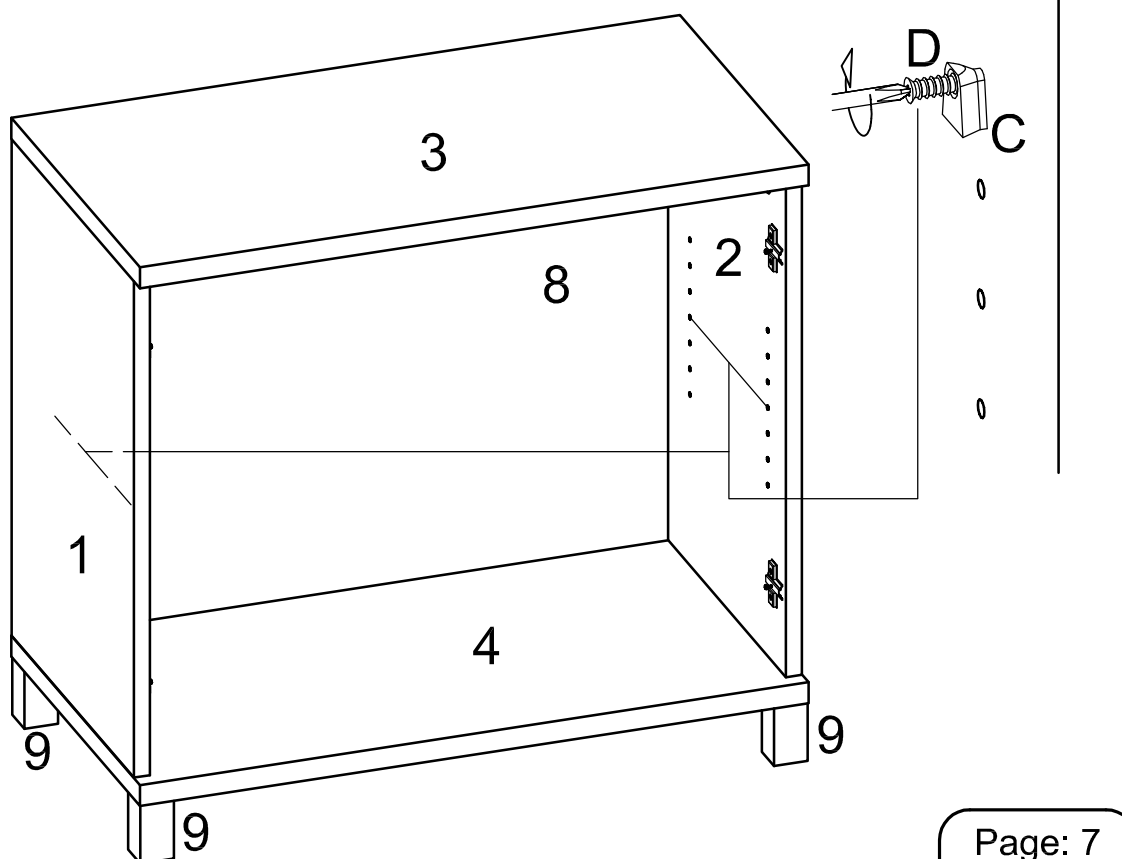


## Step 11

Insert the shelf (5) and place it on the shelf supports (C).

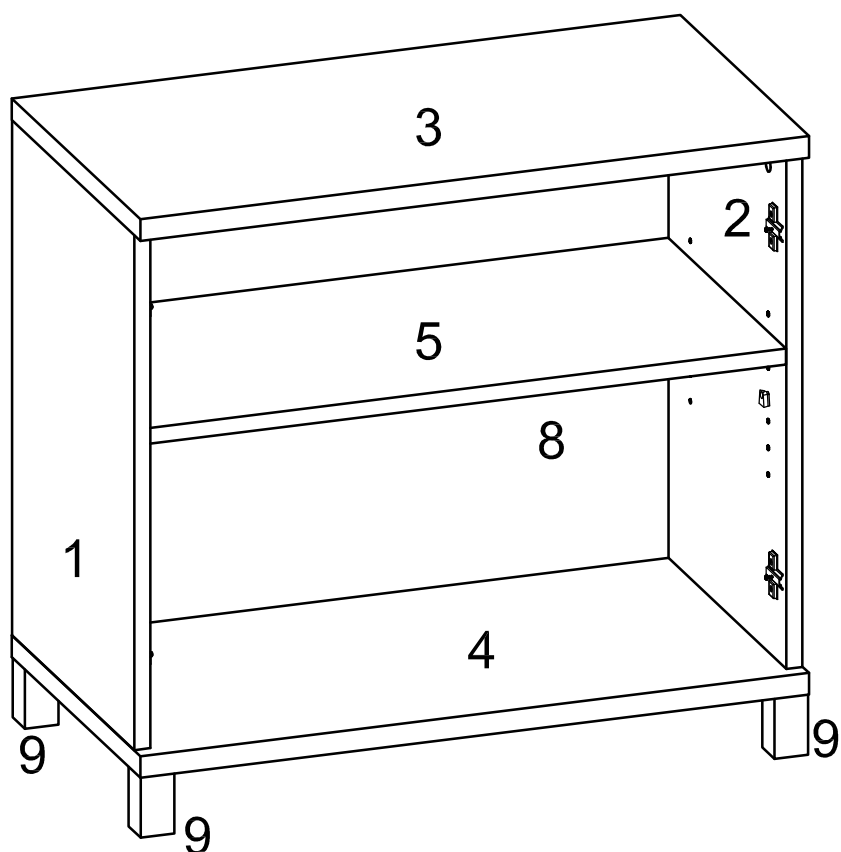


## Step 12

Fittings

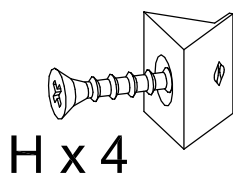

Insert the plastic back holders (H) into the grooves in the top (3) and the base (4). Screw the four plastic back holders (H). Tighten using the crosshead screwdriver.


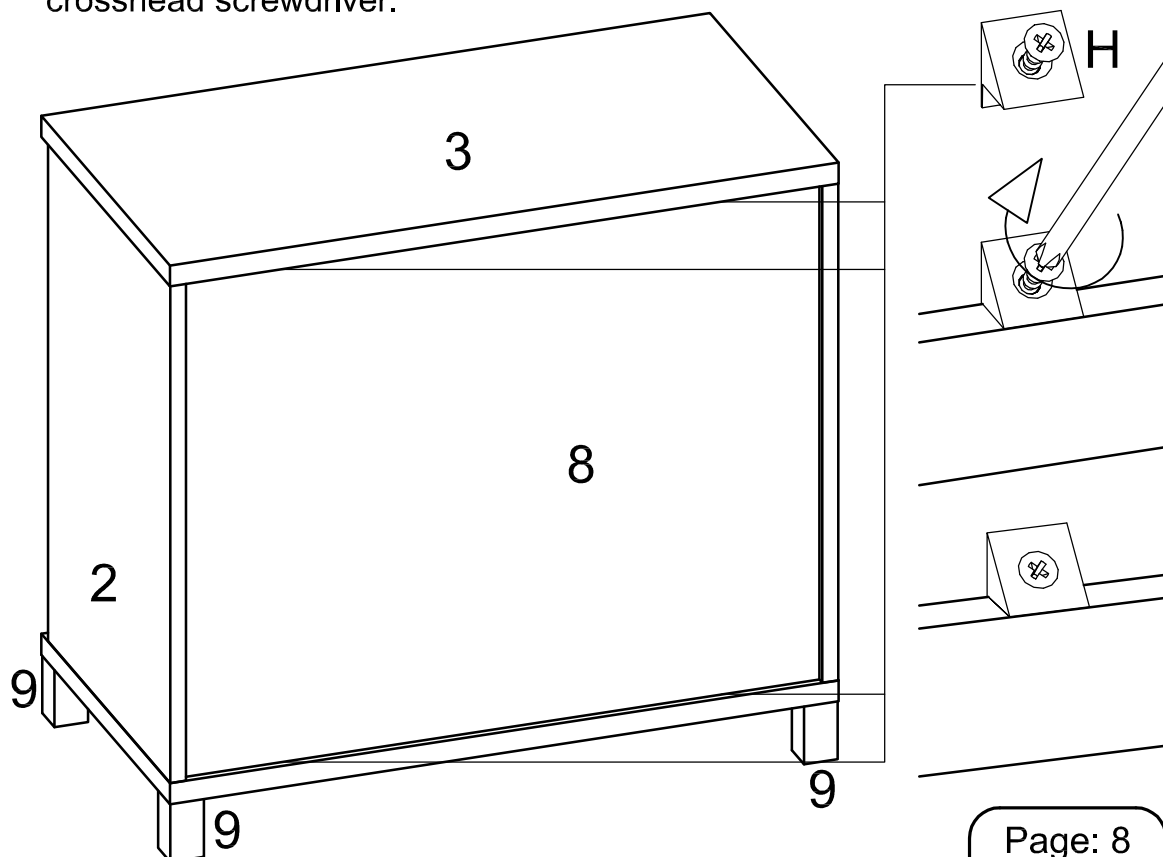




## Step 13

Insert the four cover caps (E) in the holes in the camlocks (L).


Fittings

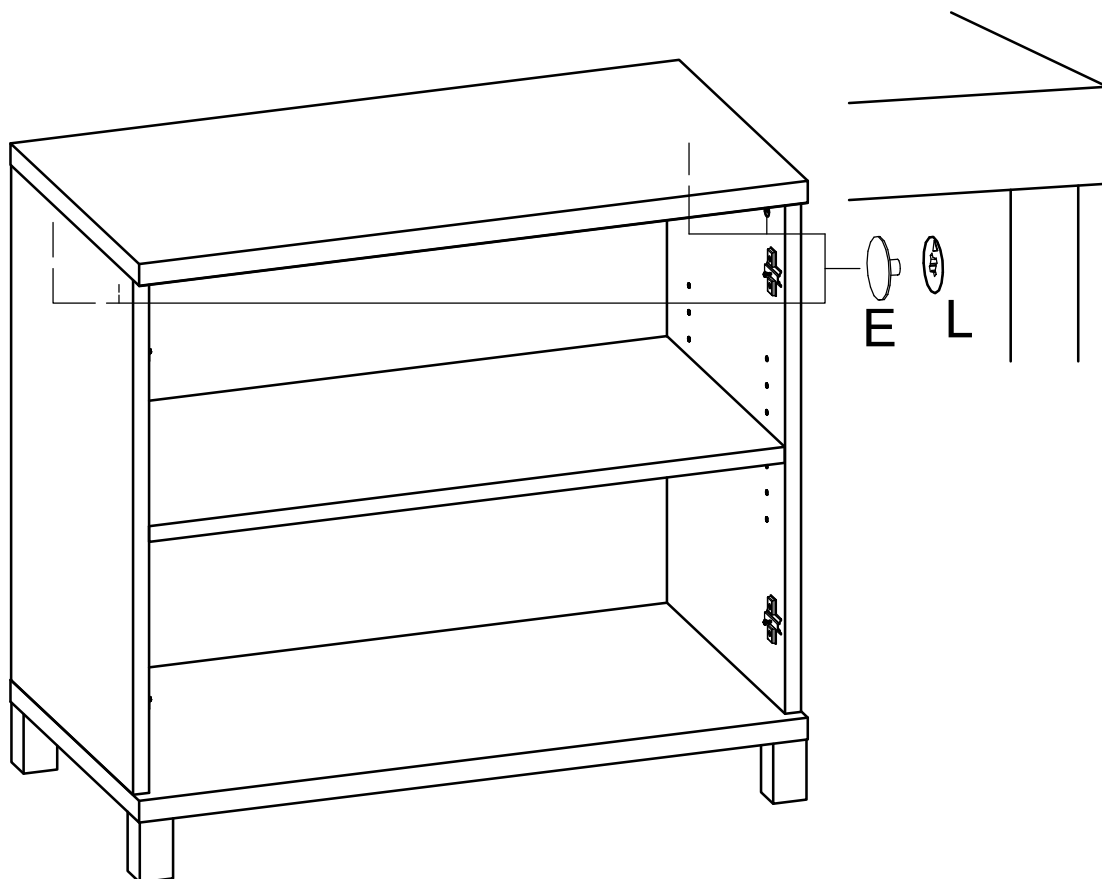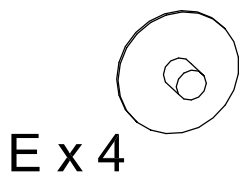

## Step 14


Insert the hinges (A) into the predrilled holes in the left (6) and right doors (7) and tighten the screws.

Fittings

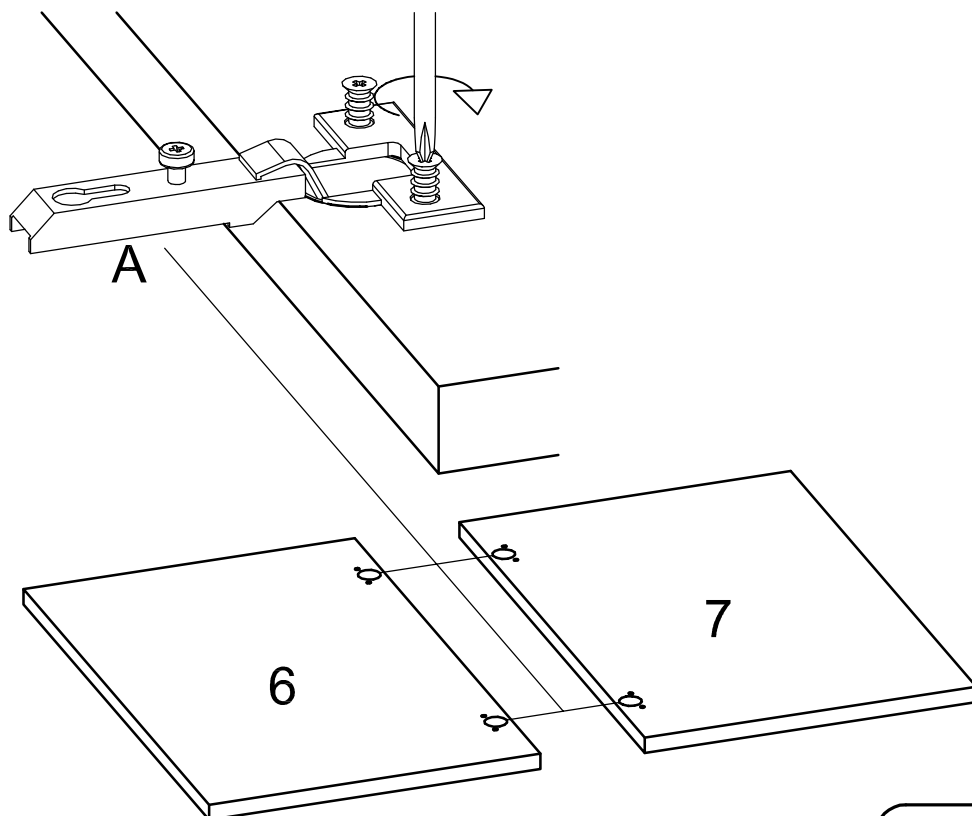


## Step 15

Attach the doors (6, 7) onto the sides as shown below.  
Adjustment of the door is possible using the screws on the hinges.

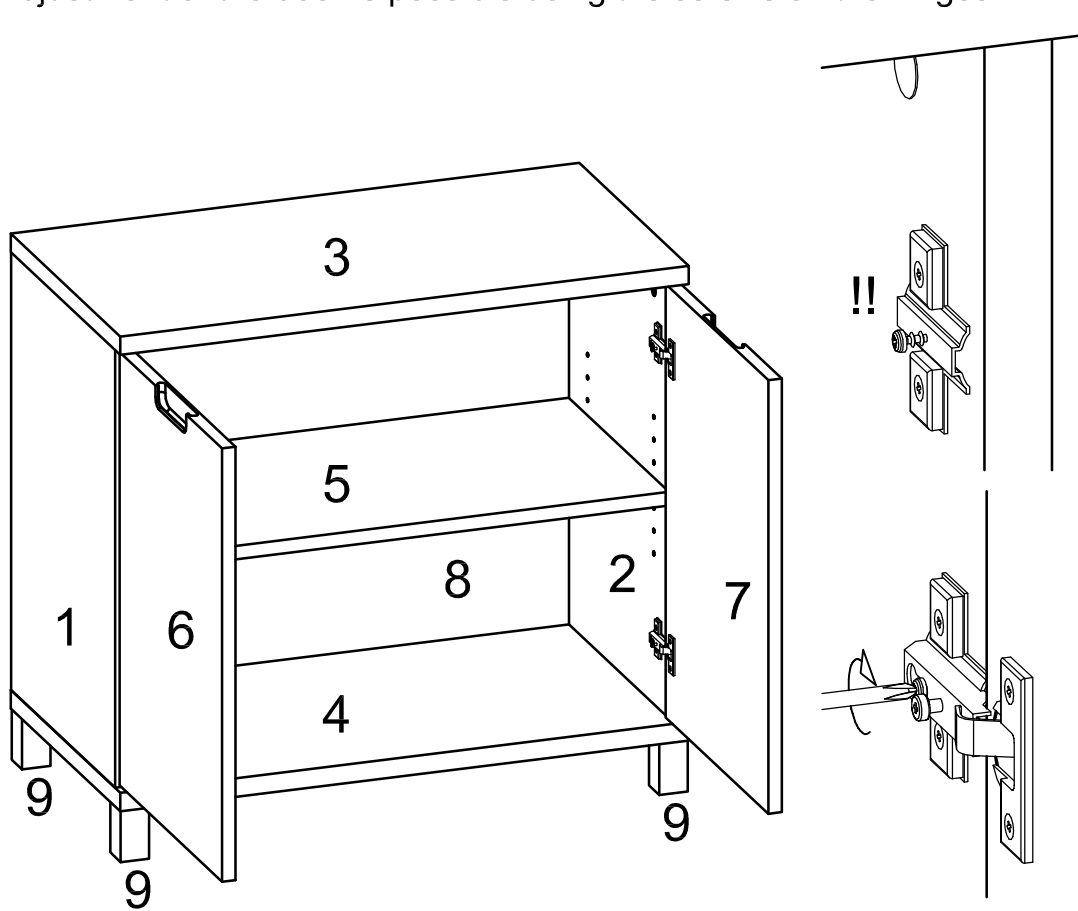


These pictures show adjustment of the doors

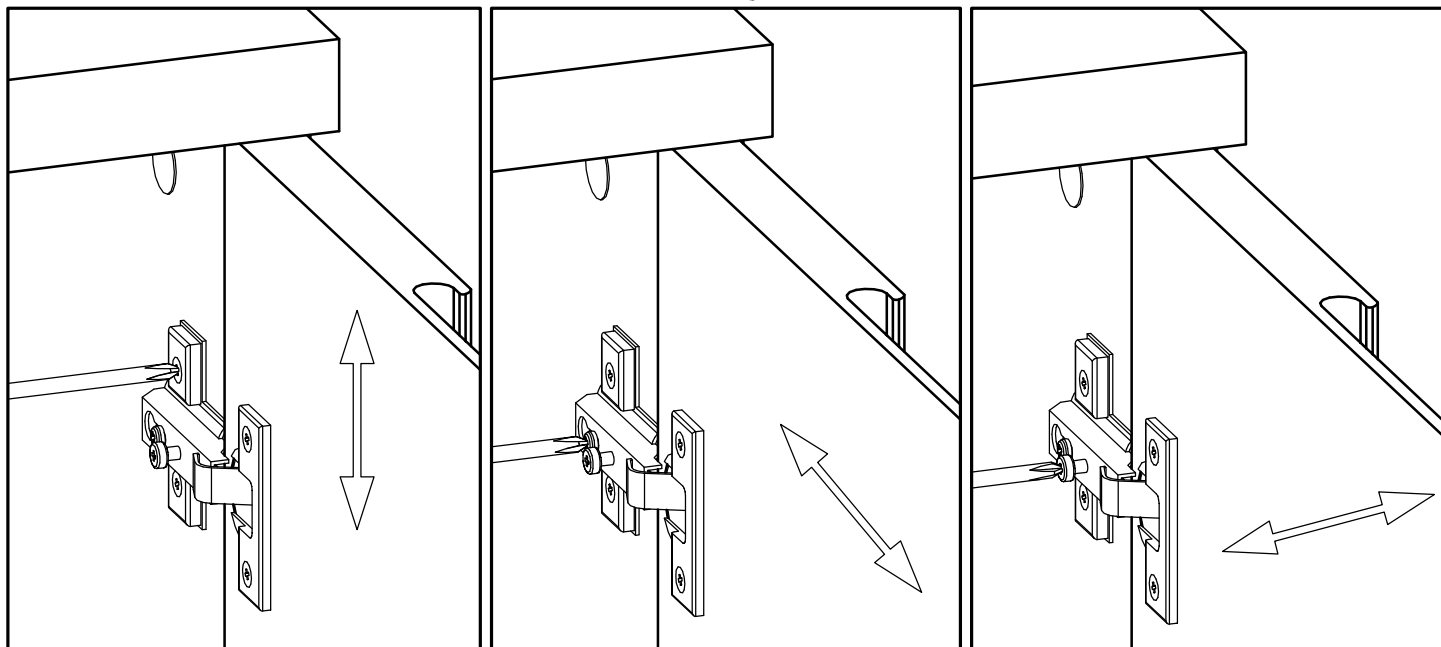


## Step 16

Stick the plastic buffers (J) onto shelf (5) as shown in picture.  
The assembly is now complete.

Fittings

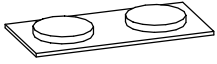


J x 1

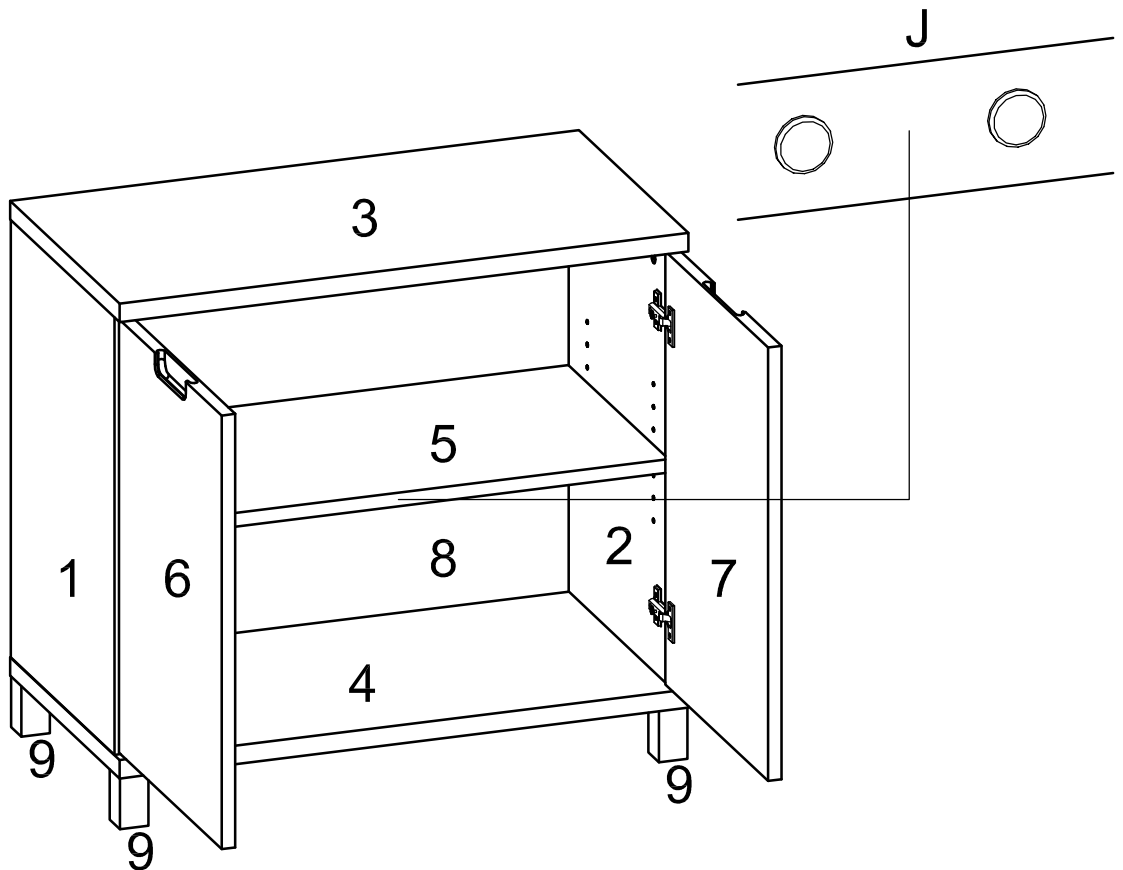


### WARNING

Always lift the unit from the base when moving it, do not drag along the ground, as this may damage the legs. It is recommended that two people should move the unit, never move it alone.

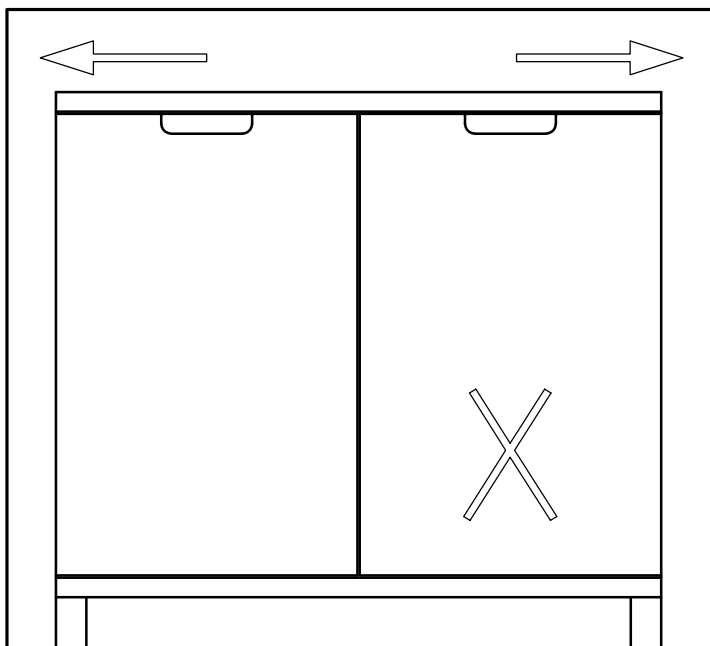

**NEVER DRAG UNIT ALONG THE GROUND**

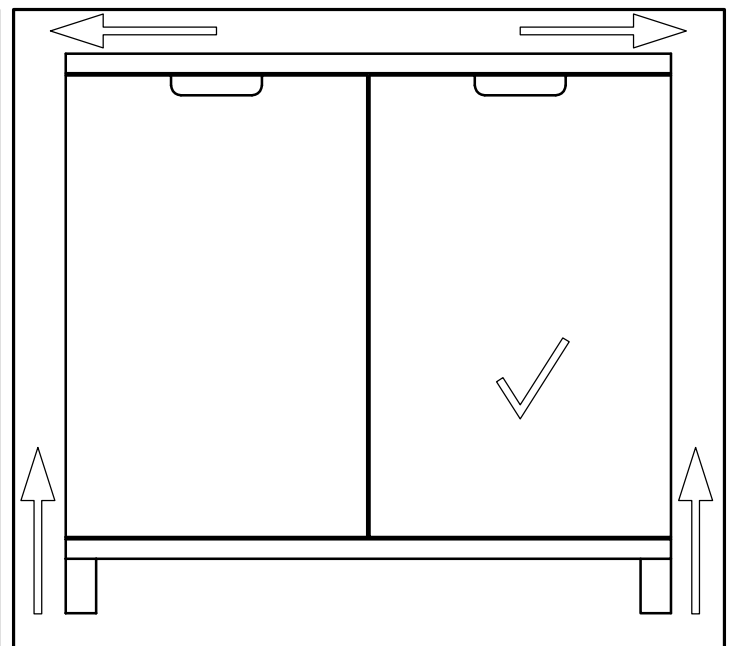

**ALWAYS LIFT THE UNIT FROM THE BASE WHEN MOVING**