

John Lewis


## Helston 2 door Wide Wardrobe

Stock number: 80311205 · 80311311 · 80317207

---

Thank you for purchasing Helston 2 door wide wardrobe. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

---

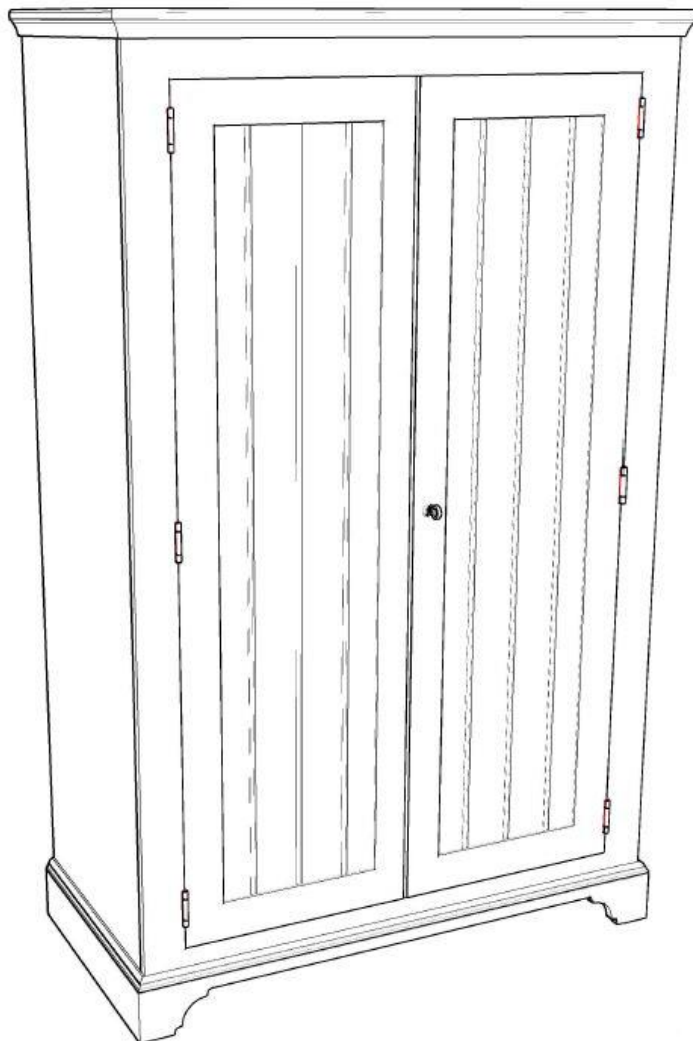

### Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

---

Necessary Tools



---

**DO NOT USE POWER TOOLS !**

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the number on the front of this assembly instruction.

This product is **HEAVY**, it should be assembled as near as possible to the point of use.  
**TAKE CARE WHEN LIFTING** to avoid personal injury or damage to the product.

This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.


Read this leaflet in full before commencing assembly.






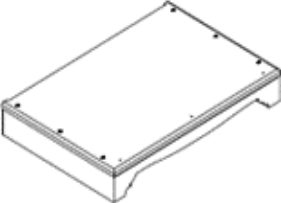




---

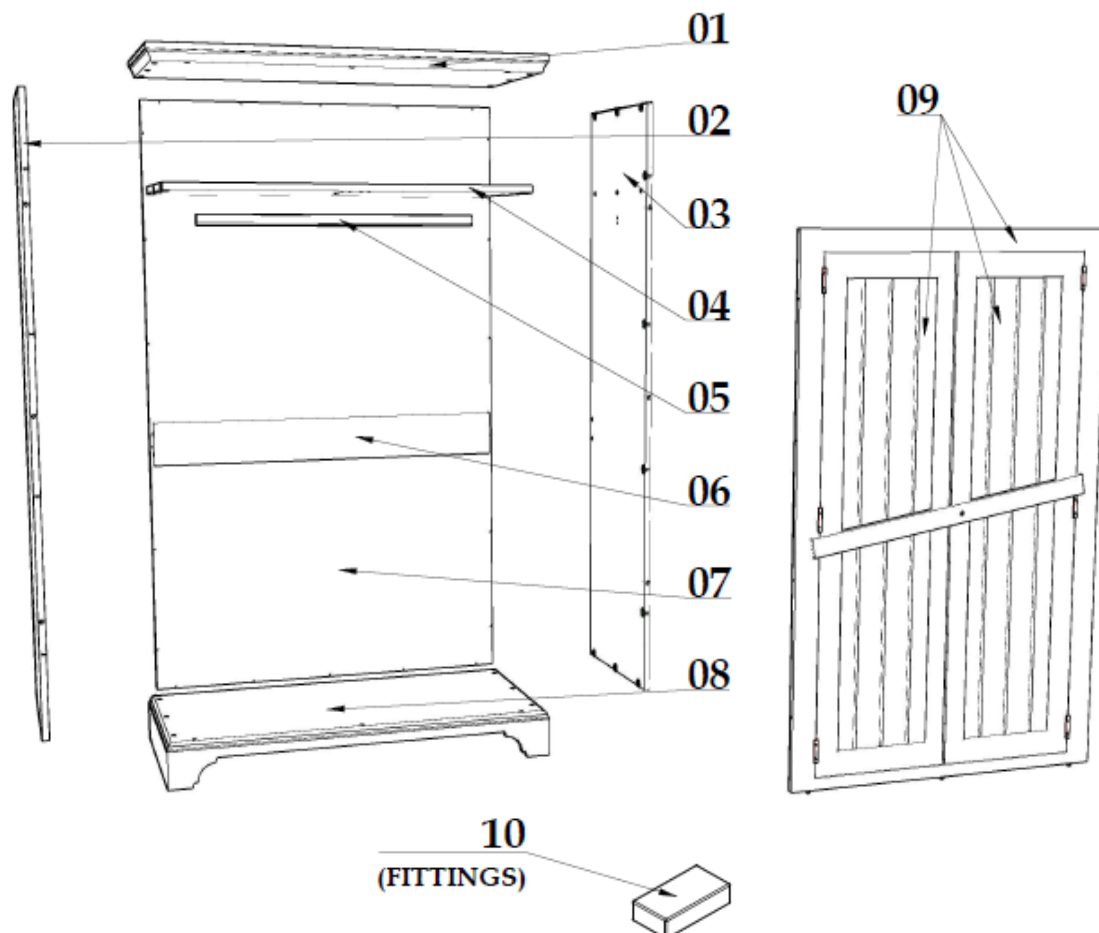






## Fittings and parts checklist

---

If you are missing some fittings please contact our spare parts helpline on 01691 770 157



01	1 x Top		06	1 x Support	
02	1 x LHF S. Panel		07	1 x Back Panel	
03	1 x RHF S. Panel		08	1 x Base	
04	1 x Top Shelf		09	1 x Front Door	
05	1 x Hanging Rail		10	1 x Fittings Box	

A	33 x Fittings	
B	2 x Fittings	
C	10 x Screws	
D	1 x Fitting	
E	1 x Sham Key	
F	2 x Adjustable Magnets	
G	32 x Screws	


## Step by step assembly instructions

---

### Step One

Lay parts **(01) & (08)**, **(02) & (03)** and add cams **(A)**. **PLEASE PLACE THE PARTS ON A SMOOTH SURFACE**, in order not to scratch the paint.


Fittings **( F )** must be screwed in to the shelf **(04)** holes predrilled by using screwdriver and 4x screws **( C )**. Fittings **( B )** must be screwed in to the lhs panel **(02)** and rhs panel **(03)** holes predrilled by using screwdriver and 4x screws **( C )**.

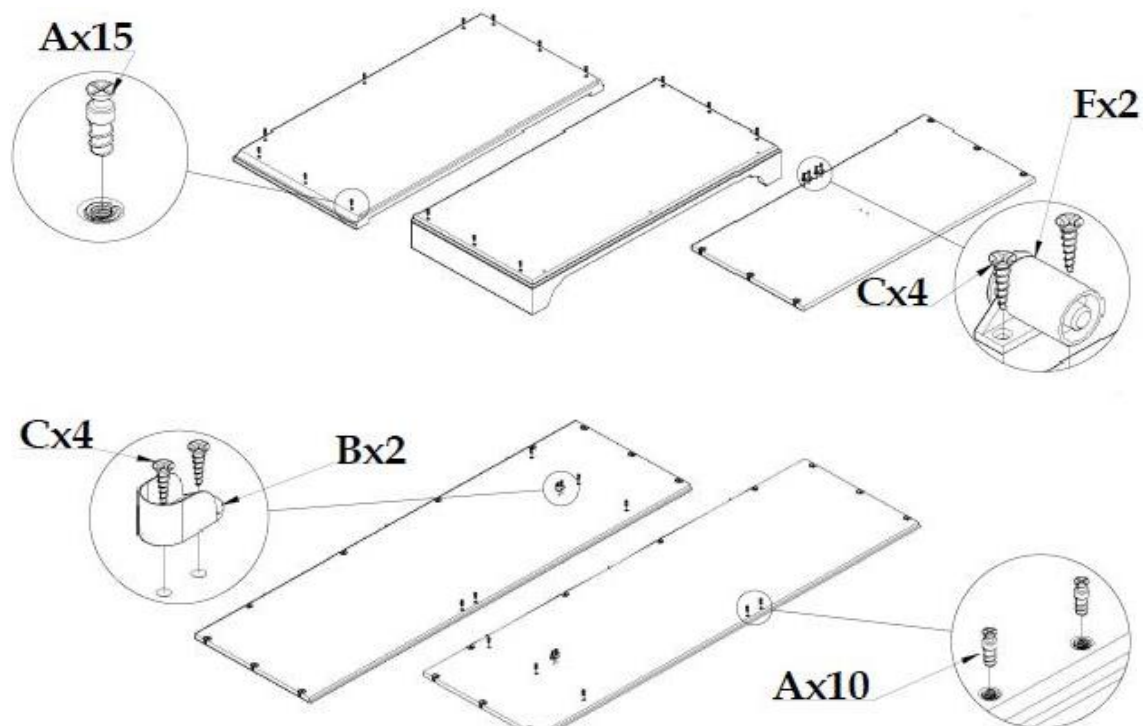

## Step Two

### Two persons required.


Lay part **(09)** on the ground. **PLEASE PLACE THE PARTS ON A SMOOTH SURFACE**, in order not to scratch the paint. Please take the doors from the box as per picture below according to the arrows direction shown. All fittings **(A)** must be screwed into the pre fitted cams on the front panel **(11)**.

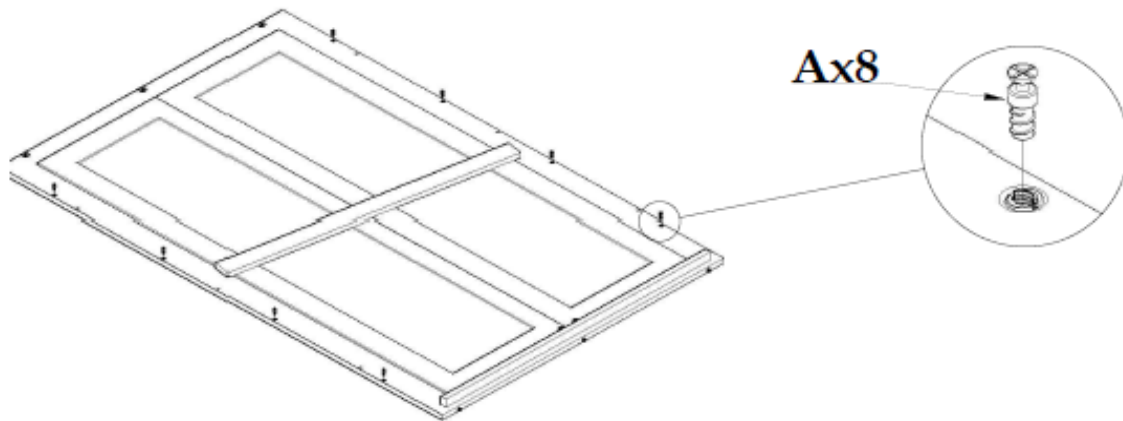

## Step Three

### Two persons required.


Please position **(02)**, **(03)**, **(04)** and **(08)** parts as shown in the picture. All fittings **(A)** must go into prepared holes with the cam. Side panels **(02)** and **(03)** attach to the shelf **(04)** and base **(08)** according to the arrows direction shown. If cams don't lock into place please use screwdriver to adjust them. After all pieces are pre assembled, please use screwdriver to adjust the cams and tighten up all the components.

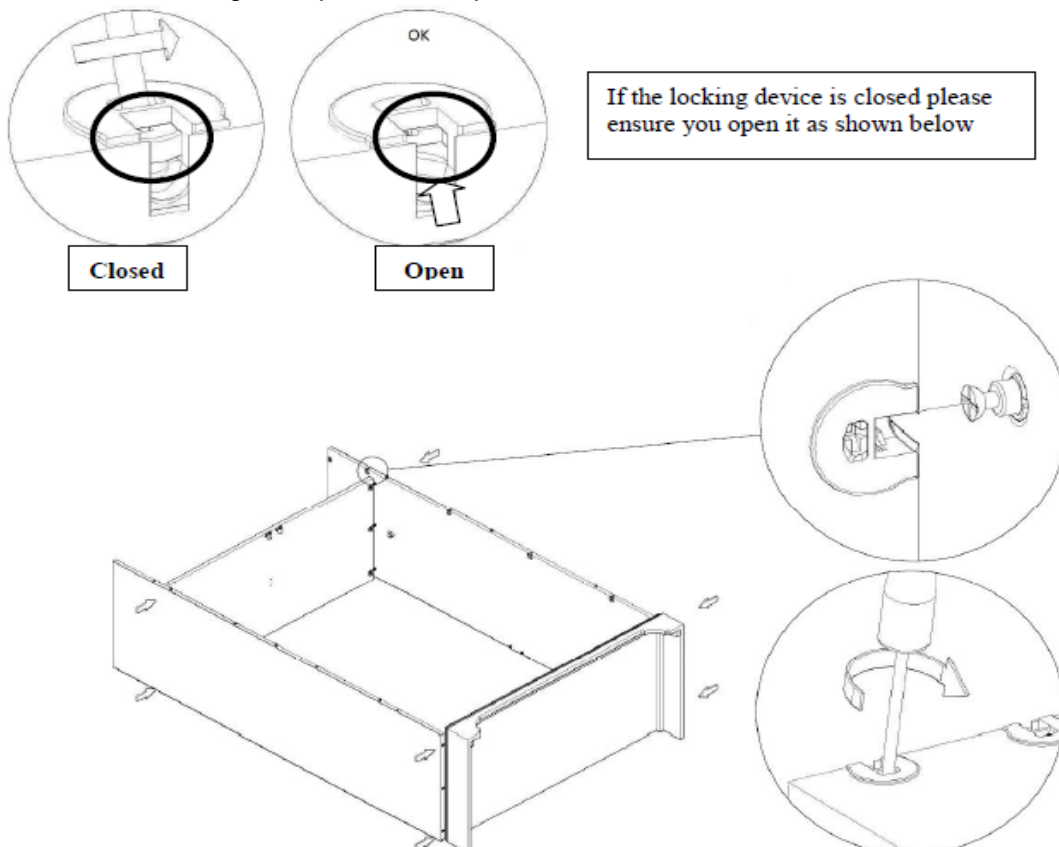

## Step Four

### **Two persons required.**

Please position the assembled wardrobe components vertically on the base of the wardrobe as shown in the picture. Please angle the front frame as per diagram and locate the dowels into the bottom holes. Front **(09)** must attach to wardrobe frame according to the arrows direction shown. Tighten with a screwdriver.

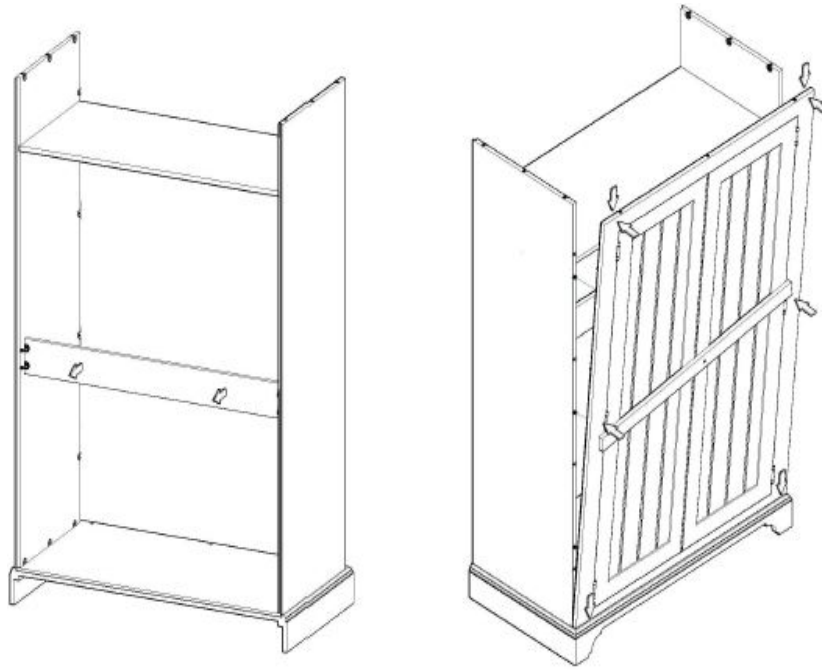


---

## Step Five

### **Two persons required.**

Please attach top **(01)** as shown. Tighten the top **(01)** with a screwdriver.

To remove the supporting door system please unscrew the middle screw as shown below. This is a two man job - the other person should secure the other side.

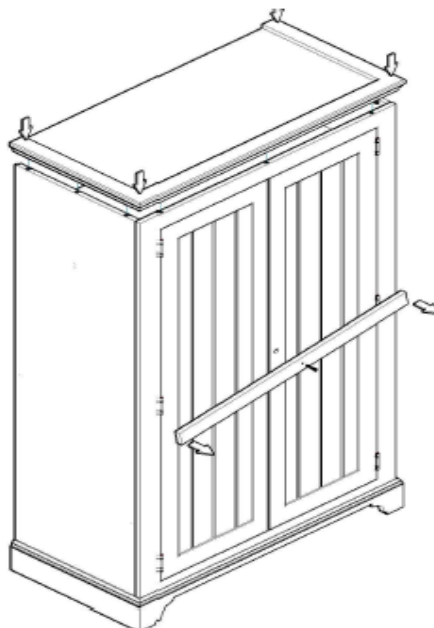


## Step Six

Please insert 1x sham key handle (**E**) into the front door and secure screw from inside the door. Attach the back panel to the wardrobe, use 32x screws (**G**) to tighten the panel to the wardrobe.

Hanging rail (**05**) must be placed to pre screwed (**Step One**) 2x fittings (**B**) on side panels.

Please tighten fitting (**D**) using 2x screws (**C**) to the holes prepared.

Please adjust the magnets by hand to get doors in right position.

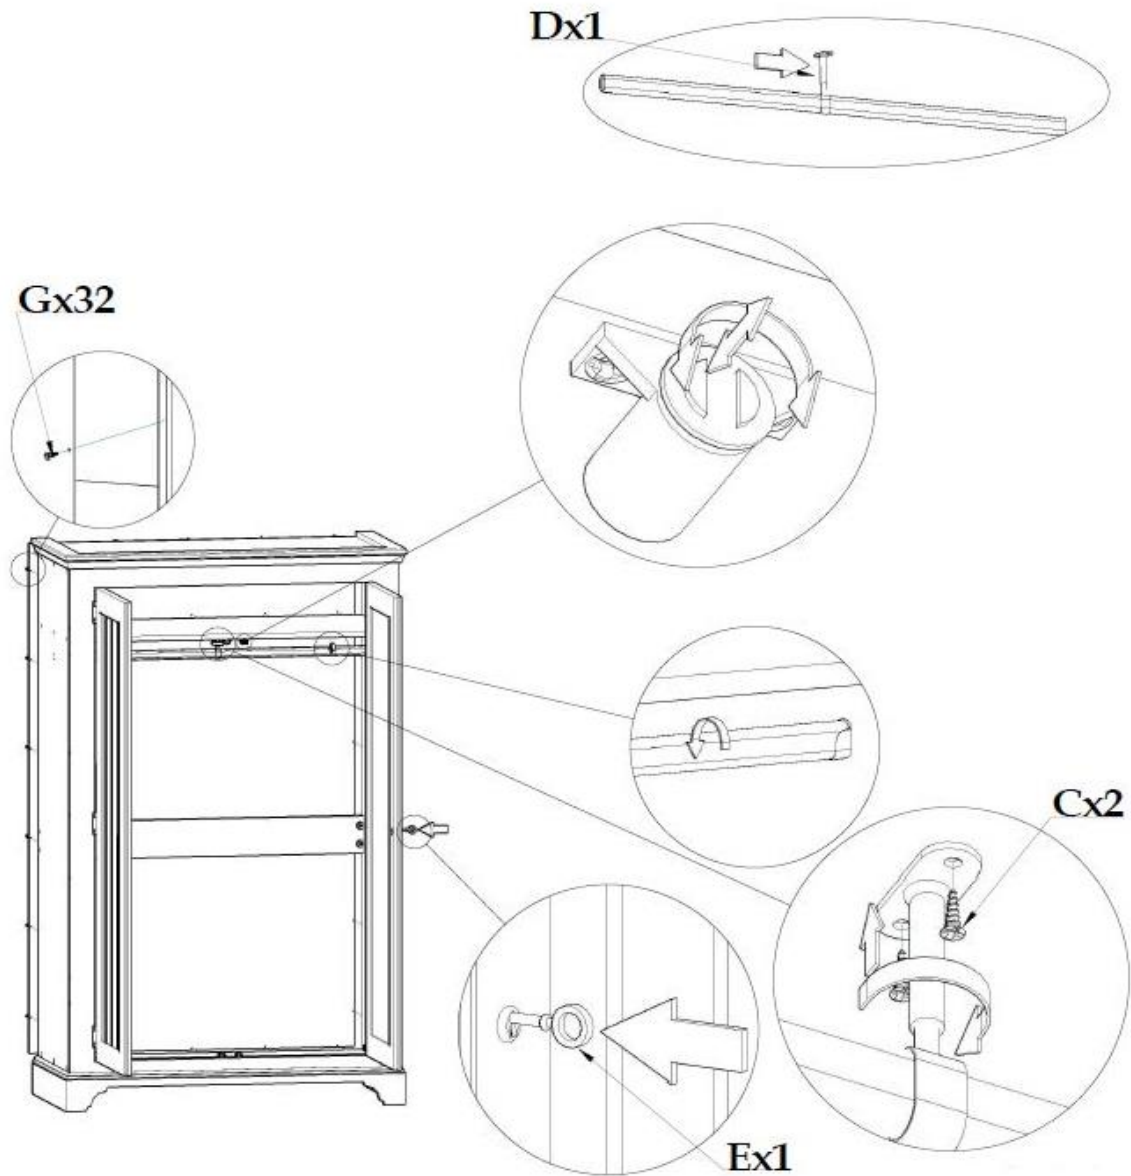

---

## Care and Maintenance

---

The Helston range is a timeless painted bedroom range in either white with metal cup handles or ivory and grey with solid oak tops and metal cup handles. Each piece has been carefully constructed to ensure it will give you years of pleasure. The natural characteristics of oak may include small cracks, knots, blemishes, and grain pattern variations which all add to the natural charm and beauty of this furniture product. Each piece is unique, and for this reason no two pieces within the range will perfectly match, however there will be harmony between all the

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

### How to care for your furniture

Try to avoid prolonged exposure to direct sunlight as this may alter the colour and tone of your furniture over time.

Any spillages that do happen should be wiped up immediately with a clean dry lint free cloth to avoid marking the surface of the furniture.

---

## Safety Instructions

---

### General warnings:

Never drag furniture when moving it always lift it. Periodically check all fixings to ensure none have come loose and re-tighten where necessary. Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

### Specific warnings for heavy items:

It is recommended that before moving heavy objects to a new location they are completely disassembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

### PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN

[www.johnlewis.com](http://www.johnlewis.com)