

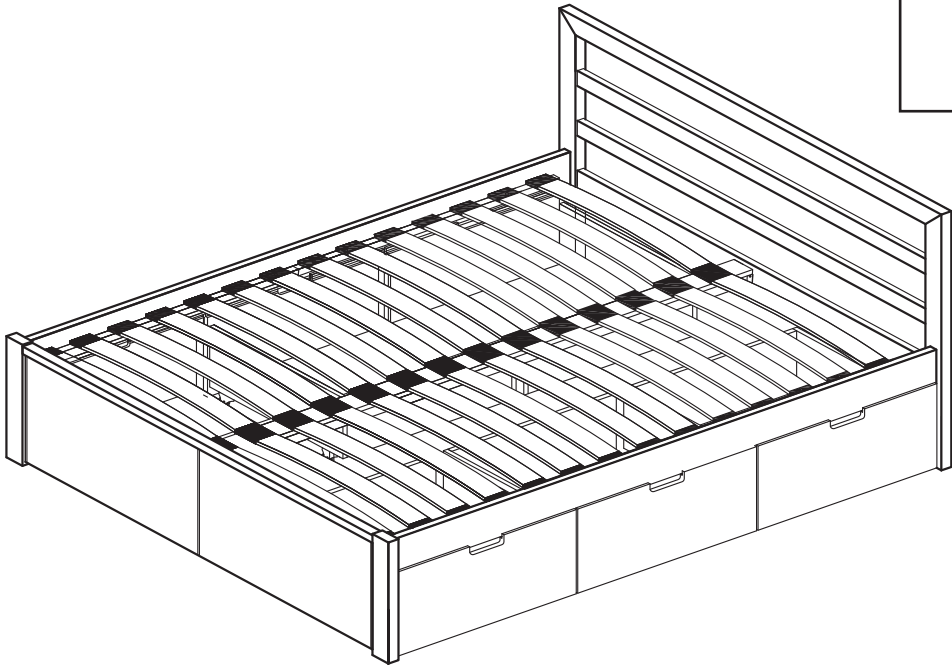
Ollie Oak Storage Bed

Double

Stock Code: 803/46601

Thank you for purchasing this Ollie Storage Bed. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.


For product support or spare parts please call the John Lewis Helpline;
T: 01244 689949
E: mail@fwgroup-uk.com



PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

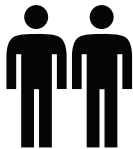Necessary Tools



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the John Lewis Helpline.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

This product takes approximately **35 MINUTES** to assemble with **2 PEOPLE**.

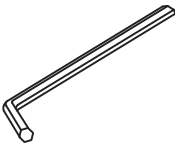





The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.






If you require any additional information or have any issues with this product please call the John Lewis Helpline on 01244 689949 or email mail@fwgroup-uk.com

Fittings and parts checklist - Bedstead

Fittings

A	4mm Allen Key x1		D		20mm Screws x8
B	M8 x 22mm Bolt x8		E		Slat Connectors x14
C	Centre Rail Cup x2		F		Cap Ends x28

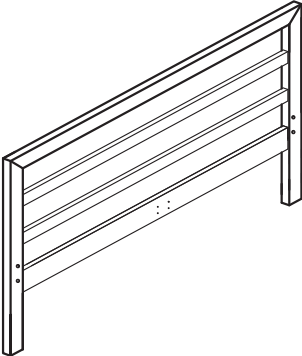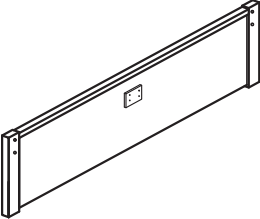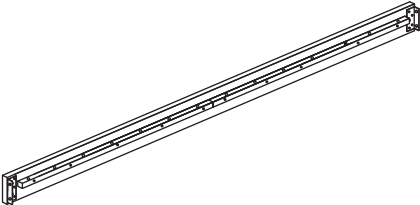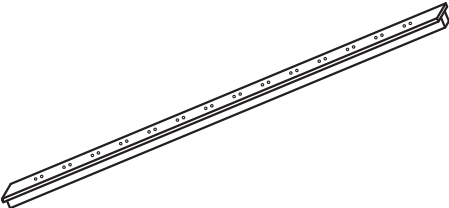
Parts

1	Headboard x 1	
2	Footboard x 1	
3	Side Rail x 2	
4	Centre Rail x 1	
5	Slats x 28	

Step by step assembly instructions - Bedstead


Step One

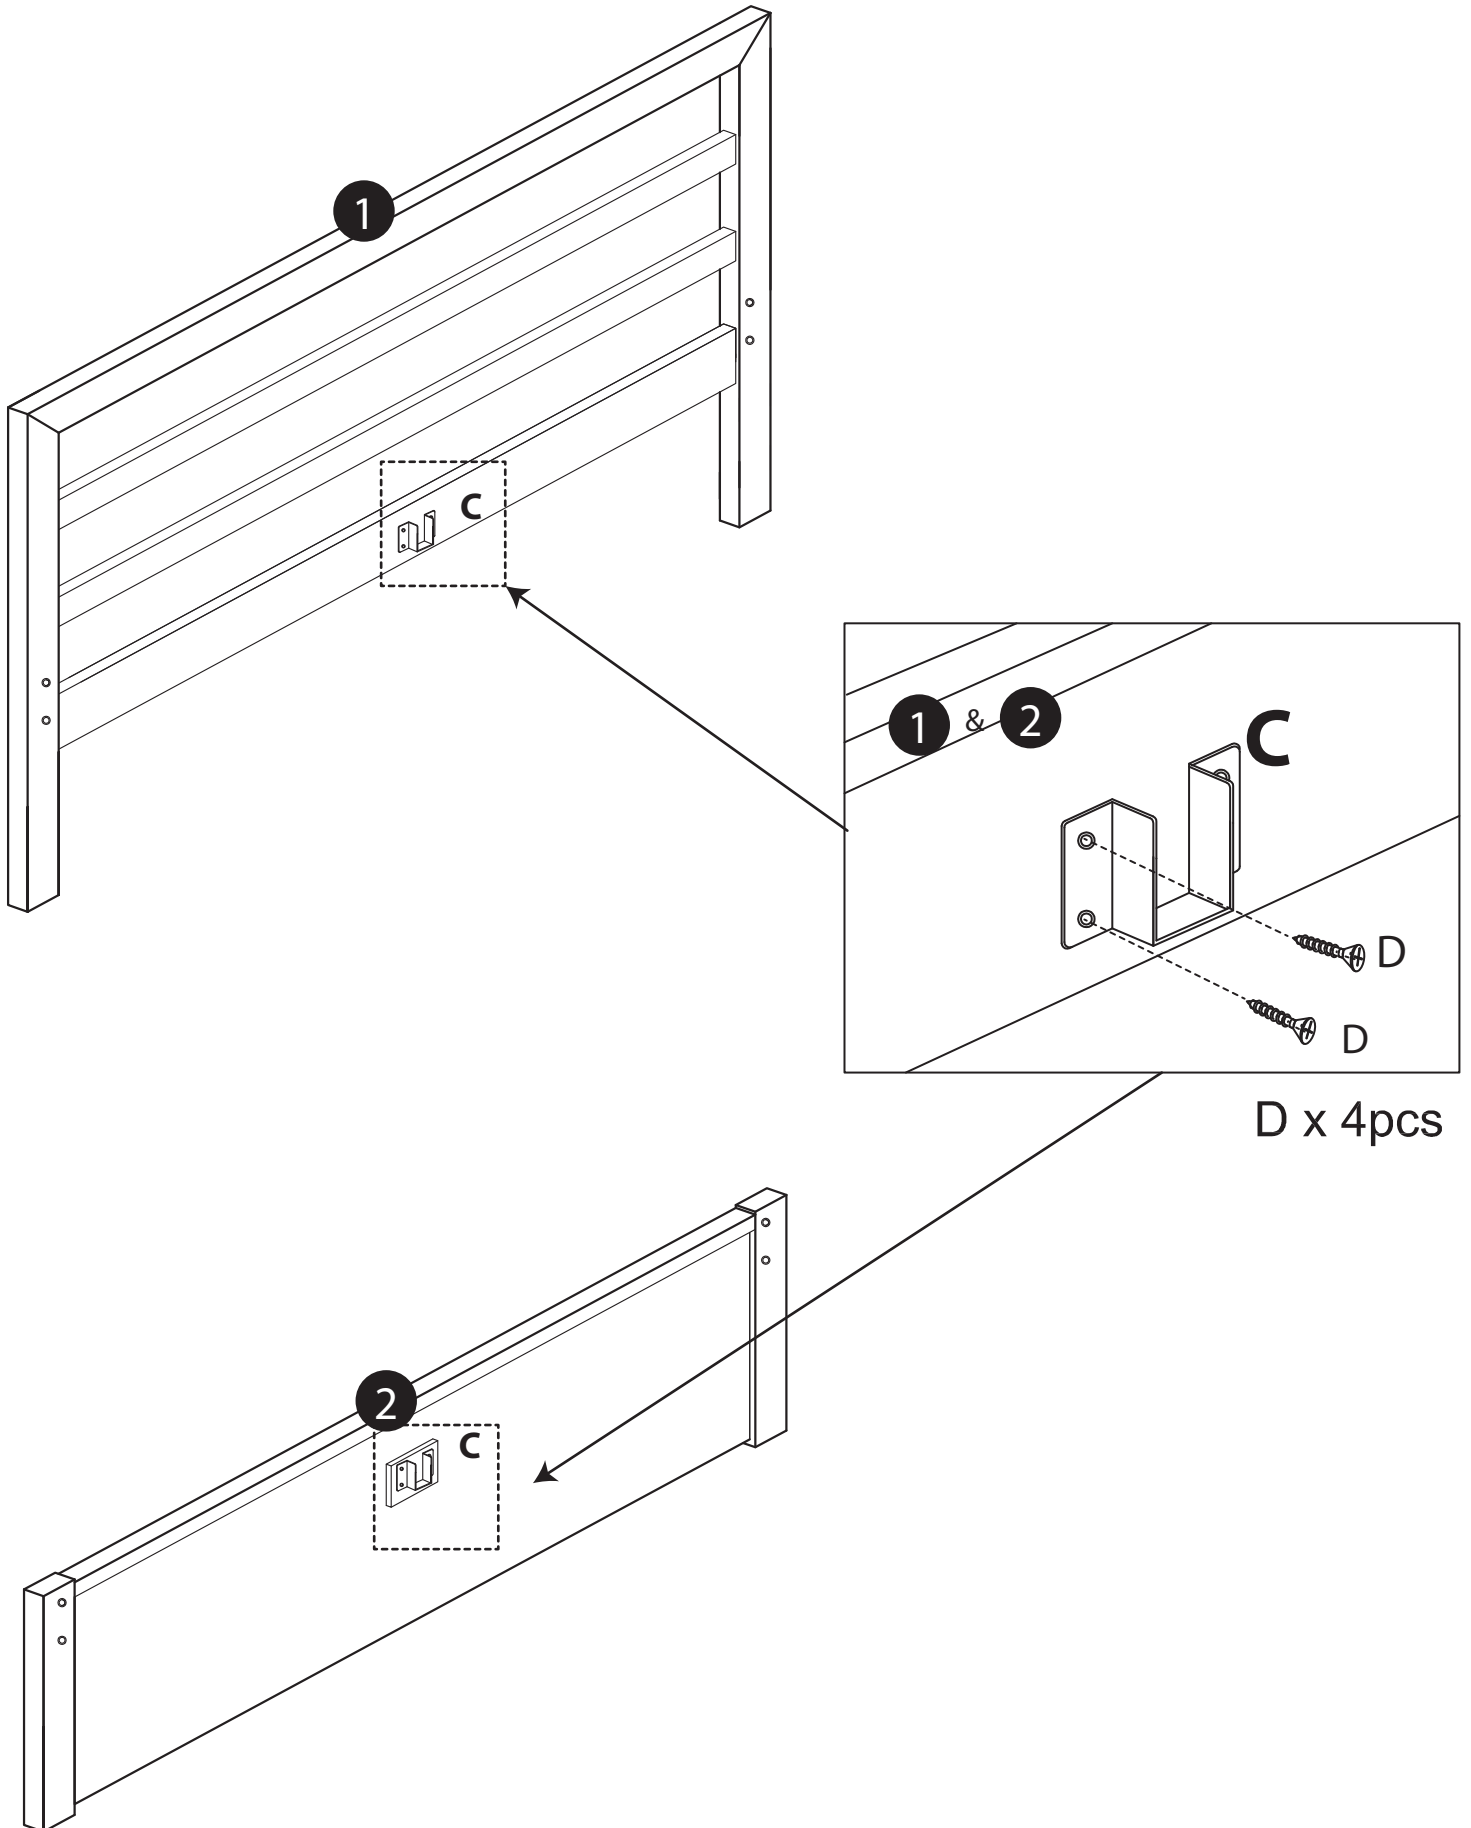Attach the Centre Rail Cup (2) to the lower rail of the Headboard (1) and Footboard (2) using 20mm Screws (D) as shown in the diagram below.




Step Two

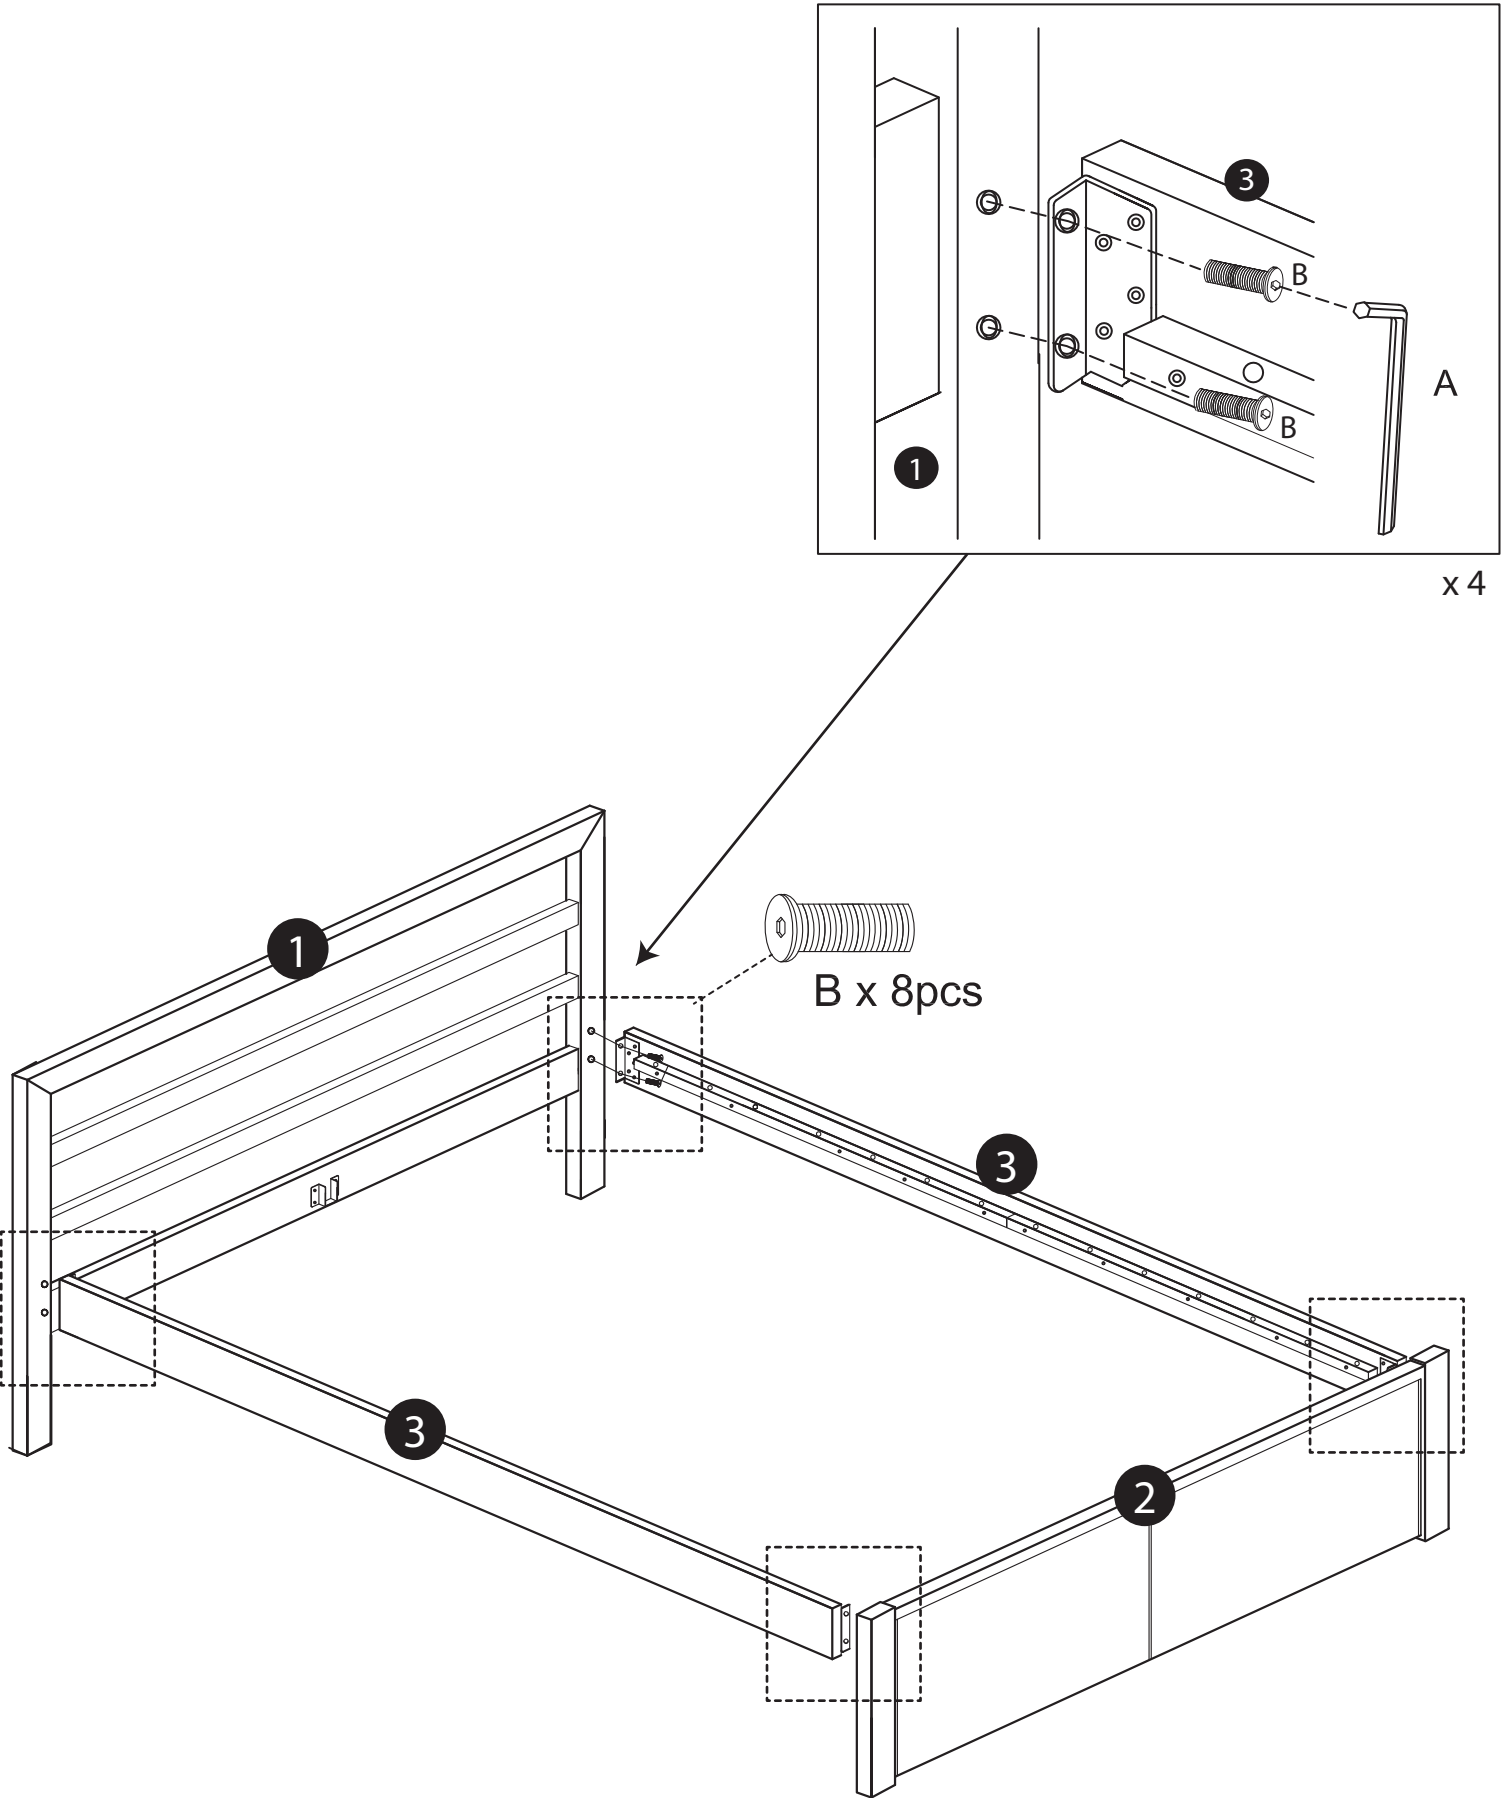Attach the Siderails (3) to the Headboard (1) and Footboard (2) using M8 x 15mm Bolts (B) as shown below. Tighten the Bolts (B) using the 4mm Allen Key (A) provided.




Step Three

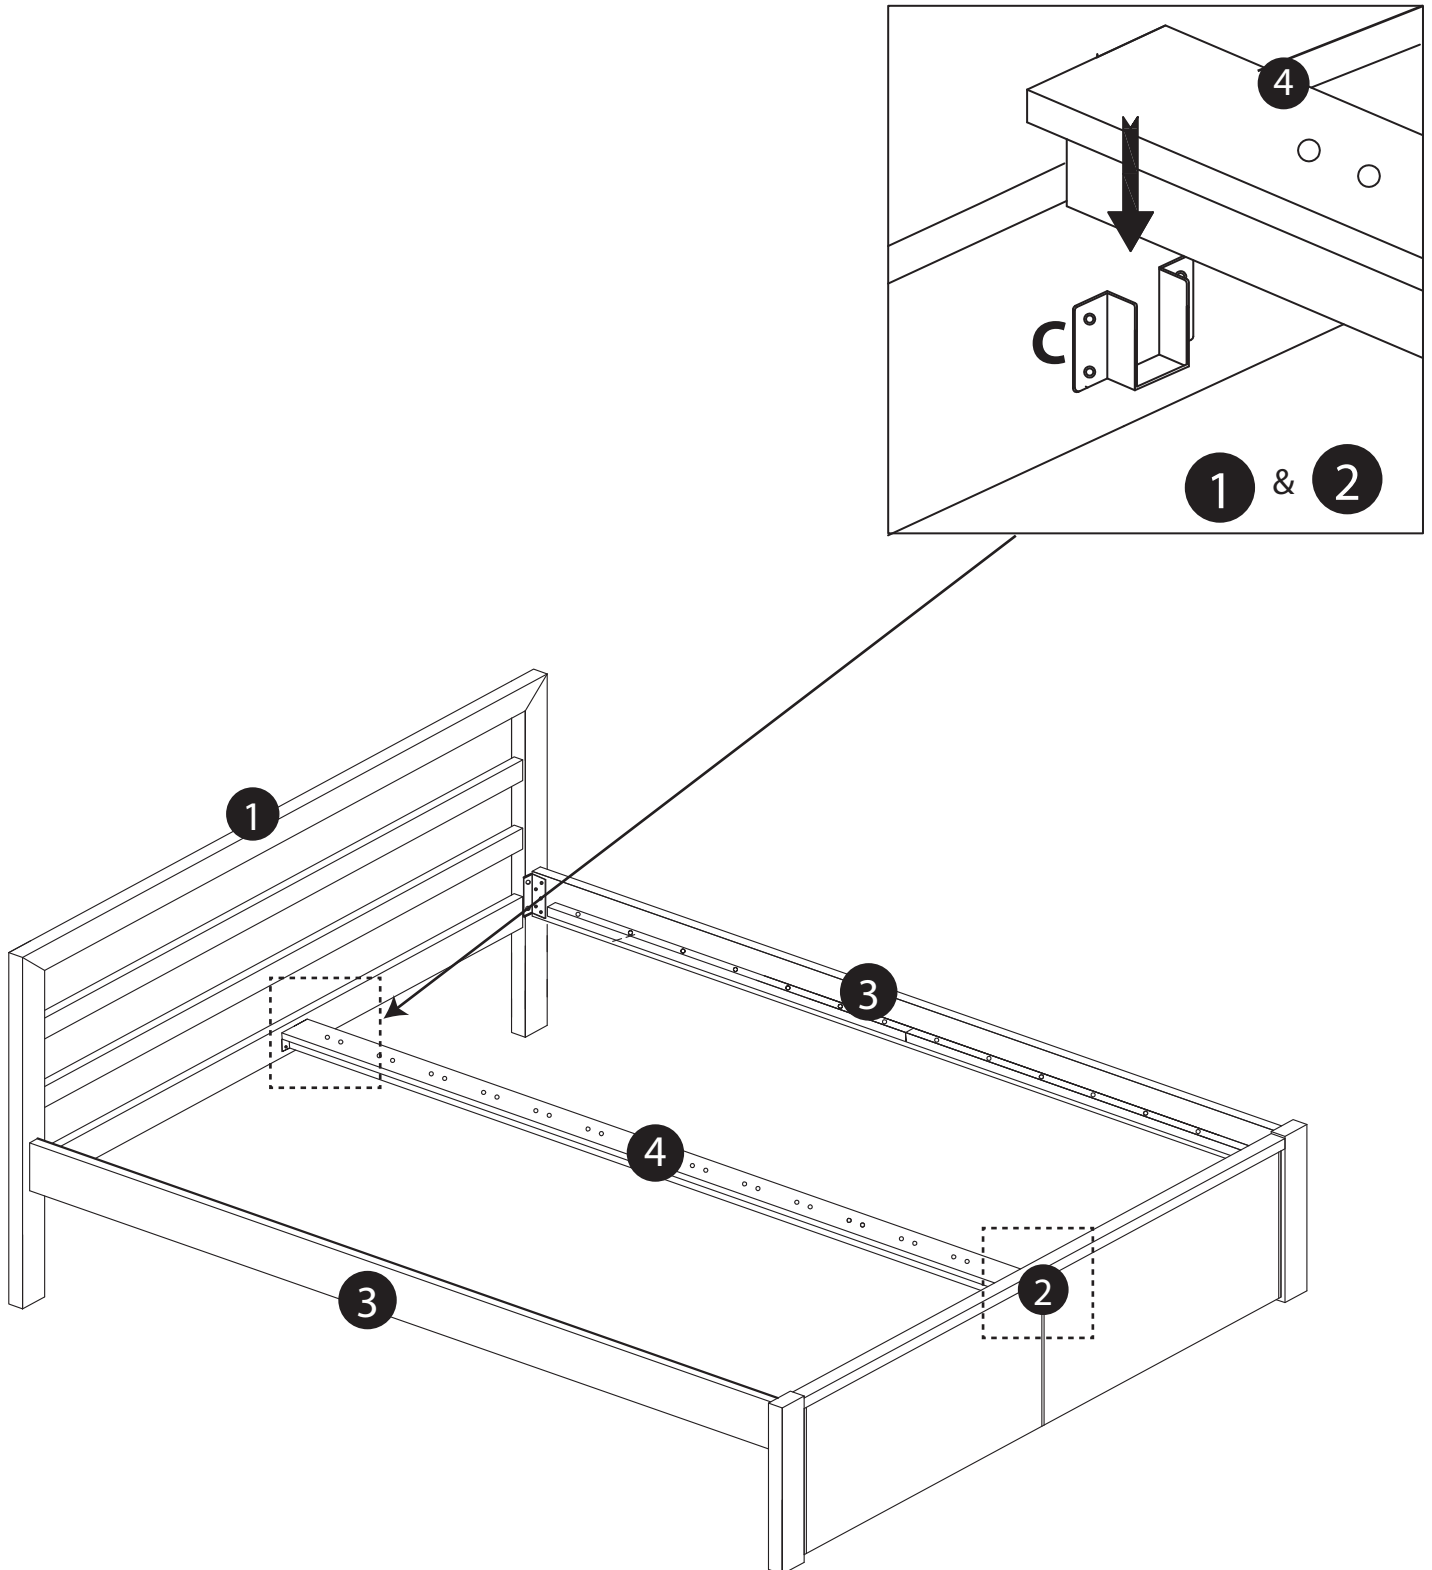Lower the Centre Rail (4) onto the Centre Rail Cups (C) on the Headboard (1) and Footboard (2) as shown in the diagram below.




Step Four

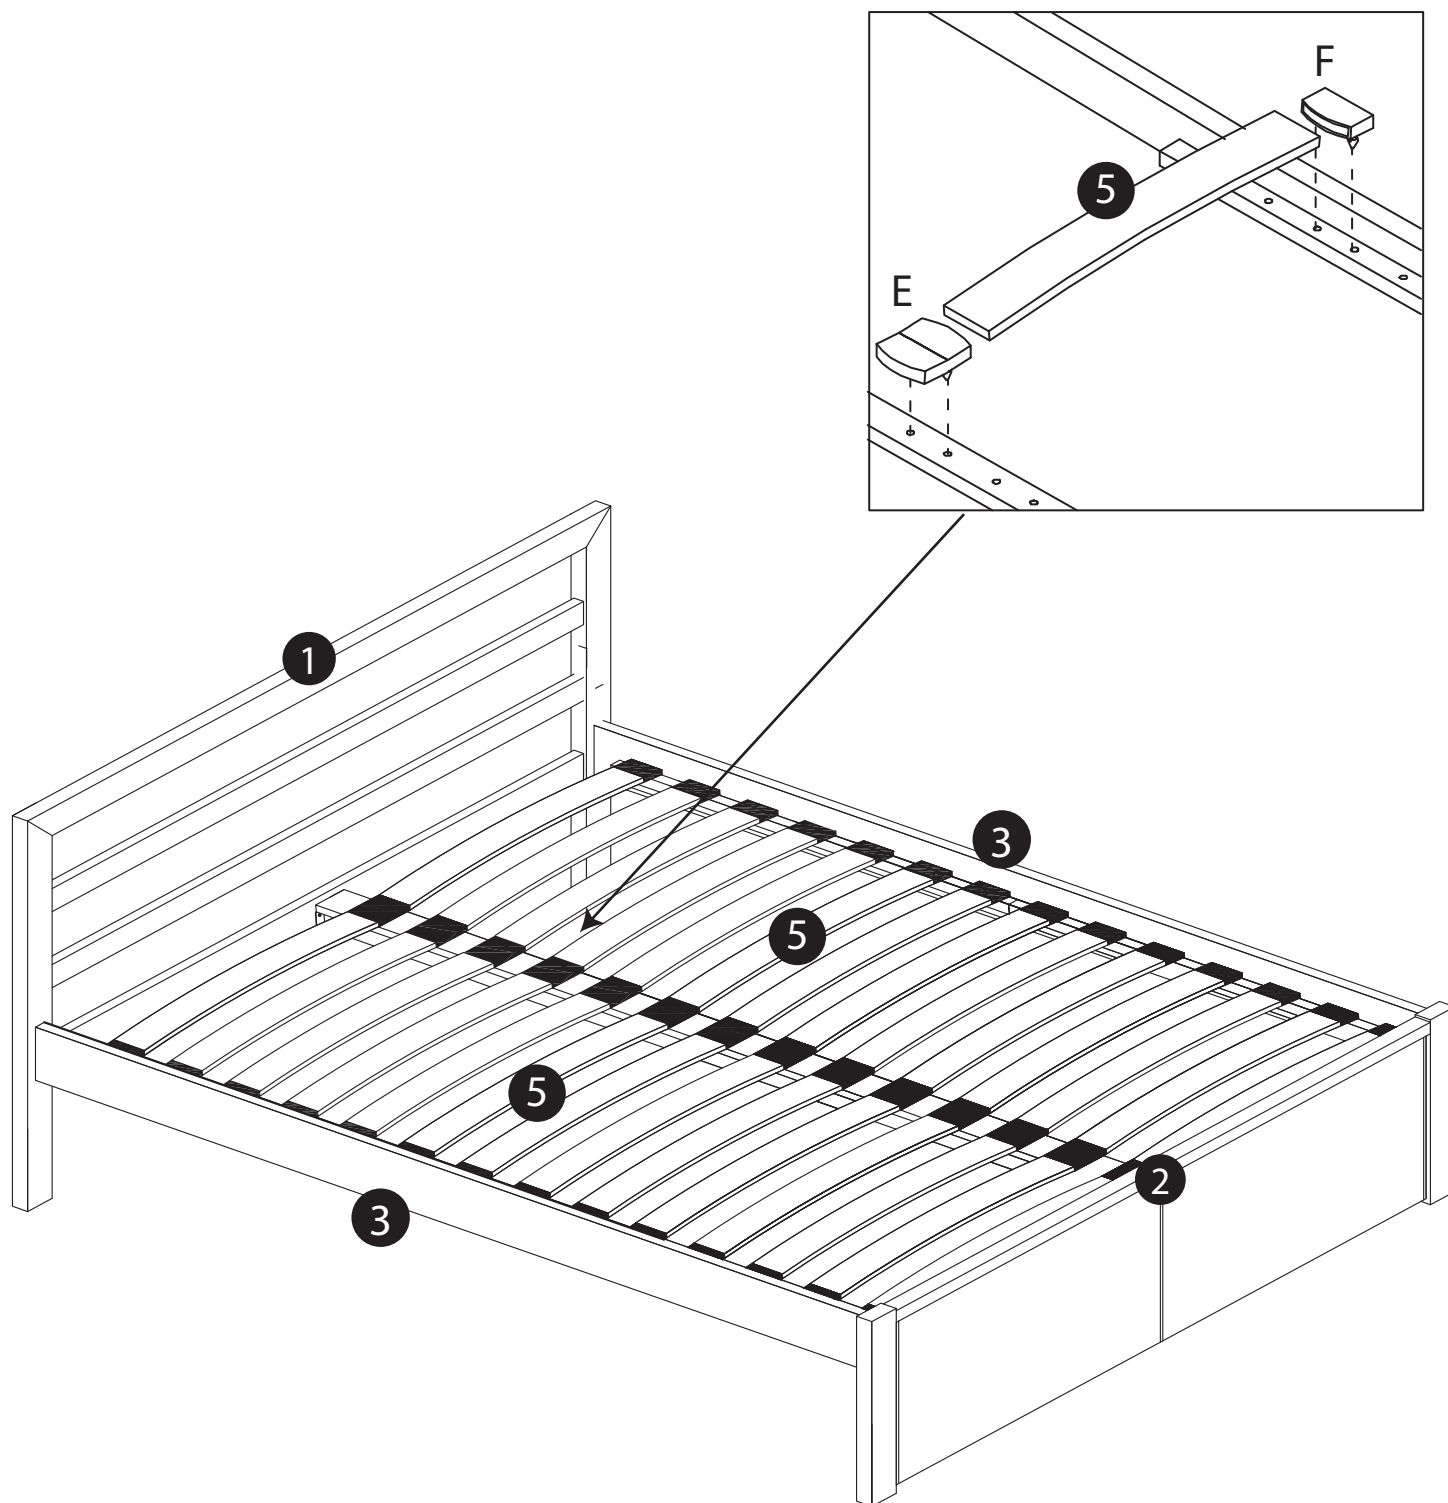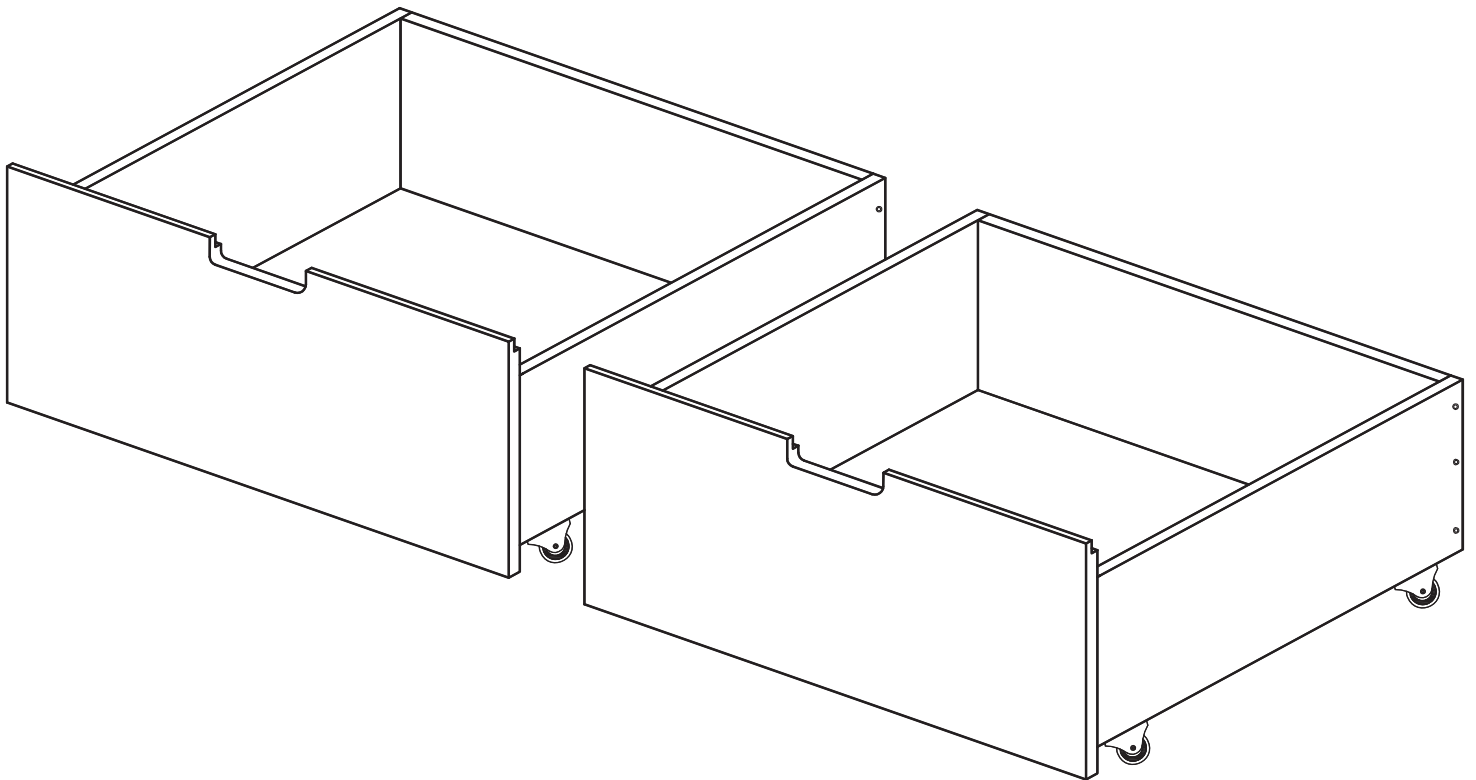Starting at the headend, insert the Slat Connectors (E) along the Centre Rail (4). Ensuring that the Slats (5) are facing curved side up, insert into the Slat Connector (E). Place a Cap End (F) onto the other end of the Slat (5) and push down fully into the pre-drilled holes along the Side Rails (3), as shown in the diagram below. Repeat this process to attach all 28 Slats (5).

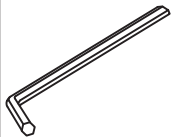






Ollie Oak Storage Bed - Drawers








Fittings and parts checklist - Drawers

Fittings

A	4mm Allen Key x1		D		12mm Screws x24
B	M6 x 30mm Bolt x8		E		35mm Screws x12
C	Castors x8				

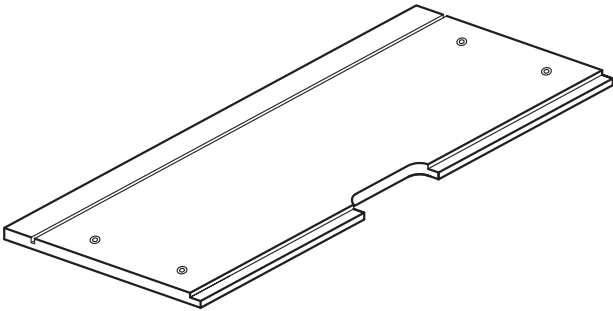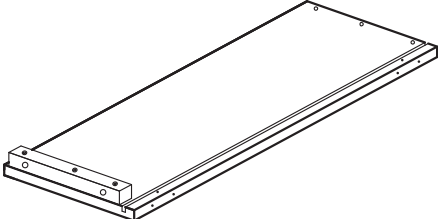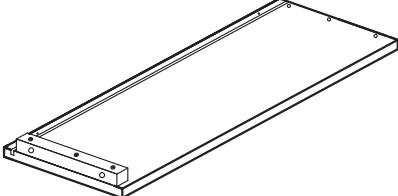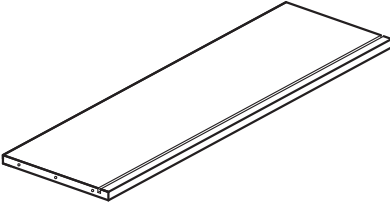
Parts

1	Drawer Fronts x 2	
2	Drawer Left Side Panel x2	
3	Drawer Right Side Panel x2	
4	Drawer Back x2	
5	Drawer Bottom x2	

PLEASE NOTE: THE DRAWERS COME IN PACKS OF TWO SO THE ABOVE CONTENTS IS WHAT EACH PACK INCLUDES.


Step One

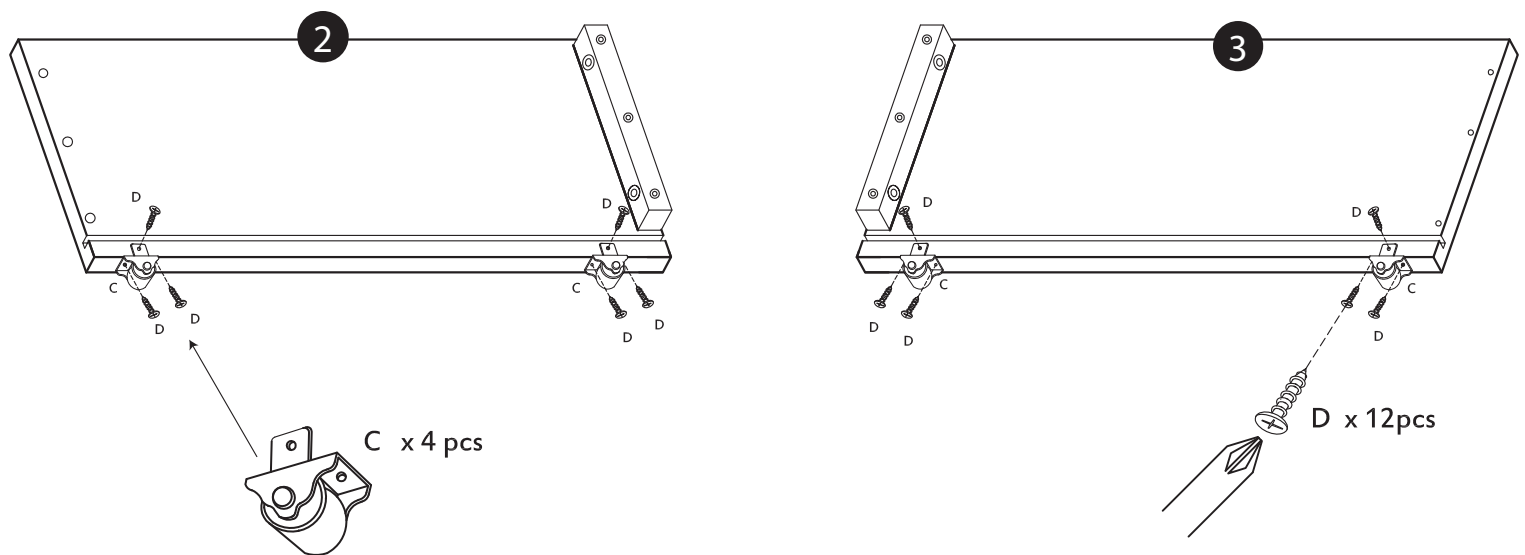Attach the Castors (C) to the Drawer Left Panel (2) and Drawer Right Panel (3) using the 12mm Screws (D) and tighten using a screw driver as shown in the diagram below.




Step Two

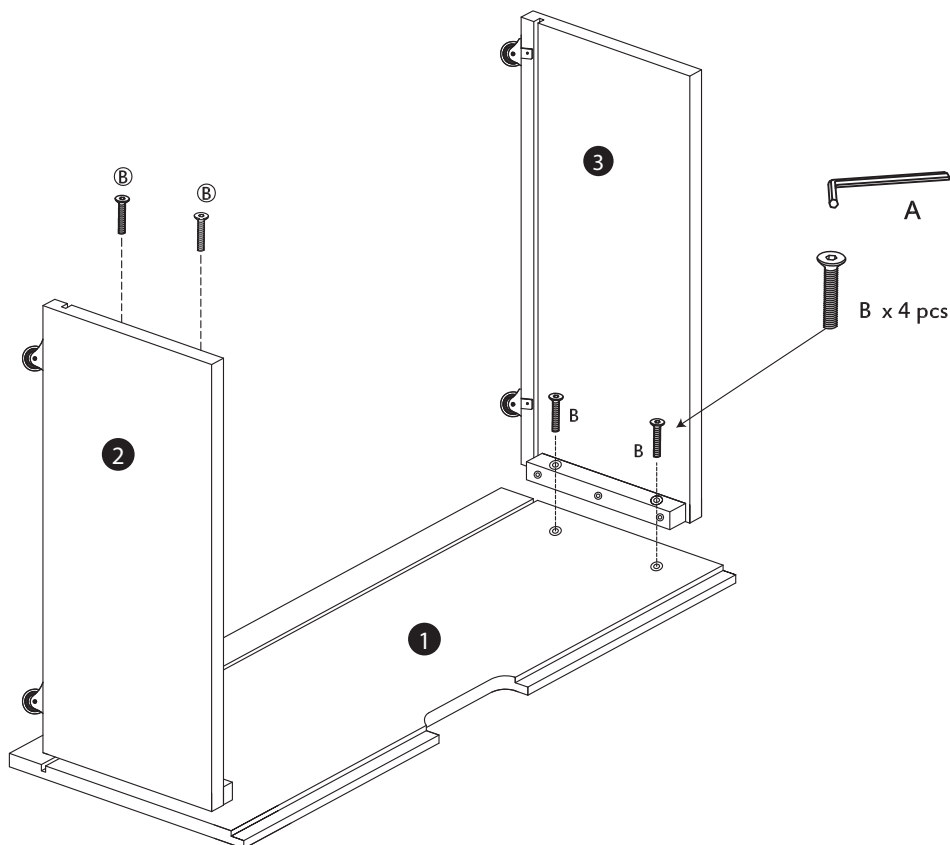Now attach the Drawer Left Panel (2) and Drawer Right Panel (3) to the Drawer Front (1) using M6 x 30mm Bolt (B) then tighten using 4mm Allen key as shown below.




Step Three

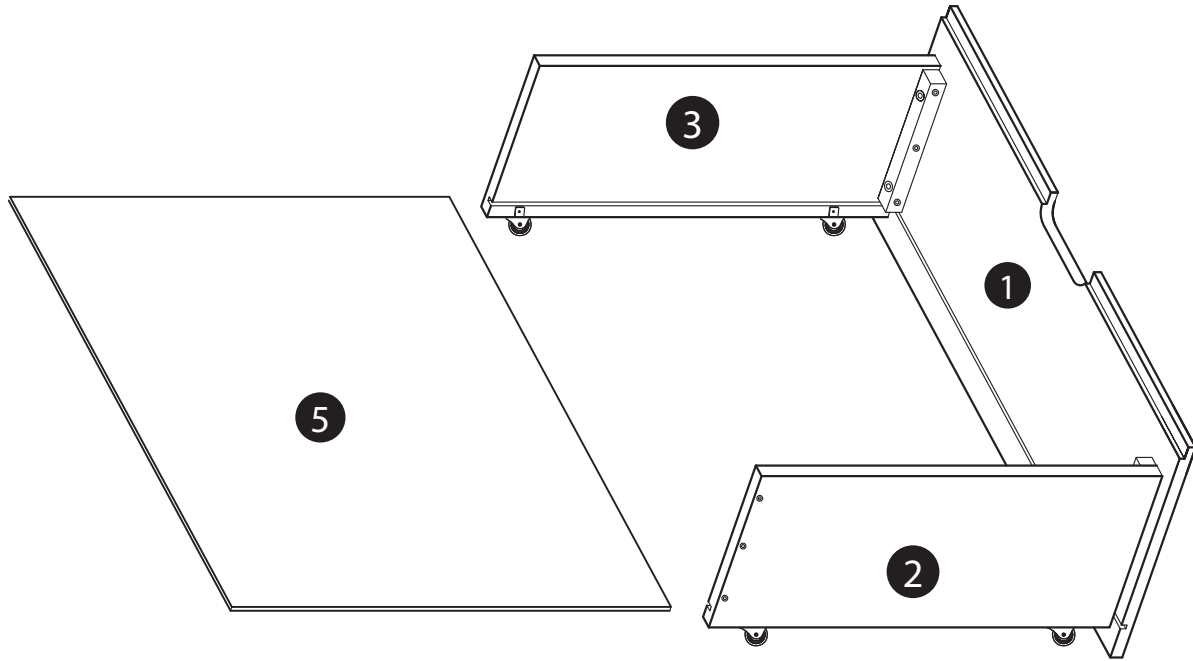Slide the Drawer Bottom (5) into the groove along the Drawer Left Panel (2) Drawer Right Panel (3) and Drawer Front (1) as detailed in the diagram below.




Step Four

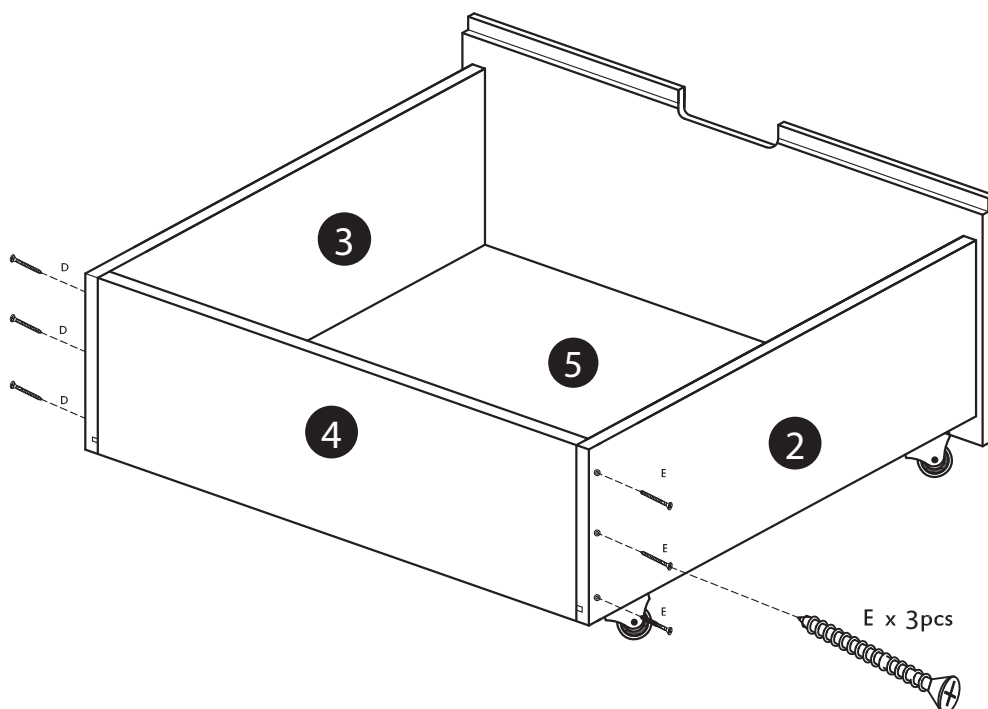Attach the Drawer Back (4) to the Drawer Left Panel (2) and Drawer Right Panel (3) using 12mm Screw (D), 35mm Screw (E) and screw driver. Please ensure you slide the Drawer Bottom into the groove on the Drawer Back (4) before securing.



Step Five

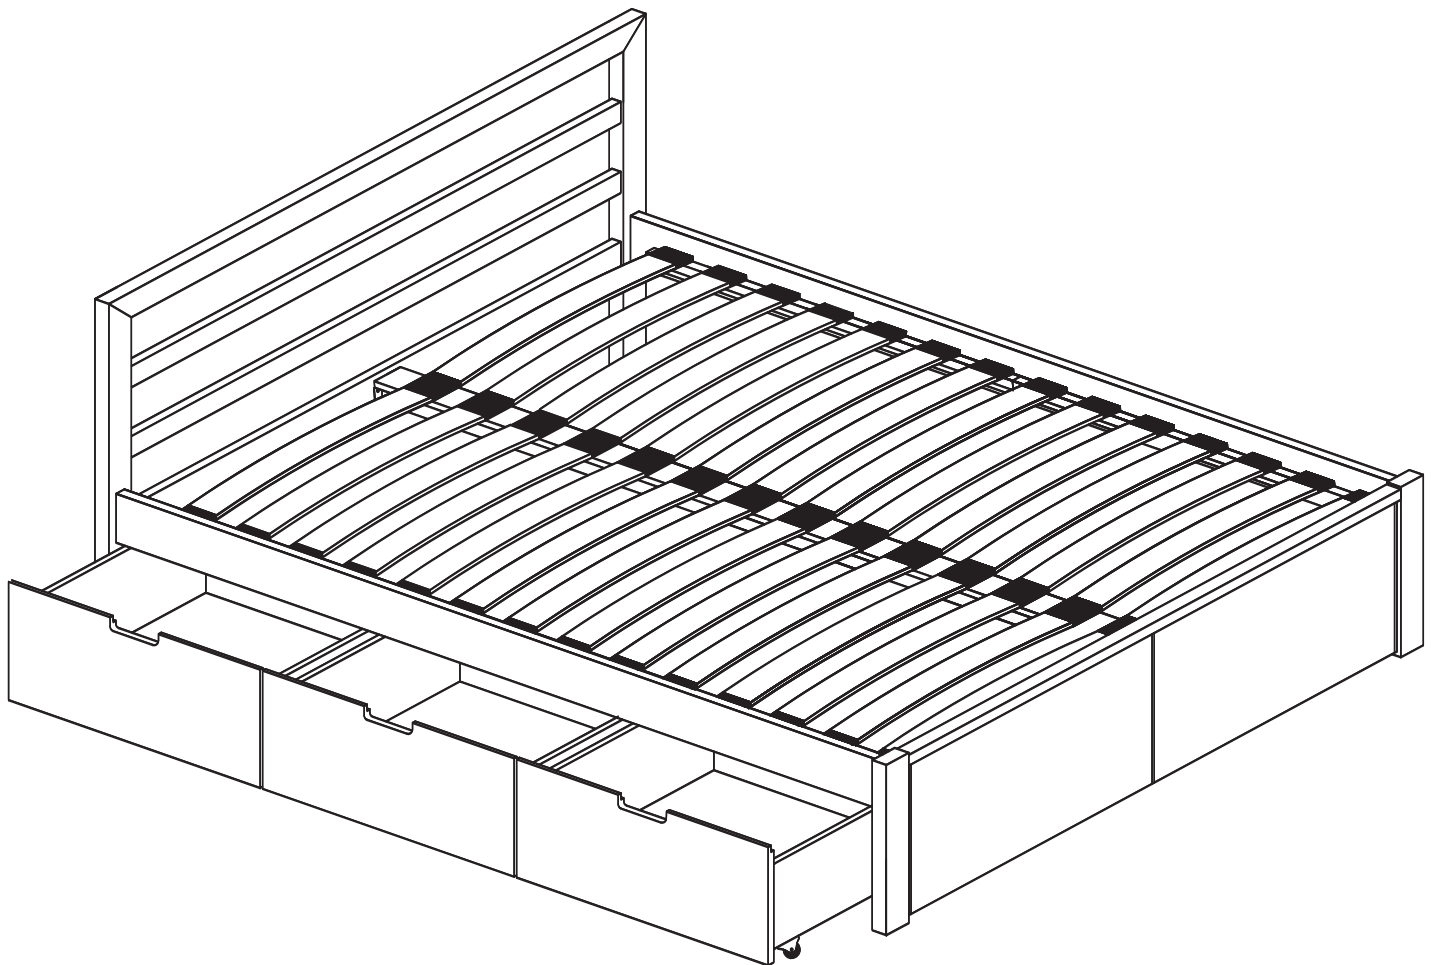The Drawers can now be placed under the bed and the bed is now ready for use.



Care and Maintenance

This Ollie Storage Bed should be cleaned using a soft damp cloth and dry immediately. Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use abrasive cleaners or harsh detergents as this can damage the surface. Do not drag any object across the bed as this can cause permanent damage.

Please retain this information leaflet for future reference.

Safety Instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury. Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent adult. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture. During assembly children should be kept away from the product due to possible risk of injury.

This product complies with BS 1725:1998

Do not use this item if any components are missing or damaged.

It is recommended that before moving heavy objects to a new location they are completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

If you require any additional information or have any issues with this product please call the John Lewis Helpline on 01244 689949 or e-mail mail@fwgroup-uk.com.

John Lewis Partnership 171 Victoria Street London SW1E 5NN
www.johnlewis.com