
John Lewis

Alexia Copper bed

Stock number:80348501/80348502

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product

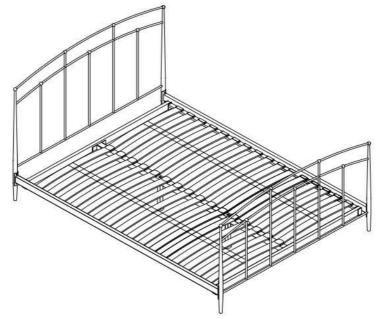

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Necessary Tools





Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product. (Include if relevant)

This product takes approximately 60 MINUTES to assemble with 2 PERSON.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.


Fittings and parts checklist

А	M6 x 20mm x 12pcs		(1)	Headboard x 1pcs	
В	M6 x 55mm x 4pcs		(2)	Footboard x 1pcs	
C	M6 Nut x 2pcs		(3)	Side Rail x 2pcs	
D	Plastic Washer x 8pcs	\bigcirc	(4)	Cross Bar x 2pcs	69
E	Metal Washer x 18pcs	\bigcirc	(5)	Center Rail x 1pcs	
F	4mm Allen key x 1pcs		(6)	SprungSlatsxD30/K32pcs	
G	11mm Spanner x 1pcs	ß	(7)	Plastic capxD30/K32pcs	
			(8)	Plastic capxD15/K16pcs	
			(9)	Fabric x2pcs	
			(10)	Supporting x 2pcs	

Step by step assembly instructions


Step One

1. Attach siderails 3 (x2) to headboard 1 and footboard 2 using 8 x bolts (A), 8 x plastic washers (D) and 8 x metal washers (E), Tighten using Allen key (F).

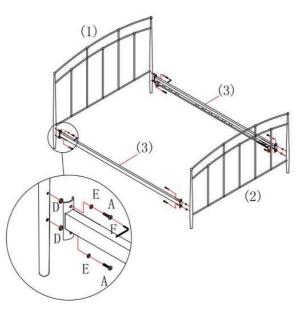


Step Two

1. Attach cross bars 4 (x2) to the brackets on siderails 3 (x2) using 4 x bolts (A) and 4 x metal washers(E), Tighten with Allen key (F).

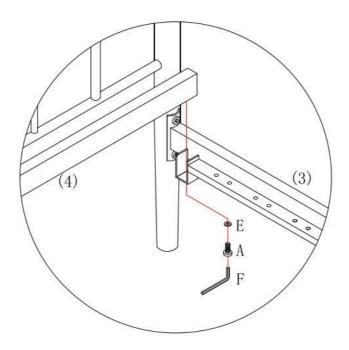


Step Three

1. 1. Attach centre rail 5 between the brackets on crossbars 4 (x2) using 2 x bolts (B), 4 x metal washers (E) and 2 x nuts (C). Tighten with Allen key (F) and spanner (G).

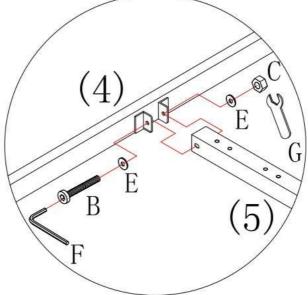

Step Four

1. Attach 2x support leg (10) to centre rail (5) using 2 x bolt(B), 2x metal washer (E) and tighten with Allen key(F).

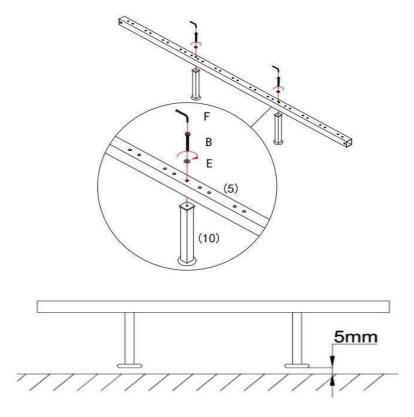


Step Five

1.Insert a sprung wooden slat 6 through the first hole in strap 9. Repeat using another sprung wooden slat 6 and the other strap 9.

2.Attach single sided slat cap 7 onto one end of the sprung wooden slat 6. Attach another single sided slat cap 7 onto the other end of the second sprung wooden slat 6.

3.Attach both sprung wooden slats to the assembled bed base by inserting each single sided slat cap 7 into side rails 3 (x2) and using double sided slat cap 8 in the centre. Once each slat has been inserted into the slat caps, ensure the double sided slat cap is firmly pushed into the holes in centre rail 5.

4.Repeat process for all remaining slats and caps until all components have been used and firmly pushed in place.

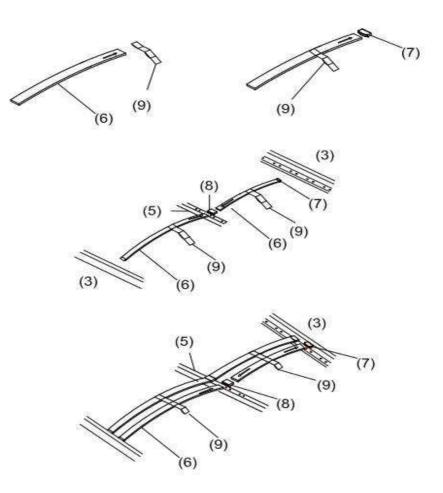

Care and Maintenance

For general cleaning, periodically dust with a soft cloth. Do not rub or scrub the surface when cleaning. Do not use abrasive cleaning products or those containing silicone. Any spills should be removed immediately with a soft clean damp cloth and dried immediately. Do not put hot dishes directly on the surfaces of the item.

General warnings:

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly insalled or assembled furniture.

Specific warnings for heavy items:

It is recommended that before moving heavy objects to a new location they are completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SWIE 5NN

www.johnlewis.com