
# Maine white/ash bed king size

Stock number: 80307103

Thank you for purchasing this Maine bedstead. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product

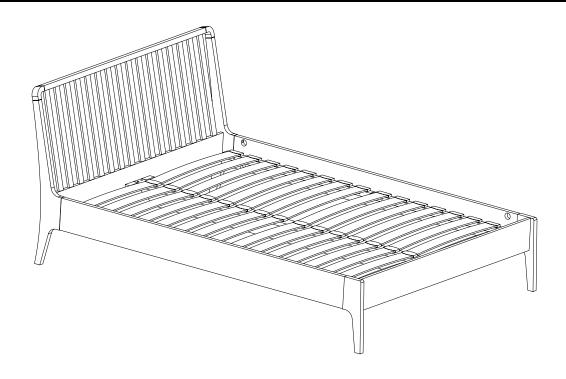

#### Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

**Necessary Tools** 



You will require a cross head screwdriver to assemble this product. An electric drill may cause damage to the product and is not recommended.

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact John Lewis customer services or your local branch.


This product is HEAVY, it should be assembled as near as possible to the point of use. TAKE CARE WHEN LIFTING to avoid personal injury and (or) damage to the product.

This product takes approximately 60 MINUTES to assemble with /2 PEOPLE.

The fittings pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

Read this leaflet in full before commencing assembly.

### Fittings and parts checklist

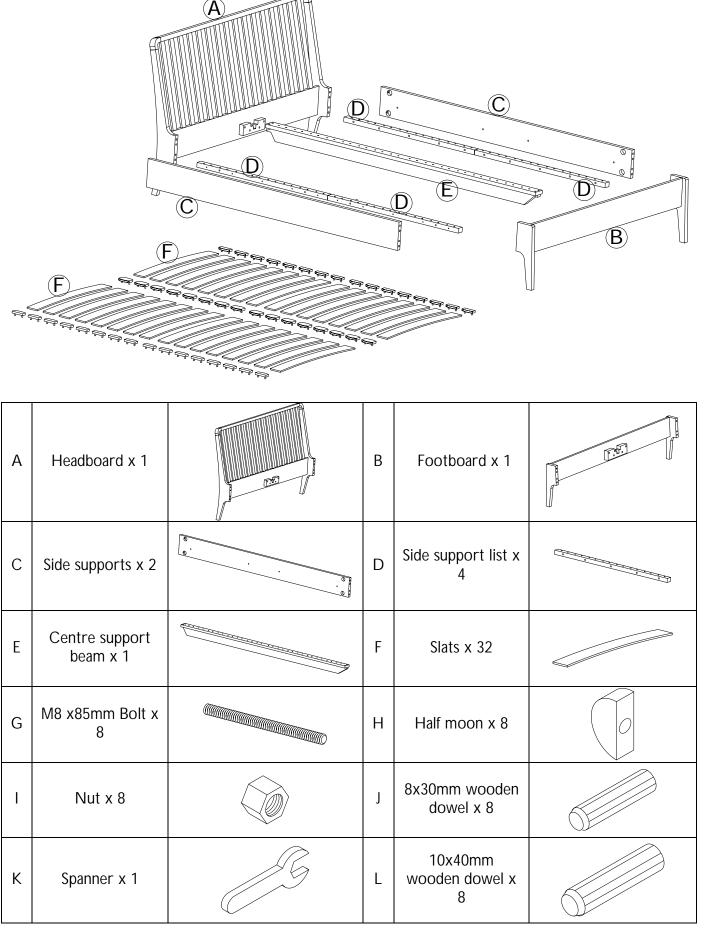


М	4x35mm screw x 20	N	4x25mm screw x 4	
0	Plastic midd caps x 16	Р	Plastic end caps x 32	


## Step by step assembly instructions

#### Step One

Insert four dowels (L) into the holes provided in the side support (C) Repeat for both side supports using a total of eight dowels (L)

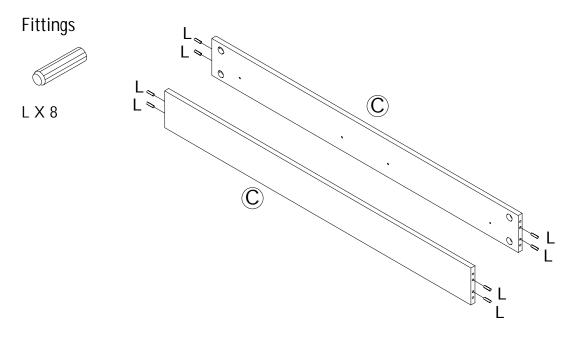


#### Step Two

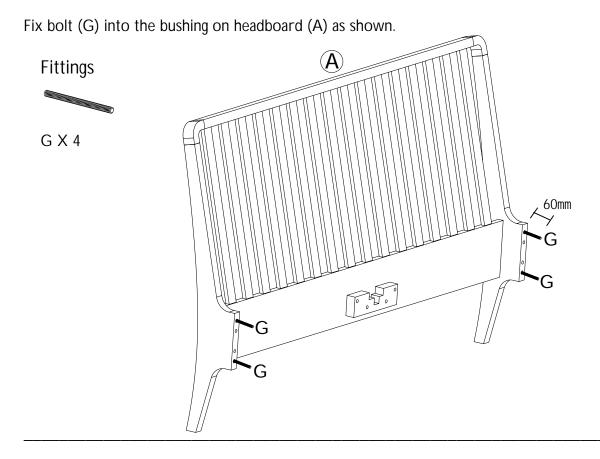

# Step Three

Fix bolt (G) into the bushing on footboard (B) as shown.

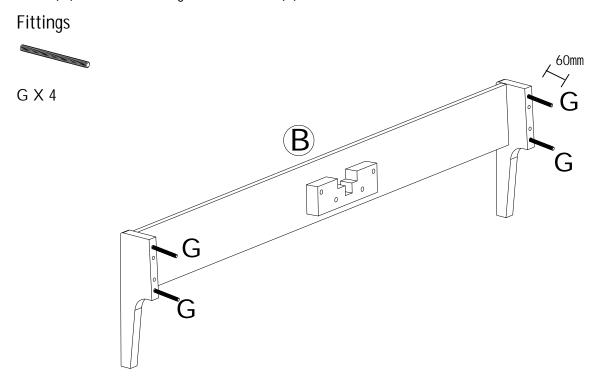


# Step Four

Insert two dowels (J) in the side support list (D) Repeat for all four side support list

#### Fittings




J X 8

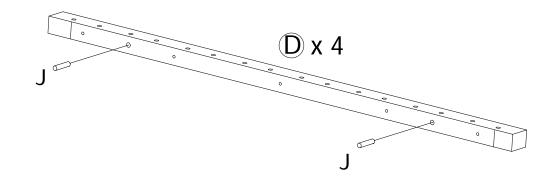


## Step Five

To attach the side supports to the headboard, you firstly place the halfmoon (H) on the bolt (G), and then you place the nut (I) on the bolt and screw it on.

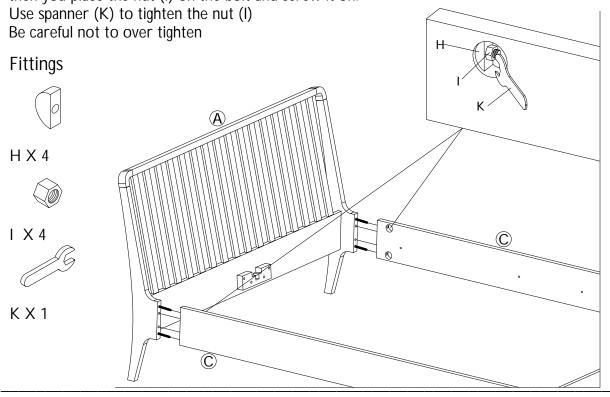


### Step Six

To attach the side supports to the footboard, you firstly place the halfmoon (H) on the bolt (G), and then you place the nut (I) on the bolt and screw it on.

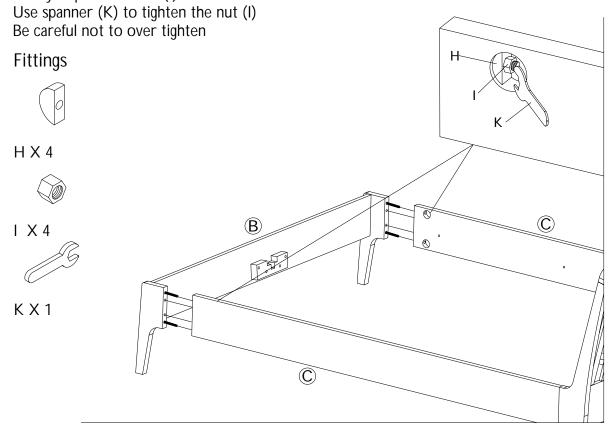


# Step Seven

Insert the end of the central support beam (E) into the U-Fitting placed on headboard (A) and footboard (B) and use screw (N) to fasten it.

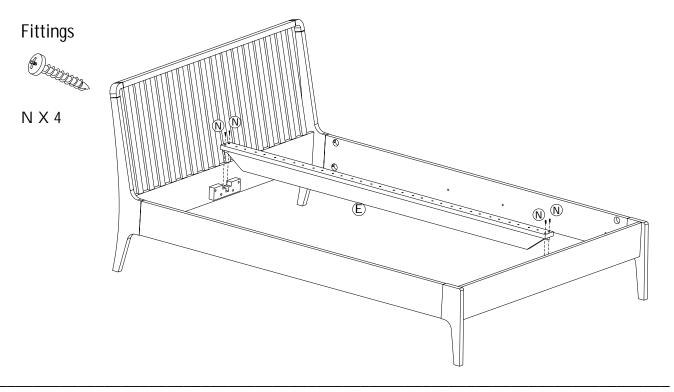


## Step Eight

Fix the side support list (D) to the side supports (C) and fasten using the 35mm screws (M)

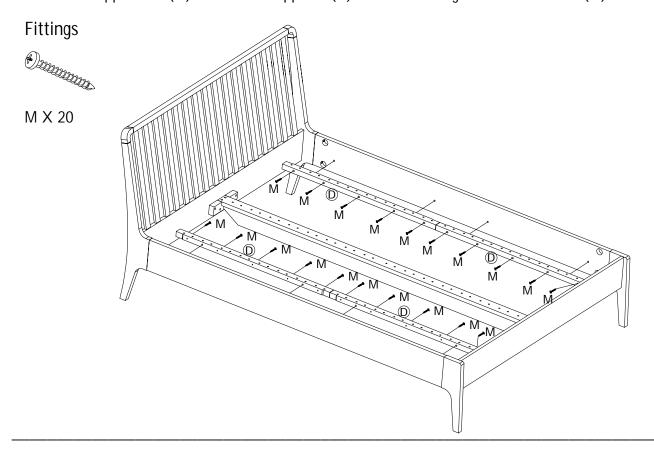


# Step Nine

Place the plastic midd caps (O) and the plastic end caps (P)onto the slats (F) as shown

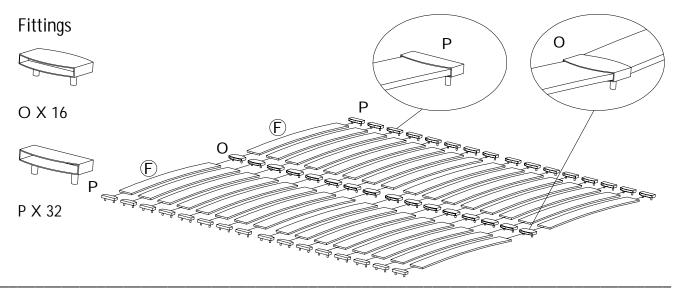

# Step Ten

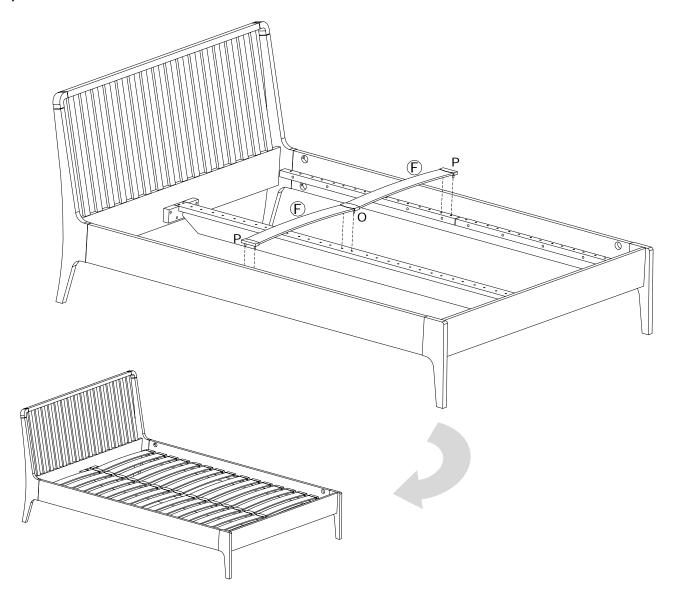

#### Care and Maintenance

This Maine bed should be cleaned using a soft damp cloth and dried immediately. Do not use a very wet cloth or allow any liquid to contact with the veneers for a long period of time as this can permanently damage the surface. Do not use any abrasive cleaner or harsh detergent as this can damage the surface of the veneers.

Safety Instructions

General warnings:

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten when necessary. Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorectly installed. Assembly should be carried out by a competent person. No Liability will be accepted for damage or injury caused by incorrectly.

Specific warnings for heavy items:

It is recommended that before moving heavy objects to a new location they are completely disassembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

#### PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN www.johnlewis.com