


Maine white/ash 2 door wardrobe

Stock number: 80307108

Thank you for purchasing this Maine 2 door wardrobe. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product

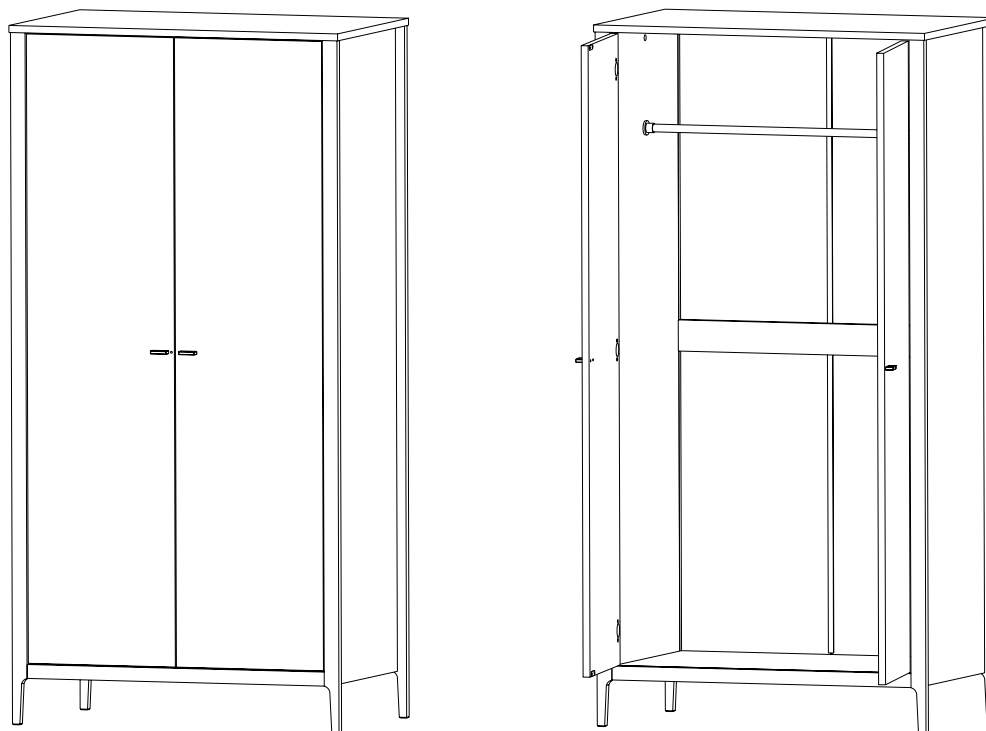

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Necessary Tools



You will require a cross head screwdriver to assemble this product. An electric drill may cause damage to the product and is not recommended.

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact John Lewis customer services or your local branch.


This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.







This product takes approximately 70 MINUTES to assemble with /2 PEOPLE.

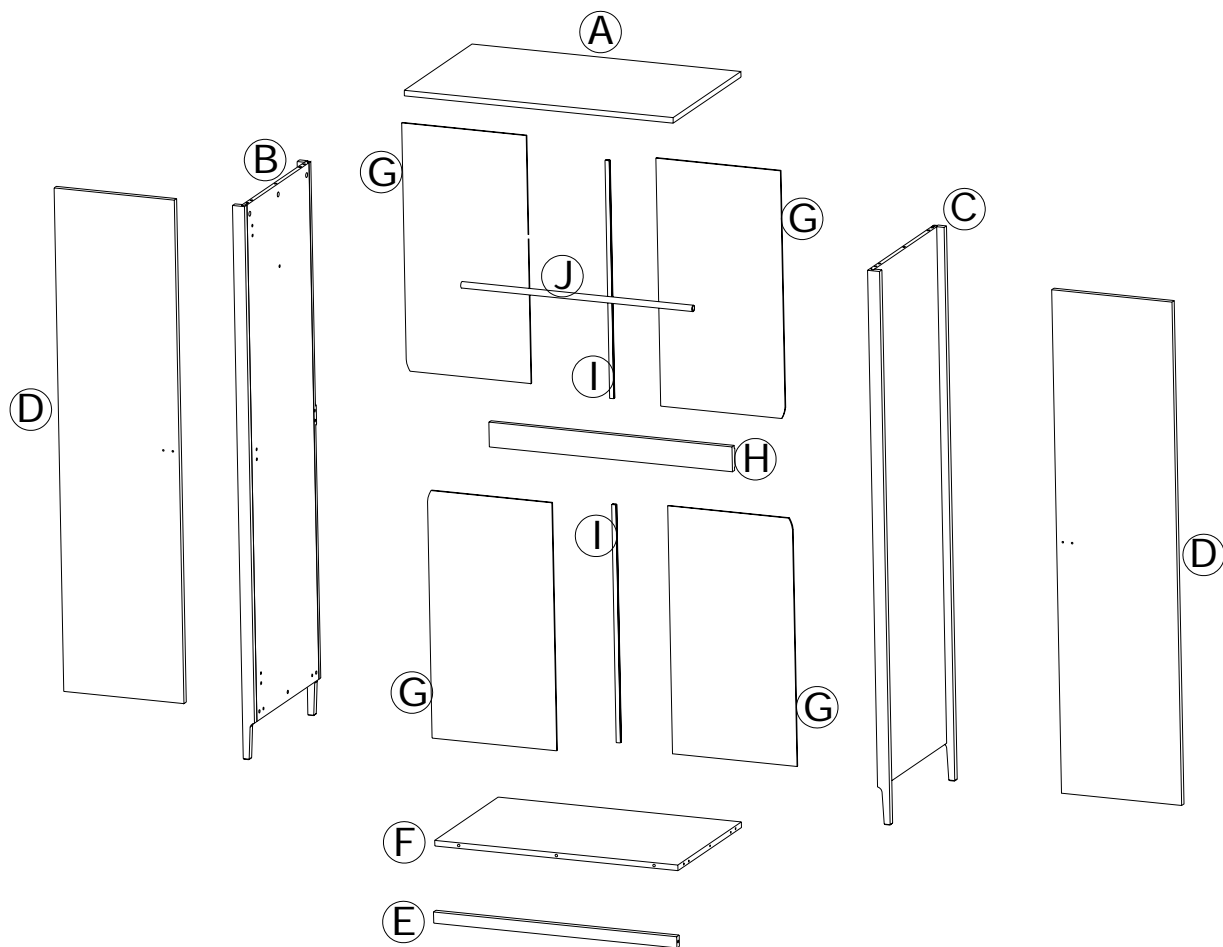




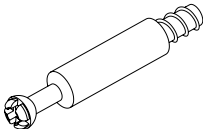
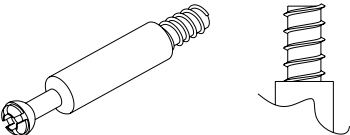


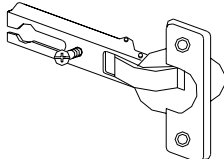




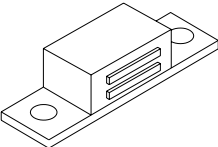

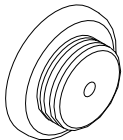
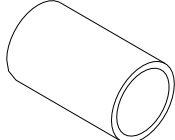


The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.

Fittings and parts checklist



A	Top x 1		B	Left side panel x 1	
C	Right side panel x 1		D	Door x 2	
E	Bottom piece front x 1		F	Bottom x 1	

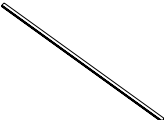G	Back panel part x 4		H	Middle piece back x 1	
I	Back panel list x 2		J	19x786mm Pole x 1	
K	8x35mm wooden dowel x 12		L	6x45mm Minifix bolt x 9 (For wood)	
M	6x45mm Minifix bolt x 12 (For bushing)		N	Minifix housing x 21	
O	Mounting plate x 6		P	Cup hinge x 6	
Q	4x12mm screw x 24		R	4x25mm screw x 2	
S	3x15mm screw x 16		T	Counter plate oval x 4	
U	Magnet x 4		V	19mm Nail x 60	
W	(Rail holder part one) x 2		X	(Rail holder part two) x 2	
Y	Knob x 2		Z	4x25mm dome screw x 4	


Step by step assembly instructions

Step One

Fix the six minifix bolt (M) to the top (A) as shown

Fix the two magnets (U) to the top as shown with 4 screws (S). Let them sit loose until the doors are fixed in step thirteen.


Fittings

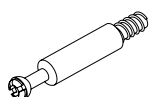


M X 6



S X 4

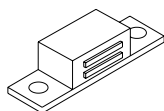

U X 2

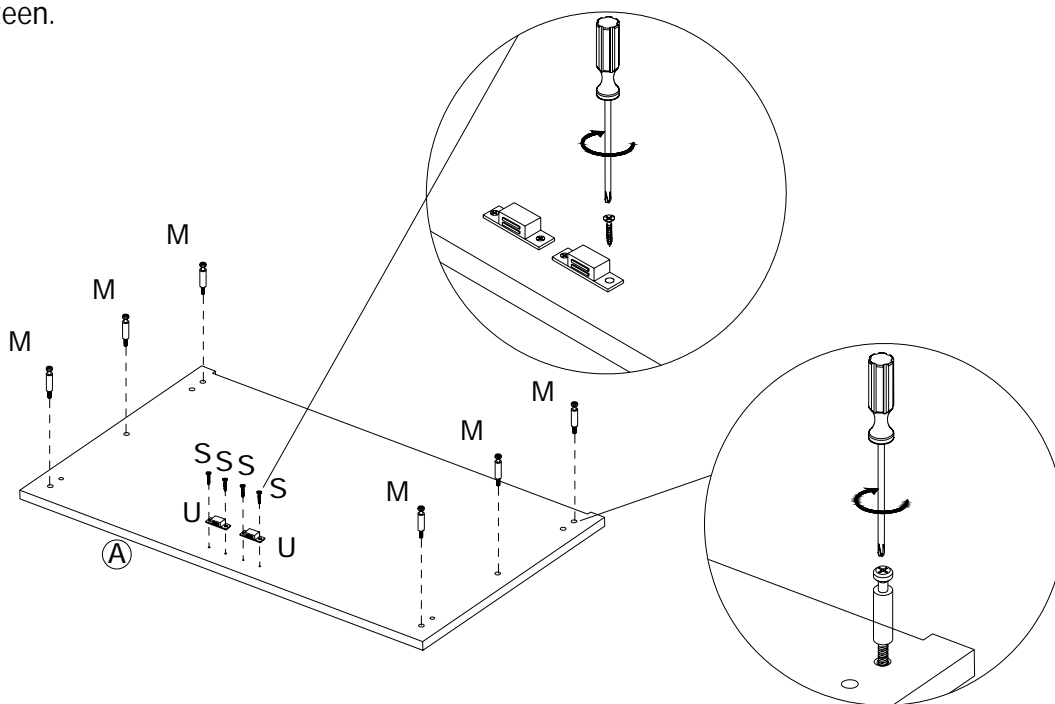


Step Two

Fix the six dowels (K) into the bottom (F) as shown

Fix the two magnets (U) to the bottom as shown with 4 screws (S). Let them sit loose until the doors are fixed in step thirteen.


Fittings

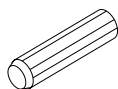


K X 6



S X 4

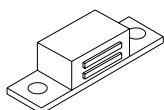


U X 2

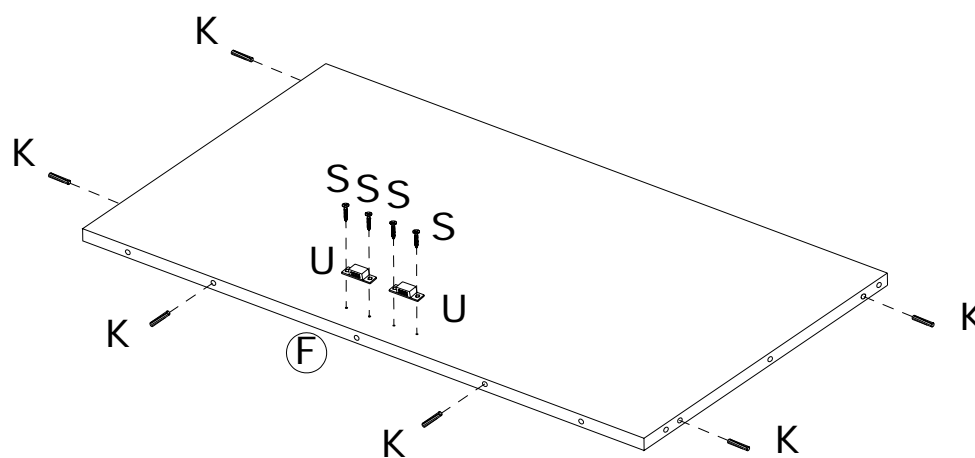


Step Three

Fit the two dowels (K) into the end of the bottom piece front (E)
Fix the three minifix bolt (L) to the bottom piece front as shown


Fittings



K X 2

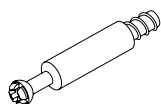

L X 3

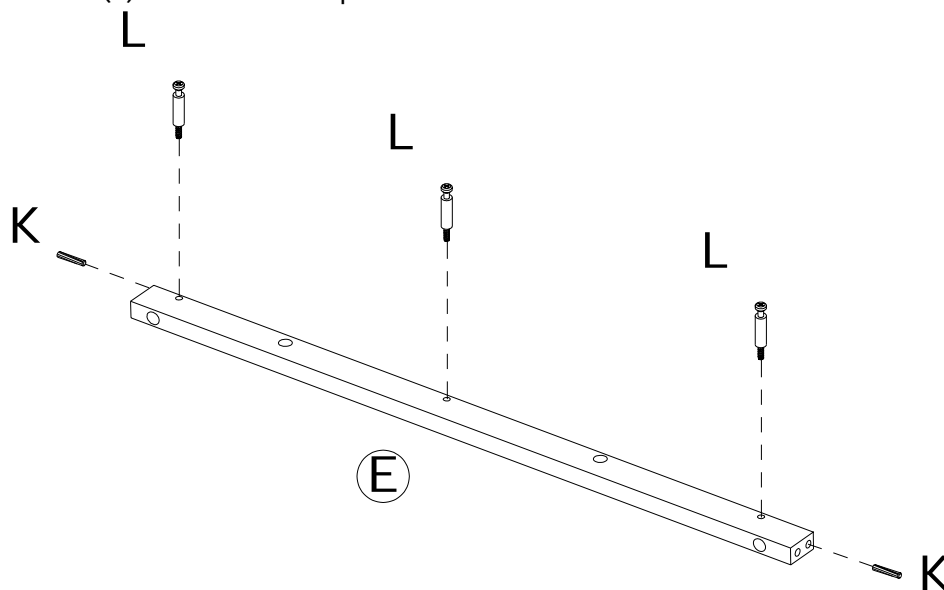



Step Four

Fit the bottom piece front (E) against the bottom (F)
Use three minifix houseings (N) to fasten the bottom piece front to the bottom

Fittings



N X 3

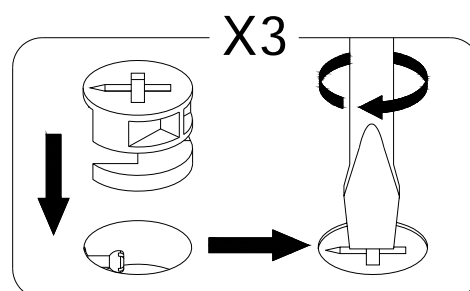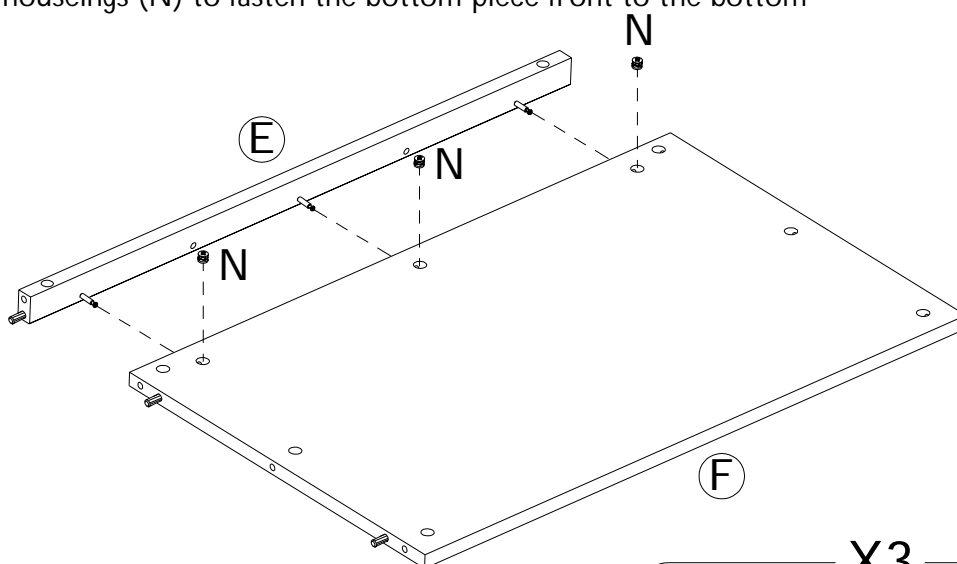

Step Five

Fit the two dowels (K) into the top end of the left side panel (B) as shown.


Fix the three minifix bolt (M) to the side as shown

Fix the three minifix bolt (L) to the legs parts of the side panel as shown


Fix the rail holder part one (W) to the side, for that use 25mm screw (R)

Fix the three mounting plates (O) to the side, for that use six screws (Q)


Fittings

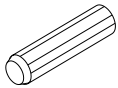


K X 2

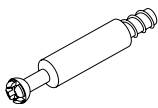

L X 3

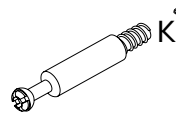

M X 3

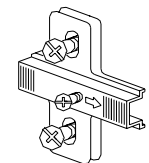


O X 3




Q X 6



R X 1

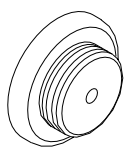

W X 1

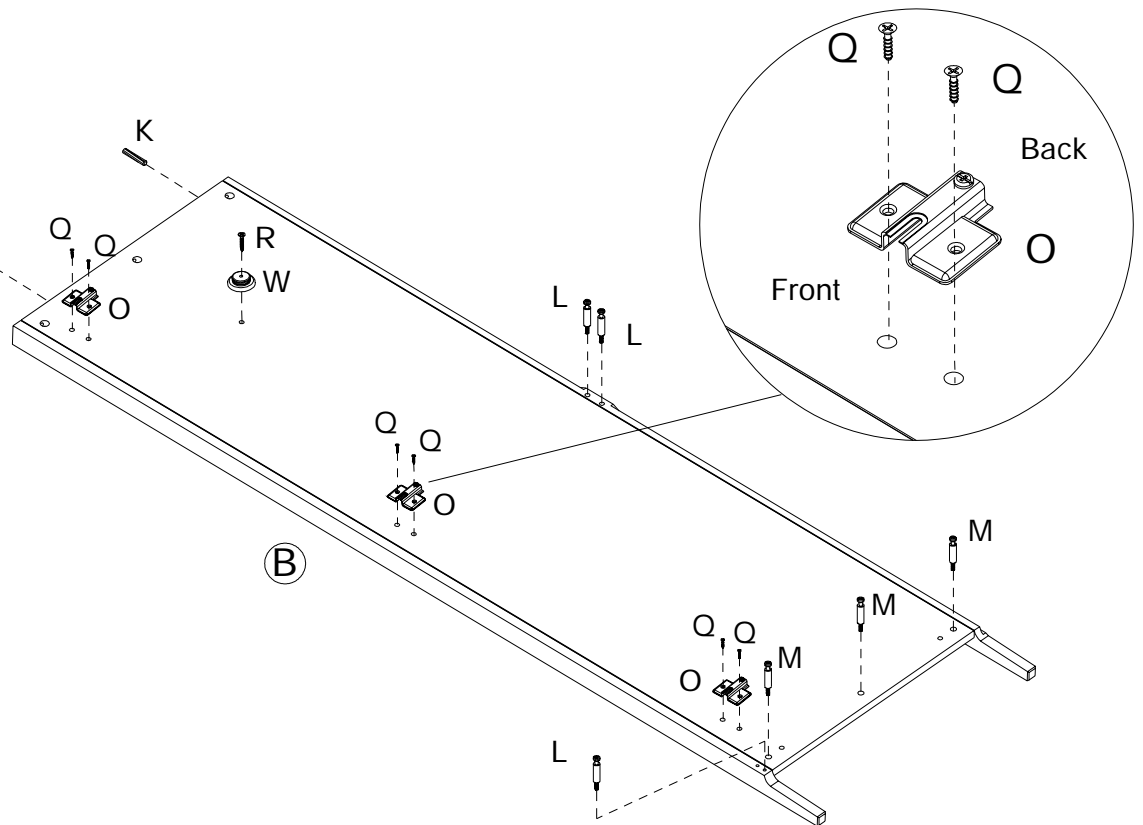

Step Six

Fit the two dowels (K) into the top end of the right side panel (C) as shown.


Fix the three minifix bolt (M) to the side as shown

Fix the three minifix bolt (L) to the legs parts of the side panel as shown


Fix the rail holder part one (W) to the side, for that use 25mm screw (R)

Fix the three mounting plates (O) to the side, for that use six screws (Q)


Fittings

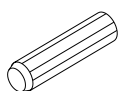


K X 2

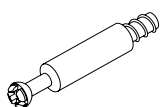

L X 3

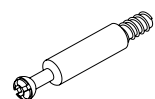

M X 3

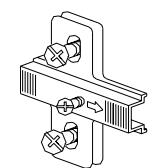


O X 3




Q X 6



R X 1

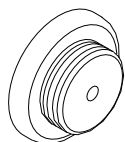

W X 1

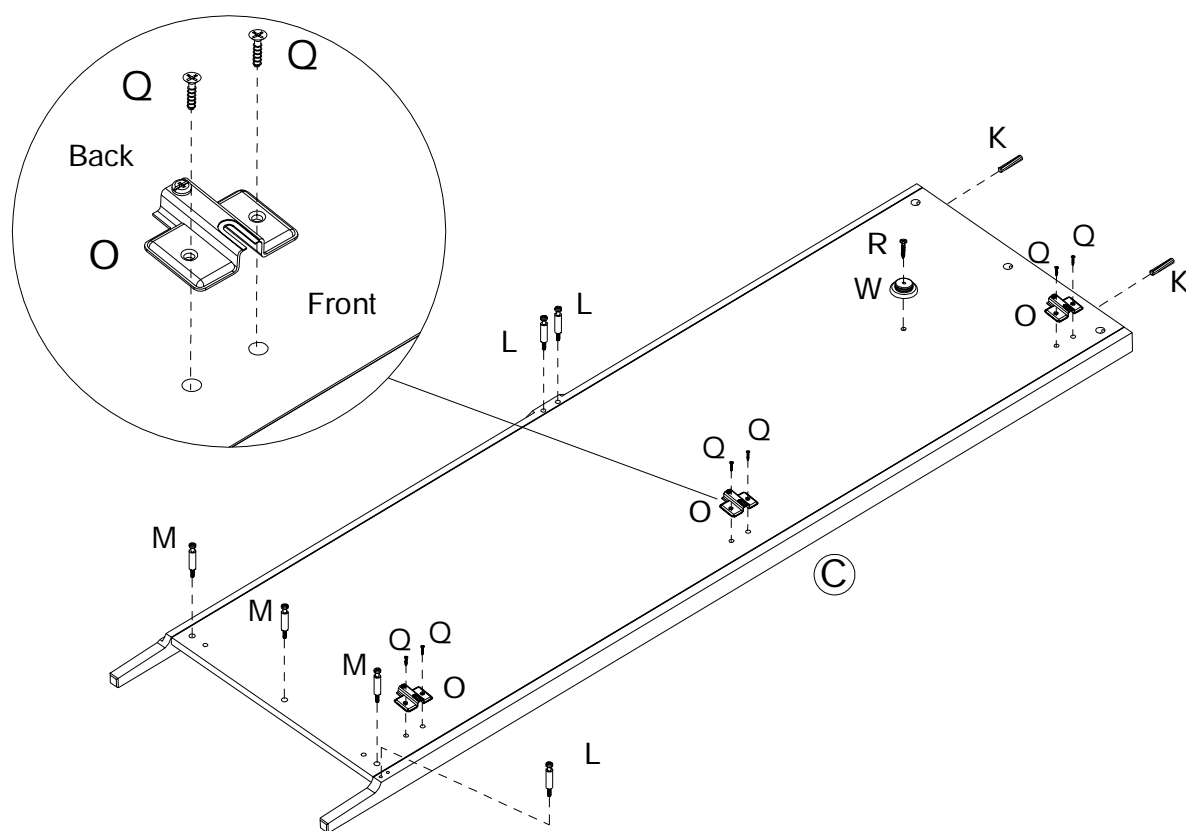

Step Seven

Lay the left side panel (B) on the floor

Fit the middle piece back (H) to the leg part of the left side panel as shown

Fit the assembled bottom and bottom piece front (E&F) into the left side panel as shown



Place the right side panel (C) so it does fit in the holes of the middle back piece (H) and bottom

Fix the twelve minifix housings (N) as shown

Fittings



N X 12

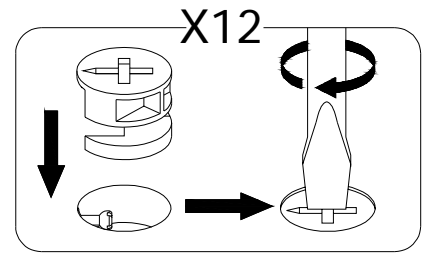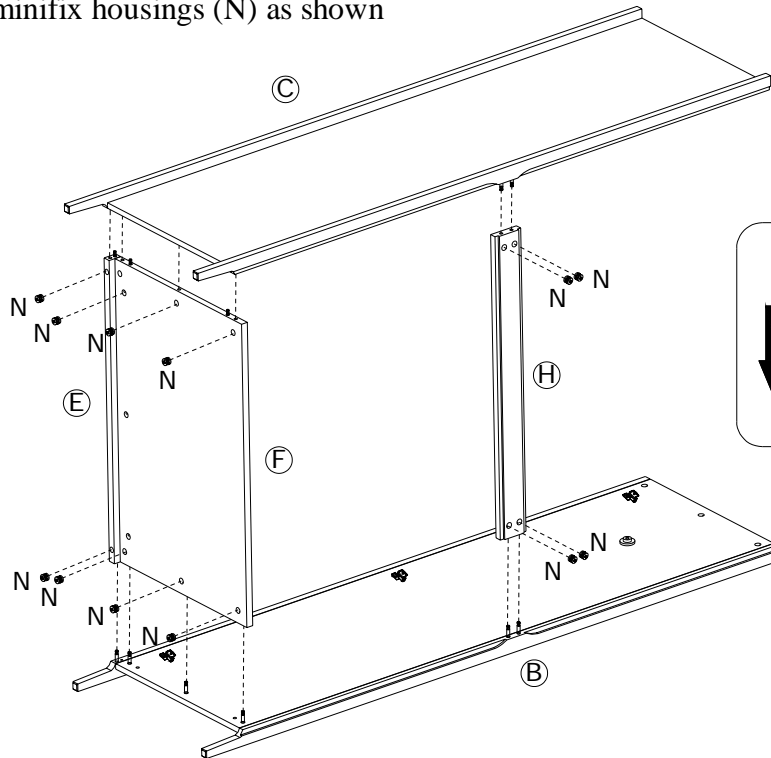

Step Eight



Place the top (A) so it does fit in the holes of the side panels (B&C)

Fix the six minifix housings (N) as shown

Fittings




N X 6

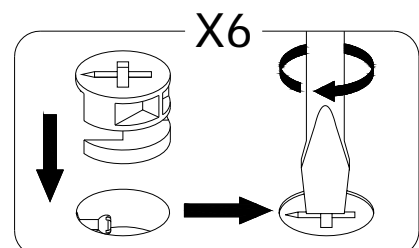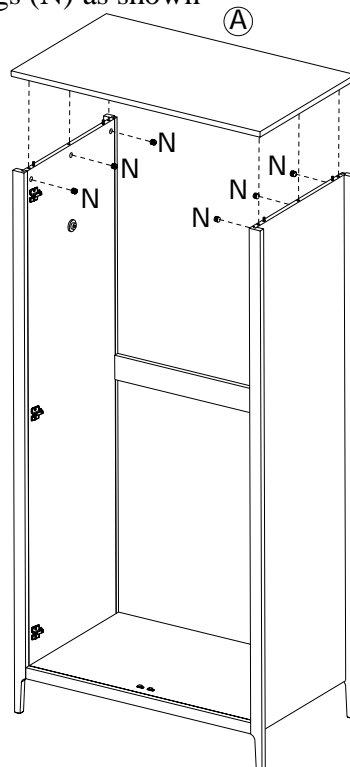

Step Nine


Place the rail holder part two (X) in both ends of the pole (J) as shown

Fittings

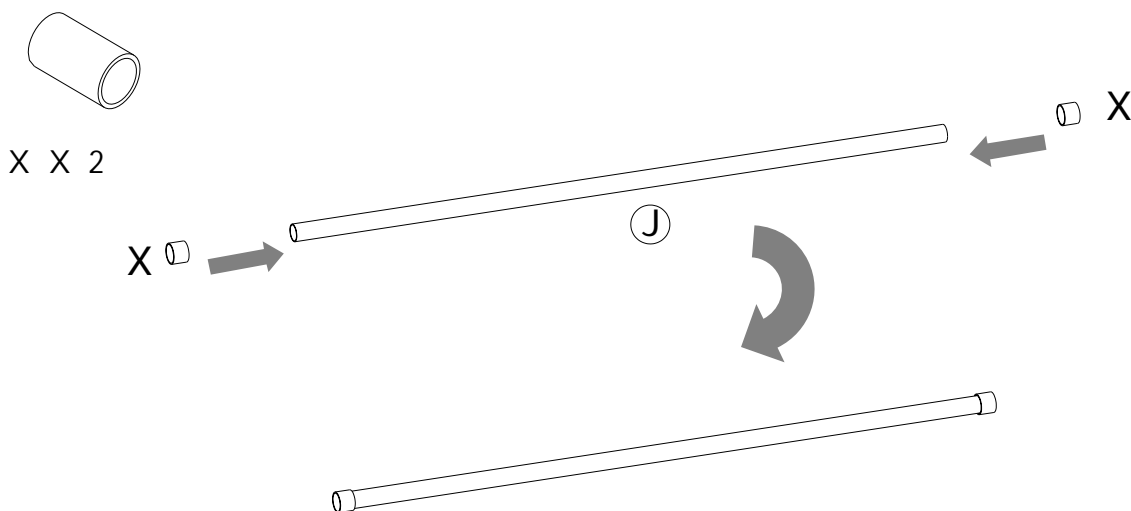

Step Ten

Place the pole (J) and rail holders part two (X) in position as shown, and screw it on rail holder part one (W)

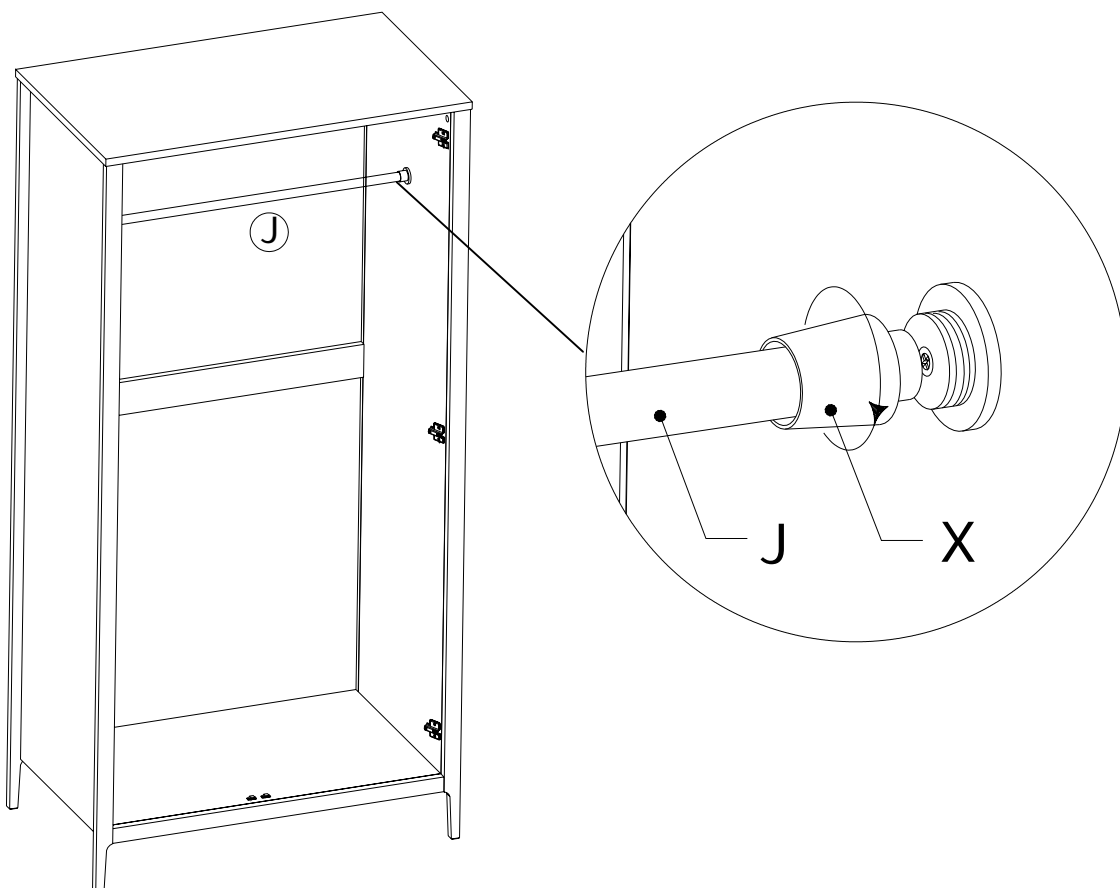


Step Eleven

Fit the four back panels (G) in position back on the wardrobe as shown


To fasten it use nails (V)

Connect two back panels with the back panel list (I), this for both upper section and lower section.

Fittings

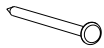

V X 60

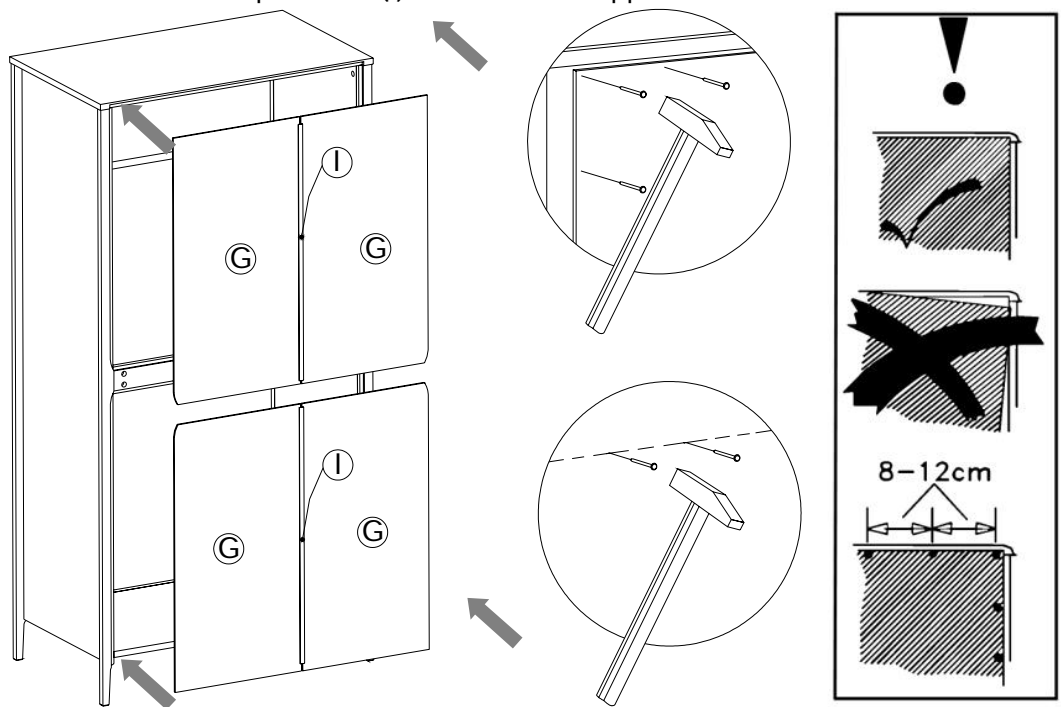


Step Twelve

Fix three cuphinges on each of the two doors (D), for that use screws (Q)

Fix two counter plates (T) on each of the two doors, for that use screws (S)

Fix the knob (Y) on each of the two doors, for that use dome screws (Z)

Fittings

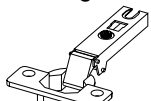


P X 6



Q X 12



S X 8




T X 4



Y X 2



Z X 4


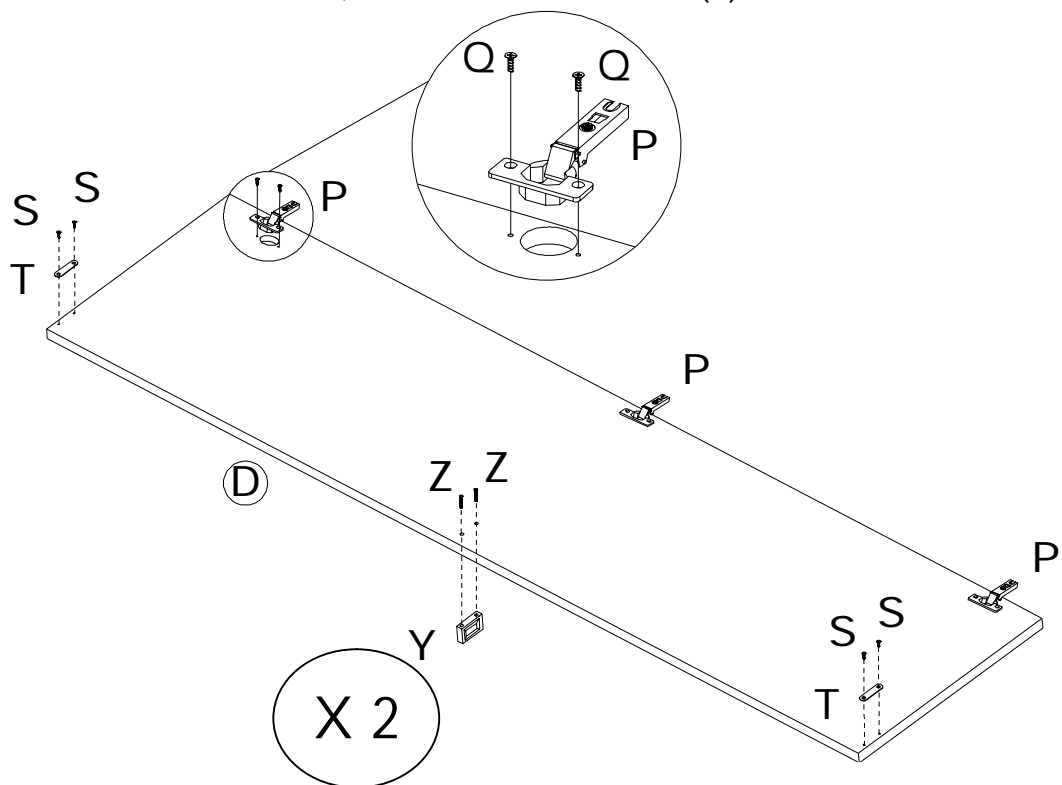


Step Thirteen

Fix the right and left doors (D) to the wardrobe by connecting the cup hinges (P) to the mounting plate (O)

The way doing that, is to push the cuphinges inwards over the mounting plates and fasten it with screw as shown.

Fasten the magnets (U) when the doors are in the right position

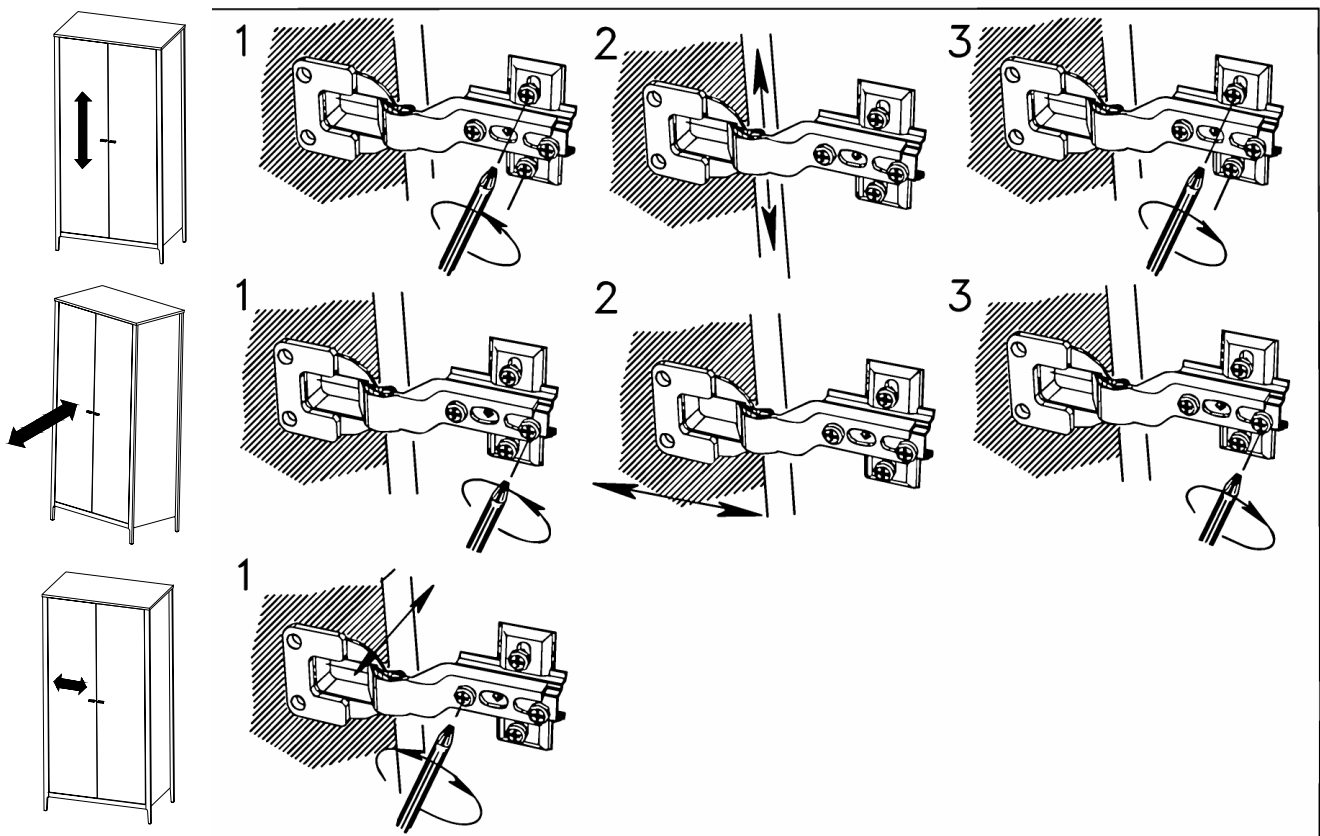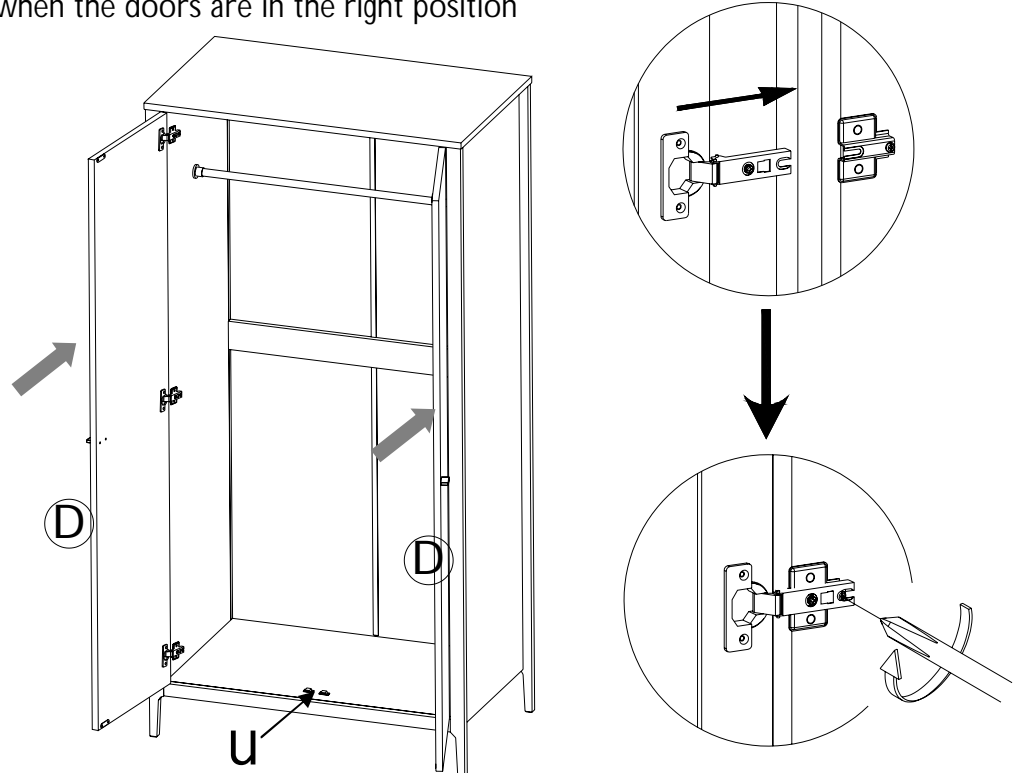

Care and Maintenance

This Maine wardrobe should be cleaned using a soft damp cloth and dried immediately. Do not use a very wet cloth or allow any liquid to contact with the veneers for a long period of time as this can permanently damage the surface. Do not use any abrasive cleaner or harsh detergent as this can damage the surface of the veneers.

Safety Instructions

General warnings:

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No Liability will be accepted for damage or injury caused by incorrectly.

Specific warnings for heavy items:

It is recommended that before moving heavy objects to a new location they are completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN
www.johnlewis.com