

Thank you for purchasing this bedstead. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

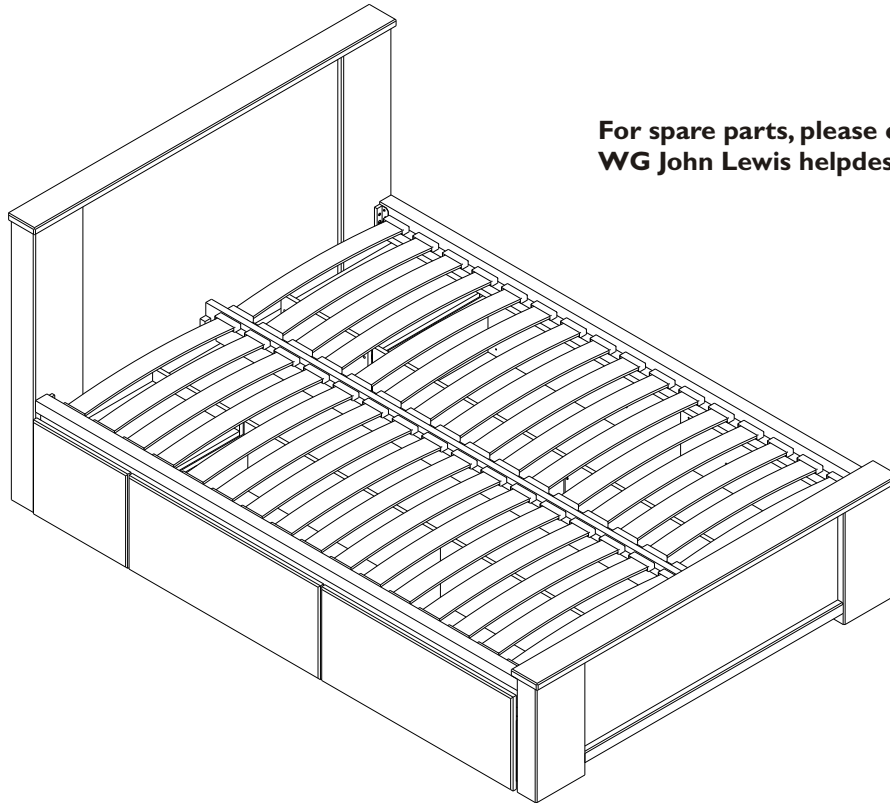


For spare parts, please contact the
WG John Lewis helpdesk on 0845 606 7004

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary tools

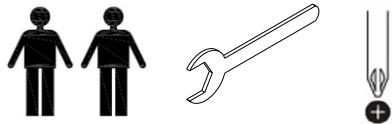

Please check the pack contents before attempting to assemble this product. A full checklist of components are given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.






This product takes approximately **2 ½ hours** to assemble with **2 OR MORE PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.

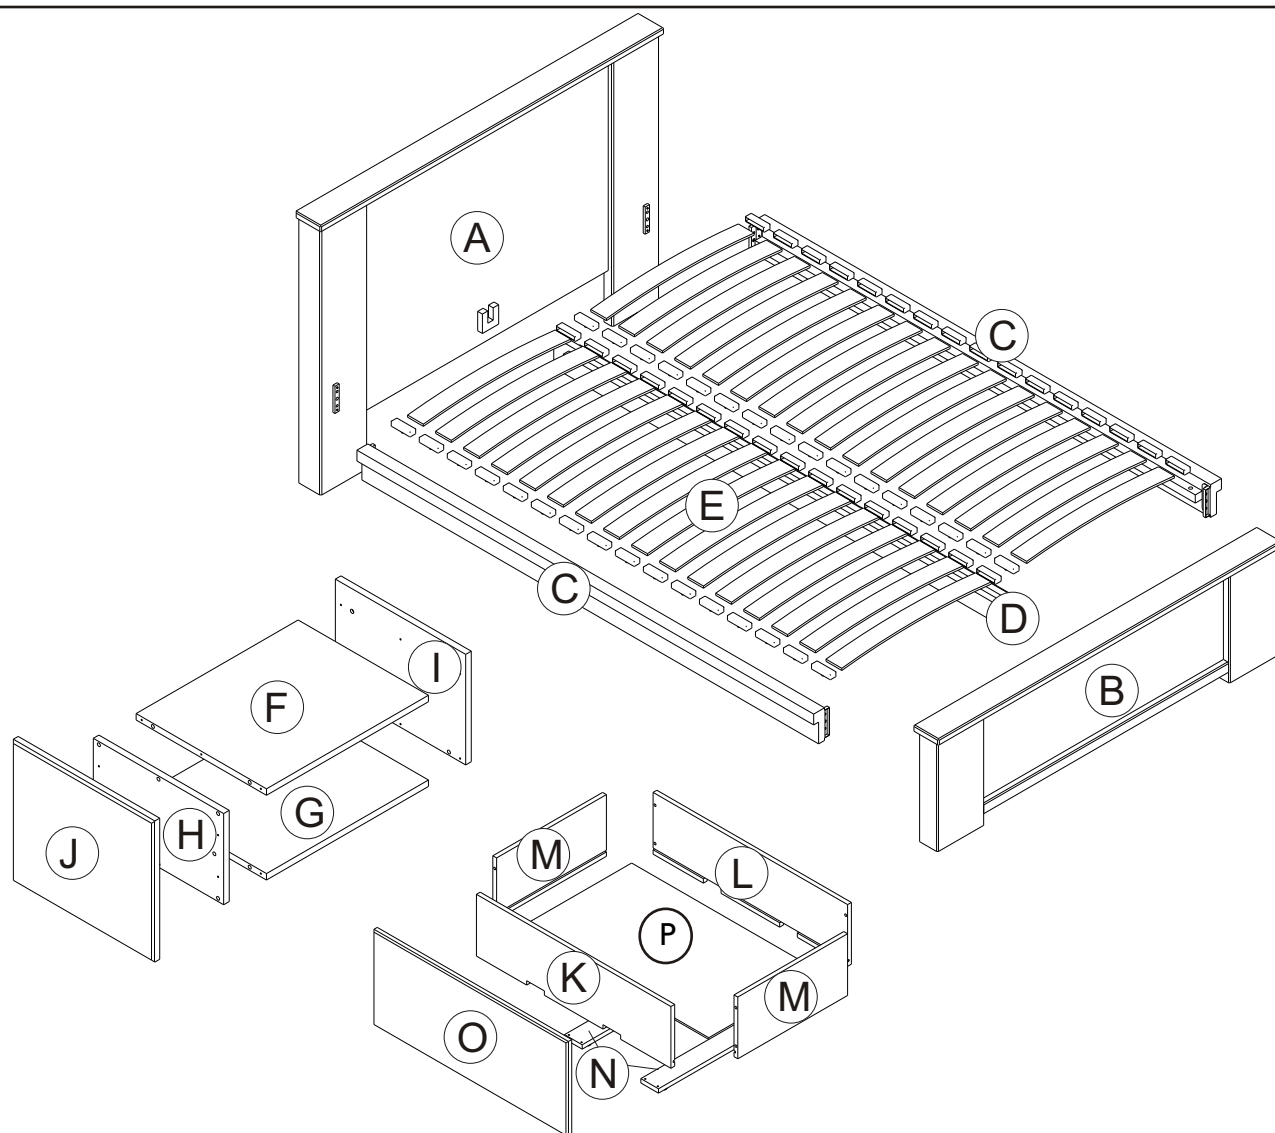Fittings and parts checklist

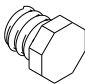
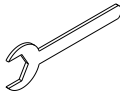


A	Headboard x 1	1	Dowel x 60
B	Footboard x 1		
C	Side rail x 2	2	25mm CSK screw x 116
D	Centre rail x 1		
E	135cm slat x 32 150cm slat x 34	3	13mm Bolt x 8
F	Bedside Top panel x 2		
G	Bedside bottom panel x 2	4	13mm Spanner x 1
H	Bedside front attachment panel x 2		
I	Bedside back panel x 2	5	135cm slat cap x 64 150cm slat cap x 68
J	Bedside front panel x 2		
K	Drawer front attachment panel x 4		
L	Drawer back panel x 4		
M	Drawer side panel x 8		
N	Caster rail x 8		
O	Drawer front x 4		
P	Drawer base x 4		

Step by step assembly instructions

Step one

1. Locate the side rails brackets (C) onto the headboard brackets (A).
2. Secure using four 13mm Bolts (3) and the 13mm spanner (4).

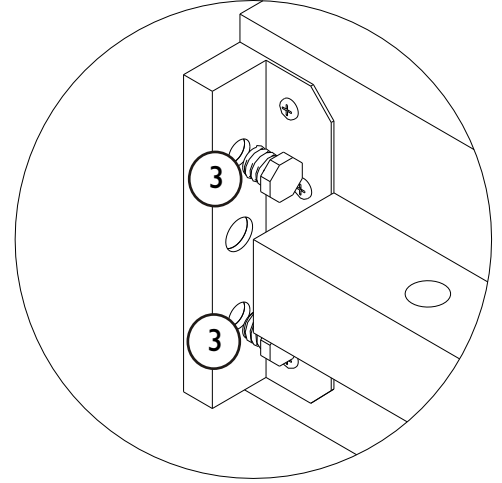
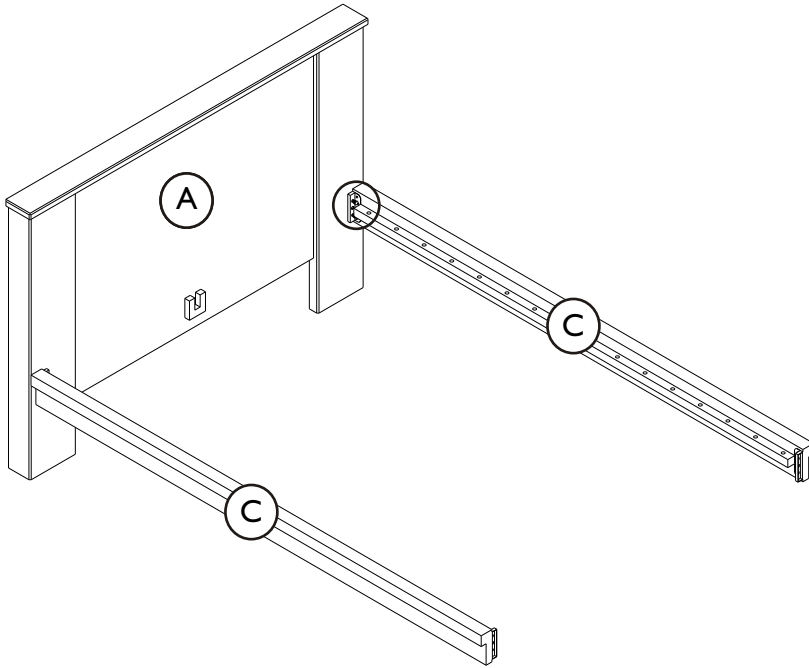


Please note.

The holes in the siderails should be facing upwards.


Step two

1. Locate the side rails brackets (C) onto the footboard brackets (B).
2. Secure using four 13mm Bolts (3) and the 13mm spanner (4).

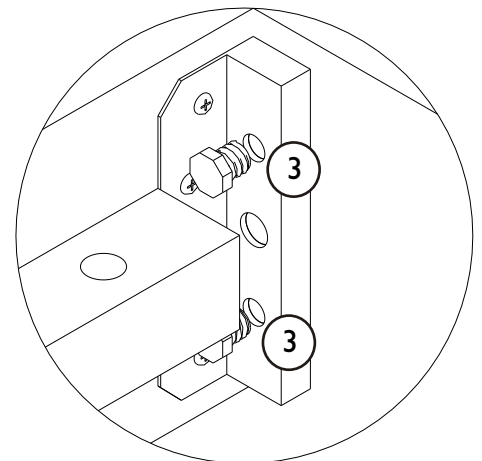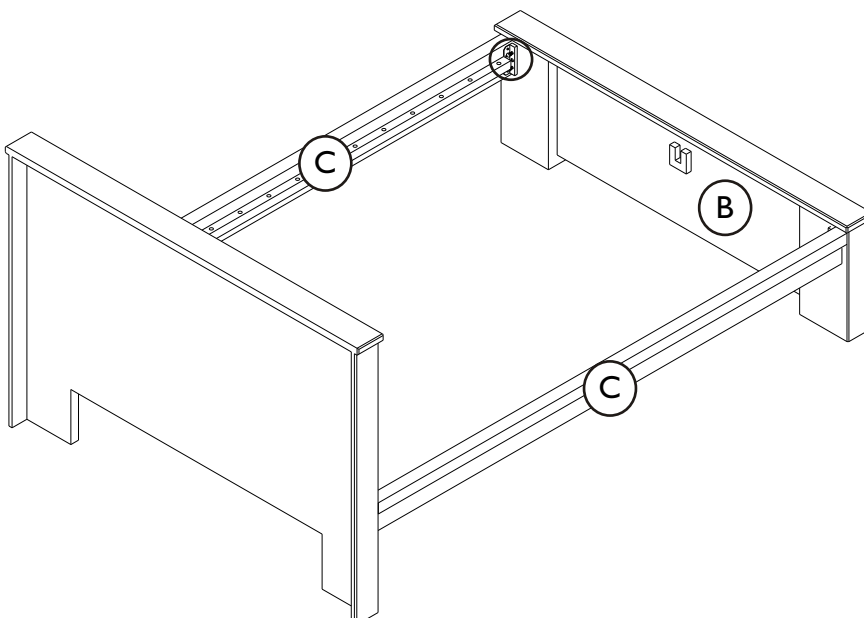

Step three

Locate the centre rail (D) into the headboard and footboard brackets.

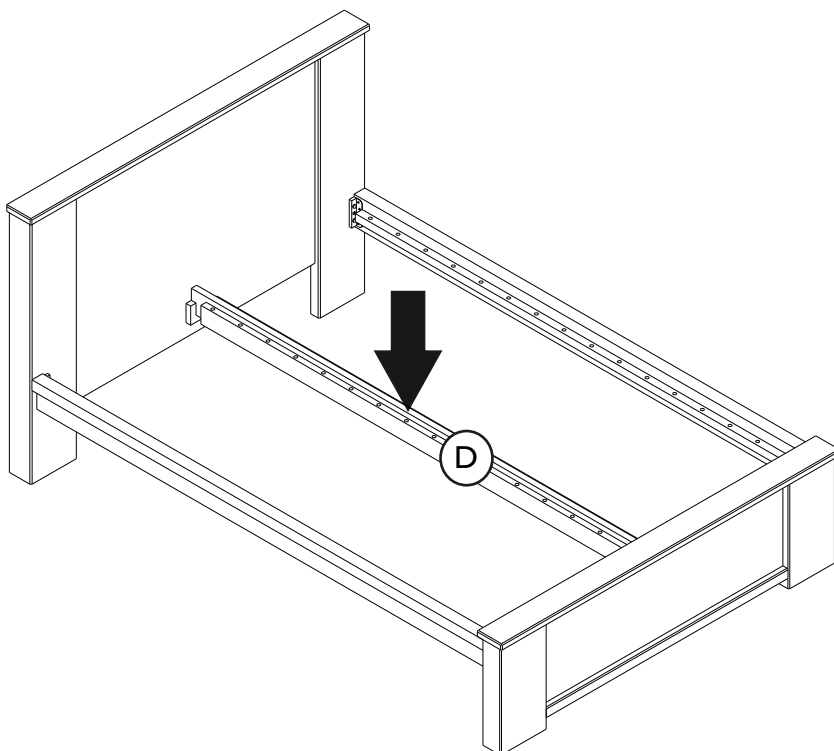


Please note

The holes in the centre rail should be facing upwards.


Step four

1. Push fit two plastic caps (5) onto either end of a slat (E).
2. Push fit the slat (E) into the pre-drilled pilot holes. Please note that the slat may need to be pushed flat to ease installation. It may also require a light tap with a soft hammer to secure the plastic end caps into the holes.

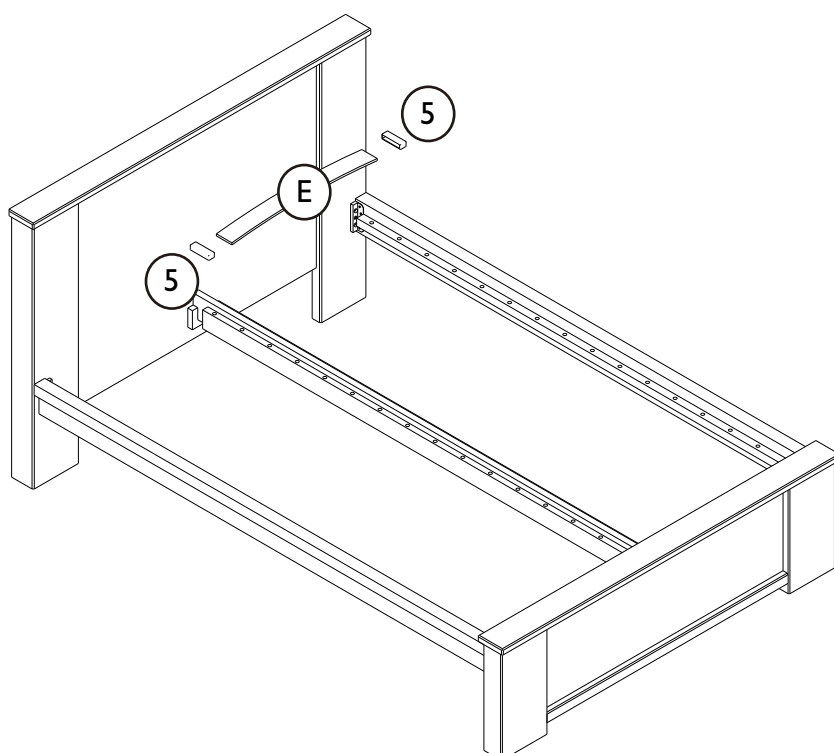


Step five

Repeat step four with the remaining slats (E) and slat caps (5).

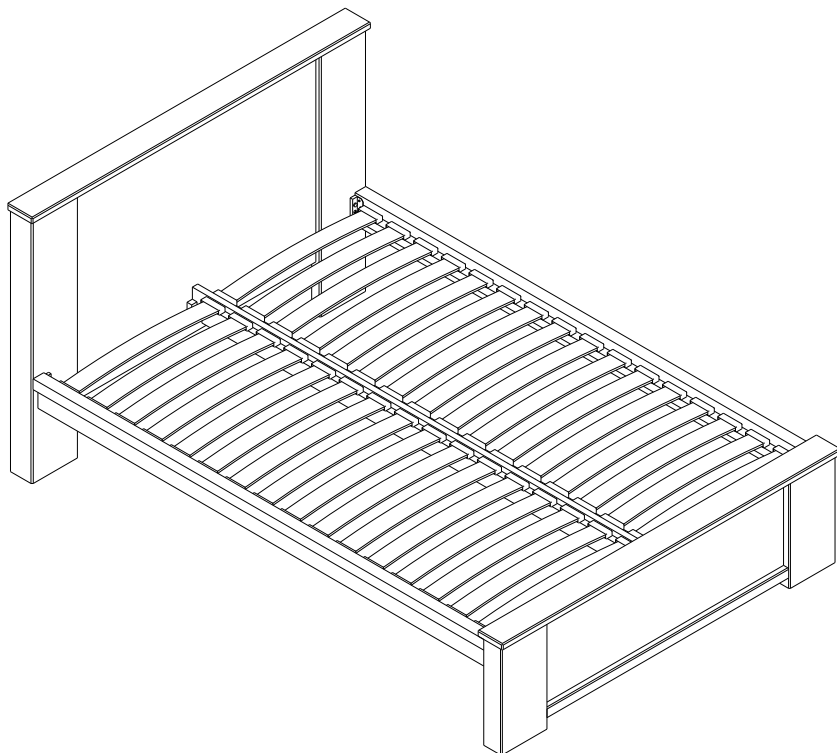


Step six

1. Push fit four dowels (I) into the bedside top panel (F).
2. Push fit four dowels (I) into the bedside bottom panel (G).

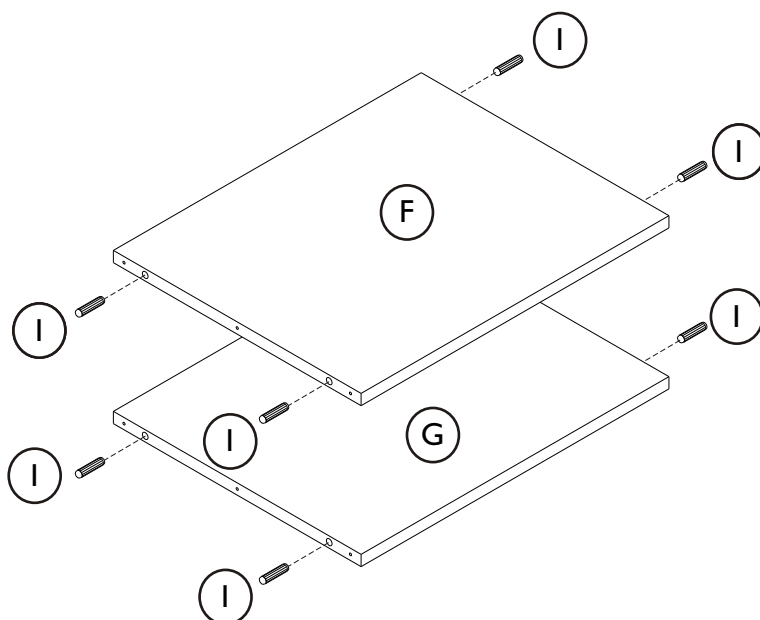


Step seven

1. Locate the bedside front attachment panel (H) and bedside back panel (I) onto the protruding dowels from the bedside top panel (F) and bedside bottom panel (G).
2. Secure using twelve 25mm CSK screws and a crosshead screwdriver.

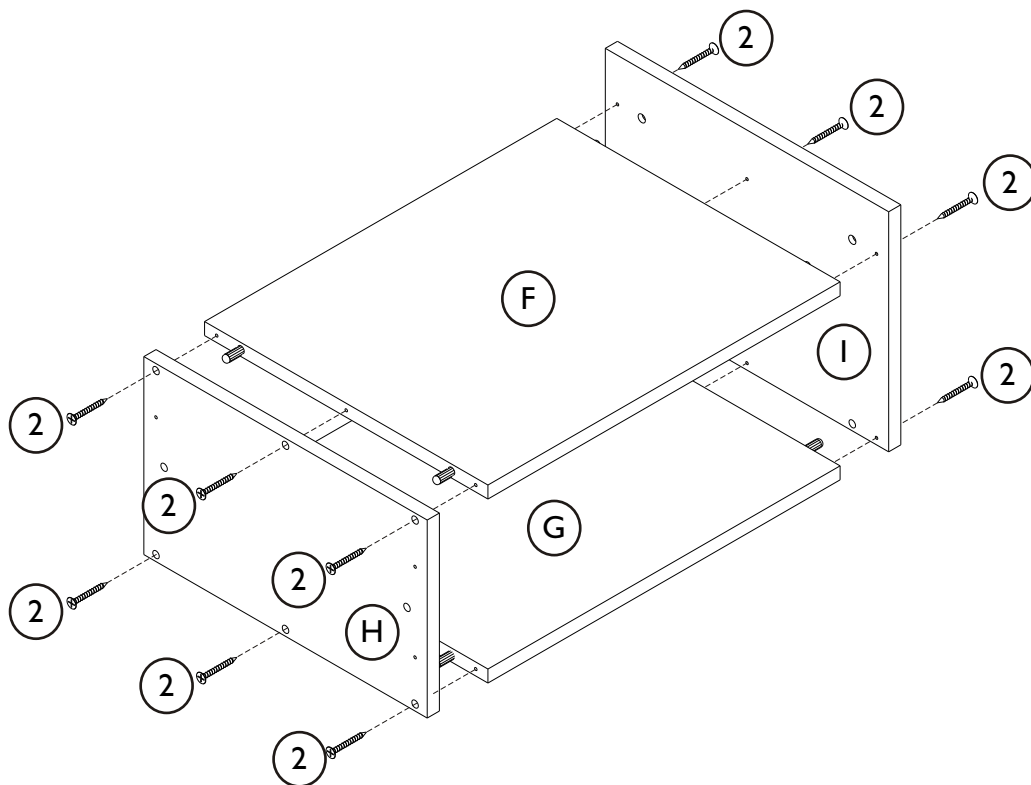


Step eight

Push fit two dowels (I) into the bedside front attachment panel (H).

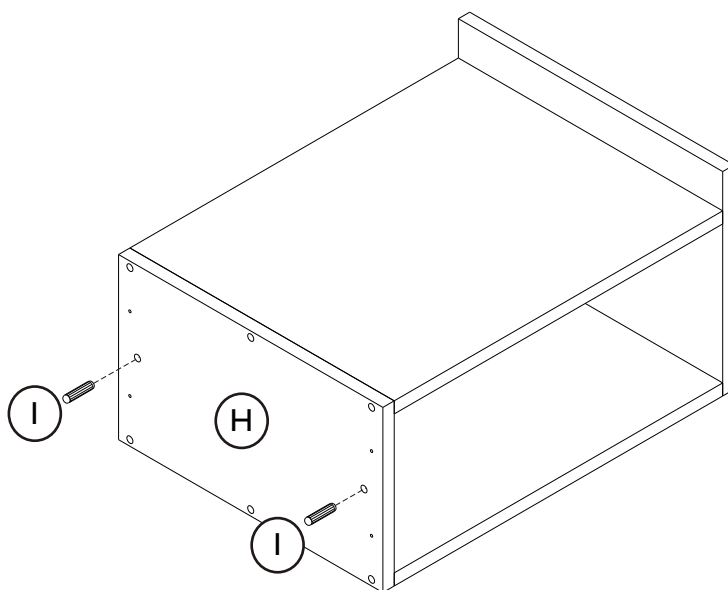


Step nine

1. Locate the bedside front panel (J) onto the protruding dowels.
2. Secure using four 25mm CSK screws.
3. Repeat steps 6, 7, 8 and 9 to the other bedside.

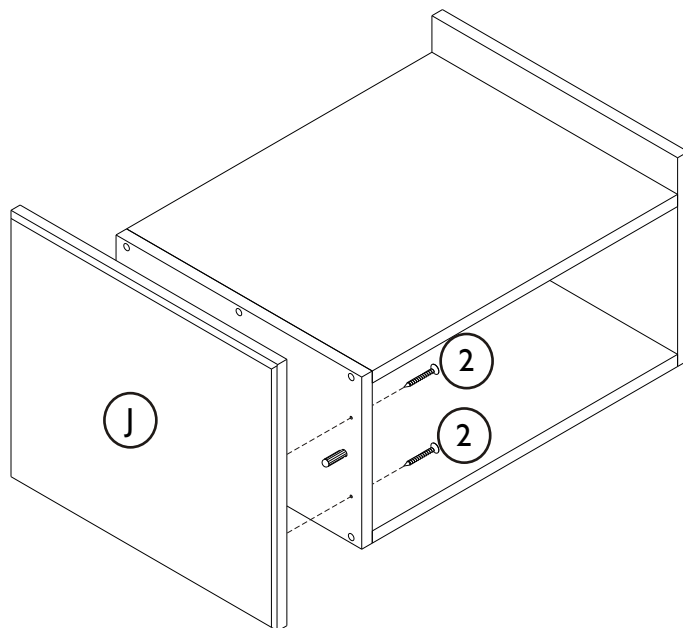


Step ten

1. Carefully lift the front of the bedside upwards, ensuring the bedside back panel can clear under the side rail.
2. Using the castors push the bedside under the side rails until the back panel has cleared the side rail.
3. Carefully lower the front of bedside downwards.
4. Push the bedside against the side rails.
5. Repeat the procedure to the other bedside.
6. Removal of the bedside is the reversal of step 10.

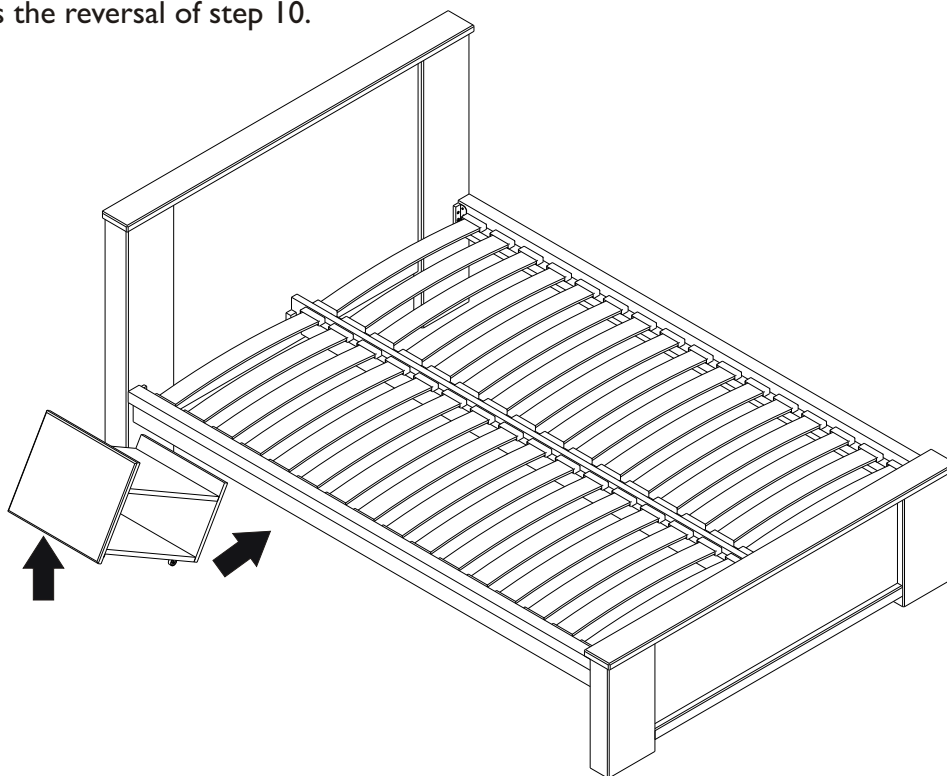


Step eleven

Push fit eight dowels (I) into two drawer side panels (M).

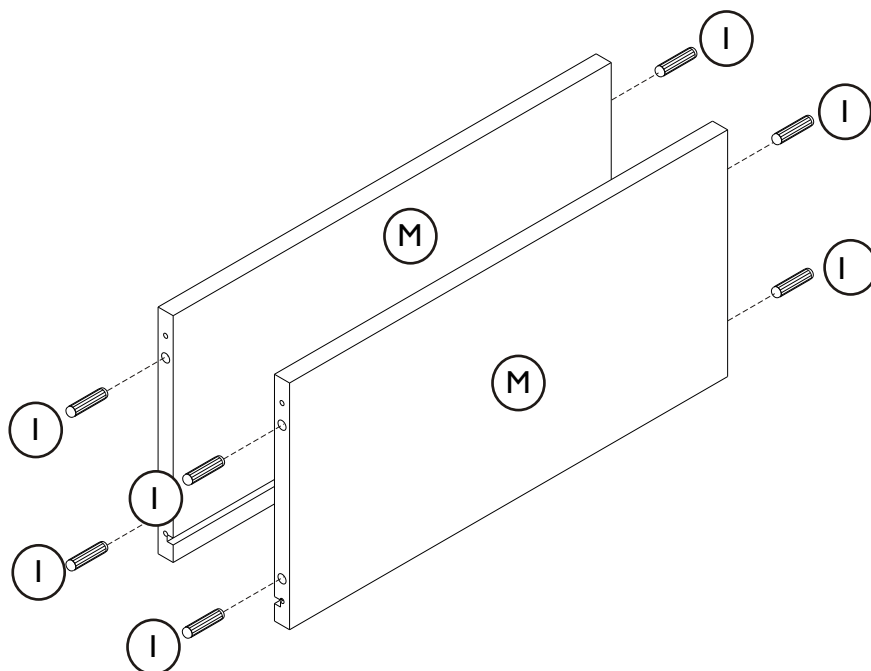

Step twelve

1. Locate the protruding dowels from the drawer side panels (M) in to the drawer box back panel (L).
2. Secure using four 25csk screws (2) and a crosshead screwdriver through the rear of the drawer box back panel (L).
3. Locate one drawer base panel (P) through the grooves lines.

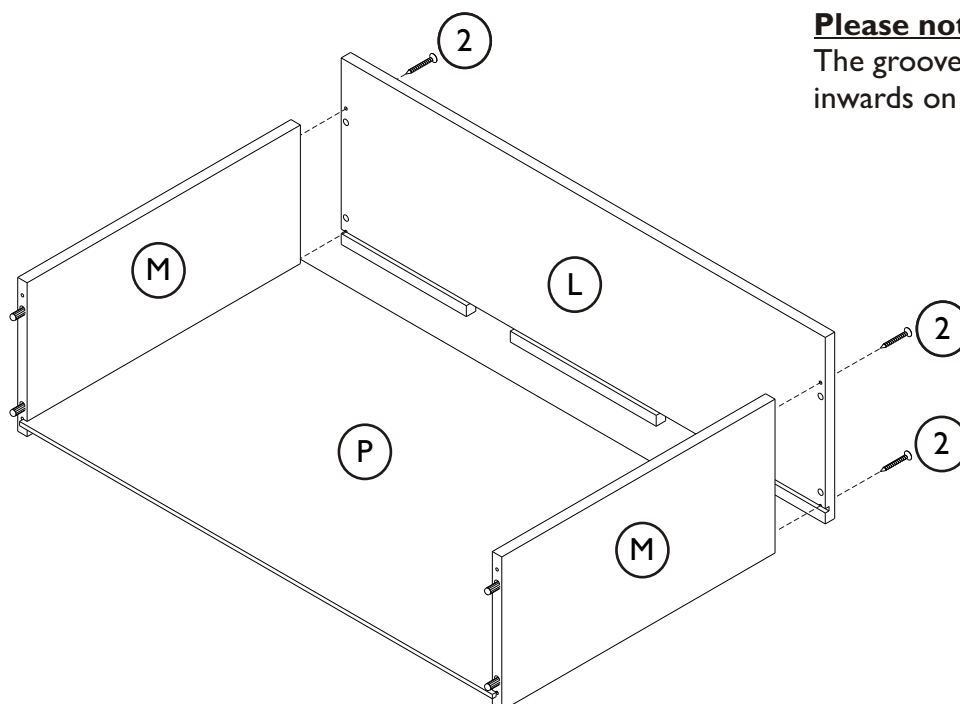


Please note

The grooves lines must be face inwards on all panels.


Step thirteen

1. Locate one drawer front attachment panel (K) onto the protruding dowels at the same time as locating the exposed drawer base panel into the groove line.
2. Secure using four 25mm CSK screws and a crosshead screwdriver.
3. Push fit two dowels (I) into the two pre-drilled on the drawer front attachment panel (K).

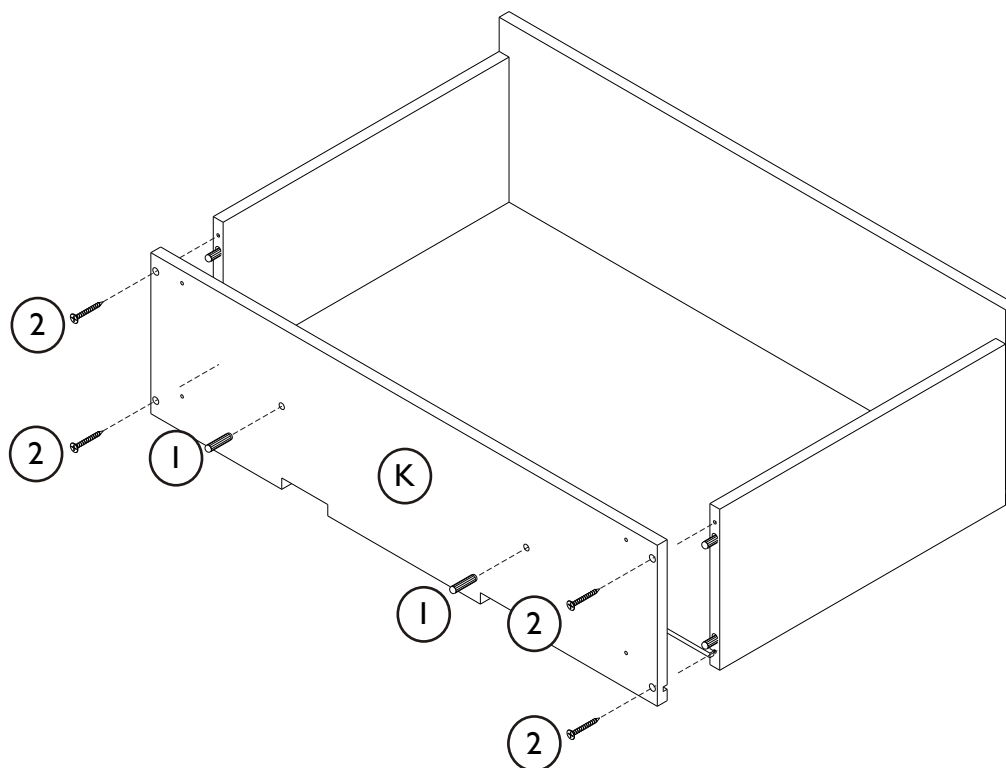


Step fourteen

1. Locate one drawer front (O) onto the two protruding dowels.
2. Secure using four 25mm CSK screws (2) and a crosshead screwdriver.

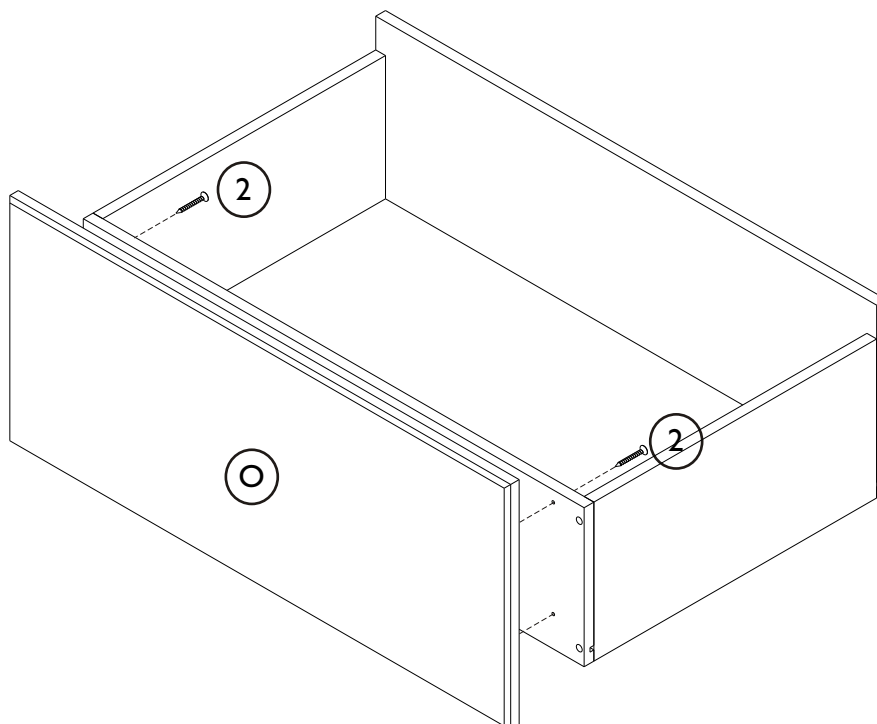


Step fifteen

1. Carefully the turn the drawer upside down.
2. Locate two castor rails (N) into the notes on the underside of the bedside.
3. Secure each castor rail (N) with four 25mm CSK screws (2) and a crosshead screwdriver.
4. Carefully turn the bedside the correct way up.
5. Repeat step fifteen to the other three drawers.

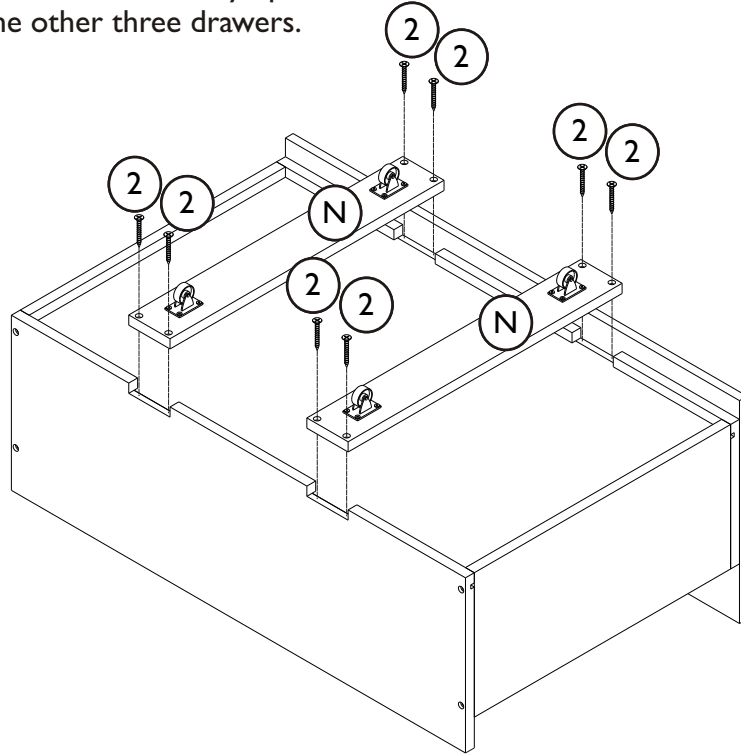

Step sixteen

1. Carefully lift the front of the drawer upwards, ensuring the drawer back panel can clear under the side rail.
 2. Using the castors push the drawer under the side rails until the back panel has cleared the side rail.
 3. Carefully lower the front of drawer downwards.
 4. Push the drawer against the side rails.
 5. Repeat the procedure to the other four drawers.
 6. Removal of the drawer is the reversal of step 16.
- The assembly is now complete.

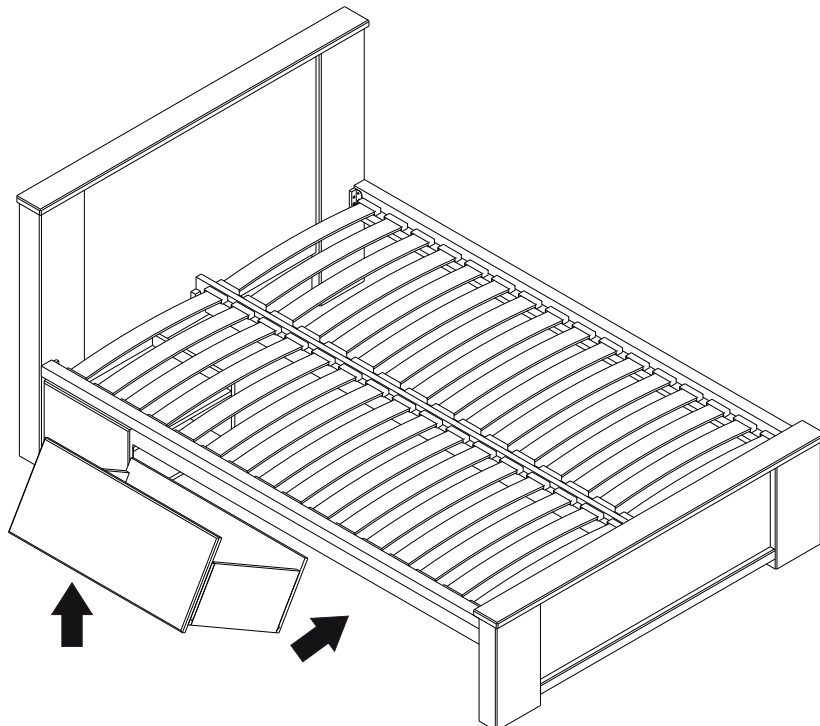

Care and Maintenance

This product should be, for general cleaning, dusted weekly with a soft lint free cloth.

Do not use furniture polish. Any spills should be removed immediately with a soft clean cloth.

Do not rub or scrub the surface when cleaning.

Do not use abrasive cleaning products or those containing silicone.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

Regularly check all fixings and re-tighten as necessary.

Never drag furniture when moving it; always lift it.

Important Safety Note

Please make sure that the side rails and centre rail brackets are securely fixed to the headboard and footboard before use.

The maximum weight for each under bed storage bedside and drawer is 20kgs.

DO NOT EXCEED THIS WEIGHT

No liability will be accepted for damage or injury caused by inadequate fixing or use without fixing.

Please retain this information leaflet for future reference.

John Lewis Partnership 171 Victoria Street, London, SW1E 5NN www.johnlewis.com