


Rose 2 Door Robe

Stock number: 803/16605


Thank you for purchasing this Rose 2 Door Robe. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

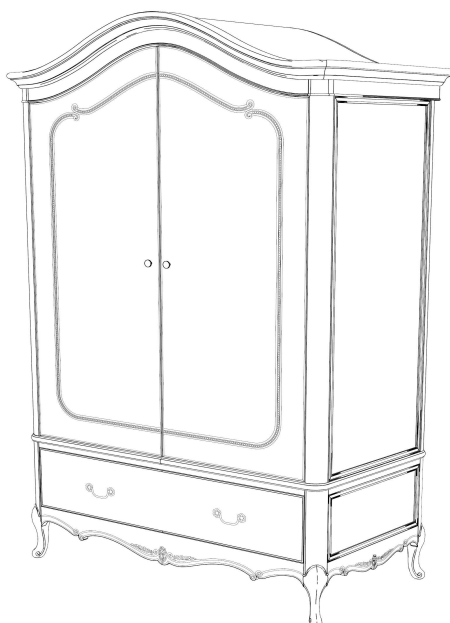

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Necessary Tools

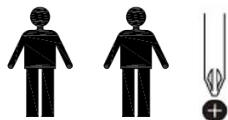

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact John Lewis Customer Services or your local branch.


This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury or damage to the product.



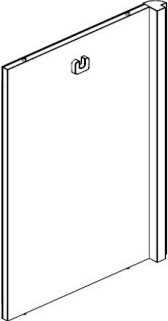
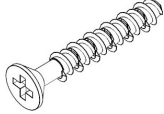

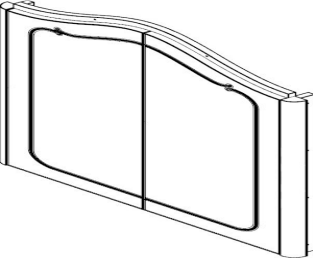




This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.

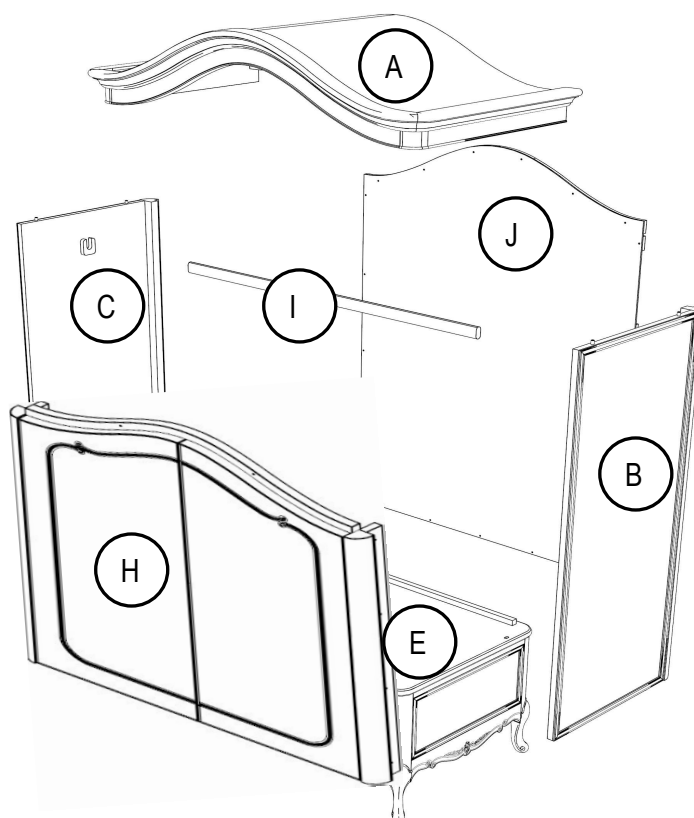Fittings and parts checklist

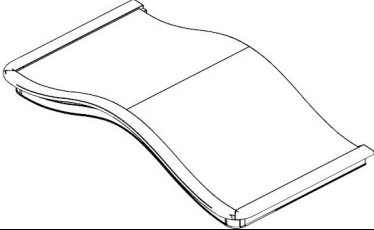

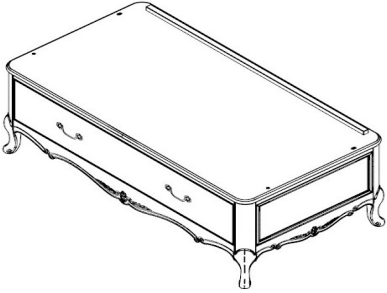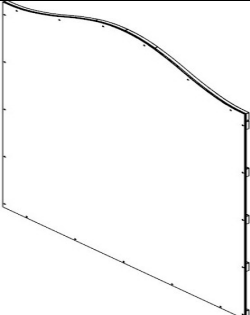A	1 x Top		F	21 x 25mm Screws	
B	1 x RHF S. Panel		G	12 x30mm Screw	
C	1 x LHF S. Panel		H	1 x Dorr frame & Doors	
D	8 x 50mm Screws		I	1 x Hanging Rail	
E	1 x Base Unit		J	1 x Back Panel	

Step by step assembly instructions


Step One

With the aid of an assistant steadying the panels from the back, locate the Left side panel (C) and Right side panel (B) onto the Base unit (E) and ensure the dowels are squarely located and the panels are kept vertical. The support for the hanging rail being at the top and the post at the rear. Screw in x 2 screws (G) into the pilot holes provided.

Fittings



G x 2

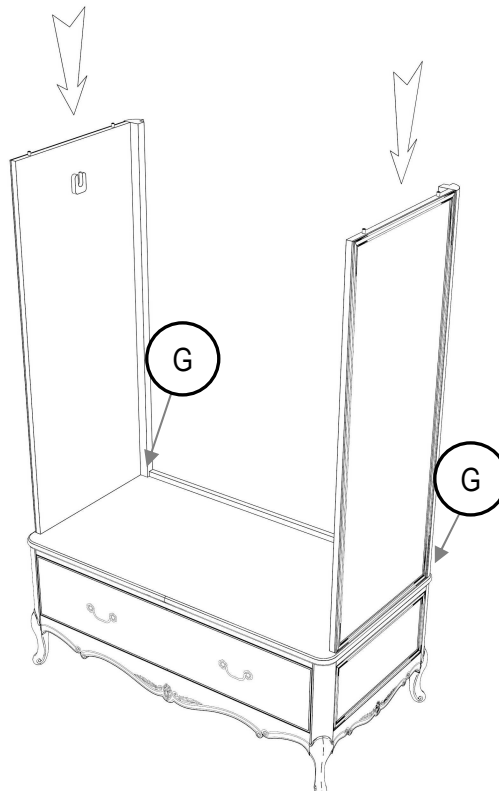



Step Two

Fittings



G x 8

One or more persons lift up the front section (H) with the hinges on the inside and the front inside rail with the 4 screw holes is at the bottom and place onto the top of the base unit. Push the front up against the sides (B) & (C) so there is no gap between the vertical ends of the front panel and the side panels. After the front has been located the person standing at the front should hold the sides and front together by holding the palms of their hands on the sides of the front section (H) and fingers on the sides (B) & (C) whilst the person at the back screws the front onto the sides by first screwing in the top 2 screws (G) then the bottom 2 (G). Once these 4 screws are fixed, the person at the front can let go and the remaining 4 screws (G) can be tightened up

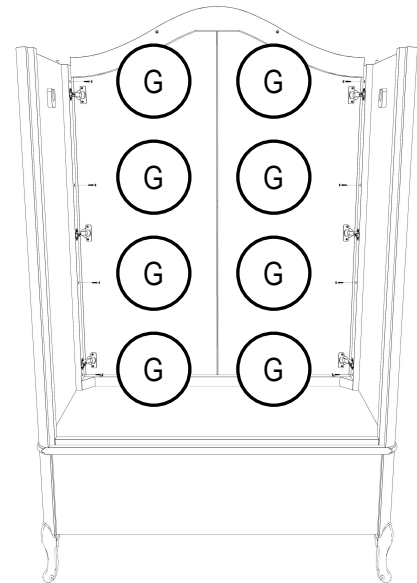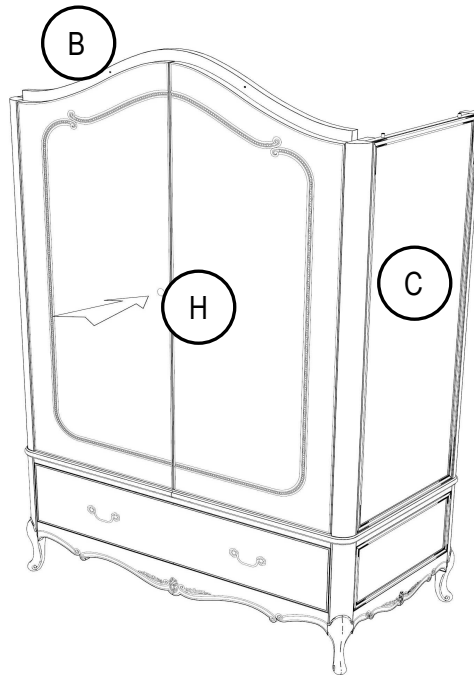



Step Four

Fittings



D x 4

Secure the bottom of the door frame using 4 x 50mm screws (D).. Fit the Hanging rail (I) into its cradle

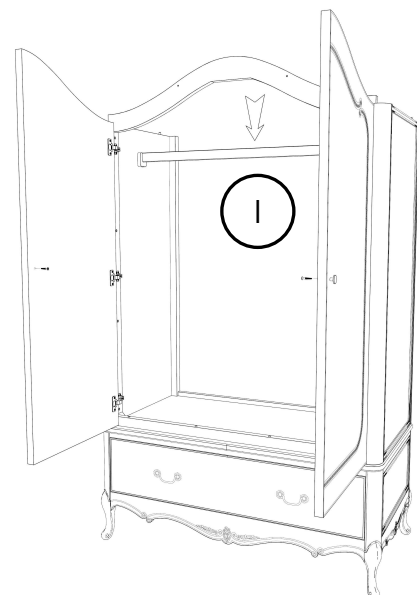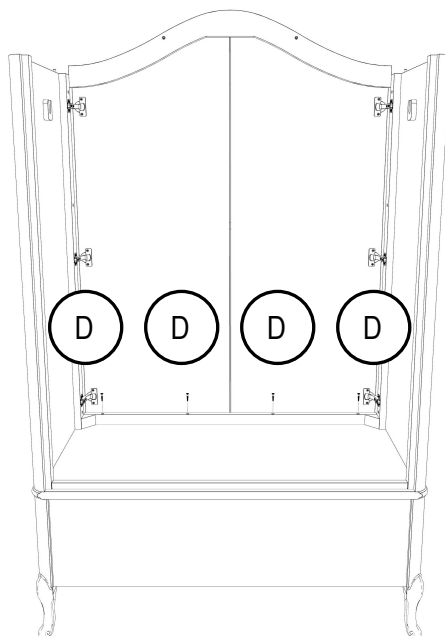

Step Five

Locate the Top (A) as shown onto the 4 dowells and secure to the Side panels using 4 x 50mm Screws (D) ensuring the cornice runs around the front and 2 sides. Screw in 2 x 30mm (G) Screws into the front of the section


Fittings



D x 4



G x 2

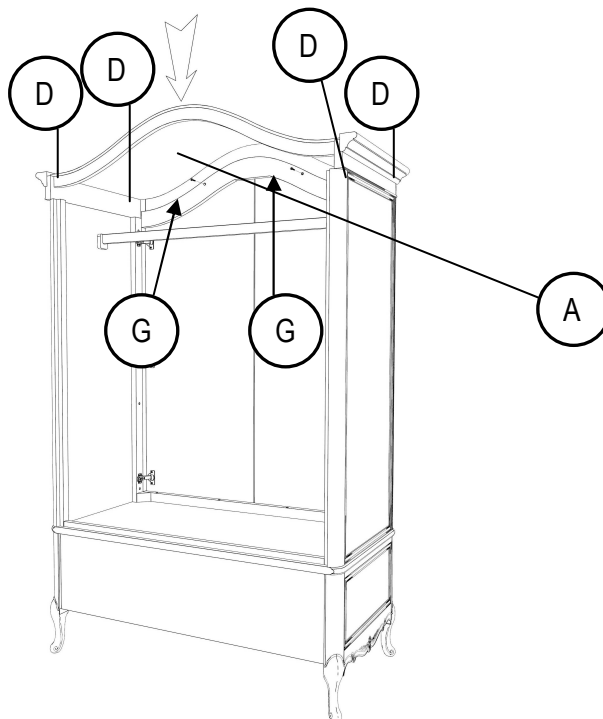


Step Six

Move the wardrobe close to the position where you intend to use it. Sometimes floors are uneven and you may need to lean the wardrobe slightly left or right to make the doors sit square inside the frame (correct position). Once the doors are square (correct position) fit the Back panel (J) using 21 x 30 mm Screws (F) ensuring the rails run horizontally facing the outside of the cabinet. First fit the bottom 2 outer screws, then the top 2 outer and finally the remaining screws

Fittings




F x 21

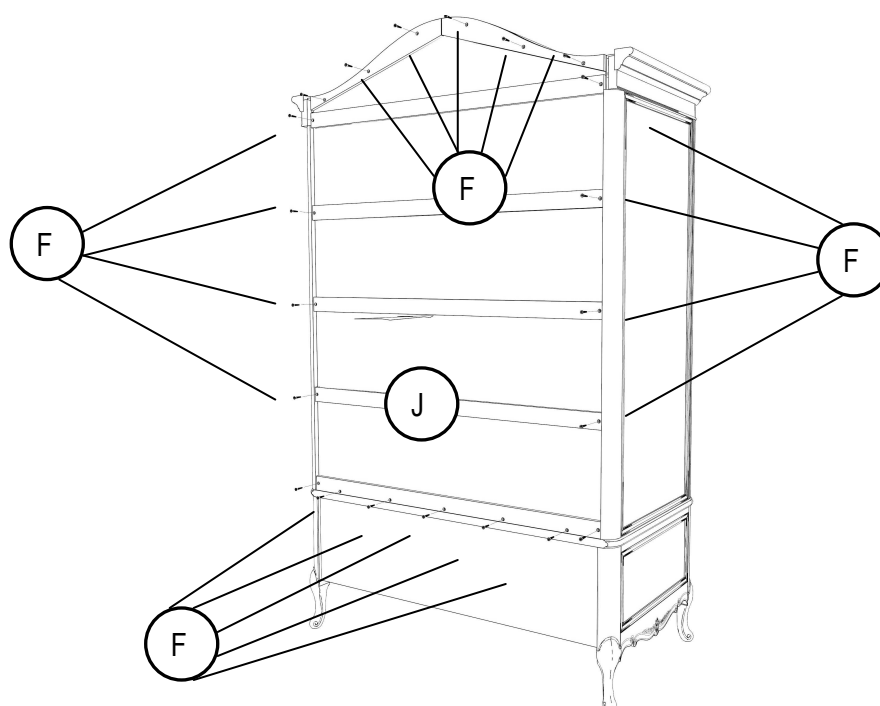

Step Seven

Check that the doors are aligned correctly and if necessary adjust the door hinges as shown below. Check that the magnets hold the door closed and that the doors are aligned correctly as shown below.

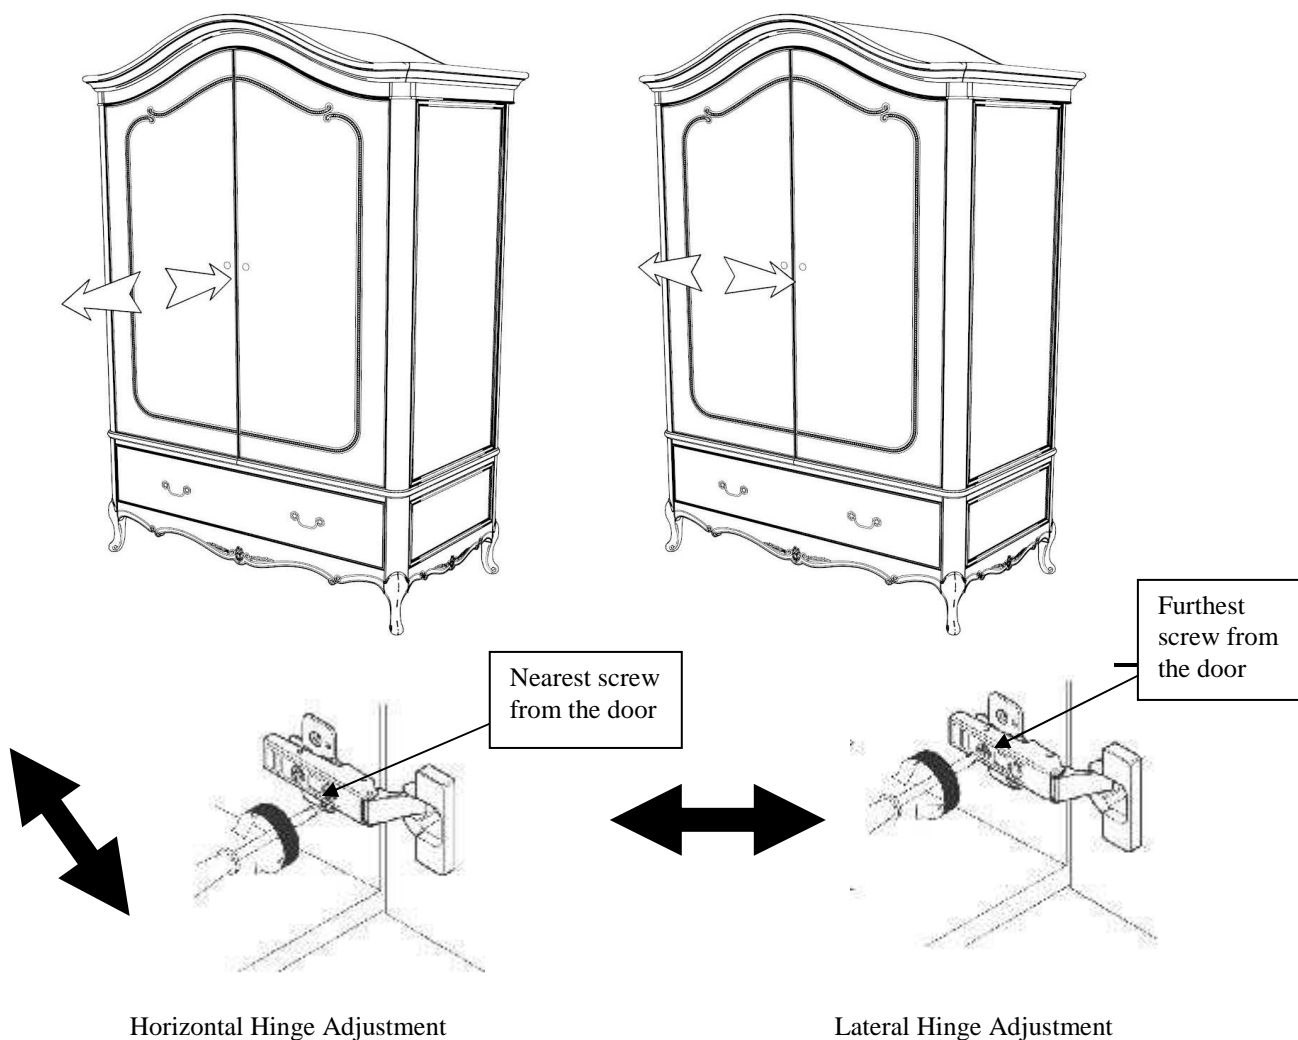

Care and Maintenance

The John Lewis Rose bedroom collection is crafted from solid Birch and Birch veneers and then hand finished with several coats of paint. Each piece is then individually distressed. This is achieved by gently rubbing by hand the top layers of finish to get to the initial coats of paint to create an authentic aged appearance. Some distressing will be black and some will be clear, but this is a natural characteristic of the effect.

Every item is unique in the way it is finished and the cracks and rubs in the paint finish are an integral part of the design.

All carving on the Rose range is done by hand by skilled craftsmen that are specifically trained. The signature carved Roses take 4 hours apiece to produce

Safety Instructions

General warnings:

Never drag furniture when moving it, always lift it. Periodically check all fixings to ensure none have come loose and re-tighten where necessary. Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Wall Fixing Strap :

Your Rose product is supplied with a wall fixing strap which John Lewis would always recommend is used to secure the product against the wall. Attach one end of the wall fixing strap to the top of the unit with the screw provided and the other end should be attached to the wall by a competent person.

Specific warnings for heavy items:

It is recommended that before moving heavy objects to a new location they are completely disassembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN
www.johnlewis.com