

Assembly instructions for the 10294 Viva Trolley



The following components are included with the trolley to enable correct assembly.

2 x Large Allen key screws
10 x Small Allen Key screws
8 x Small screws
16 x Wheel Screws
4 x Wheels (2 x Locking)
1 x Allen Key


1. Fix the top (fully slatted) shelf to the leg with towel rail, using the 2 large Allen key screws.



- 2b. Fix the second leg to opposite end of the shelves using 2 small Allen key screws per shelf.
Fix the 4 wheels to the base of the trolley using 16 wheel screws (4 per wheel).

2a. Fix the remaining 2 shelves to same leg using 2 small Allen key screws per shelf. **It is imperative that the bottom shelf is fitted the correct way up. The pilot holes for the wheels should face to the ground and match up with pilot holes on the legs. The shelf slats are mounted on the base section of this shelf to provide a tray with sides in order that bottles are contained.**
The wine rack section will not fit correctly unless the shelf is fitted the correct way

3. Place the pre-assembled top/drawer section onto the leg assembly and centralise. Remove the drawers and secure to the leg assembly using 8 small screws (4 on each side) as shown by the arrows

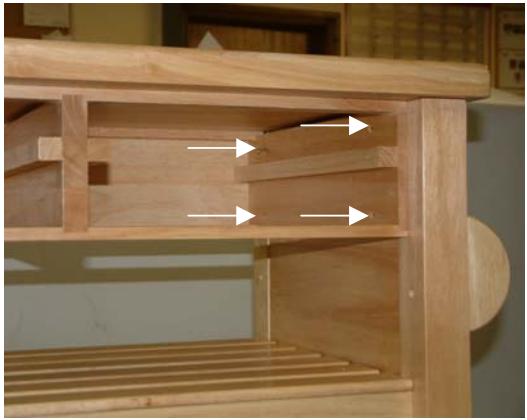

4. Once the top is secured to the legs, slide the drawers back onto their runners.
Add the removable wine rack to the lower shelf.
Your Viva Trolley is now complete.

10294 Viva Trolley - Instructions d'assemblage



Les éléments suivants sont inclus avec la desserte pour le montage


2 longues vis à tête 6 pans creux
10 petites vis à tête 6 pans creux
8 petites vis
16 vis pour roulettes
4 roulettes (2 verrouillables)
1 clé Allen

Fixer l'étagère du haut à lamelles sur le panneau avec barre de torchon, à l'aide des 2 longues vis à tête 6 pans creux



Fixer les 2 étagères restantes sur le même panneau à l'aide de 2 petites vis 6 pans creux par étagère. Fixer le deuxième panneau à l'extrême opposée des étagères à l'aide de 2 petites vis 6 pans creux par étagère. Fixer les 4 roulettes à la base de la desserte à l'aide des 16 vis pour roulettes (4 par roulette).

Placer les tiroirs prémontés sur le panneau et centrer. Enlever les tiroirs et fixer le tout aux 2 panneaux à l'aide de 8 petites vis (4 de chaque côté) comme montré par les flèches

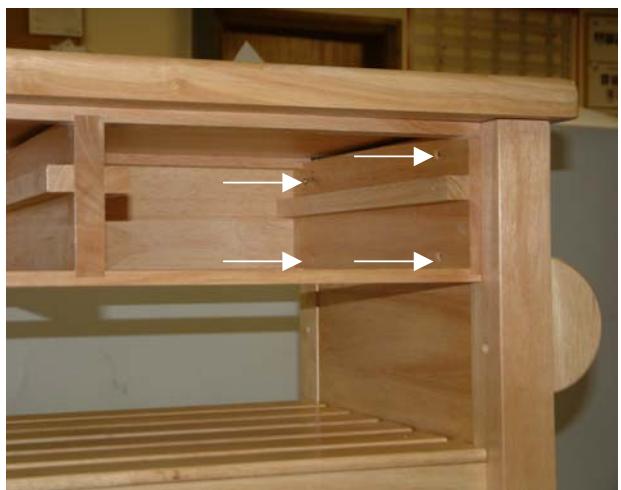

Une fois que le dessus est fixé aux panneaux, incorporer les tiroirs vers l'arrière sur les règlettes. Ajouter le repose bouteille sur l'étagère inférieure. Votre desserte est maintenant complète.