


# Napoli dressing table

Stock Code: 80310606

Thank you for purchasing this Napoli dressing table. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

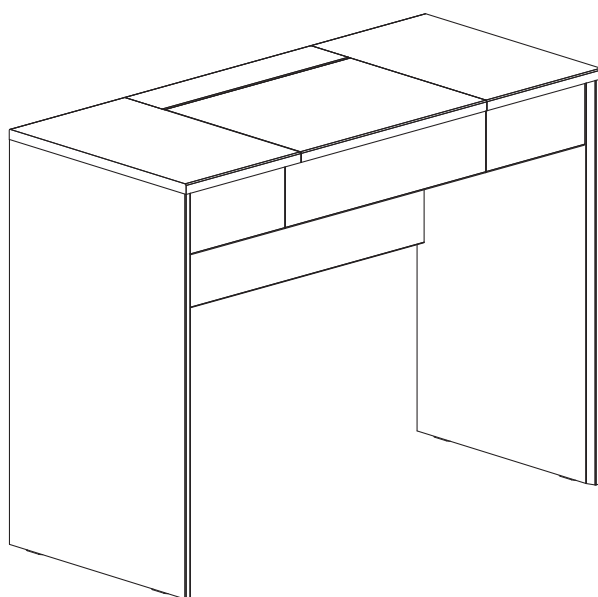


**REMOVE PROTECTIVE  
FILM FROM SIDE PANELS  
AND TOP/BOTTOM PANEL  
BEFORE FIXING THEM TO  
OTHER COMPONENTS**

## PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

### Necessary Tools



Screwdriver



Spirit level



Drill



Eye protection



Ruler/tape  
measure



Small hammer

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the John Lewis Helpline.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.


















This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**.

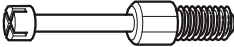The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

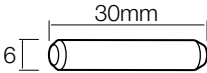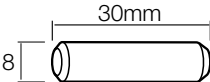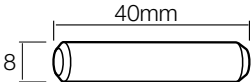
Read this leaflet in full before commencing assembly.

If you are missing some fittings please contact our spare parts helpline on 0330 005 9435.  
Opening hours are 9am - 5pm Monday to Friday.
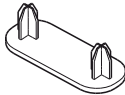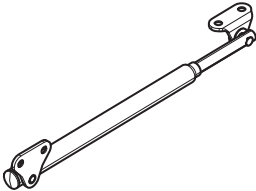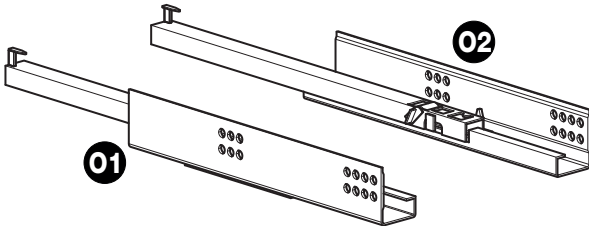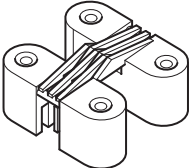
# Fittings checklist
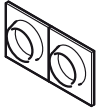
<p><b>A</b></p>  <p>Metal dowel x 27</p>	<p><b>B</b></p>  <p>Long cam lock x 23</p>	<p><b>C</b></p>  <p>Short cam lock x 4</p>
<p><b>D</b></p>  <p>Wooden dowel x 8</p>	<p><b>E</b></p>  <p>Wooden dowel x 16</p>	<p><b>F</b></p>  <p>Wooden dowel x 4</p>
<p><b>G</b></p>  <p>Conformat x 4</p>	<p><b>H</b></p>  <p>11mm Euroscrew x 8</p>	<p><b>I</b></p>  <p>16mm Screw x 8</p>
<p><b>L</b></p>  <p>30mm Screw x 4</p>	<p><b>M</b></p>  <p>Support foot x 4</p>	<p><b>N</b></p>  <p>Arm x 2</p>
 <p>Runners x 2</p>		<p><b>P</b></p>  <p>Plastic hinge x 2</p>
<p><b>Q</b></p>  <p>30mm Screw x 8</p>	<p><b>R</b></p>  <p>Allen key x 1</p>	<p><b>S</b></p>  <p>Bumper x 1</p>


# Parts checklist

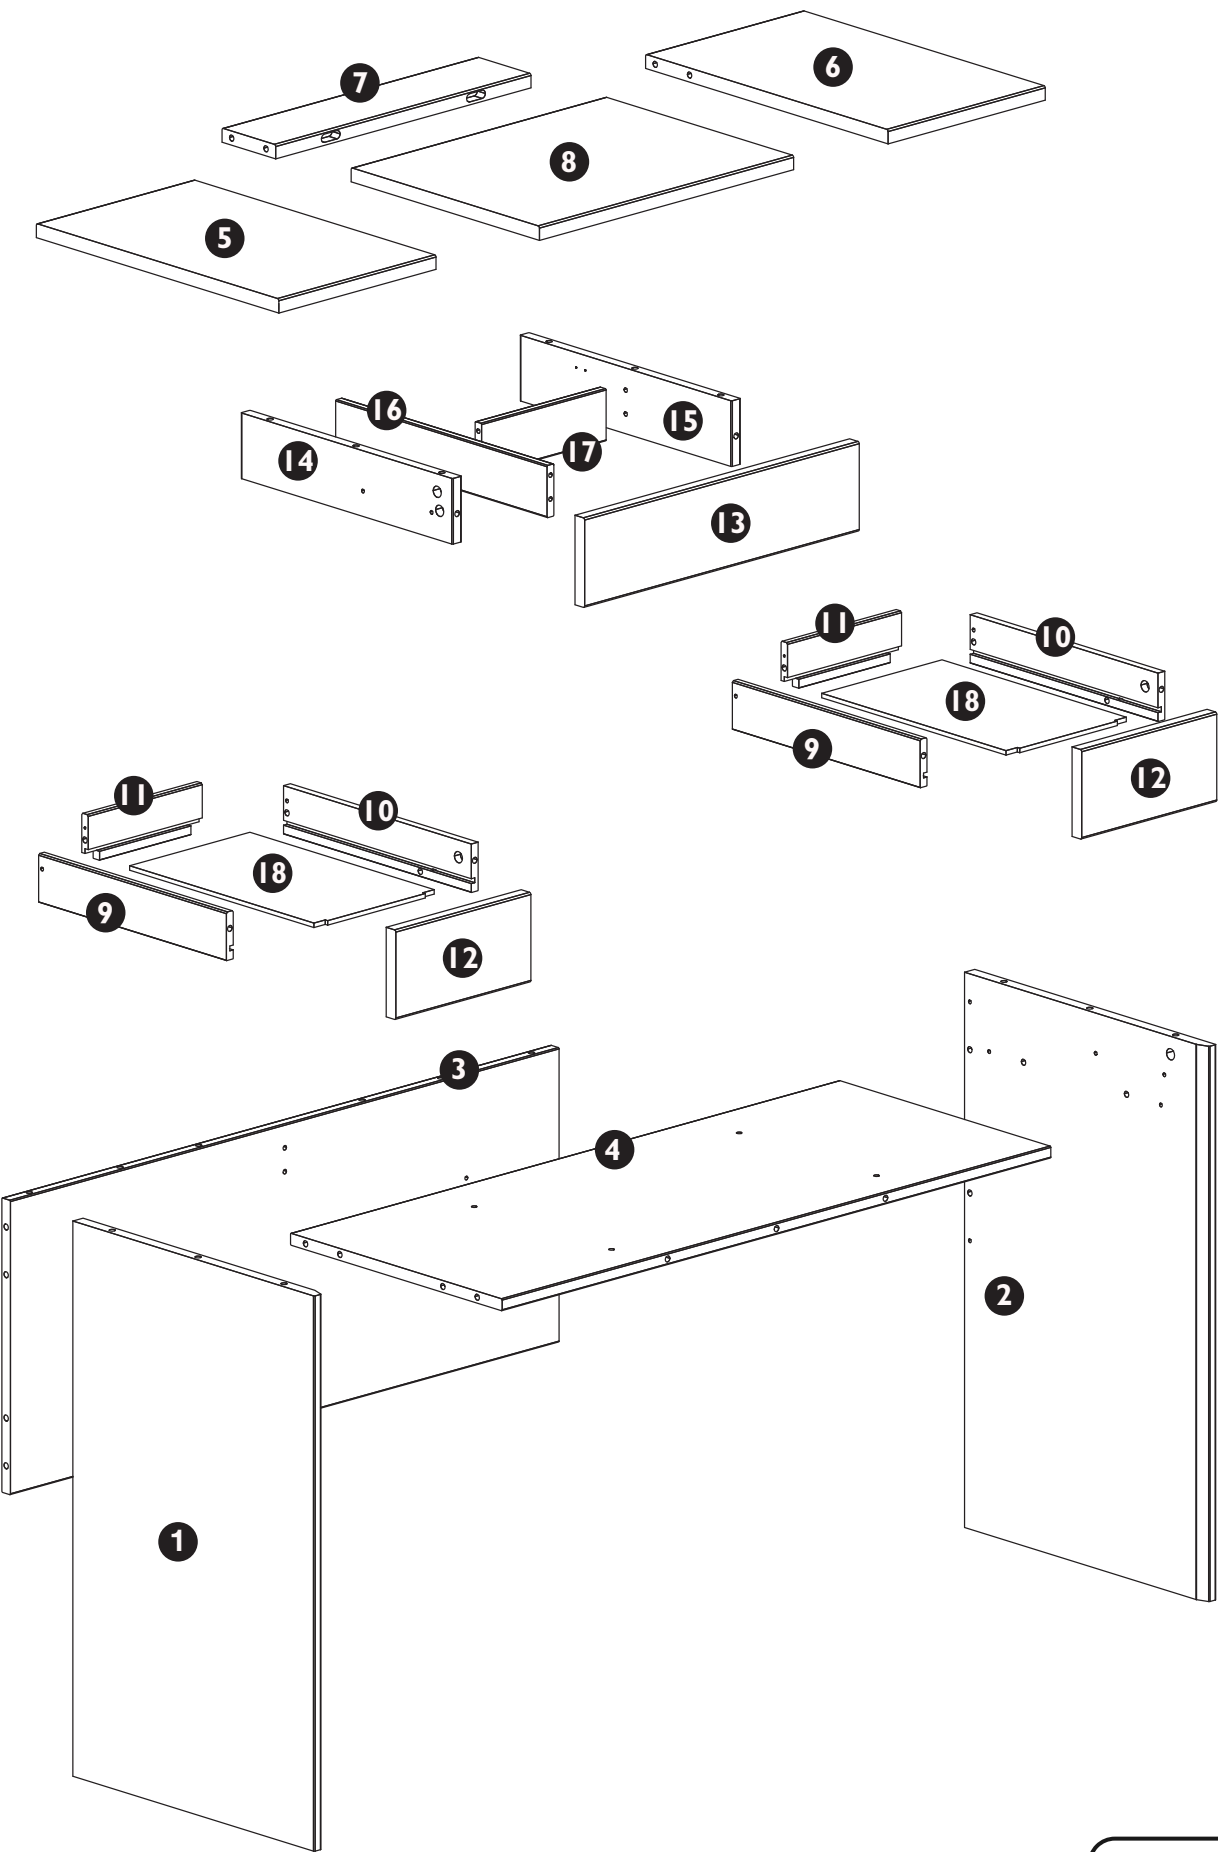

# Step by step assembly instructions


## Step One

1. Place the cam lock (B) into the holes on panels (3) (4), arrow pointing towards the bolt.
2. Attach 8x wooden dowels (E) into the pre-drilled holes as shown.

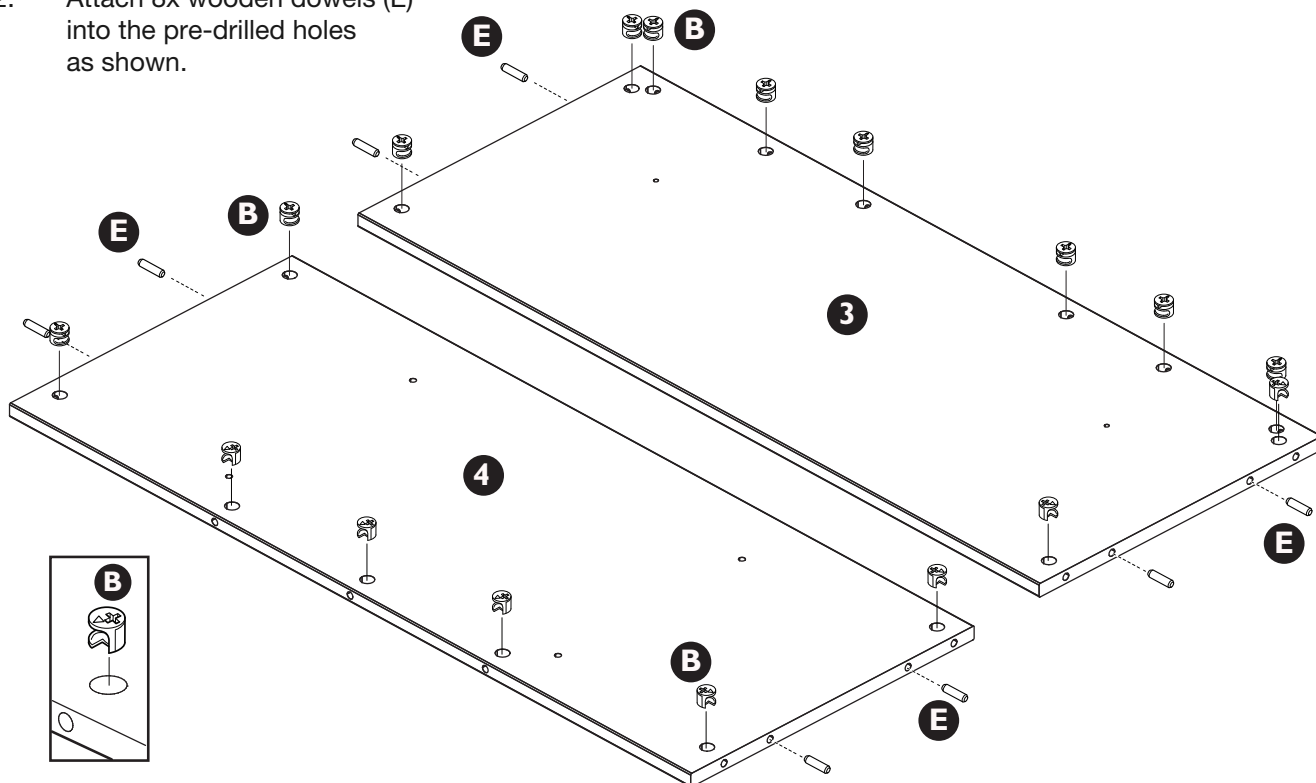

## Step Two

1. Attach 8x metal dowels (A) into the pre-drilled holes on side panels (1) (2) as shown. Use a screwdriver to turn fitting (A) clockwise to fix.
2. Fix runner parts (O1) (O2) to the side panels (1) (2) through holes shown in the detail view using 4x euroscrews (H).
3. Place the cam lock (B) into the holes on panels (1) (2), arrow pointing towards the bolt.
4. Fix 4x support foot (M) as shown

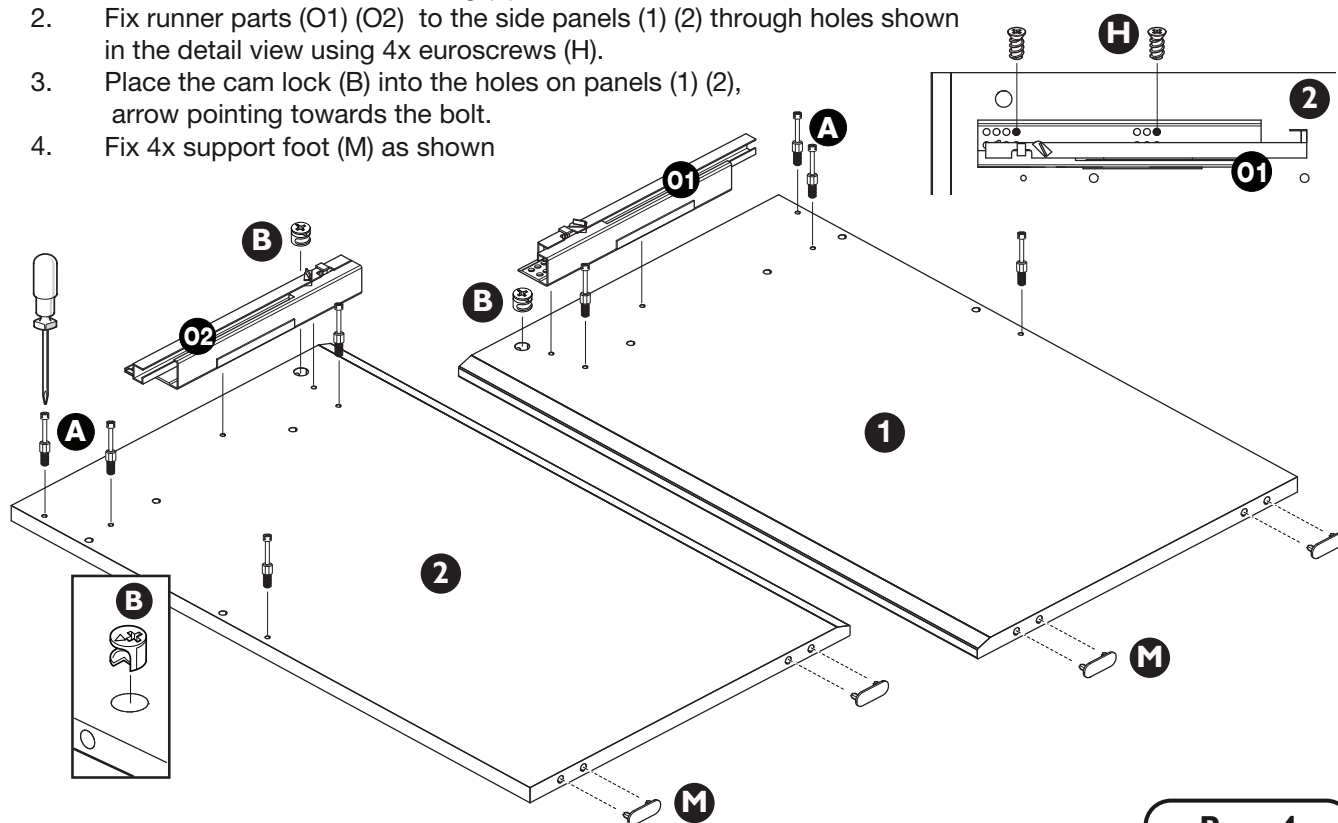


---

## Step by step assembly instructions

---

### Step Three


1. Attach panels (3) (4) onto side panels (1) as shown. Ensure metal dowels (A) and wooden dowels (E) are aligned correctly with the holes of matching parts before attaching.
2. Secure panels using a screwdriver to turn fitting (B) clockwise to fix.

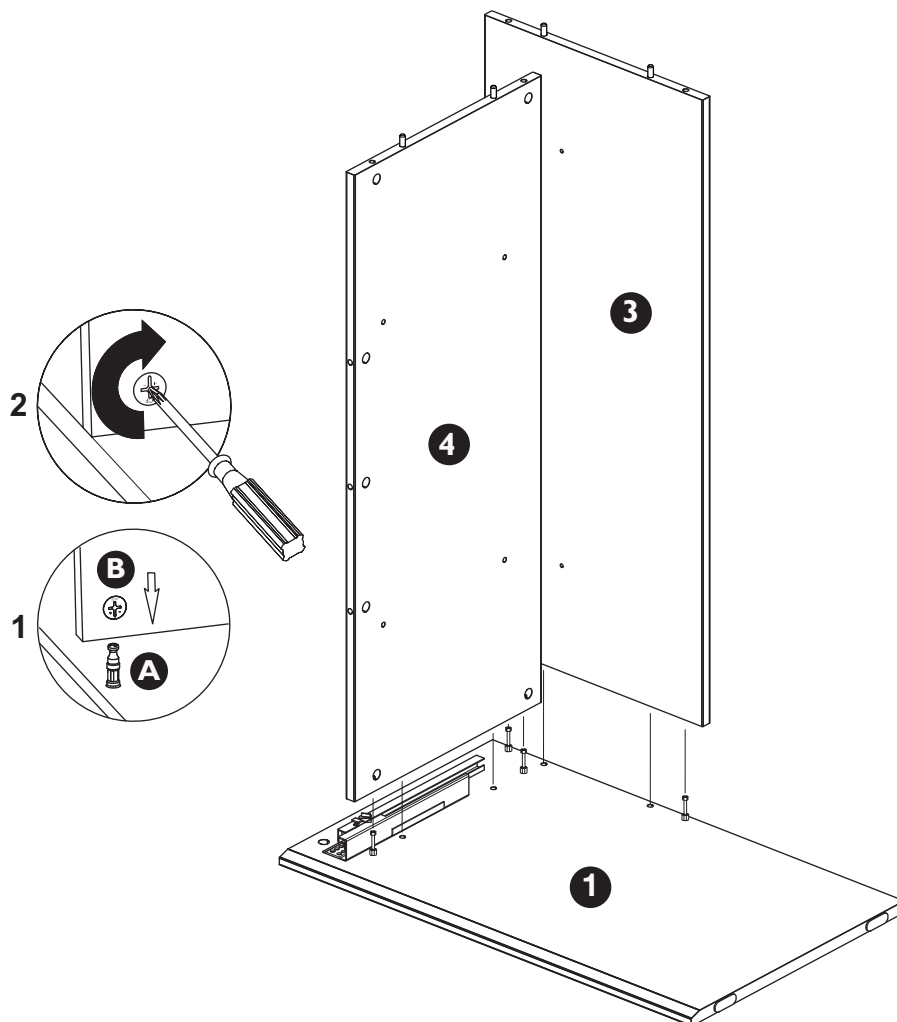

---

### Step Four


1. Attach side panels (2) onto panels (3) (4) as shown. Ensure metal dowels (A) and wooden dowels (E) are aligned correctly with the holes of matching parts before attaching.
2. Secure panels using a screwdriver to turn fitting (B) clockwise to fix.

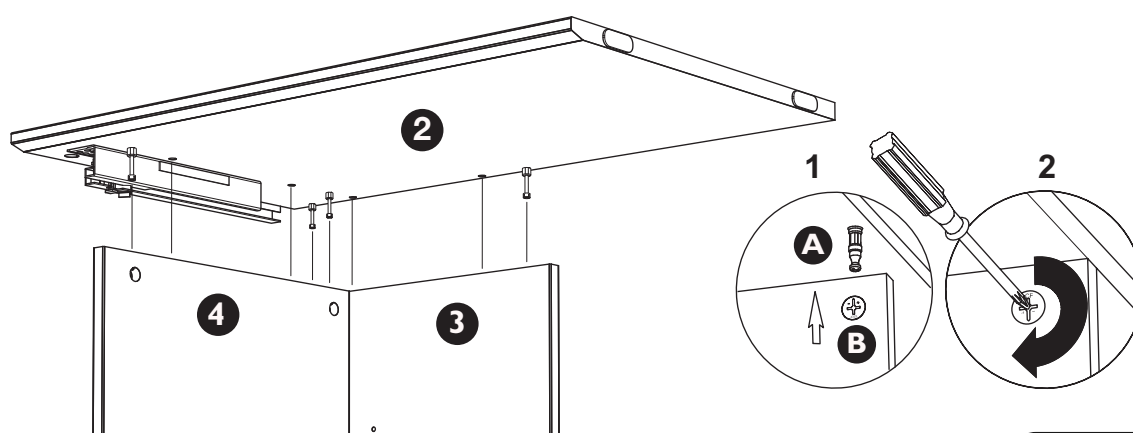

## Step by step assembly instructions


### Step Five

1. Attach 4x wooden dowels (E) into the pre-drilled holes of panels (14)(15) as shown.
2. Attach 8x wooden dowels (D) into the pre-drilled holes of panels (16)(17) as shown.
3. Place the cam lock (B) into the holes on panels (14) (15) arrow pointing towards the bolt.

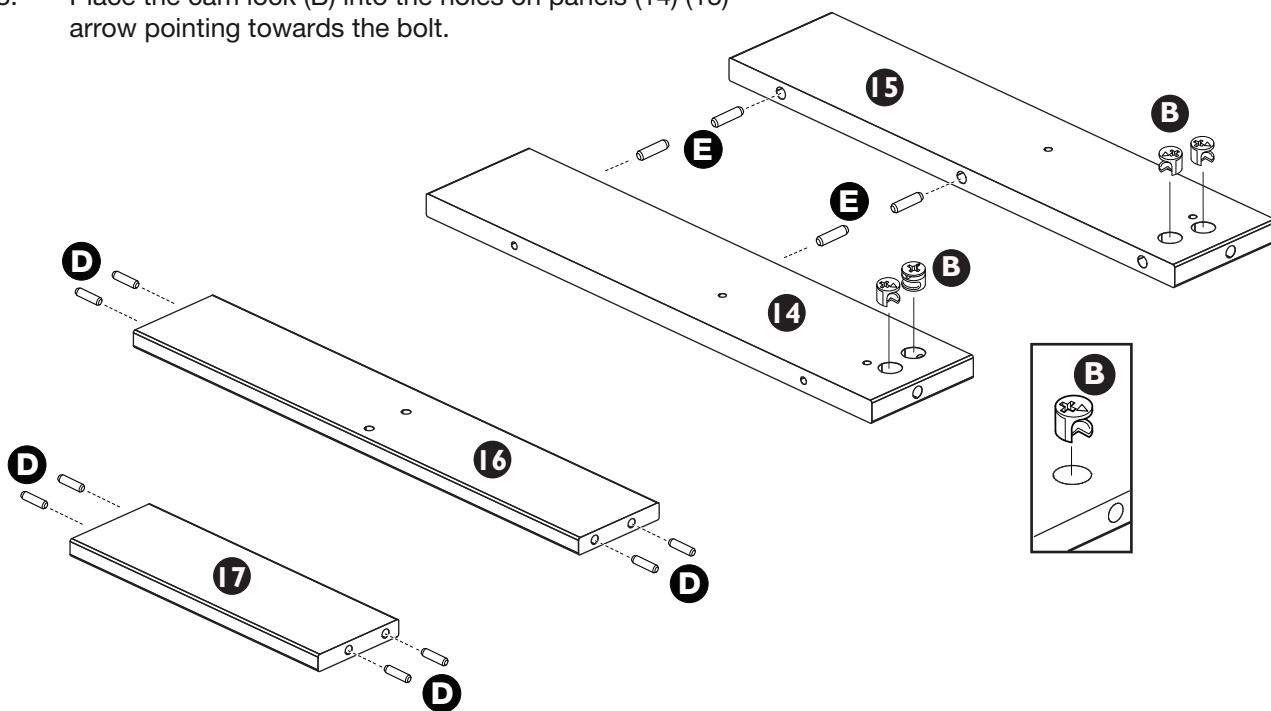

### Step Six

1. Fix panel (14) onto bottom panel (4) using 2x conformat screws (G) and allen key (R).

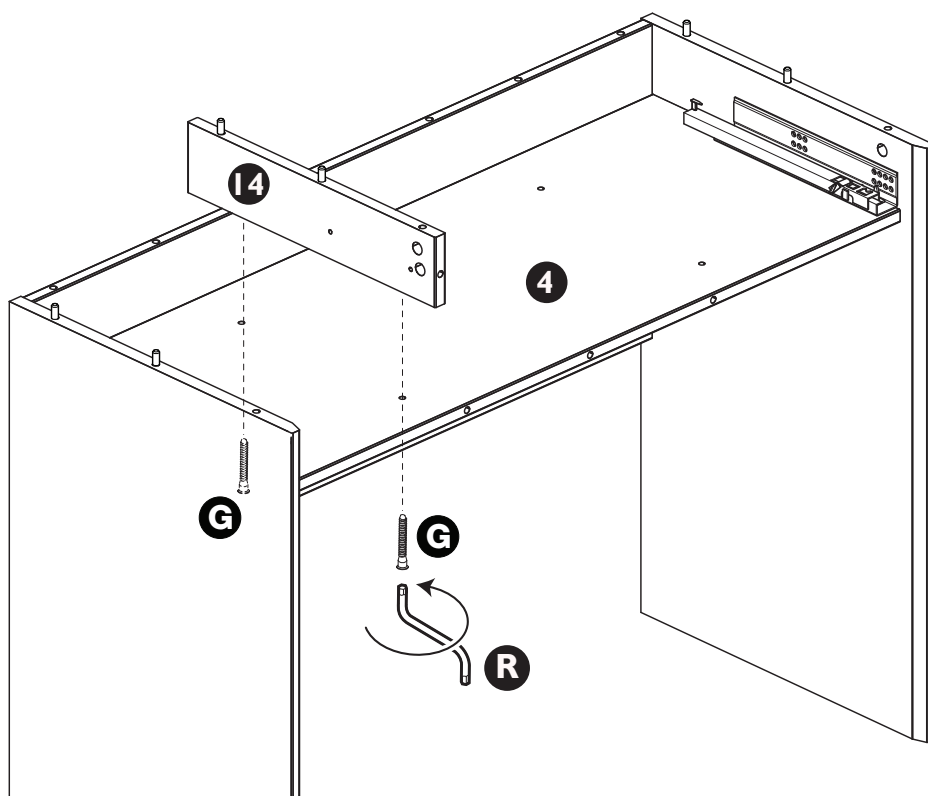


---

## Step by step assembly instructions

---

### Step Seven


1. Attach panel (16) onto panel (3). Ensure wooden dowels (D) are aligned correctly with the holes of matching parts before attaching.

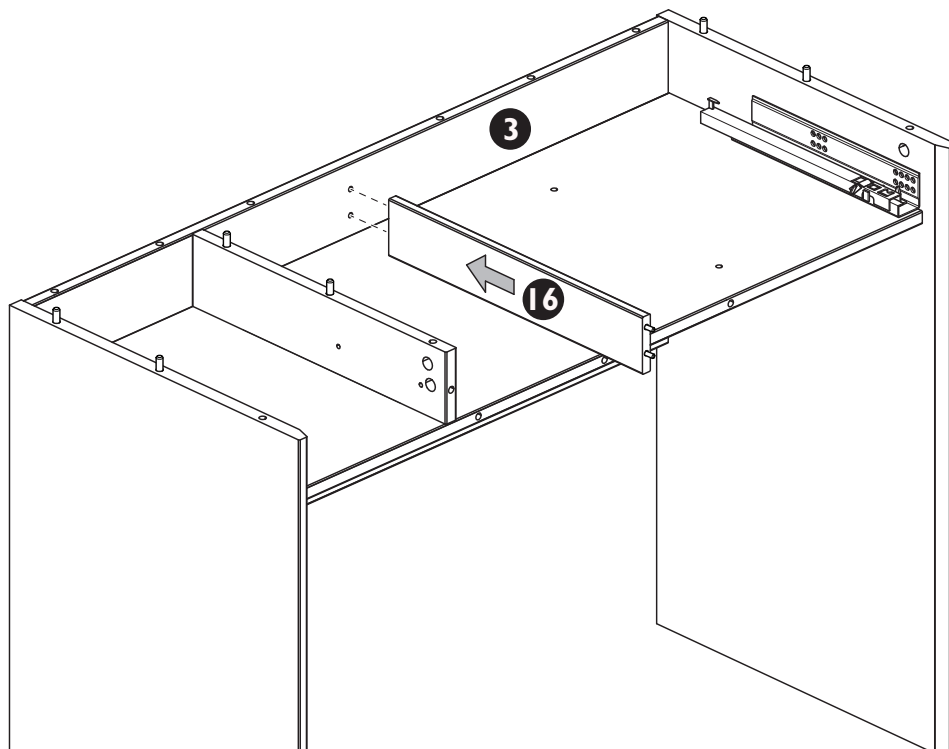

---

### Step Eight


1. Attach panel (17) onto panel (16) as shown. Ensure wooden dowels (D) are aligned correctly with the holes of matching parts before attaching.
2. Attach panel (15) onto panel (17) as shown. Ensure wooden dowels (D) are aligned correctly with the holes of matching parts before attaching.

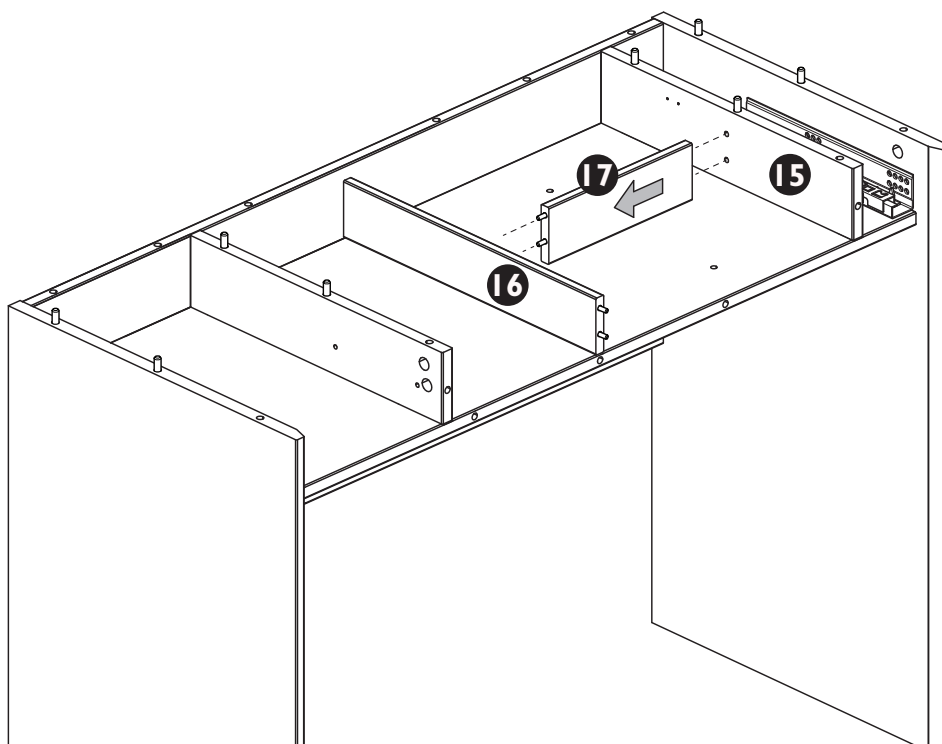

# Step by step assembly instructions


## Step Nine

1. Fix panel (15) onto bottom panel (4) using 2x conformat screws (G) and allen key (R).

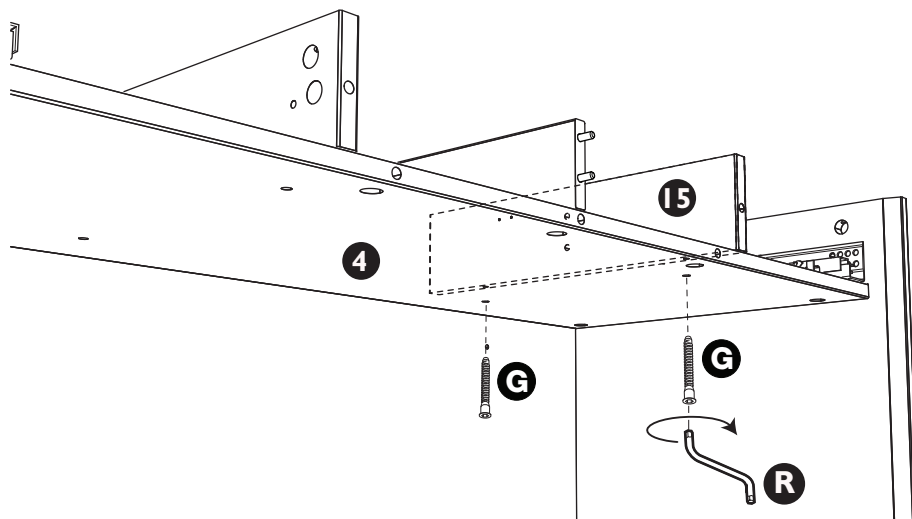


## Step Ten

1. Attach 5x metal dowels (A) into the pre-drilled holes on panel (13). Use a screwdriver to turn fitting (A) clockwise to fix, repeat for all drawers.

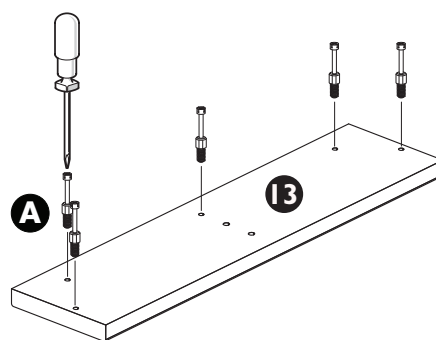

## Step Eleven

1. Position panel (13) as shown, turn locking nuts (B) clockwise to lock.

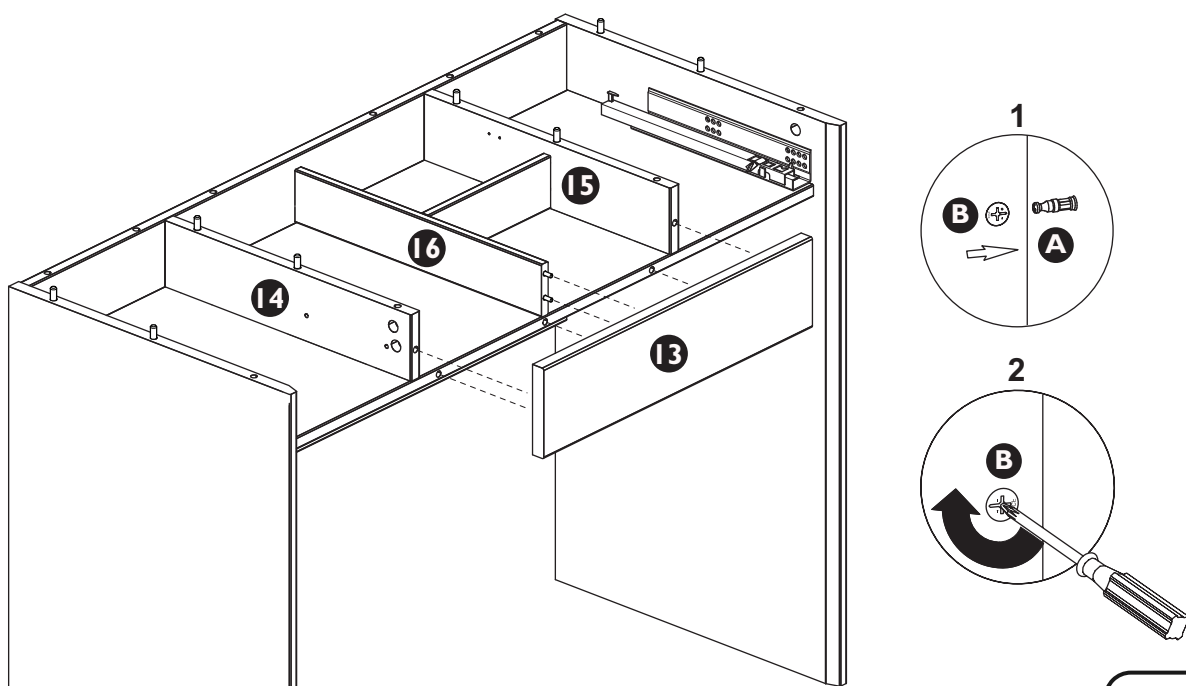




## Step by step assembly instructions


### Step Twelve

1. Fix runner parts (O1) (O2) to the panels (14) (15) through holes shown in the detail view using 4x euro screws (H).

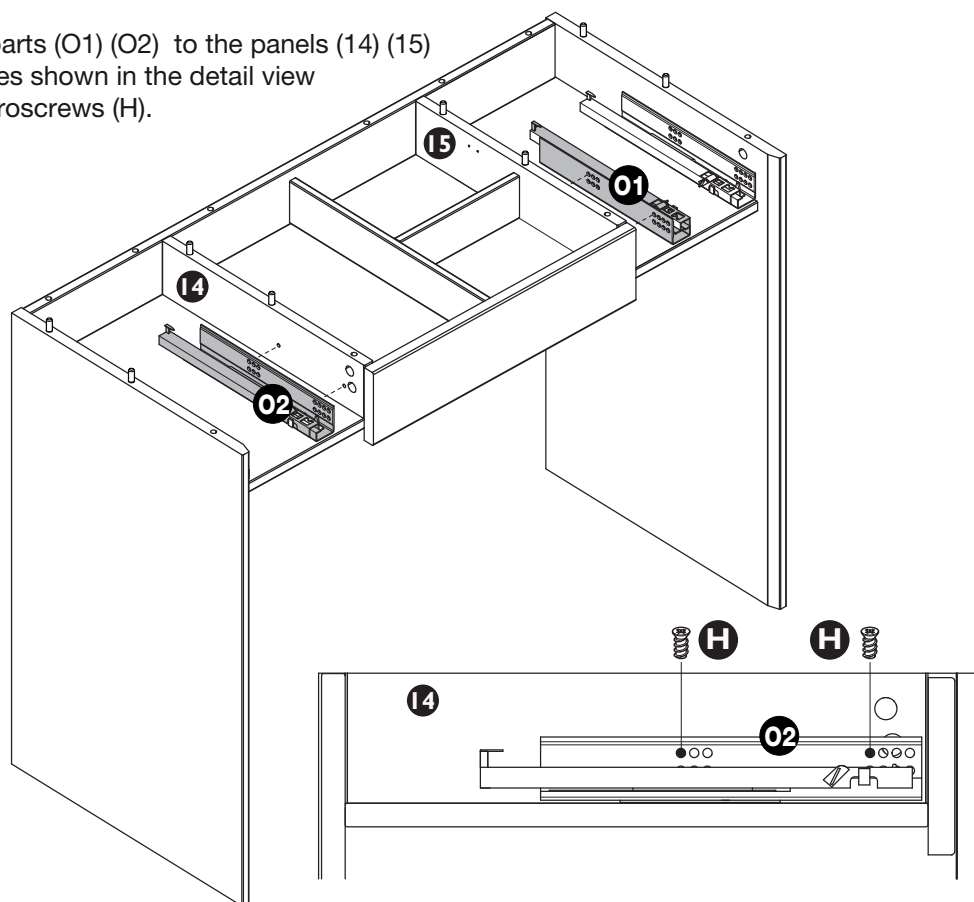

### Step Thirteen

1. Attach 10x metal dowels (A) into the pre-drilled holes on panels. Use a screwdriver to turn fitting (A) clockwise to fix.
2. Attach 4x wooden dowels (F) into the pre-drilled holes of panel (7) as shown.

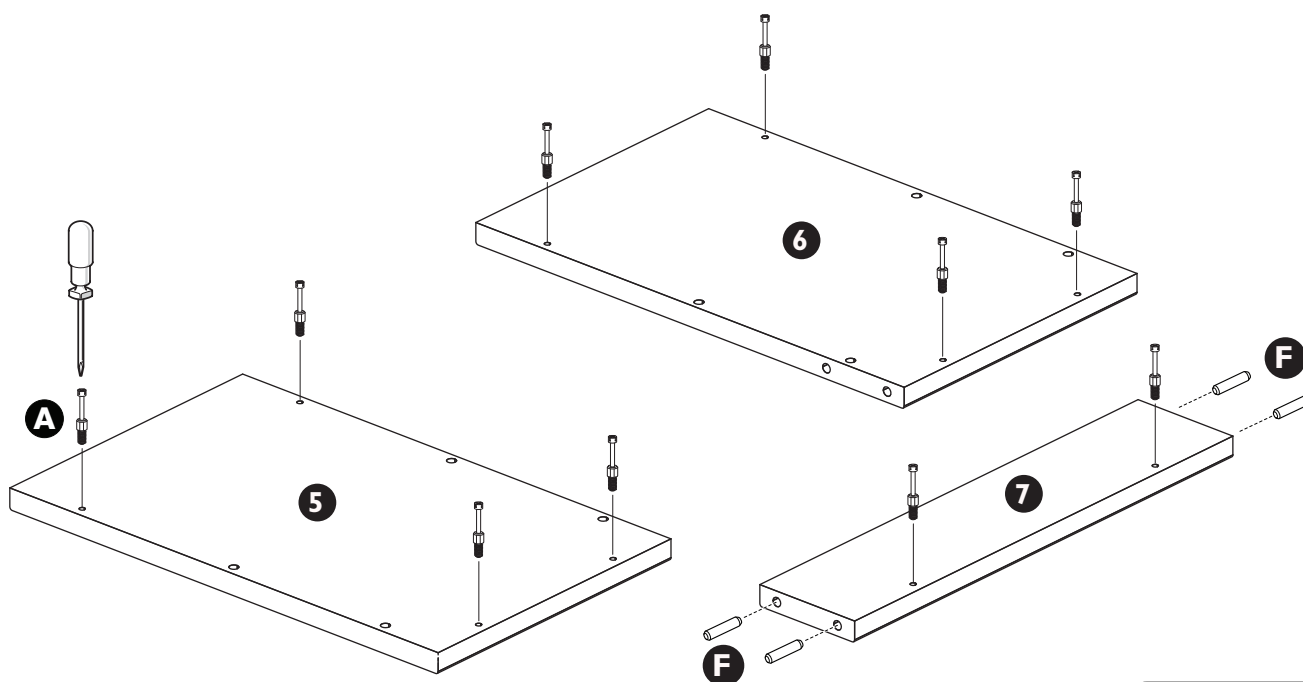


---

## Step by step assembly instructions

---

### Step Fourteen


1. Attach panels as shown.  
Ensure wooden dowels are aligned correctly with the holes of matching parts before attaching.

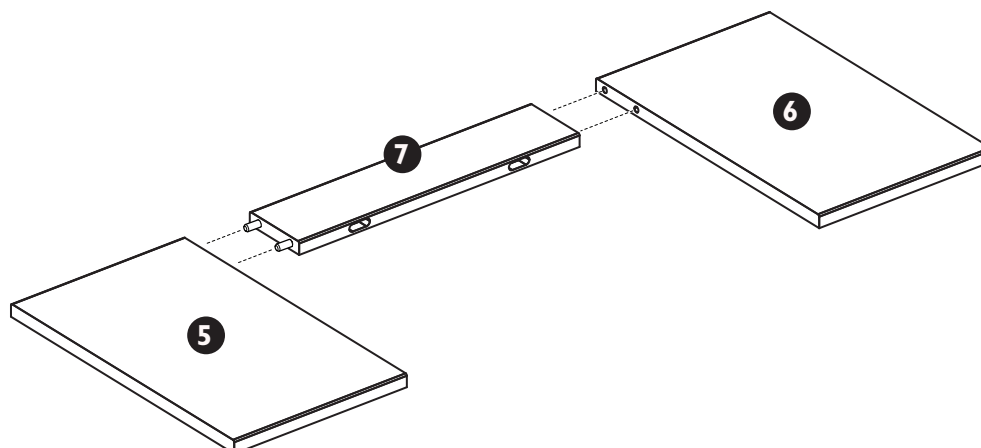

---

### Step Fifteen



1. Position panels as shown, turn locking nuts (B) clockwise to lock.

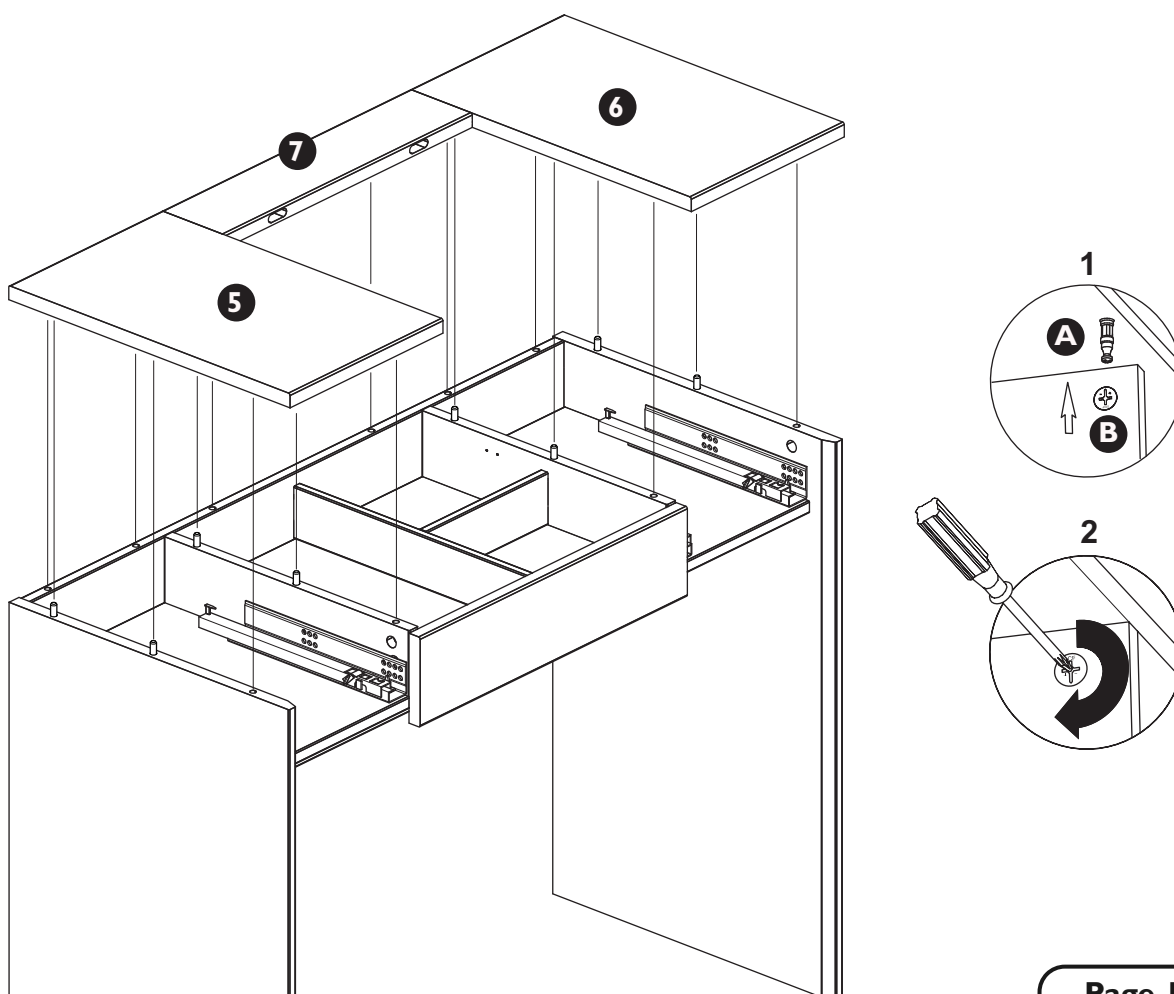



## Step by step assembly instructions

### Step Sixteen

1. Fix plastic hinge (P) to mirror panel (8) using screw (Q)

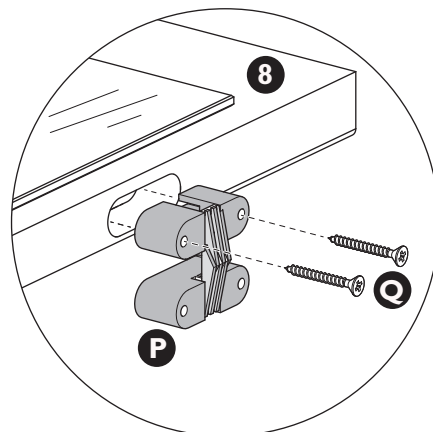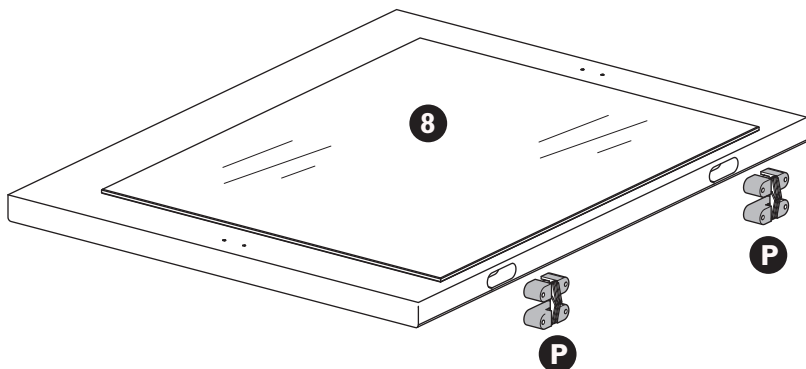


2. Fix mirror panel (8) to desk using plastic hinge (P) and screw (Q)

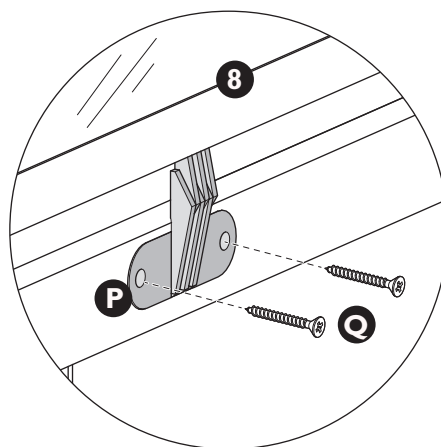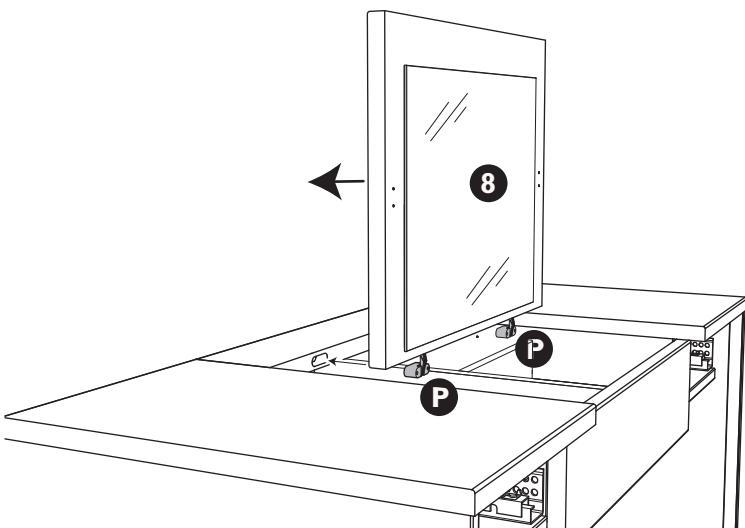


### Step Seventeen

1. Fix the two Arms (N) using 8x screws (I)
2. Attach bumpers (S)

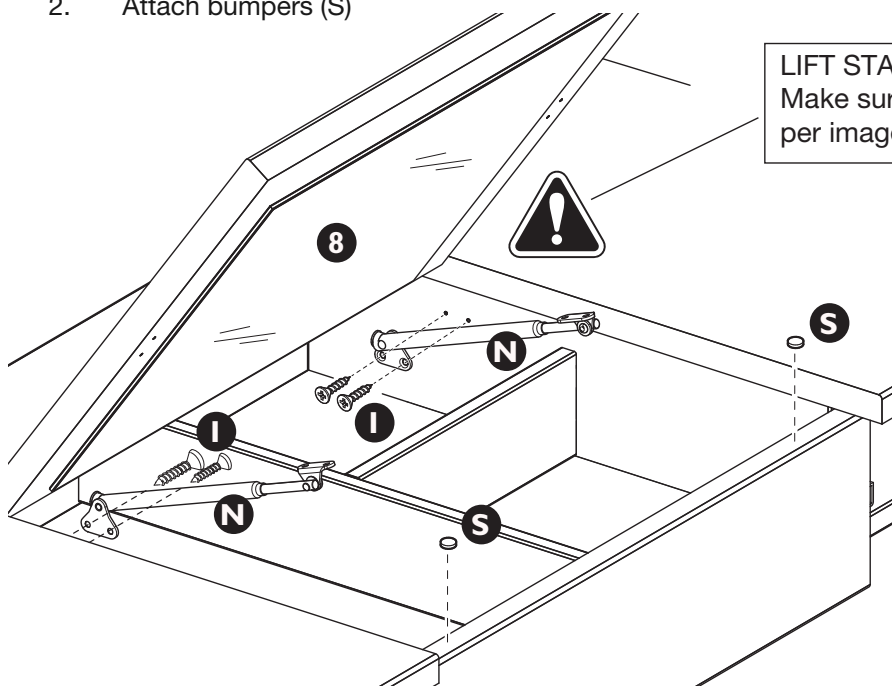

**LIFT STAY ASSEMBLY**  
Make sure triangle plate is positioned as per image

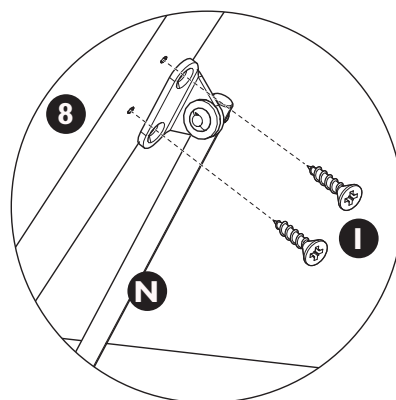

---


## Step by step assembly instructions

---

### Step Eighteen

1. Attach 2x wooden dowels (E) into the pre-drilled holes on drawer backs (11) as shown.
2. Place the cam lock (C) into the holes on drawer sides (9) (10) as shown, arrow pointing towards the bolt.
3. Attach 2x metal dowels (A) into the pre-drilled holes on drawer front (12). Use a screwdriver to turn fitting (A) clockwise to fix.

Repeat for all drawers.

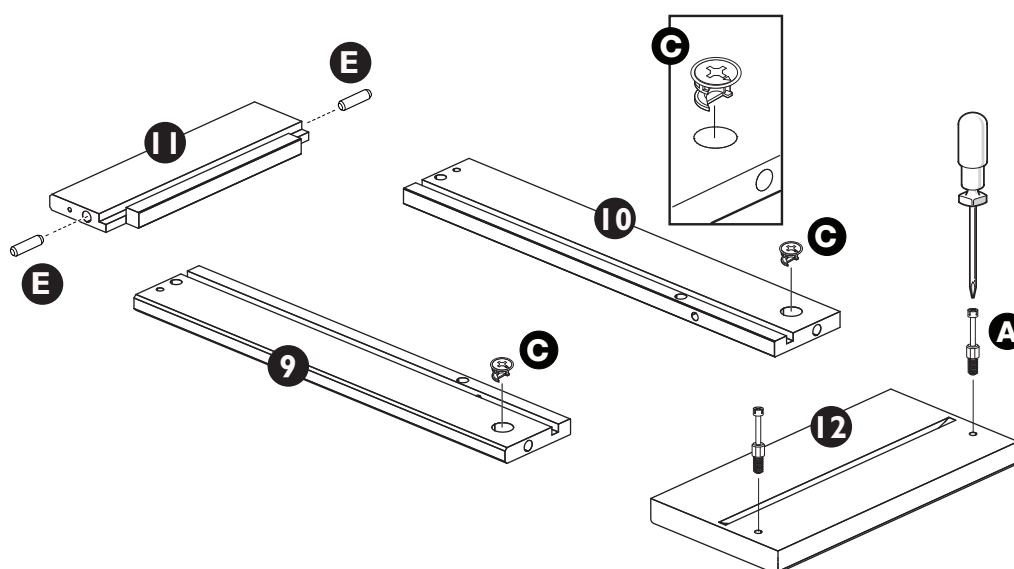


---

### Step Nineteen

1. Fit the RH (10) and LH (9) drawer sides to the drawer back (11) using 30 mm screws (L).

Repeat for all drawers.

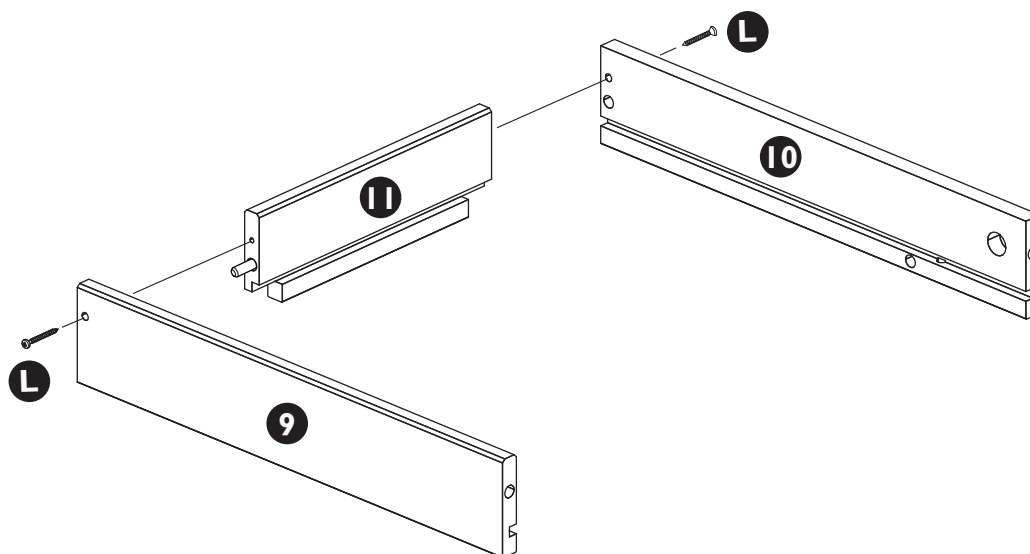

---


## Step by step assembly instructions

---

### Step Twenty

1. Slide drawer bottom panel (18) into the drawer box grooves.
2. Position drawer front (12) onto drawer box, turn locking nuts (C) clockwise to lock.


Repeat for all drawers.

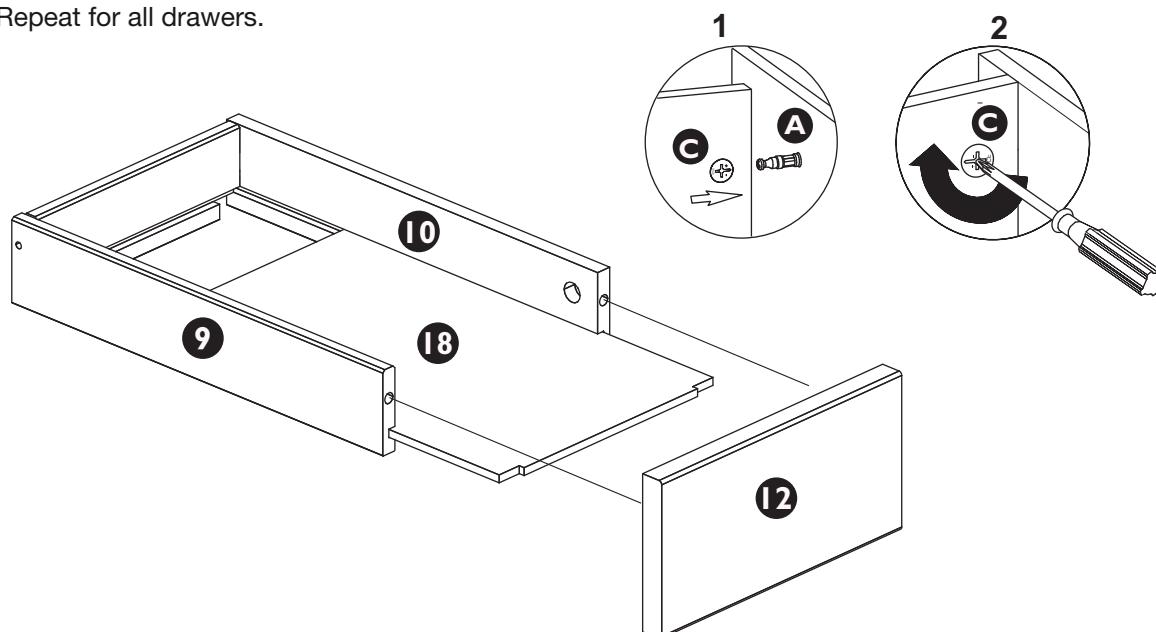

---

### Step Twenty-one

1. Pull out the runners, then ensure plastic securing pegs are to the OUT position.

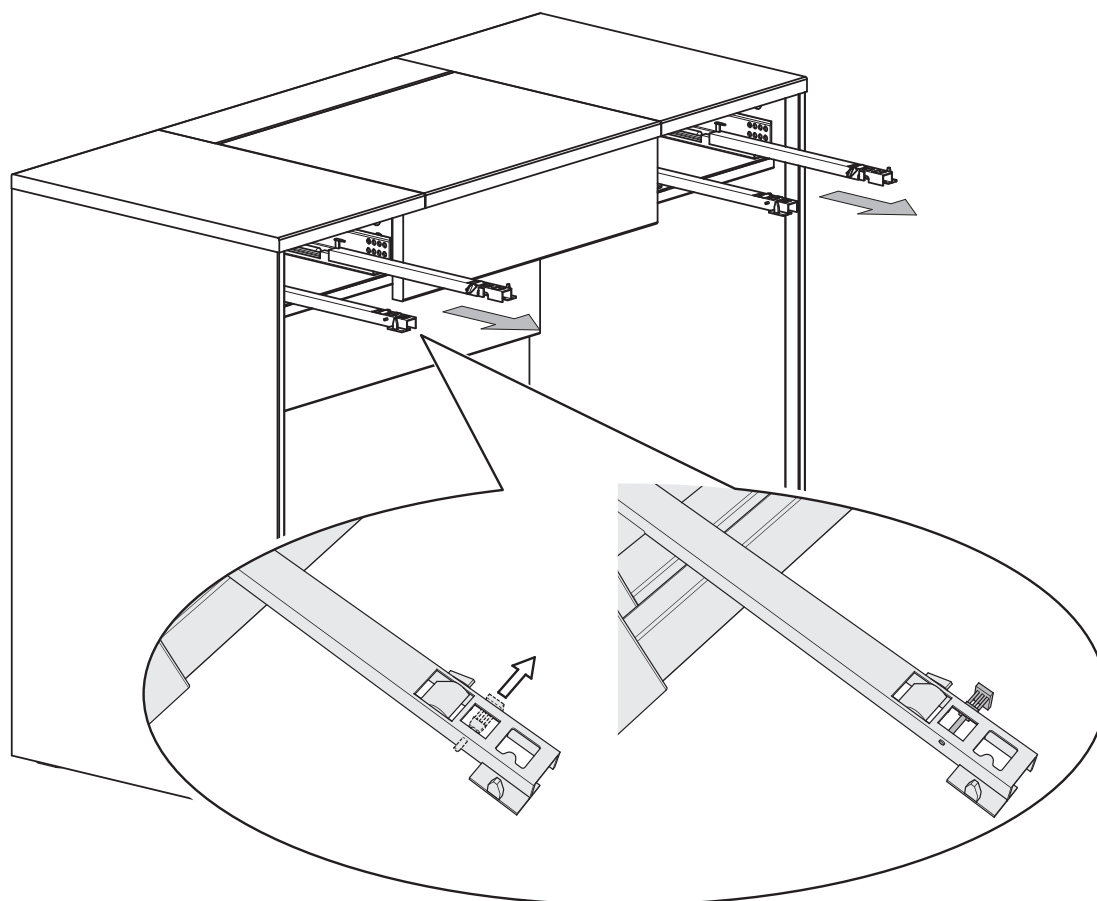


---

## Step by step assembly instructions

---

### Step Twenty-two

1. Slide the drawer box tilted until the stop.
2. Attach the drawer box leaning on the runners.
3. Push the plastic securing pegs in the IN position

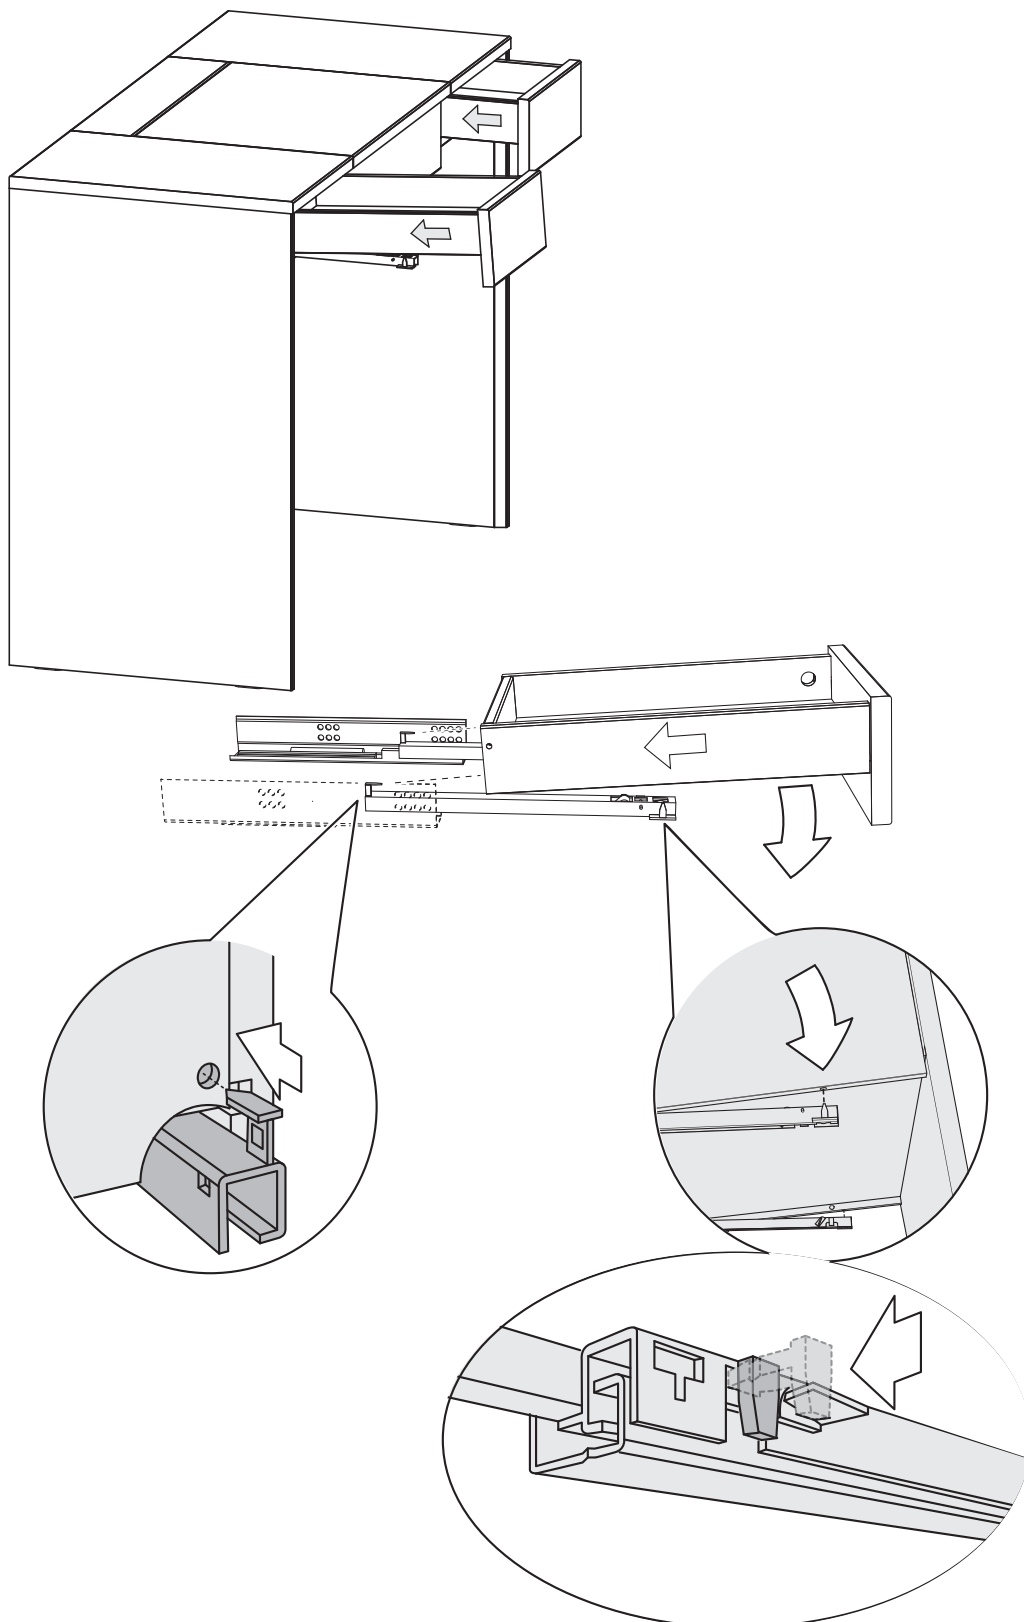


---

## Step by step assembly instructions

---

### Step Twenty-three

1. Use the small plastic knob of the runners to align the drawers if needed.

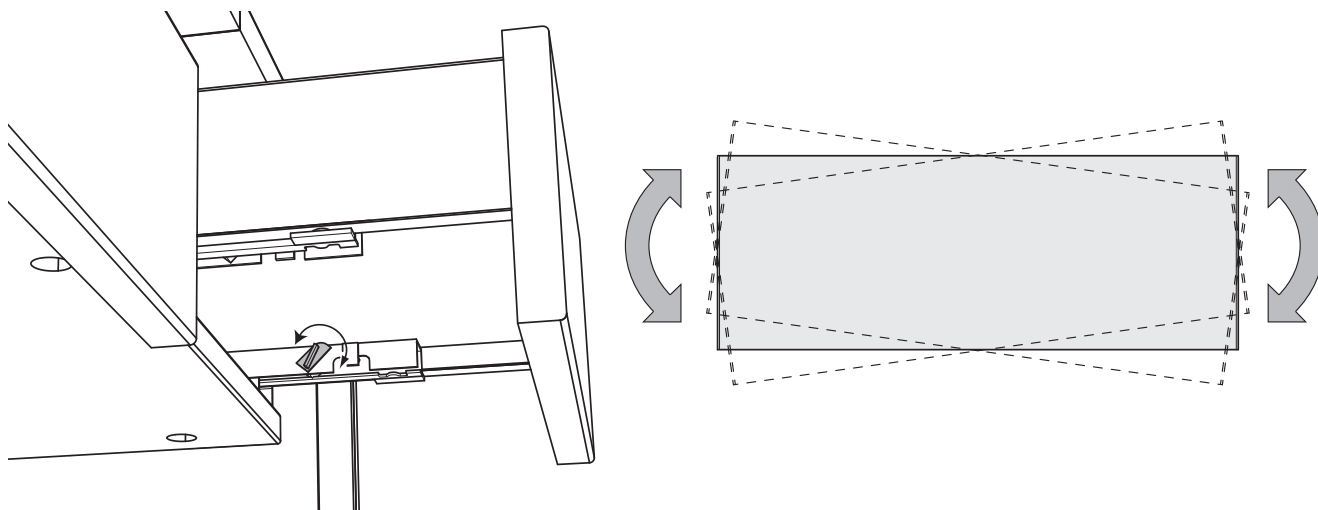


---

### Step Twenty-four

1. To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by using appropriate wall plug and screw (not included) and the two holes into back panel (3).


See wall fixings guide at the end of booklet.

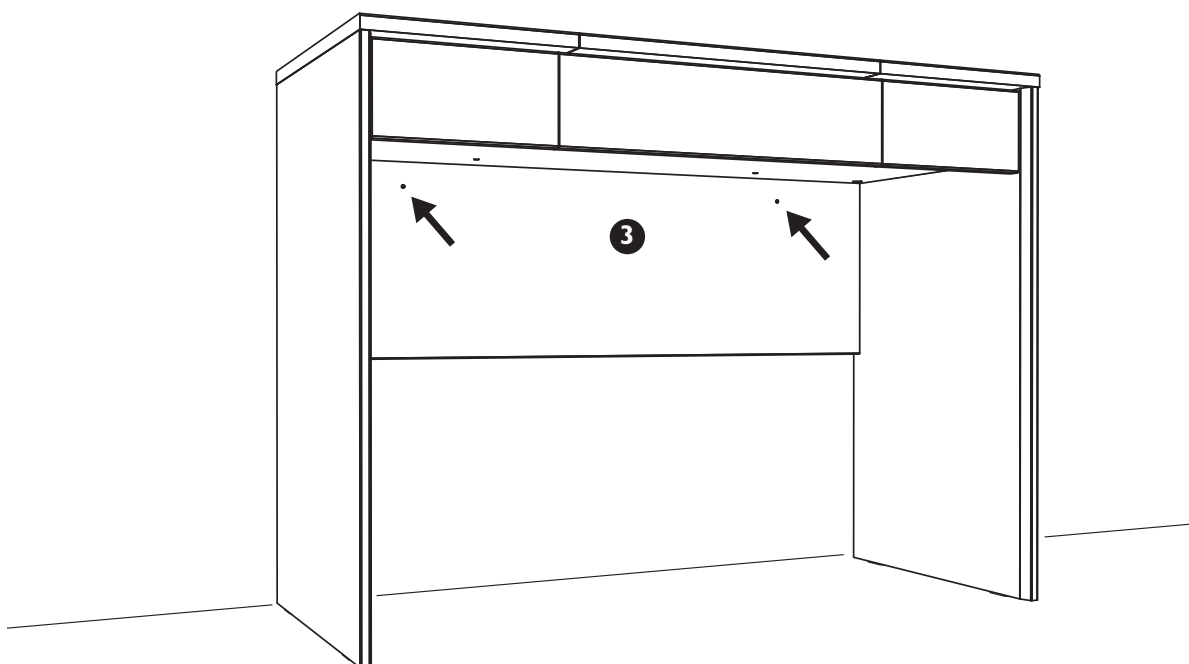


---

## Wall fixing - if in doubt seek professional advice


---

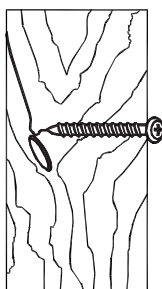

**Wood**  
If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure

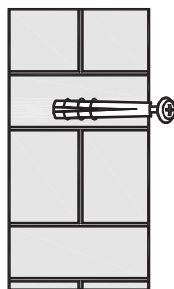

**Brick or Masonry**  
Use an appropriate wall plug provided you are sure your wall is sound.

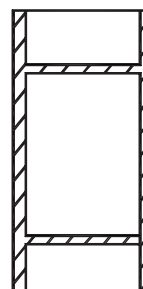

**Cavity wall**  
Special toggle wall plugs are needed. Seek expert advice.

---

## Care and Maintenance

---

This product has been manufactured using modern manufacturing methods and materials.

To keep your product, looking at its best, we strongly recommend either dusting with a soft cloth, or the use of a damp (not wet) cloth and water containing no more than a 5% soap solution.  
Dry with a soft clean cloth.

Aggressive chemicals, such as wax furniture polish, abrasive cleaners, bleach or hypochlorate (chlorine) based cleaners, multi purpose cleaners, dilutes, acetone, alcohol and solvent based liquid product should NOT be used, as may result in damage.

---

## Safety Instructions

---

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

It is recommended that before moving a heavy object to a new location it is completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

This product is designed to be fixed securely to a sound wall in the manner stated.

It must under no circumstances be used free-standing. No liability will be accepted for damage or injury caused by inadequate fixing or use without fixing.

---

### PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis Partnership 171 Victoria Street London SW1E 5NN  
[www.johnlewis.com](http://www.johnlewis.com)