


IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

John Lewis

Victoria Wardrobe

Stock code: 803/67010

Thank you for purchasing this Victoria Wardrobe. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

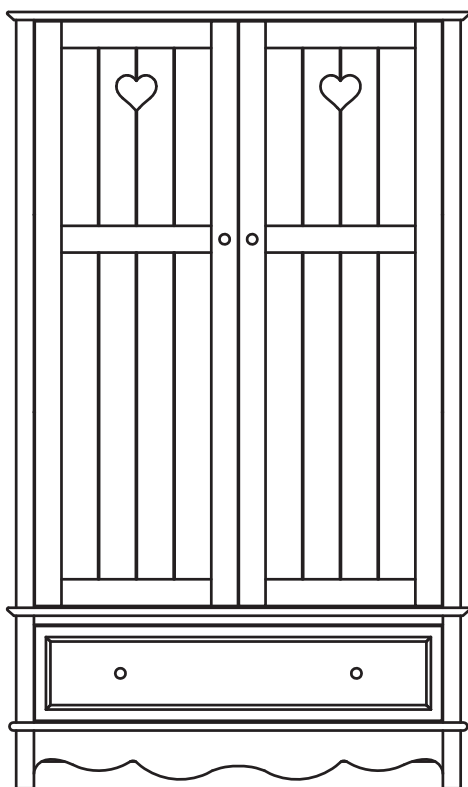

For product support or spare parts please call the John Lewis Helpline;


T: 01244 689949

E: mail@fwgroup-uk.com

PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools

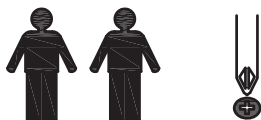

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the John Lewis Helpline.

This product is **HEAVY**. It should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.












Read this leaflet in full before commencing assembly.

If you require any additional information or have any issues with this product please call the John Lewis Helpline on 01244 689949 or email mail@fwgroup-uk.com.





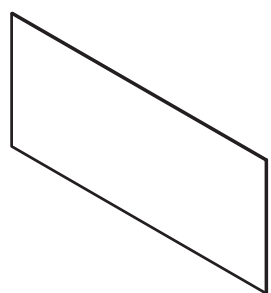
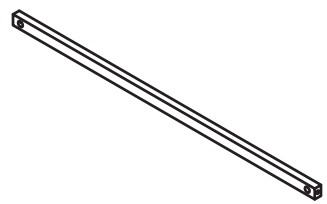
IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Fittings and parts checklist

Fittings



1	CAMFIX x 16		7	PAN HEAD SCREWS M3.5x16MM x 18	
2	CHROME PIPE x 1		8	RING HOLDER x 1 SET	
3	SCREWS M3.5x16MM x 30		9	STRAP x 2	
4	FLAT WASHER x 2		10	DOOR STOPPER x 4	
5	DOOR HINGES x 6		11	WOOD DOWEL x 8	
6	MINIFIX x 16		PLEASE NOTE: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. You must use fixing devices that are suitable for the type of wall you intend to mount this product to. The screw supplied is to fix the strap to the wardrobe.		

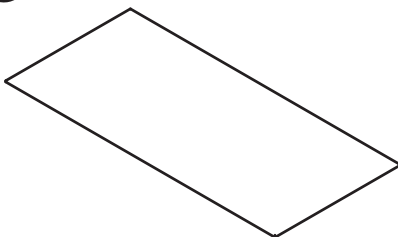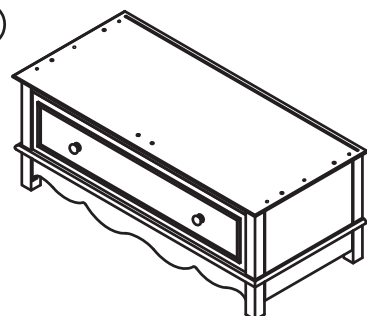Parts




(A)  SIDE FRAME x 2	(B)  TOP FRAME x 1	(C)  THE BASE x 1
(D)  DOOR x 2	(E)  BACK PANEL x 3	(F)  BACK PANEL SUPPORT x 2

IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE




Pre-assembly Preparation

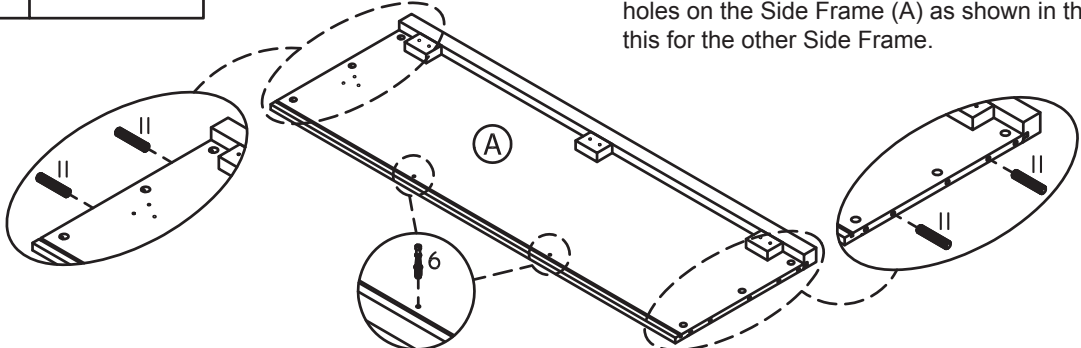- 1**  **6 x 4**  **11 x 8**




Insert the Minifixes (6) and Dowels (11) into the pre-drilled holes on the Side Frame (A) as shown in the diagram. Repeat this for the other Side Frame.

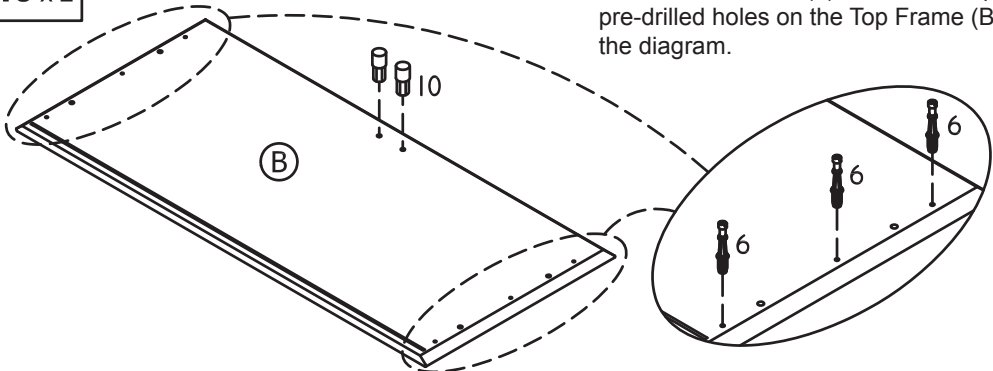
- 2**  **6 x 6**  **10 x 2**


Insert the Minifixes (6) and Door Stopper (10) into the pre-drilled holes on the Top Frame (B) as shown in the diagram.


- 3**  **6 x 6**  **10 x 2**

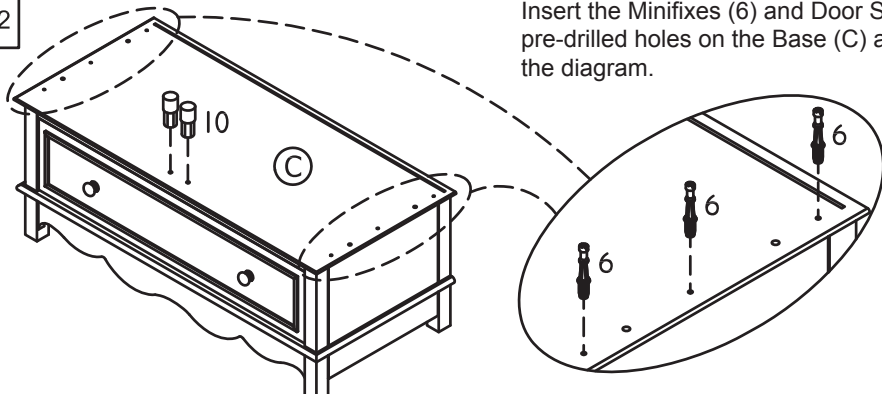Insert the Minifixes (6) and Door Stopper (10) into the pre-drilled holes on the Base (C) as shown in the diagram.


- 4**  **3 x 12**  **5 x 6**

Insert the Hinges (5) to the Doors (D) and secure in place using M3.5 x 16mm Screws (3) as shown in the diagram.

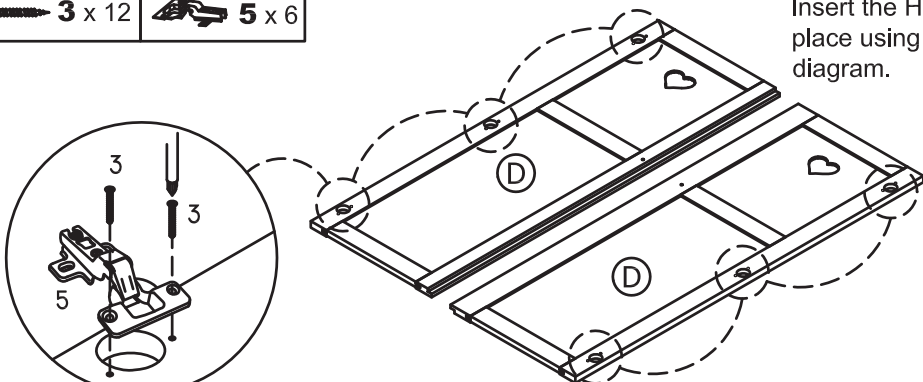


IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Step by step assembly instructions


Step One

Insert Camfixes (A) into the pre-drilled holes on Side Frame (A) as shown in the diagram below. Attach Side Frame (A) to the Base (C) ensuring Minifixes (B) on the Base are correctly aligned. Tighten using a screwdriver.

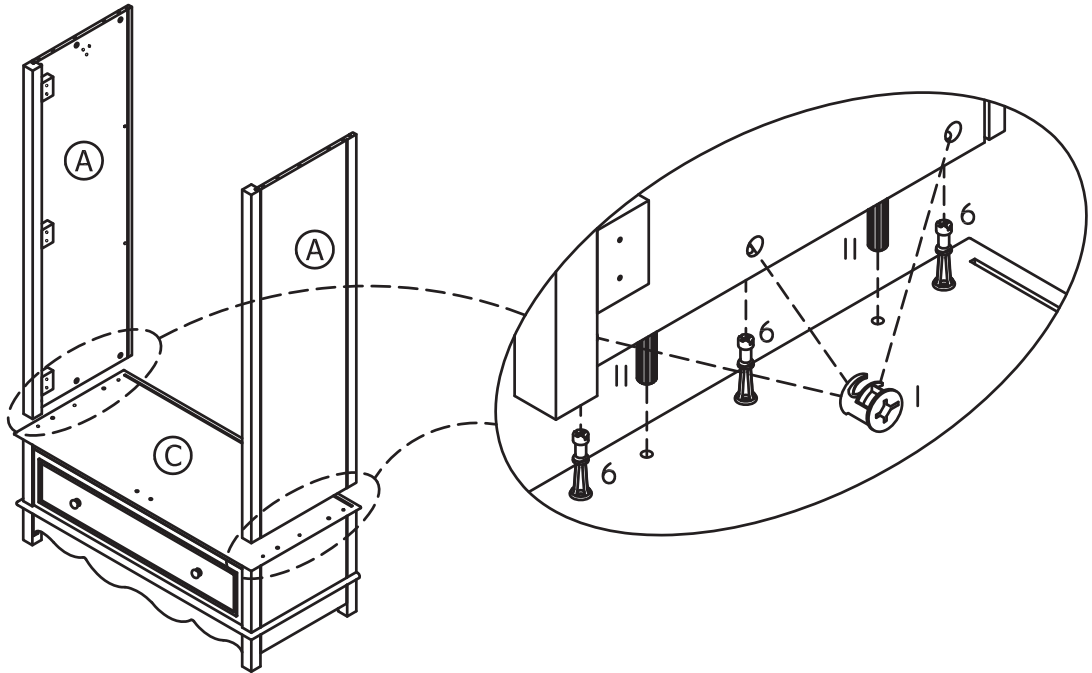

Step Two


Attach and secure Back Panel Supports (F) to both Side Frames (A) with the Camfixes (1) and Minifixes (6). Tighten using a screwdriver.

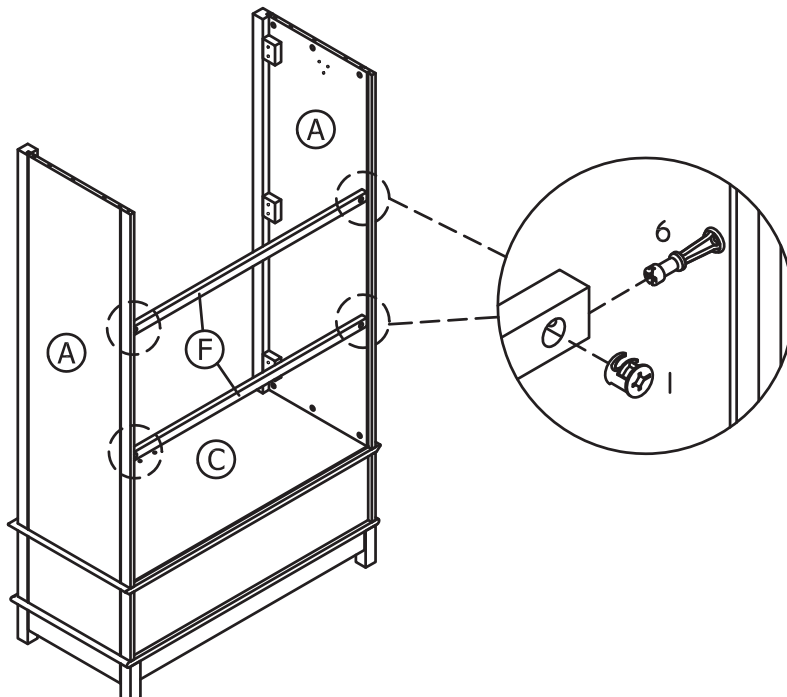

IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE


Step Three

Place the Back Panels (E) into the rails at the back of the Side Frames (A) as shown in the diagram below.

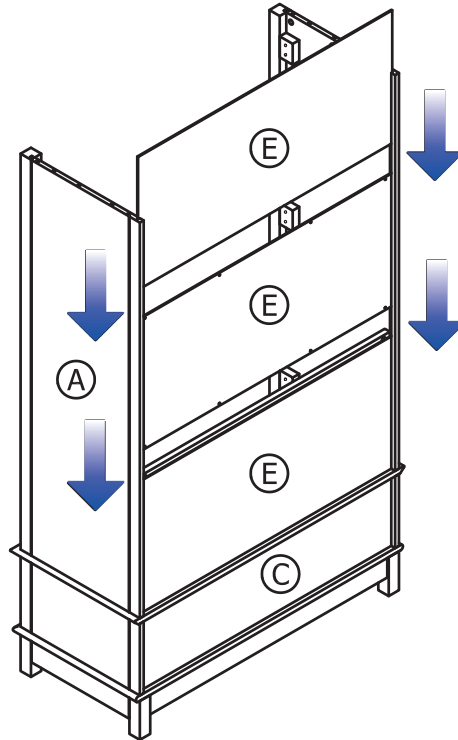

Step Four


Place the Top Frame (B) to Wardrobe and secure Side Frames (A) to Top Frame using Camfix (1) and tighten with screwdriver as shown in the diagram below.

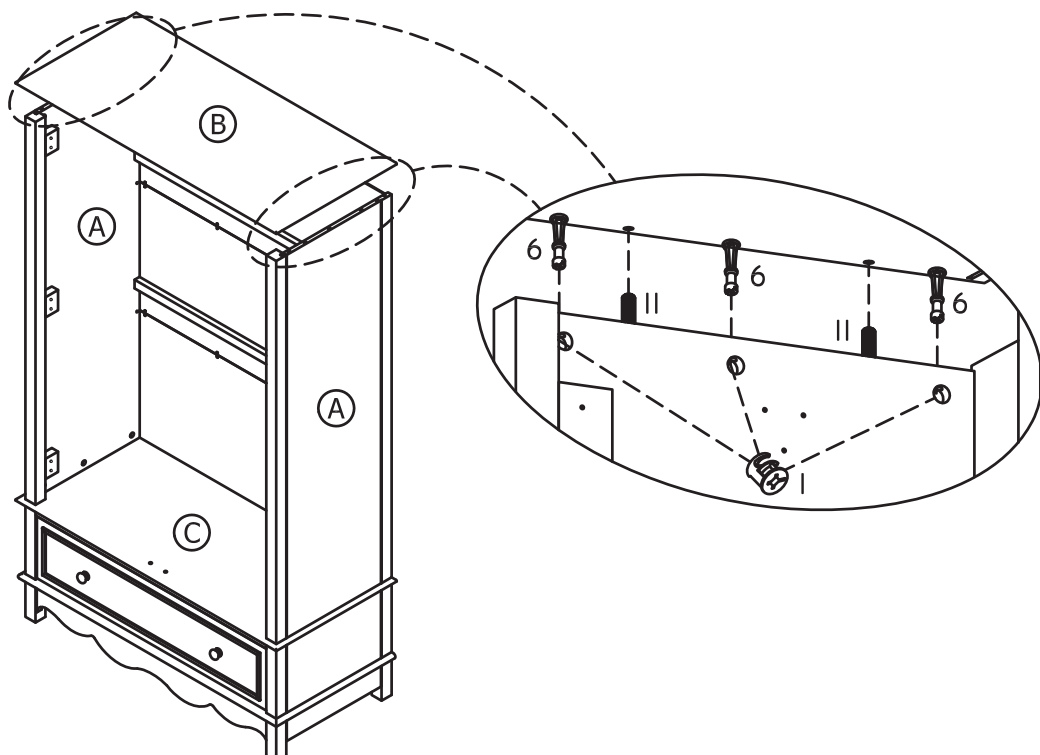

IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE


Step Five

Secure Back Panels (E) to the back of the Wardrobe using the Pan Head Screws M3.5 x 16mm (7). Tighten using a screwdriver as shown in the diagram below.

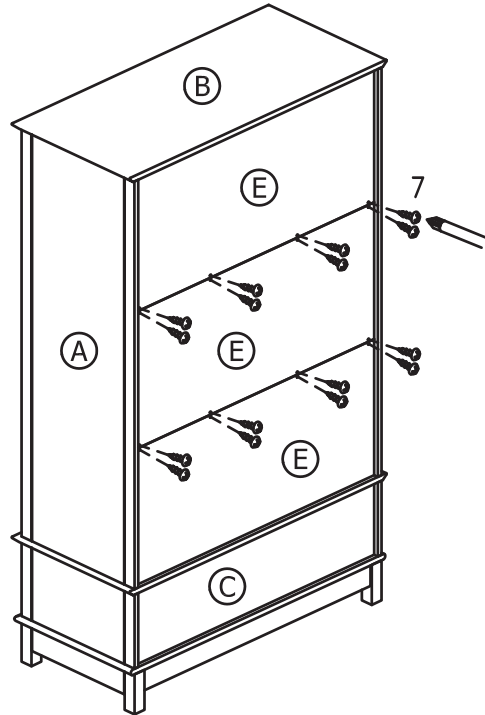

Step Six


Attach the Ring Holders (8) and Chrome Pipe (2) to the Side Frames (A) using the Screws M3.5 x 16mm (3). Tighten using a screwdriver as shown in the diagram below.

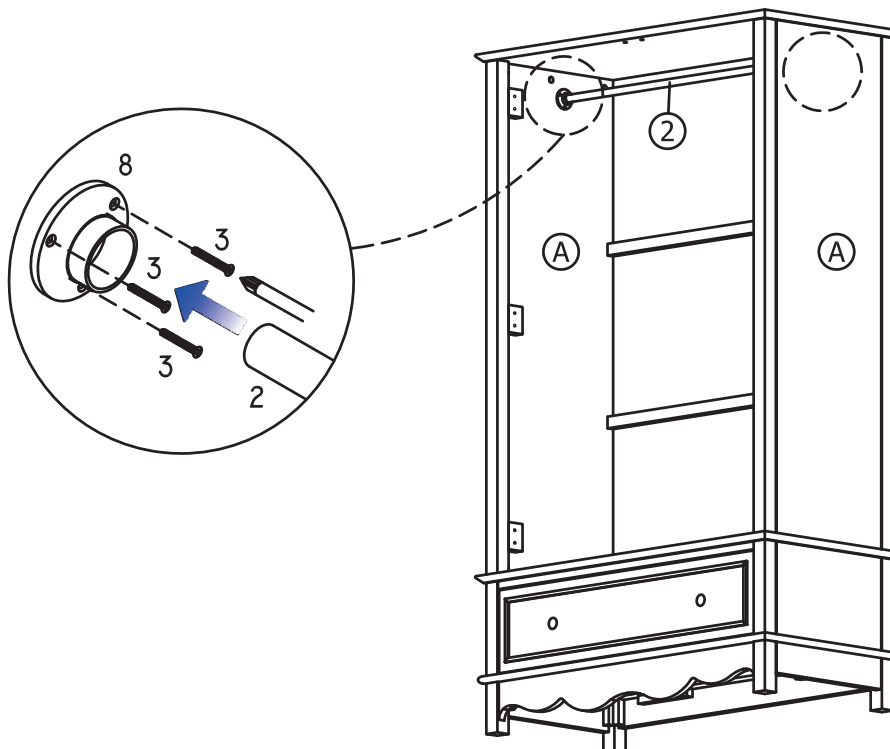

IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE


Step Seven

Attach Door Panels (D) to the Wardrobe. Fix Door Panels (D) to Side Frames (A) using Hinges (5). Tighten Screws M3.5 x 16mm (3) to Hinges (5) using a screwdriver.

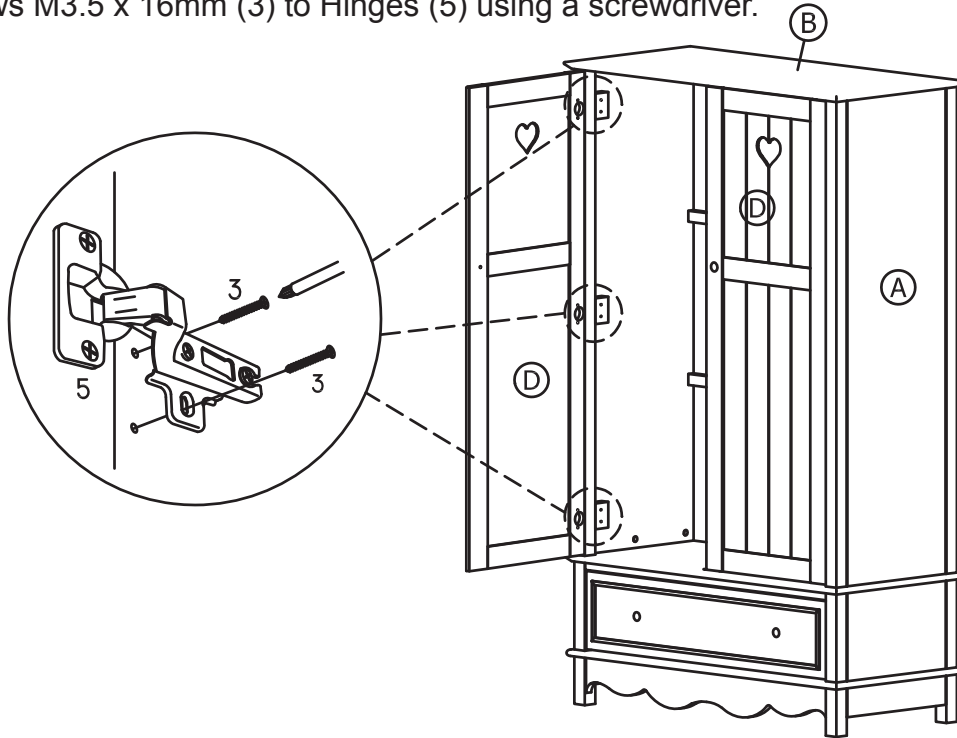

Step Eight

Attach Straps (9) to the back of the Wardrobe using Flat Washers (4) and Pan Head Screws (7). Tighten with a screwdriver as detailed below.

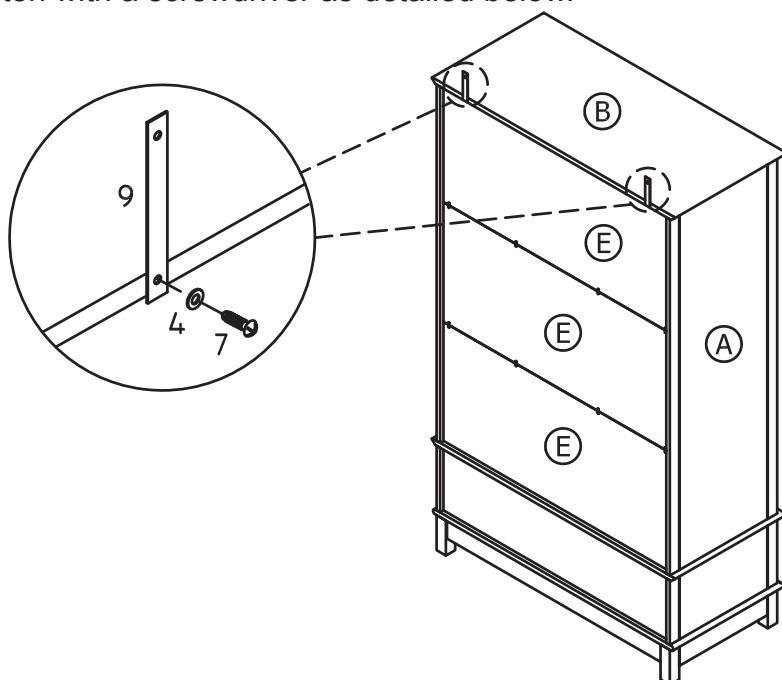


WARNING: In order to prevent overturning, this product must be used with the wall attachment device provided.

PLEASE NOTE: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. You must use fixing devices that are suitable for the type of wall you intend to mount this product to. The screws supplied are to fix the strap to the wardrobe. Two washers per strap are supplied - 1 for the wardrobe and 1 for the wall.

IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Step Four

This product is now ready for use.

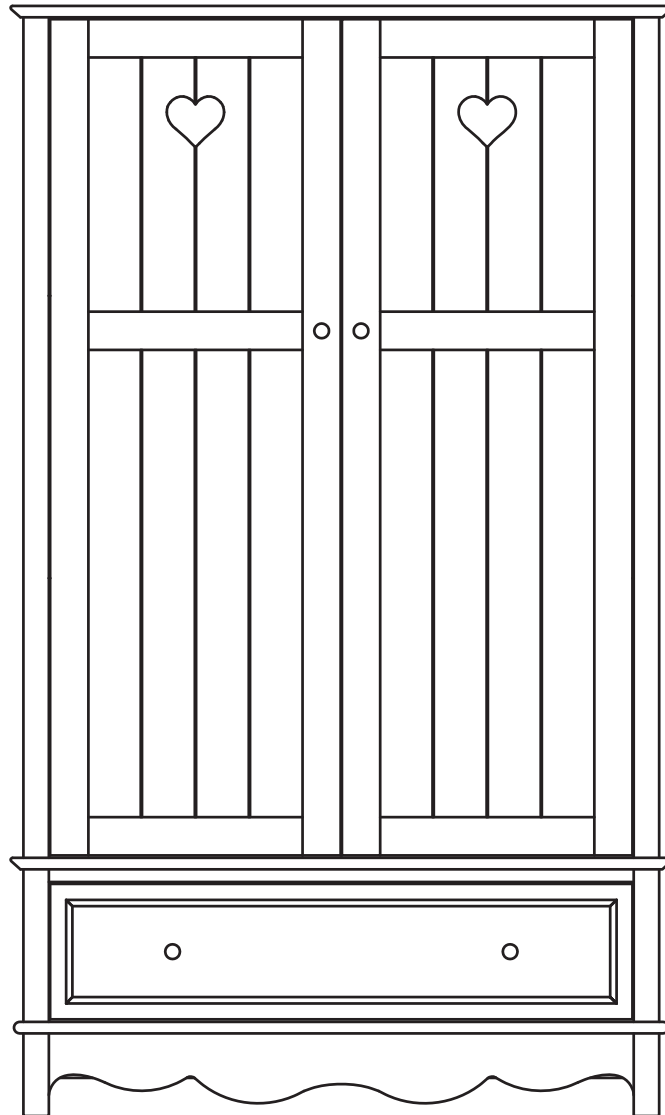

IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Care and Maintenance

Wood furniture

- Wood displays different grain patterns depending on which way they are cut - for example, 'the medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.
- Wood veneers also allow distinctive patterns to be created on flat surfaces, such as table tops and drawer fronts by the way the slivers are arranged.
- All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

- Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.
- Waxed furniture will need to be given a coat of beeswax a couple of times a year to help maintain its lustre.
- Spray polishes are best avoided as they contain silicones which may spoil the furniture by building up over time.
- Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

IMPORTANT! PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Safety Instructions

- Never drag furniture when moving it. Always lift it.
- Periodically check all fixings to ensure none have come loose and re-tighten where necessary.
- Please take care when handling or moving the furniture as careless handling may cause damage or injury.
- Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent adult.
- No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.
- During assembly, children should be kept away from the product due to possible risk of injury.
- Do not use this item if any components are missing or damaged.
- This product is suitable for children aged 3 - 12 years.
- This product complies with FIRA/FRQG C001:2008, FIRA/FRQG C004:2008 and BS EN 71-3:2013+A1:2014.

If you require any additional information or have any issues with this product please call the John Lewis helpline on 01244 689949 or email mail@fwgroup-uk.com.

John Lewis Partnership 171 Victoria Street, London, SW1E 5NN
www.johnlewis.com