

Care instructions

Check that all assembly fittings are tight on a regular basis.

Practical advice

Clean with a mild soapy solution and wipe off with a dry cloth.

Cleaning products may contain chemicals which can have a corrosive effect.

John Lewis

User manual


Croft by John Lewis

Skye Robe Hook

Skye Towel Ring

Skye Swing Toilet Roll Holder

Bathshop Accessory

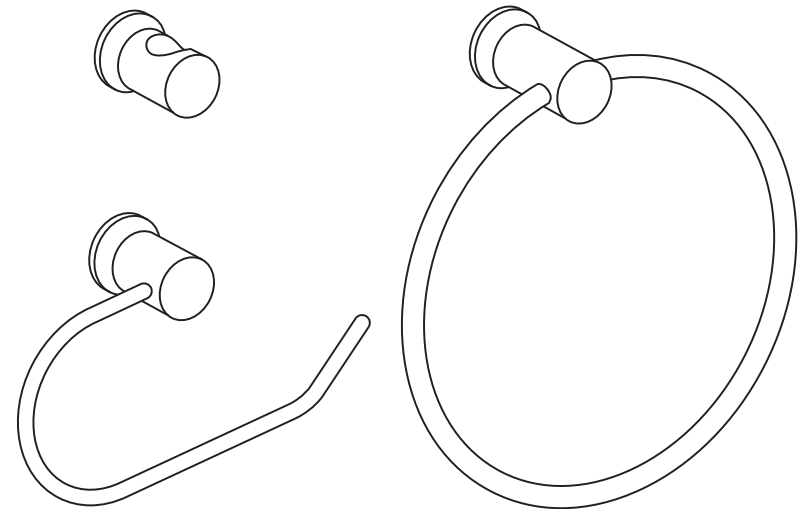

Please retain these instructions for future reference.

John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com

Made in China

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. It is recommended that this product should only be installed by persons competent in DIY.

Warnings!

This product should be fitted in accordance with the manufacturer's fitting instructions - see diagram opposite.

This fitting pack contains small items which should be kept away from small children.

Safety

Wear suitable eye protection when drilling. When using power tools near water - for added protection against electric shock the use of a residual current device is advised.

Beware of hidden pipes or power cables. Take care when drilling on glazed tile surfaces in case the drill slips.

Parts list - Robe hook

Chrome plated robe hook

Backplate

Locking screw

Screws (X3)

Wall plugs (X3)

Hexagon socket key

Parts list - Towel ring

Chrome plated towel ring

Backplate

Locking screw

Screws (X3)

Wall plugs (X3)

Hexagon socket key

Parts list - Swing toilet roll holder

Chrome plated swing toilet roll holder

Locking screw

Screws (X3)

Wall plugs (X3)

Hexagon socket key

Material composition

Chrome plated zinc alloy / stainless steel

Assembly

You will need a power drill, 6mm masonry drill bit, medium cross-head screwdriver, tape measure, spirit level and a pencil to install this product.

Ensure the wall surface is of suitable strength and construction.

Note: The wall plugs provided are suitable for solid stone or brick walls. For other wall types (e.g. hollow plasterboard) use appropriate wall plugs and drill bit.

If in doubt, consult a qualified person.

