


# Emily Storage Bed

Double

Thank you for purchasing this Emily storage bed. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

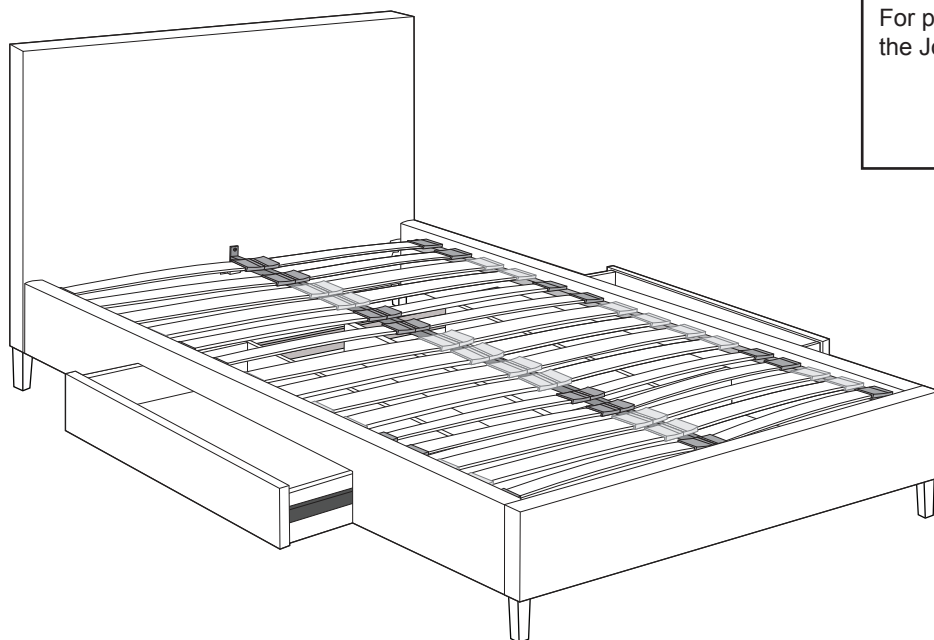

For product support or spare parts please call the John Lewis Helpline;

T: 01244 689949

E: [mail@fwgroup-uk.com](mailto:mail@fwgroup-uk.com)

## PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

### Necessary Tools



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the John Lewis Helpline.

This product is **HEAVY**. It should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

This product takes approximately **90 MINUTES** to assemble with **2 PEOPLE**.  
Do not use power tools to assemble.














The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.








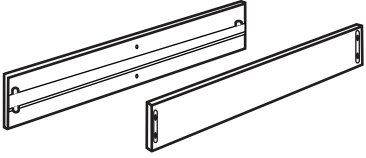

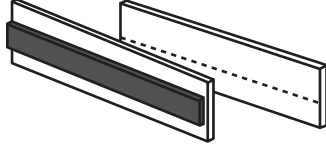
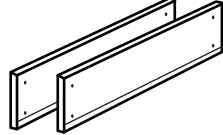
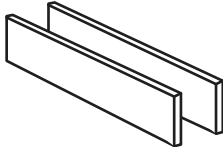
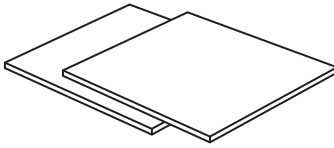
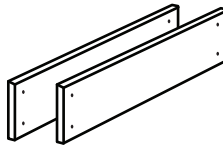

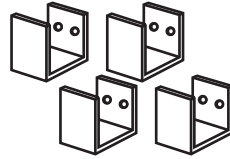
If you require any additional information or have any issues with this product please call the John Lewis Helpline on 01244 689949 or email [mail@fwgroup-uk.com](mailto:mail@fwgroup-uk.com)

# Fittings and parts checklist

## Fittings

<b>A</b>	M4 Allen Key x 1 pcs		<b>G</b>		M8 Spring Washer x 8 pcs
<b>B</b>	M5 Allen Key x 1 pcs		<b>H</b>		M8 X 16mm Bolt x 8 pcs
<b>C</b>	Centre Plastic Caps x 7 pcs		<b>I</b>		M6 X 25mm Bolt x 2 pcs
<b>D</b>	Side Plastic Caps x 14 pcs		<b>J</b>		M6 X 40mm Bolt x 8 pcs
<b>E</b>	Wide Centre Caps x 8		<b>K</b>		Screw 4 x 50mmx 4pcs
<b>F</b>	Wide Side Caps x 16		<b>L</b>		Screw 3.5 x 30mm x 40pcs
			<b>M</b>		Screw 4 x 18mm x 8pcs


# Parts
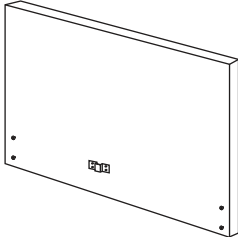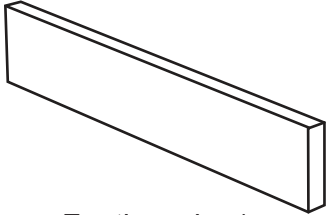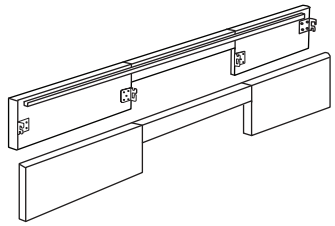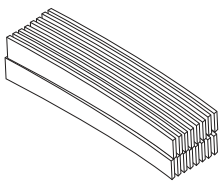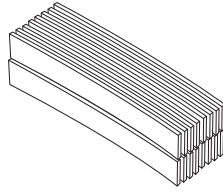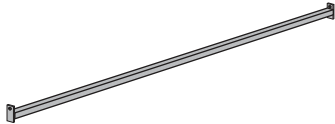
<p>1</p>  <p>Headboard x 1</p>	<p>2</p>  <p>Footboard x 1</p>	<p>3</p>  <p>Side Rails x 2</p>
<p>4</p>  <p>Slats x 14</p>	<p>5</p>  <p>Wide Slats x 16</p>	<p>6</p>  <p>Centre Rail x 1</p>
<p>7</p>  <p>Legs x 4</p>	<p>8</p>  <p>Drawer Runner Base x 2</p>	<p>9</p>  <p>Drawer Centre Support x 1</p>
<p>10</p>  <p>Drawer Sides x 4</p>	<p>11</p>  <p>Drawer Fronts x 2</p>	<p>12</p>  <p>Drawer Backs x 2</p>
<p>13</p>  <p>Drawer Bottoms x 2</p>	<p>14</p>  <p>Upholstered Front Panels x 2</p>	<p>15</p>  <p>Drawer Bottom Supports x 6</p>
<p>16</p>  <p>Metal Stopper x 4</p>		

# Step by step assembly instructions


## Step One

Place Wooden Legs (7) into the holes in the underside of the Headboard (1) and Footboard (2) as per diagram below and twist into place so they are fully secured.

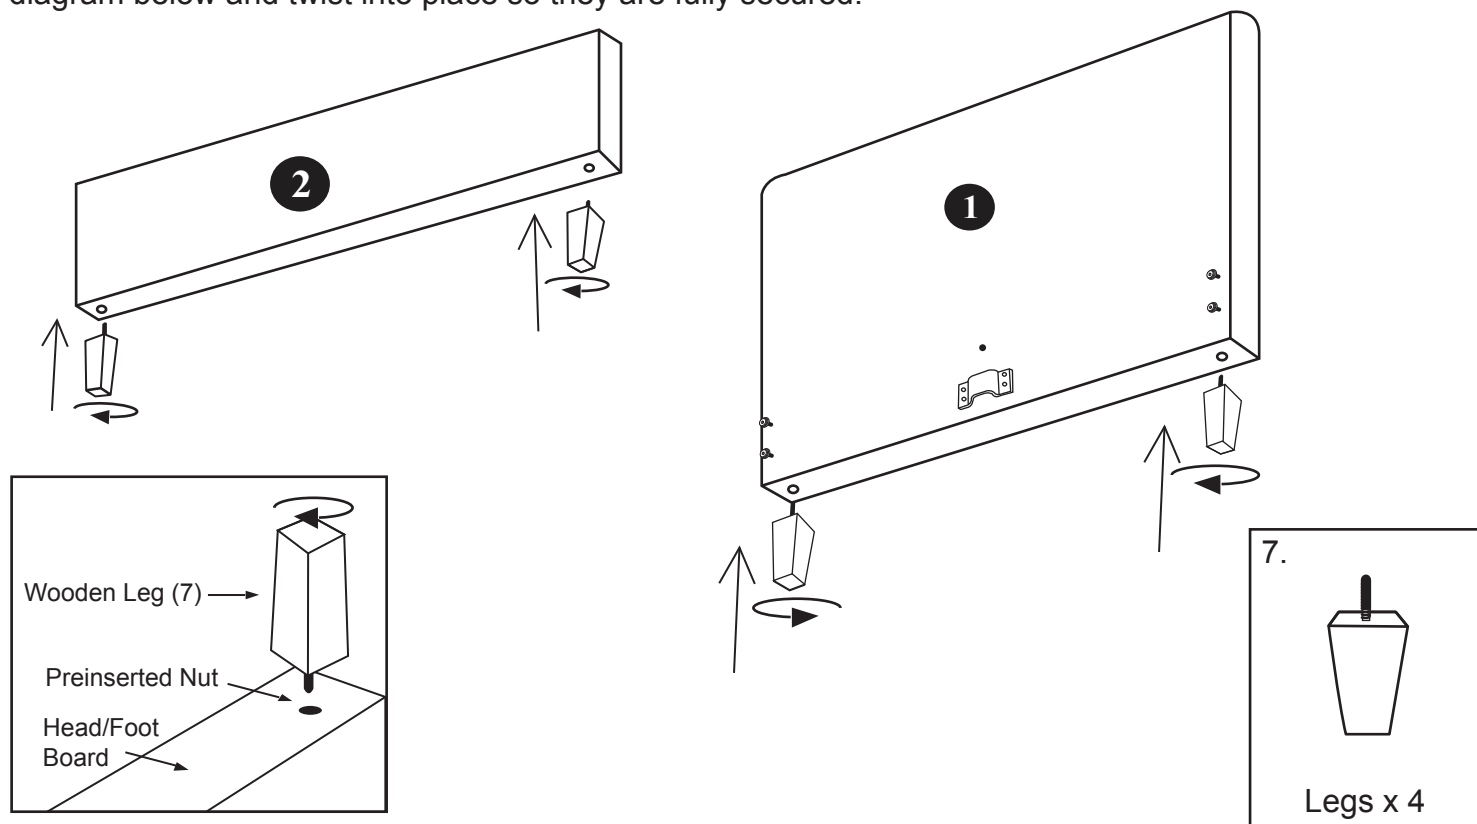


## Step Two

Hook the pre-attached brackets on the Side Rails (3) over the pre-inserted bolts in the head and footboard and hand-tighten bolts to loosely secure parts together. Do not tighten with the M5 Allen Key (B) until you have inserted the Centre Rail in Step Five.

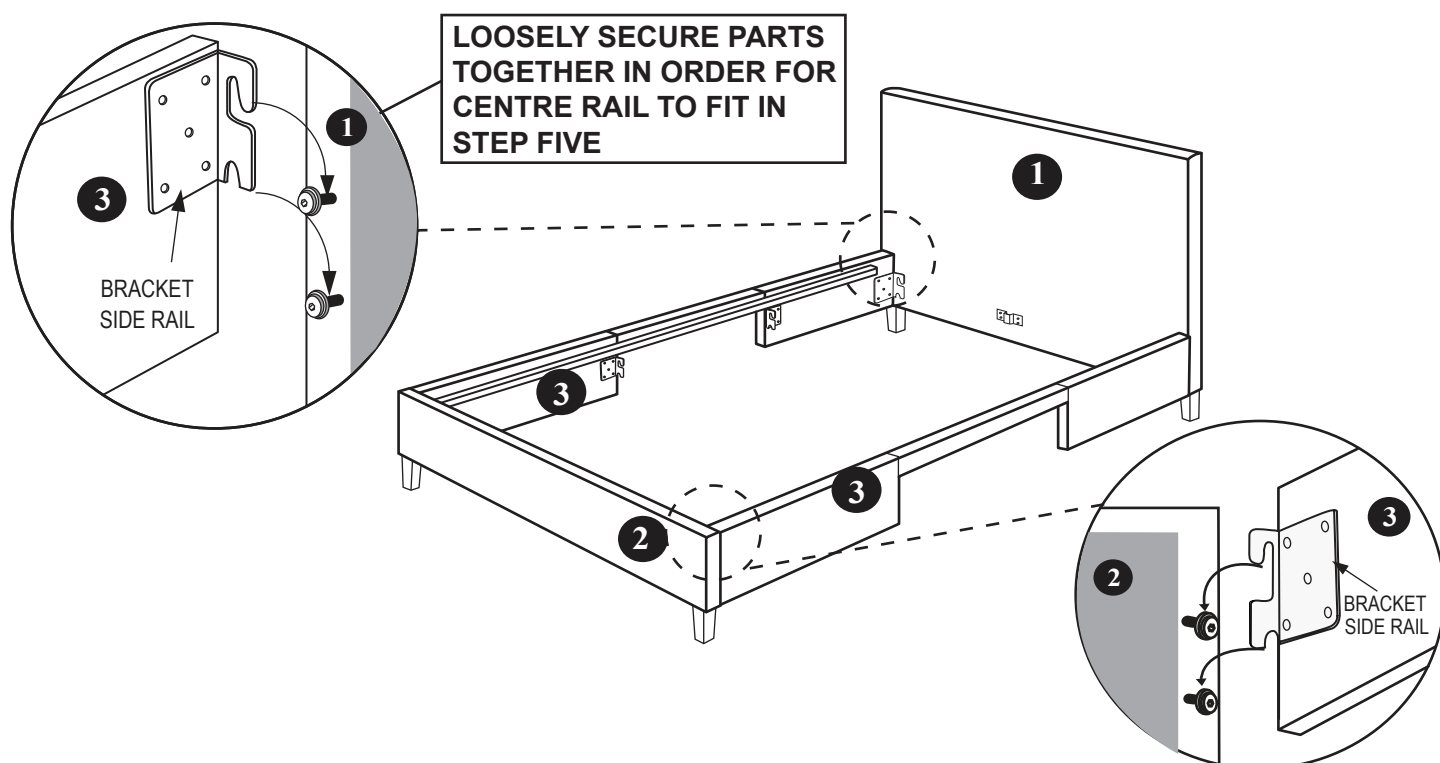


### Step Three

Attach M8 Spring Washer (G) and M8 x 16mm Bolt (H) into the metal fixings on to both Drawer Runner Base (8) **(only for the top side)**. Insert the Drawer Runner Base (8) inside the bed frame as shown in Step 2. Next, attach the M8 Spring Washer (G) and M8 x 16mm bolt (H) into the bottom side of metal fixing on the Drawer Runner Base (8). Loosely tighten the bolts using M5 Allen key (B).

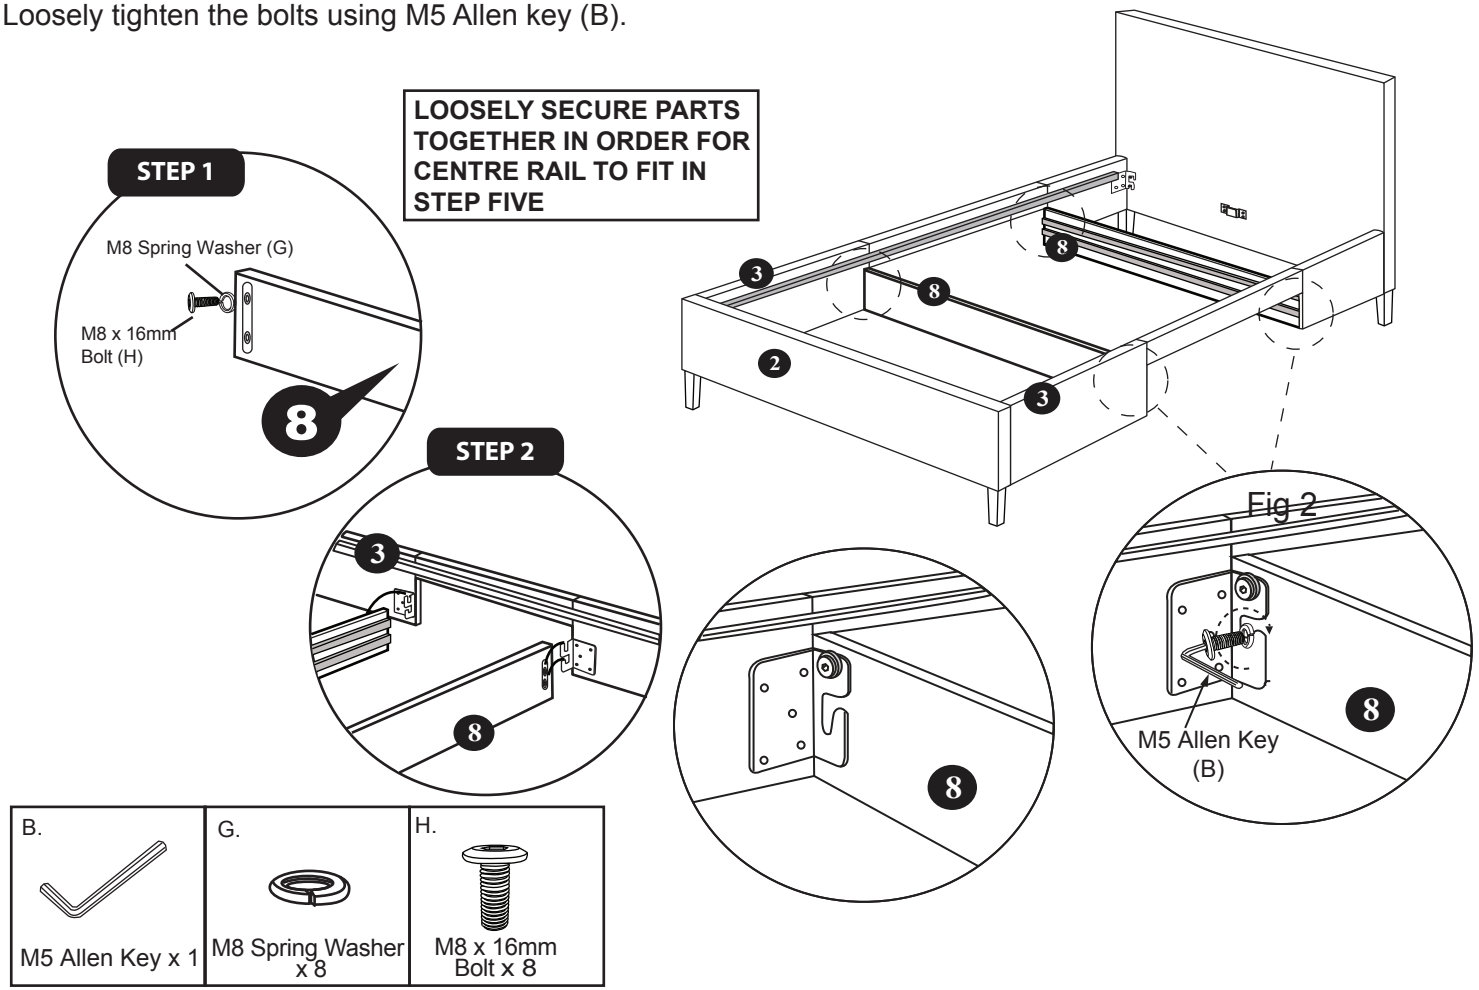


### Step Four

Attach Drawer Centre Support (9) to Drawer Runner Base (8) and secure into place using Screws 4 x 50mm (K) as shown in the diagram below.

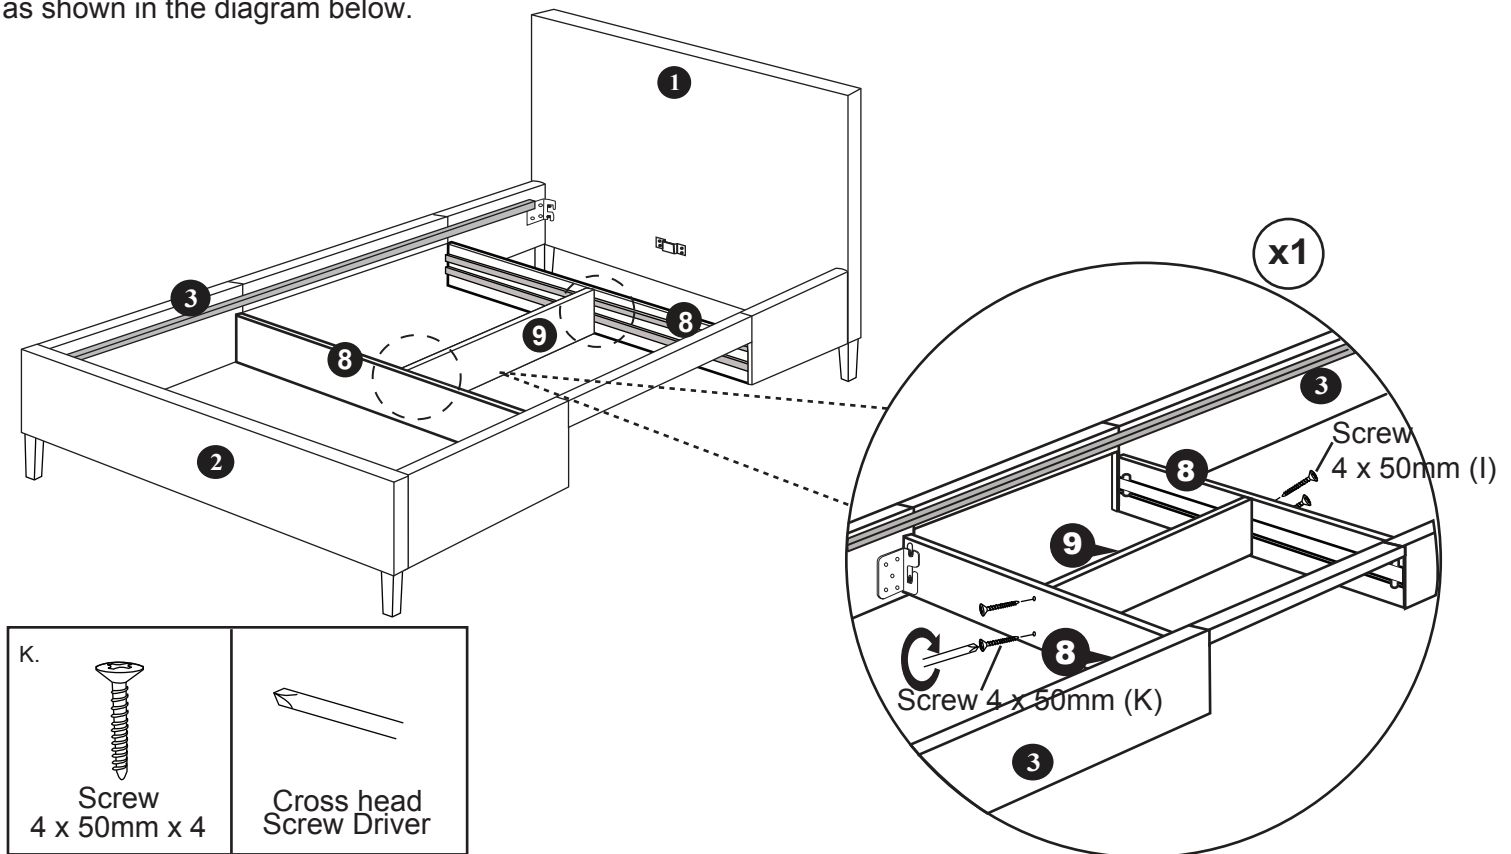


## Step Five

Insert Centre Rail (6) into the brackets on the Headboard (1) and Footboard (2). Push down fully and secure in place using M6 x 25mm Bolts (I). Tighten using M4 Allen Key (A). You can now tighten the bolts with M5 Allen Key (B) at the Side Rails from Step Two so all fastenings are now tightened.




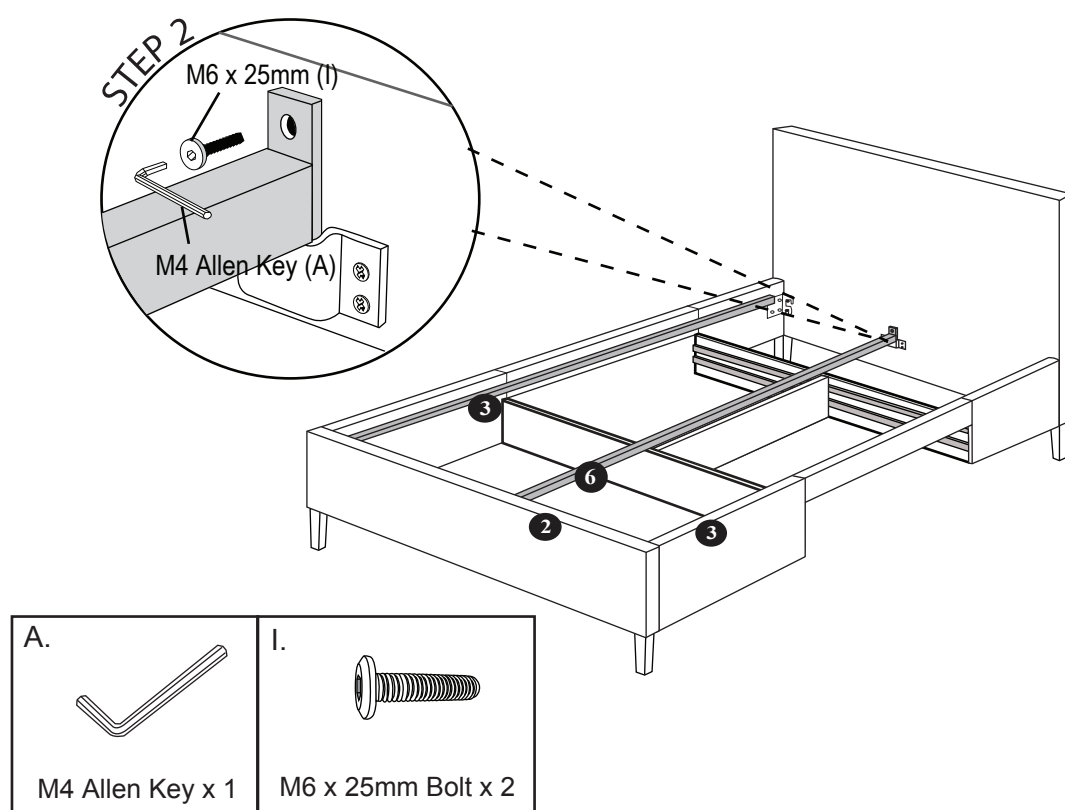


**AFTER INSERTING CENTRE RAIL, TIGHTEN ALL FIXINGS FULLY INCLUDING BOLTS AT SIDE RAILS (FROM STEP TWO)**

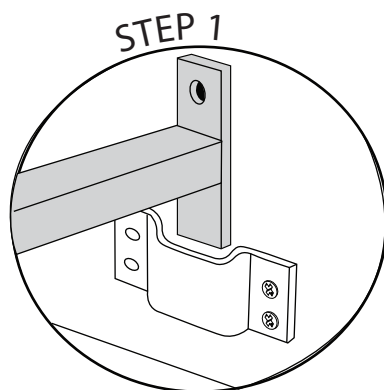



## Step Six

To construct the drawers, fix Drawer Front (11) with one end of each Drawer Bottom Support (15) using Screws 3.5 x 30mm (L) as shown in Fig.1, then fix the Drawer Sides (10) to the Drawer Back (12). Next, insert Drawer Bottom (13) and then fix Drawer Front (11) using Screws 3.5 x 30mm (L) as shown in Fig.2. Finally, secure the other end of the Drawer Bottom Supports (15) to the other side of the drawer and tighten using a cross head screw driver.

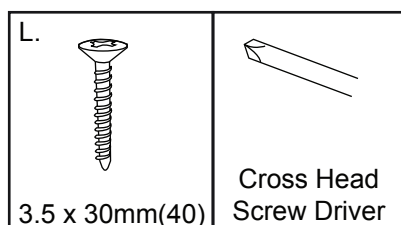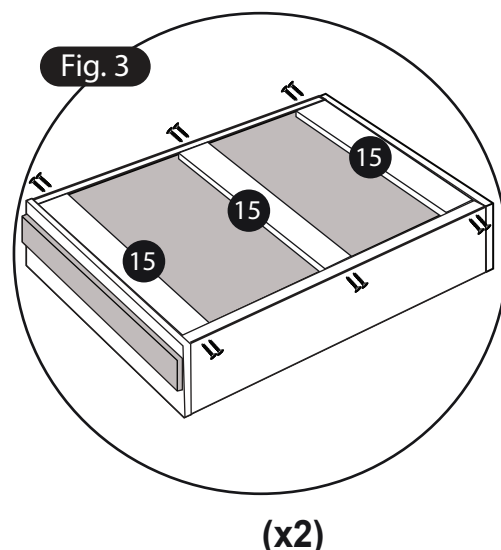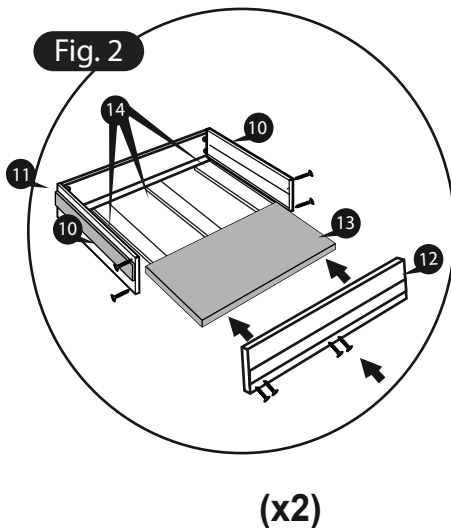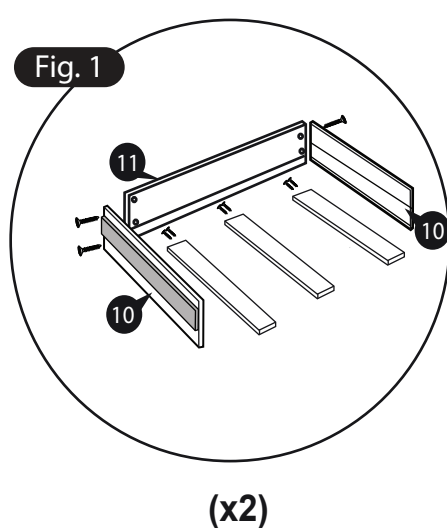



# Step Seven

Attach Upholstered Front Panel (14) to drawer and tighten together using M6 x 40mm Bolt (J). Tighten with M4 Allen Key (A).

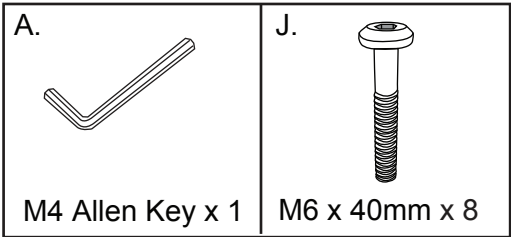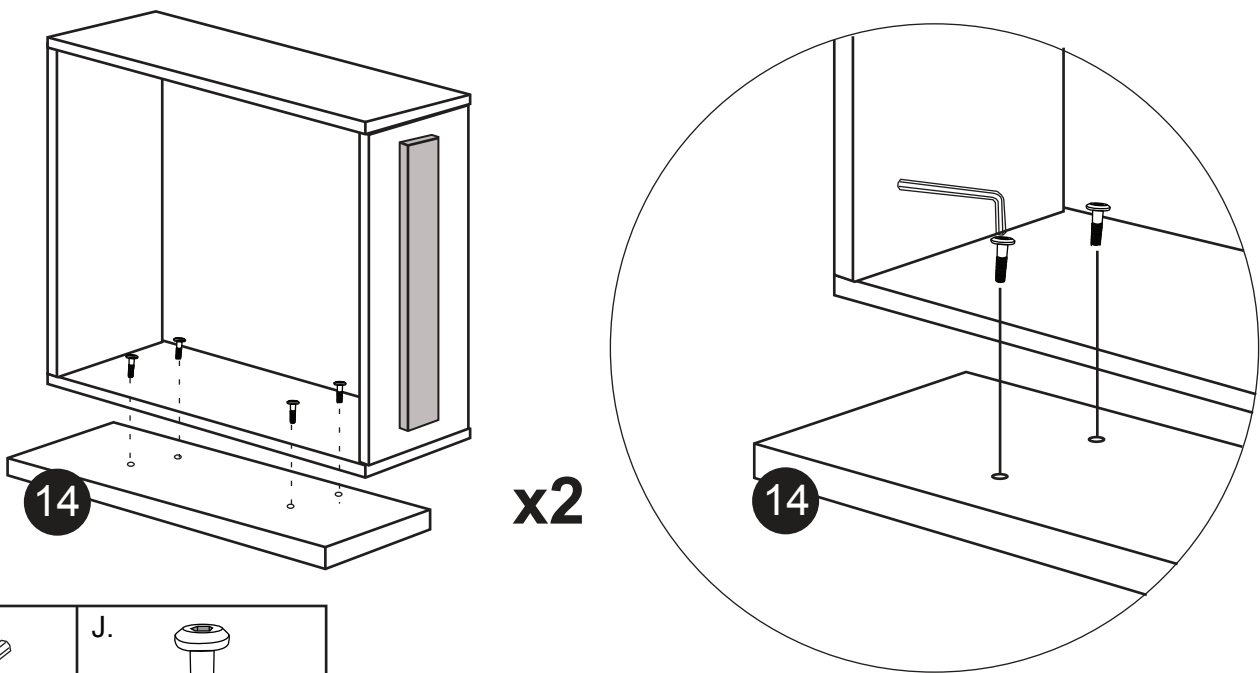

# Step Eight

Slide drawers into both sides of the bed frame. Attach Metal Stopper (16) to the Drawer Runner base (8) using screw 4 x 18mm (M).

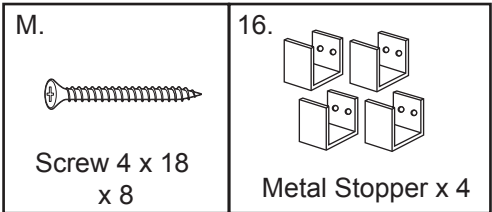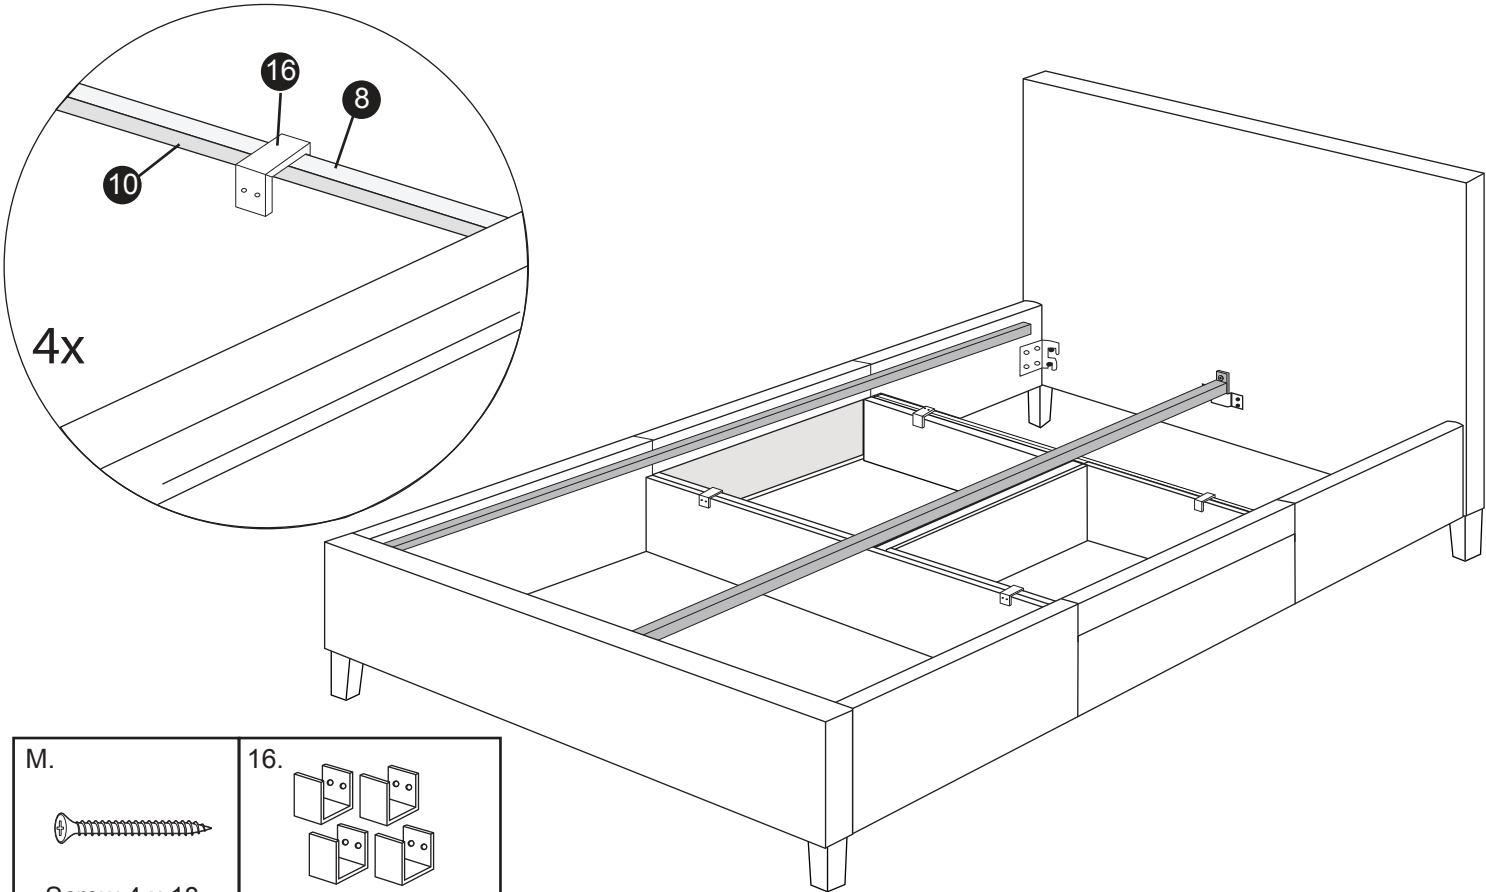




# Step Nine


With the curved side facing upwards, insert 2 slats into a centre cap then into 2 side caps on either end(x15). (Please note the Wide Slats must be inserted with the Wide Centre Caps (E) and Wide Side Caps (F)). Repeat this process for all slats.

Note: Please see the Diagram 1 below to arrange the slat with the correct system).

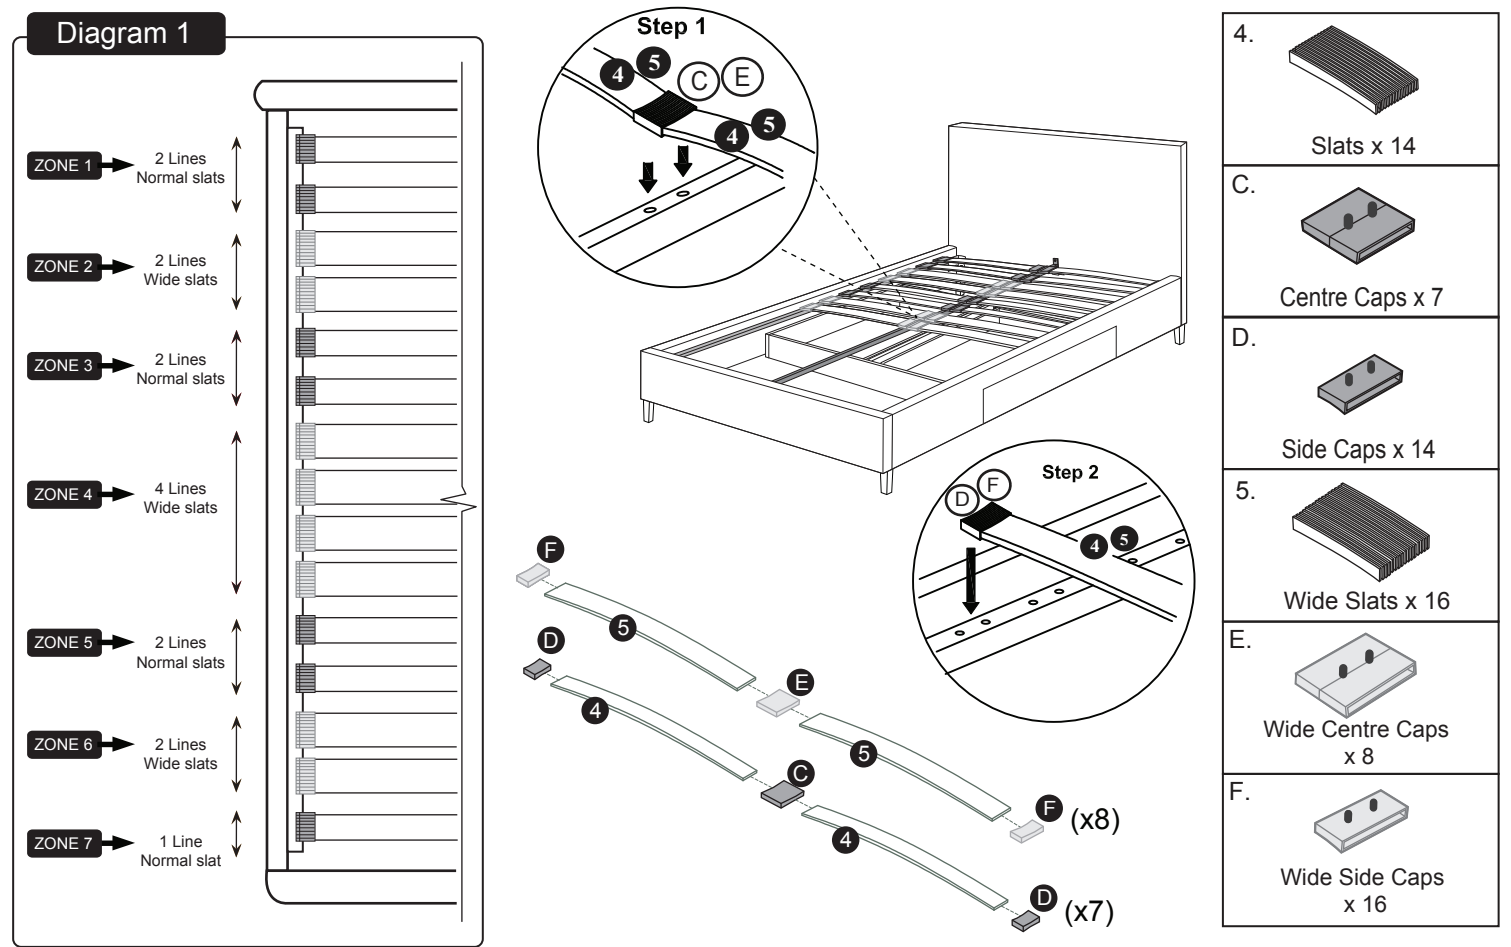

# Step Ten

The bed is now ready for use.

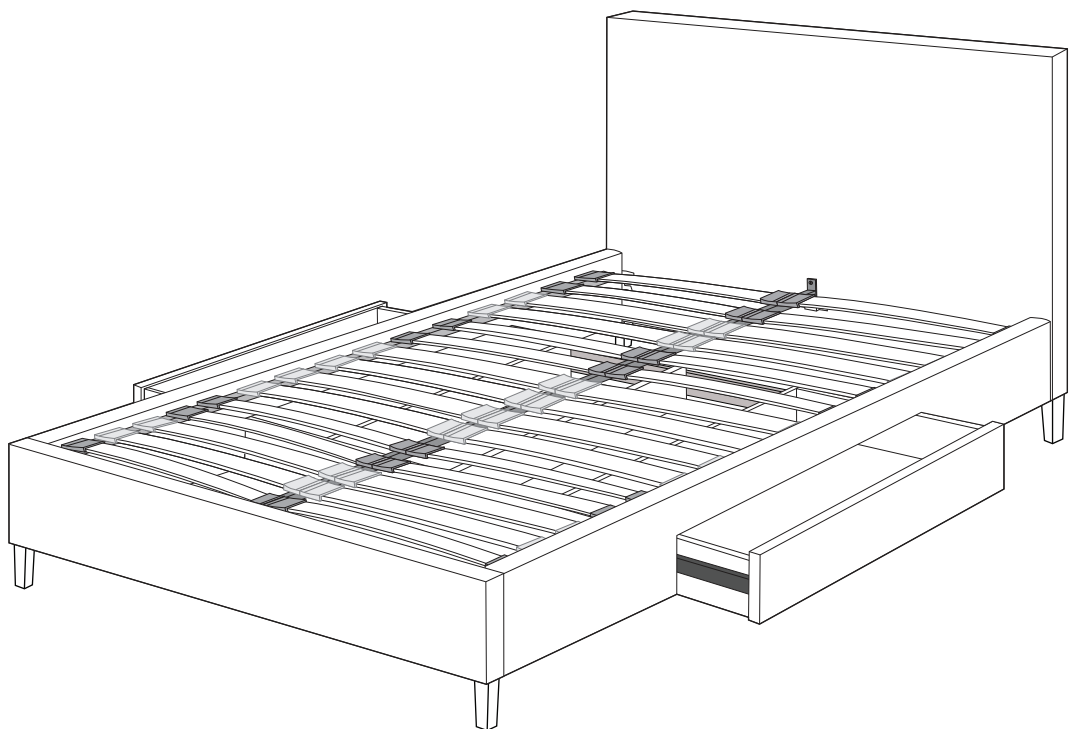



---

## Care and Maintenance

---

This Emily Storage Bed should be cleaned using a soft damp cloth and dried immediately.

Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use detergents and do not rub as this can cause permanent damage.

Always protect your bed from direct sunlight as this may accelerate the natural ongoing discolouration process.

Bolts holding together the bed frame should be tightened regularly.

Please retain this information leaflet for future reference.

This product complies with BS EN 1725:1998.

---

## Safety Instructions

---

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Any assembly should be carried out by a competent adult.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

During assembly, children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

It is recommended that care is taken when moving heavy objects to a new location to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

**If you require any additional information or have any issues with this product please call the John Lewis Helpline on 01244 689949 or email [mail@fwgroup-uk.com](mailto:mail@fwgroup-uk.com)**

John Lewis Partnership 171 Victoria Street, London, SW1E 5NN.  
[www.johnlewis.com](http://www.johnlewis.com)