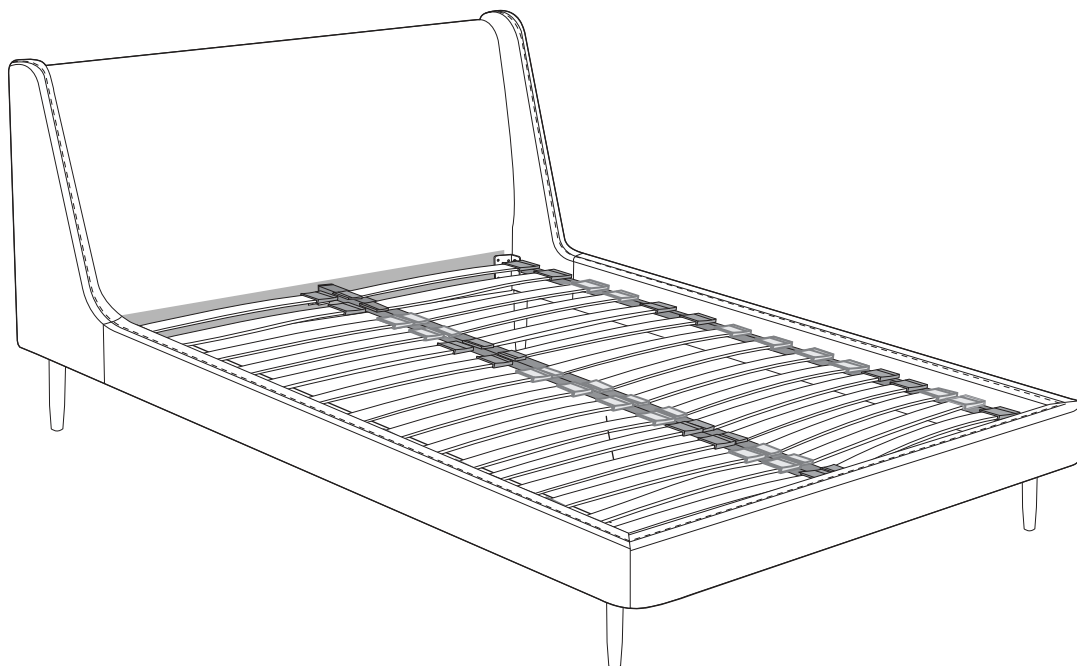


Midcentury Sweep Bed

Double

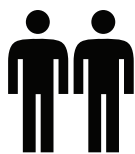
Thank you for purchasing this Midcentury Sweep Bed. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.



PRE-ASSEMBLY PREPARATION

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact customer services on 01244 689949 or email mail@fwgroup-uk.com.

This product is **HEAVY**. It should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.














This product takes approximately **40 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.








Read this leaflet in full before commencing assembly.

Fitting and parts checklist

Fittings

A	M5 Allen Key x 1		H		M8 Spring Washer x 8
B	M13 Spanner x 1		I		Two-Ways Bolt x 4
C	Centre Caps x 7		J		Wide Centre Caps x 8
D	Side Caps x 14		K		Wide Side Caps x 16
E	M8 Washer x 4		L		M4 Allen Key x 1
F	M8 Nut x 4		M		M6 X 25mm Bolt x 2
G	M8 X 45mm Bolt x 8				

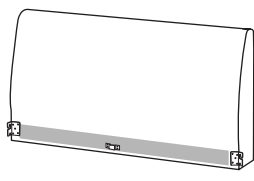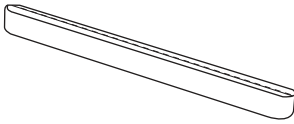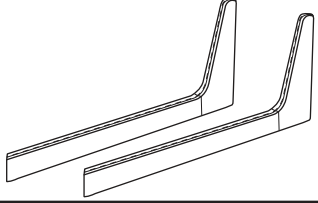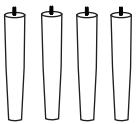
Parts

1	Headboard x 1	
2	Footboard x 1	
3	Side Rails x 2	
4	Slats x 14	
5	Wide Slats x 16	
6	Centre Rails x 1	
7	Legs x 4	

Step by step assembly instructions



Step One

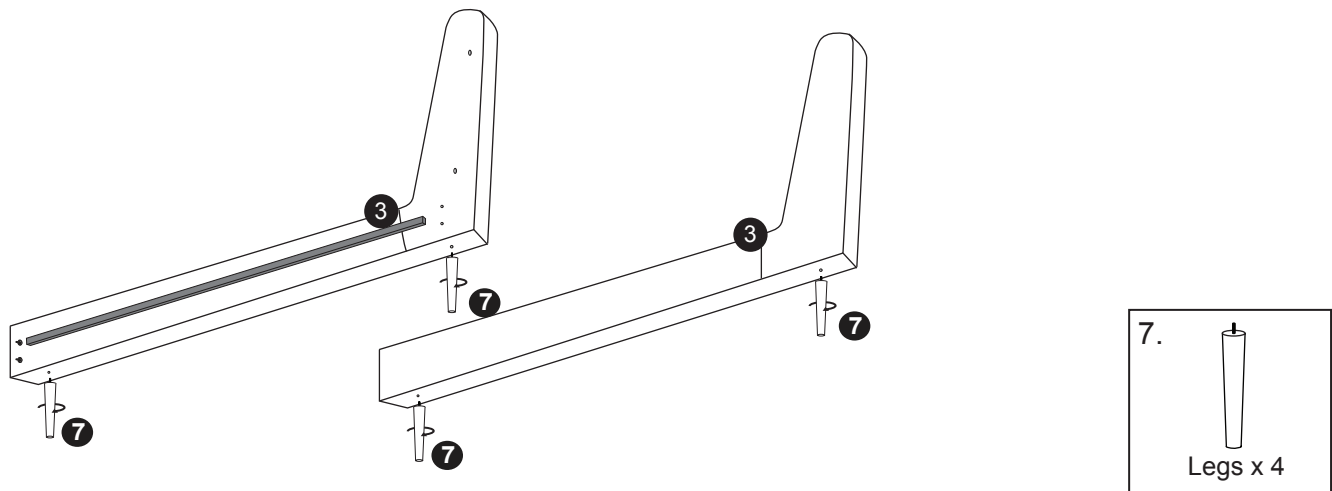Insert the Legs (7) into the pre-drilled holes on the Siderail (3). Twist the legs (7) to secure in place.
(As per diagram below)




Step Two

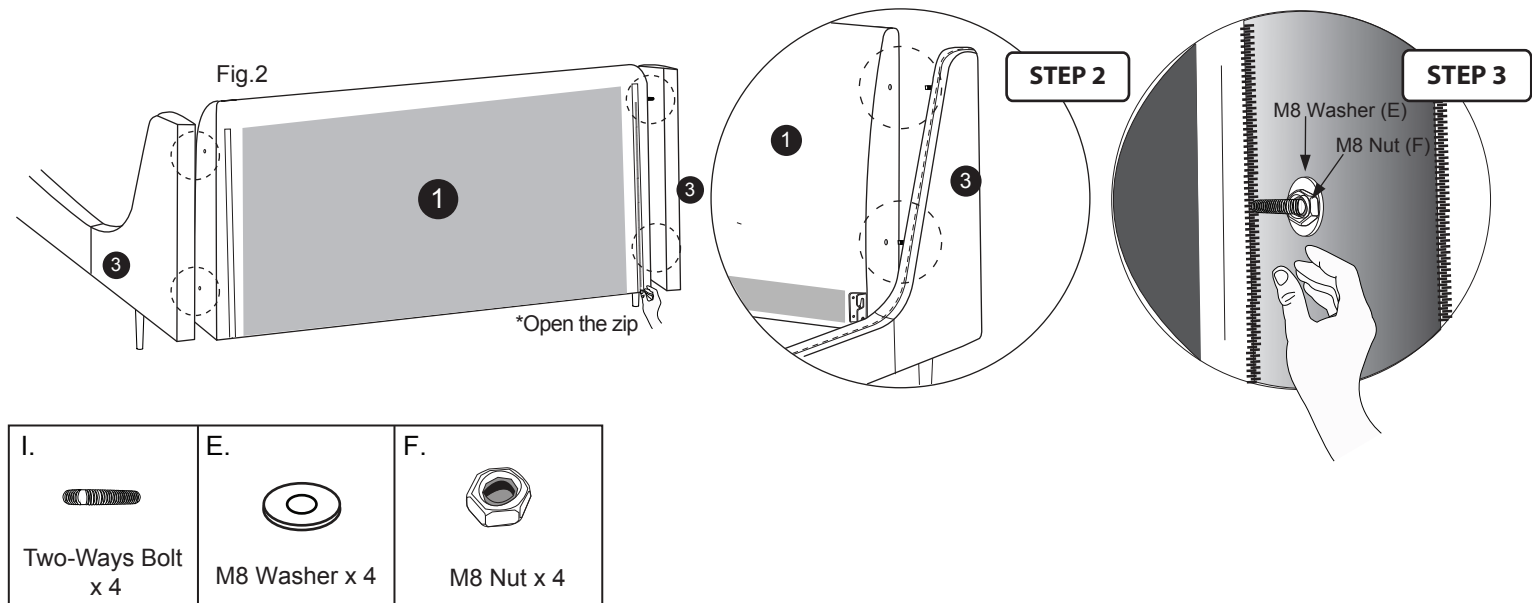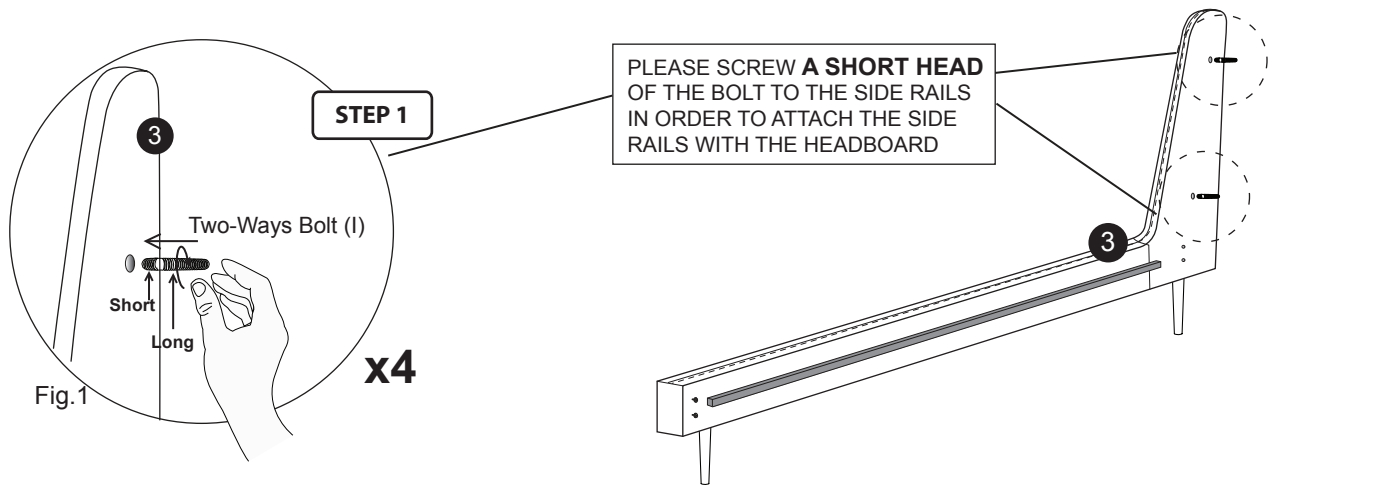To attach the Side Rail (3) with the Headboard (1), start with inserting the Two-Ways Bolt (I) into the pre-drilled holes on the Siderail (3) as shown in Fig. 1.
Next, you can start to attach the Side Rail (3) and the Headboard (1) with M8 Washer (E) and M8 Nut (F) by opening the zip at the back of the Headboard (1) as shown in Fig 2.
Do not tighten with M13 Spanner (B) until you have inserted the Centre Rail in the next step.




Step Three

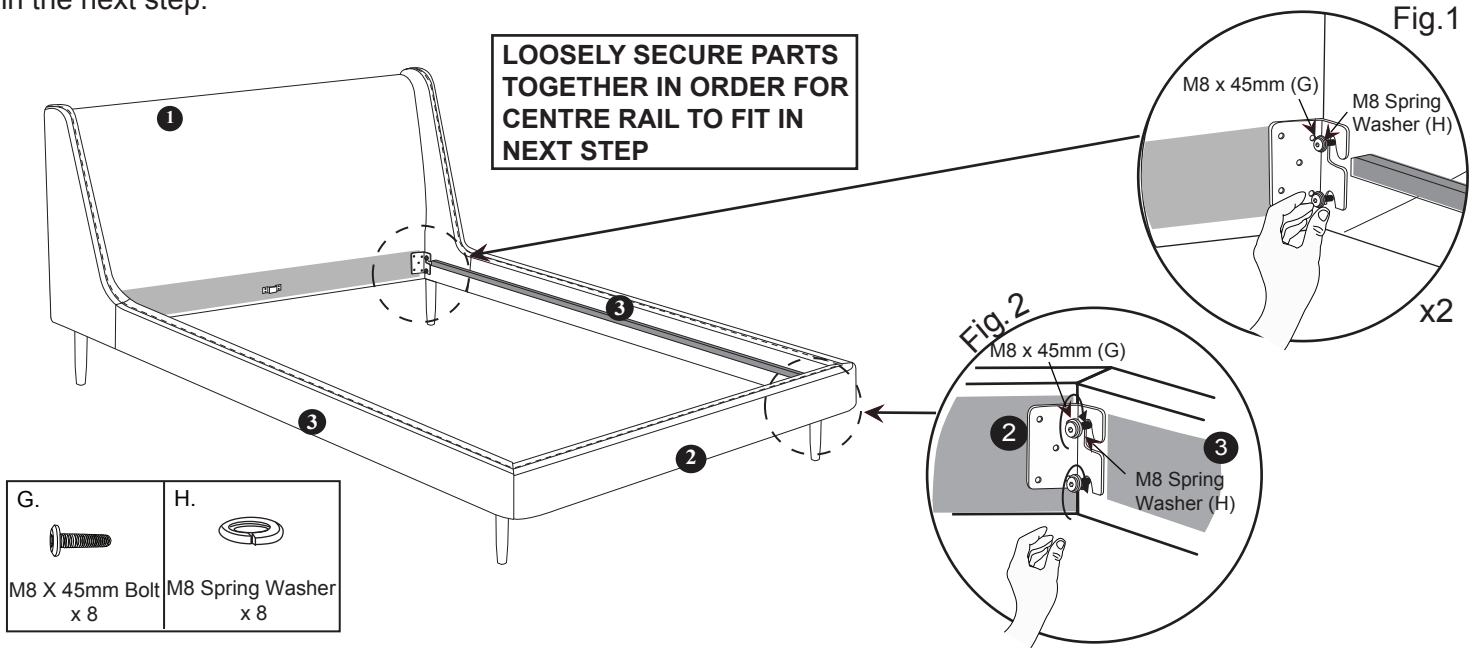Starting with the Headboard (1) attach the Side Rails (3) using the M8 x 45mm Bolt (G) and M8 Spring Washer (H) into the pre-drilled holes on the Siderail (3). Please do not tighten the bolts yet. Repeat the step with the Footboard (3). Do not tighten with M5 Allen Key (A) until you have inserted the Centre Rail in the next step.



Step Four


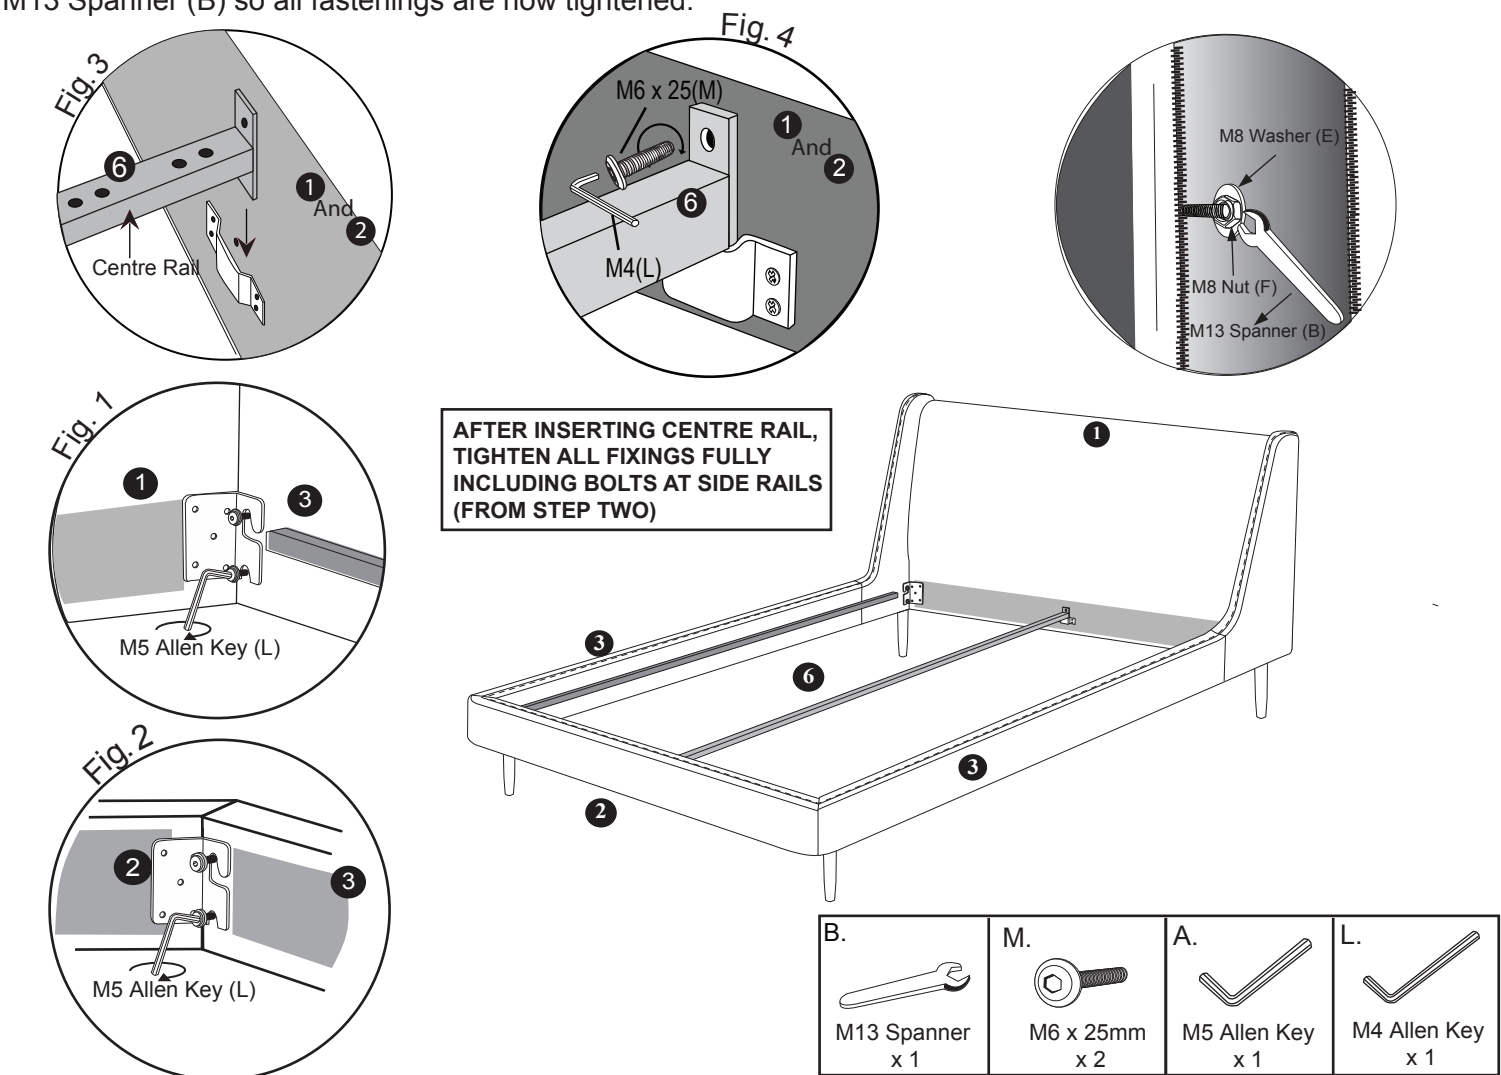
Lower the Centre Rail (6) into the pre-drilled holes of the Headboard (1) and Footboard (2) and attach with M6 x 25mm Bolt (M) and fully tighten bolts with M4 Allen Key (L) as shown in Fig.3. You can now tighten the bolts at the Side Rails from previous step (Step Two) with the M5 Allen Key (A) and M13 Spanner (B) so all fastenings are now tightened.



Step Five

With the curved side facing upwards, insert 2 slats into a centre cap then into 2 side caps on either end(x15). (Please note the Wide Slats must be inserted with the Wide Centre Caps (J) and Wide Side Caps (K)). Repeat this process for all slats.
Note: Please see the Diagram 1 below to arrange the slat with the correct system).

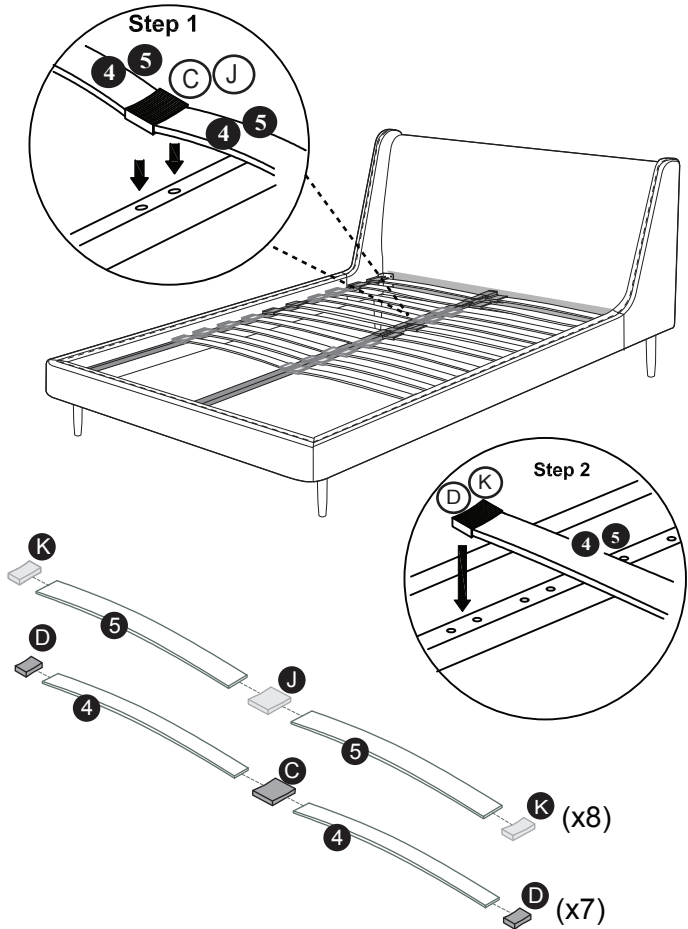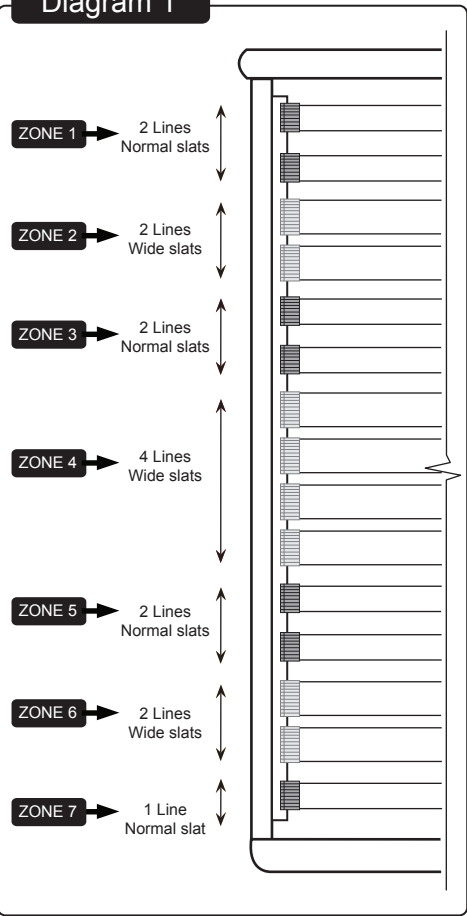Diagram 1



- | | |
|----|--|
| 4. | |
| C. | |
| D. | |
| 5. | |
| J. | |
| K. | |

Step Six

This bed is now ready to use.



Care and Maintenance

This bed should be cleaned using a soft, damp cloth and dried immediately.

Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use detergents and do not rub as this can cause permanent damage.

Always protect your bed from direct sunlight as this may accelerate the natural ongoing discolouration process.

Bolts holding together the bed frame should be tightened regularly.

Please retain this information leaflet for future reference.

This product complies with BS EN 1725:1998.

Safety Instructions

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Any assembly should be carried out by a competent adult.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

During assembly, children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

It is recommended that care is taken when moving heavy objects to a new location to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

If you require any additional information or have any issues with this product please call the customer services helpline on 01244 689949 or email mail@fwgroup-uk.com.